


Desk

SKU:WF315818
WF315819

Assembly Instruction-Please keep for future reference

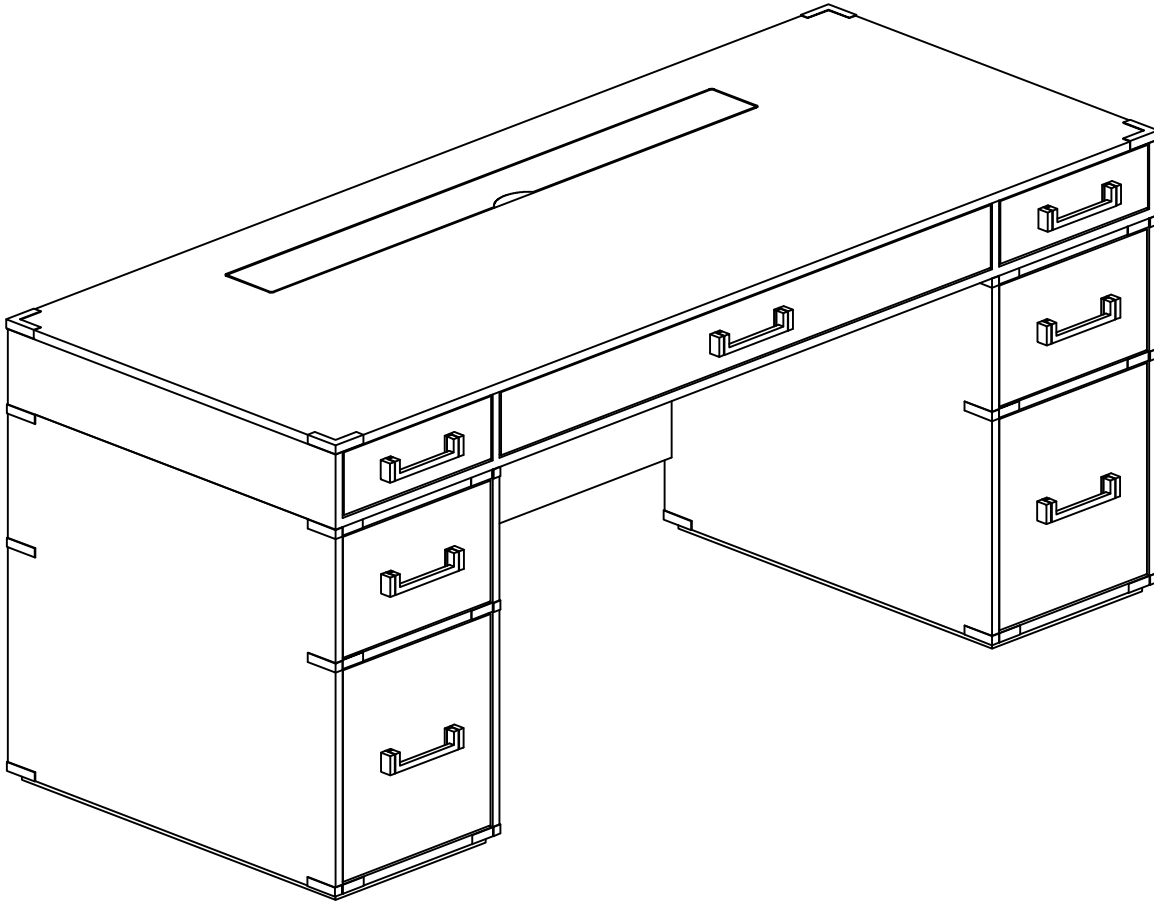

Dimensions

Width-70inch
Depth-28inch
Height-30inch

Important-Please read these instructions fully before starting assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

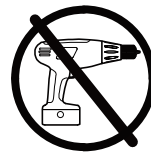

- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.


WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

PARTS LIST-WF315818


Ⓐ

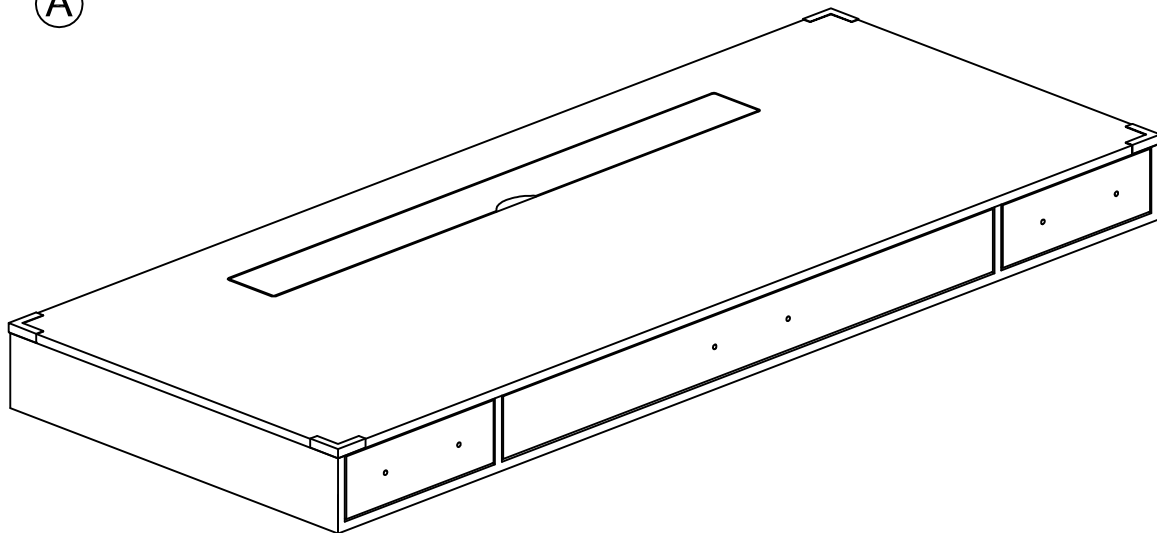

1 PC


PARTS LIST-WF315819

Ⓑ_L

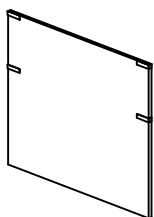


1 PC

Ⓑ_R

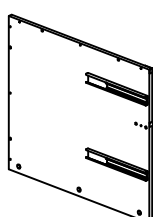


1 PC

Ⓒ_L

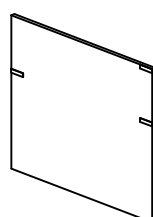


1 PC

Ⓒ_R

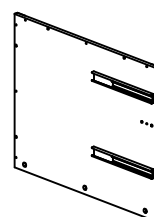


1 PC

Ⓓ




2 PCS

Ⓔ

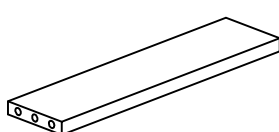


2 PCS

Ⓕ















2 PCS

Ⓖ



2 PCS







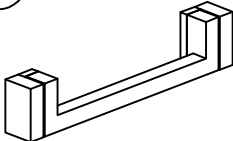


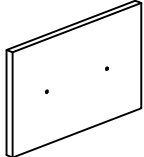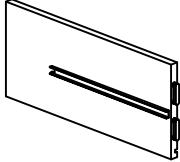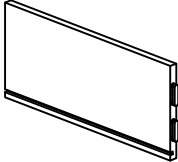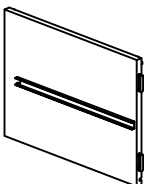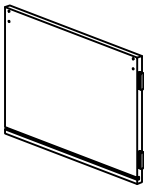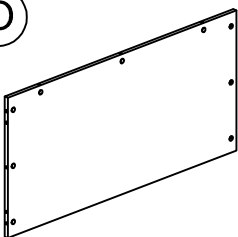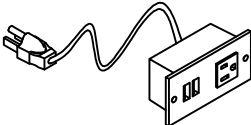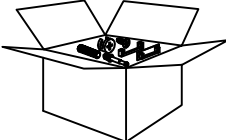


PARTS LIST-WF315819

<p>(H)</p>  <p>2 PCS</p>	<p>(IL)</p>  <p>2 PCS</p>	<p>(IR)</p>  <p>2 PCS</p>	<p>(J)</p>  <p>2 PCS</p>
<p>(K)</p>  <p>4 PCS</p>	<p>(L)</p>  <p>2 PCS</p>	<p>(ML)</p>  <p>2 PCS</p>	<p>(MR)</p>  <p>2 PCS</p>
<p>(N)</p>  <p>2 PCS</p>	<p>(O)</p>  <p>1 PC</p>	<p>(P)</p>  <p>1 PC</p>	 <p>HARDWARE</p>

HARDWARE LIST-WF315819

Please check you have all the panels listed below

Note: the quantities below are the correct amount to complete the assembly. In some cases, more fittings may be supplied than required.

<p>①</p>  <p>Ø8x30mm Dowel 36 PCS</p>	<p>②</p>  <p>Cam Bolt 49 PCS</p>	<p>③</p>  <p>Cam Lock 49 PCS</p>	<p>④</p>  <p>Ø1/4"x25mm Bolt 16 PCS</p>
<p>⑤</p>  <p>Ø1/4"x30mm Bolt 8 PCS</p>	<p>⑥</p>  <p>4mm Allen Key 1 PC</p>	<p>⑦</p>  <p>Handle 7 PCS</p>	<p>⑧</p>  <p>Ø5/32"x22mm Screw 14 PCS</p>
<p>⑨</p>  <p>#3.5x12mm Screw 18 PCS</p>	<p>⑩</p>  <p>8 PCS</p>	<p>⑪</p>  <p>Ø5x262mm Round Bar 4 PCS</p>	<p>Tools Not Supplied</p> 


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

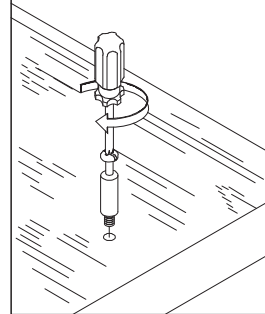

Step 2

Push the male camlock into the entry hole.

2

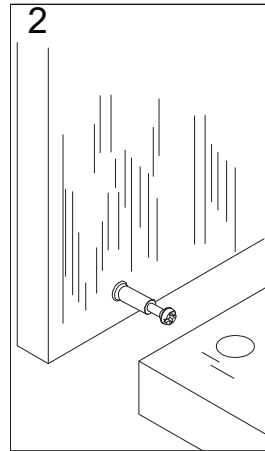


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

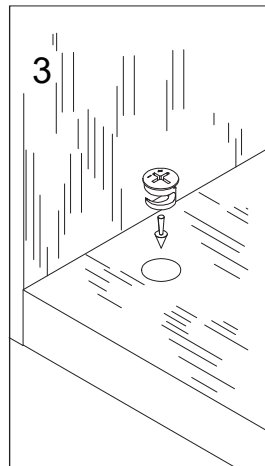


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

4

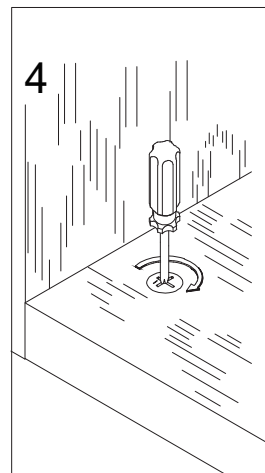

COMPONENTS - KEY DIAGRAM


WF315819

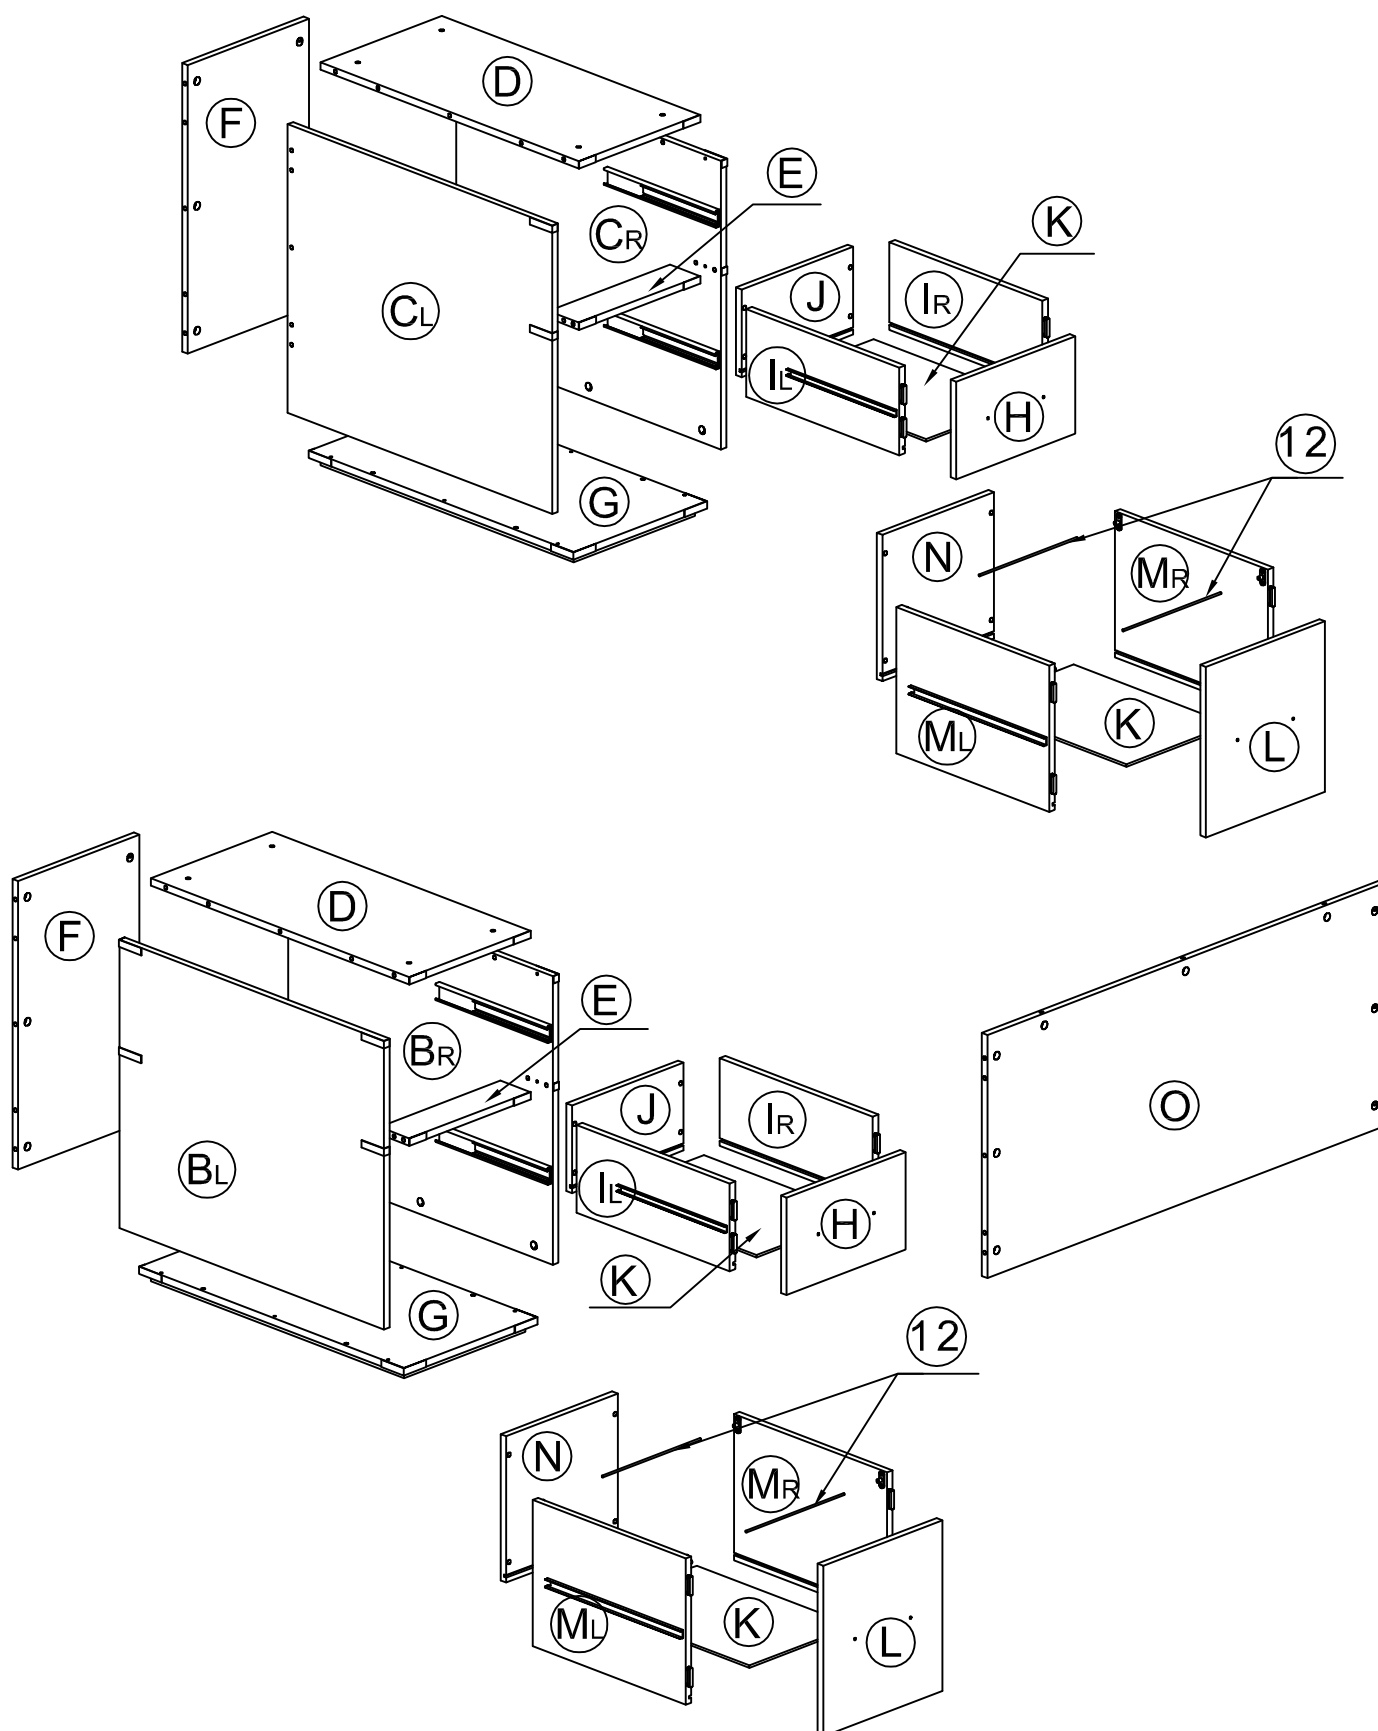


WF315819 Assembly Instructions

STEP 1

x 2

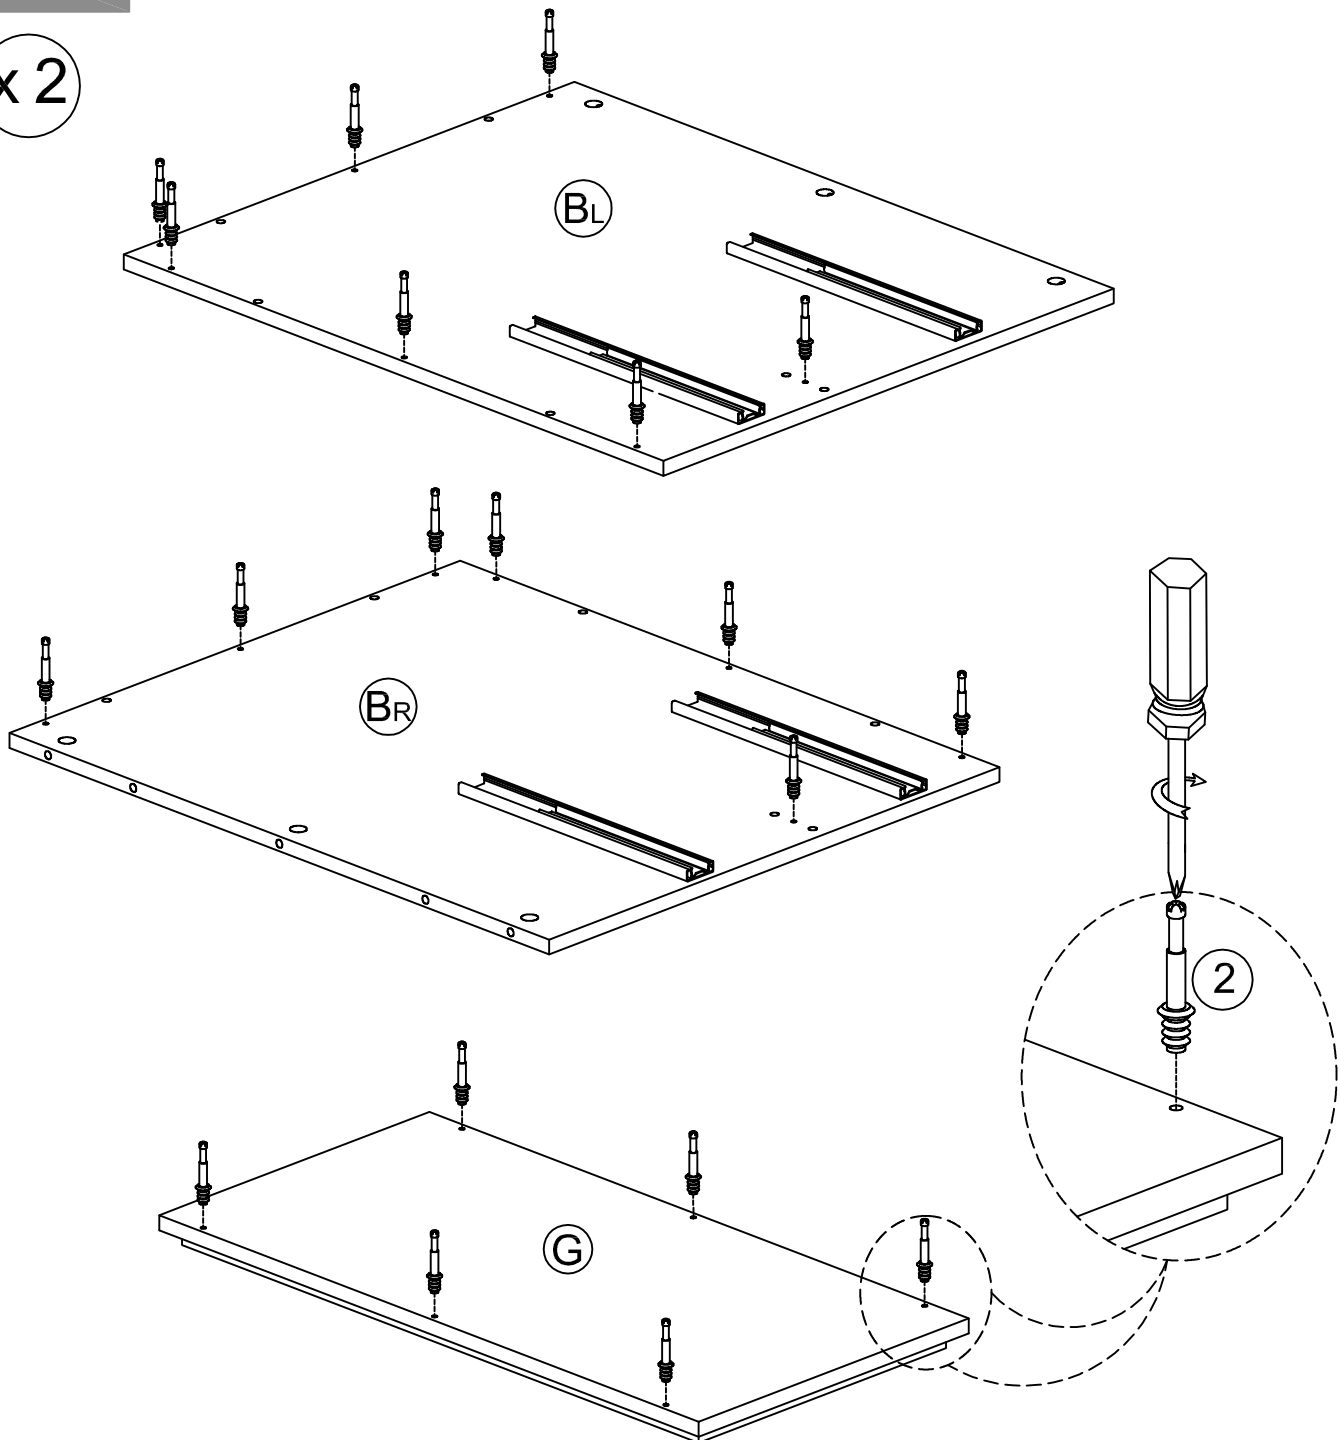

2




Cam Bolt 40 PCS


WF315819 Assembly Instructions

STEP 2

x 2

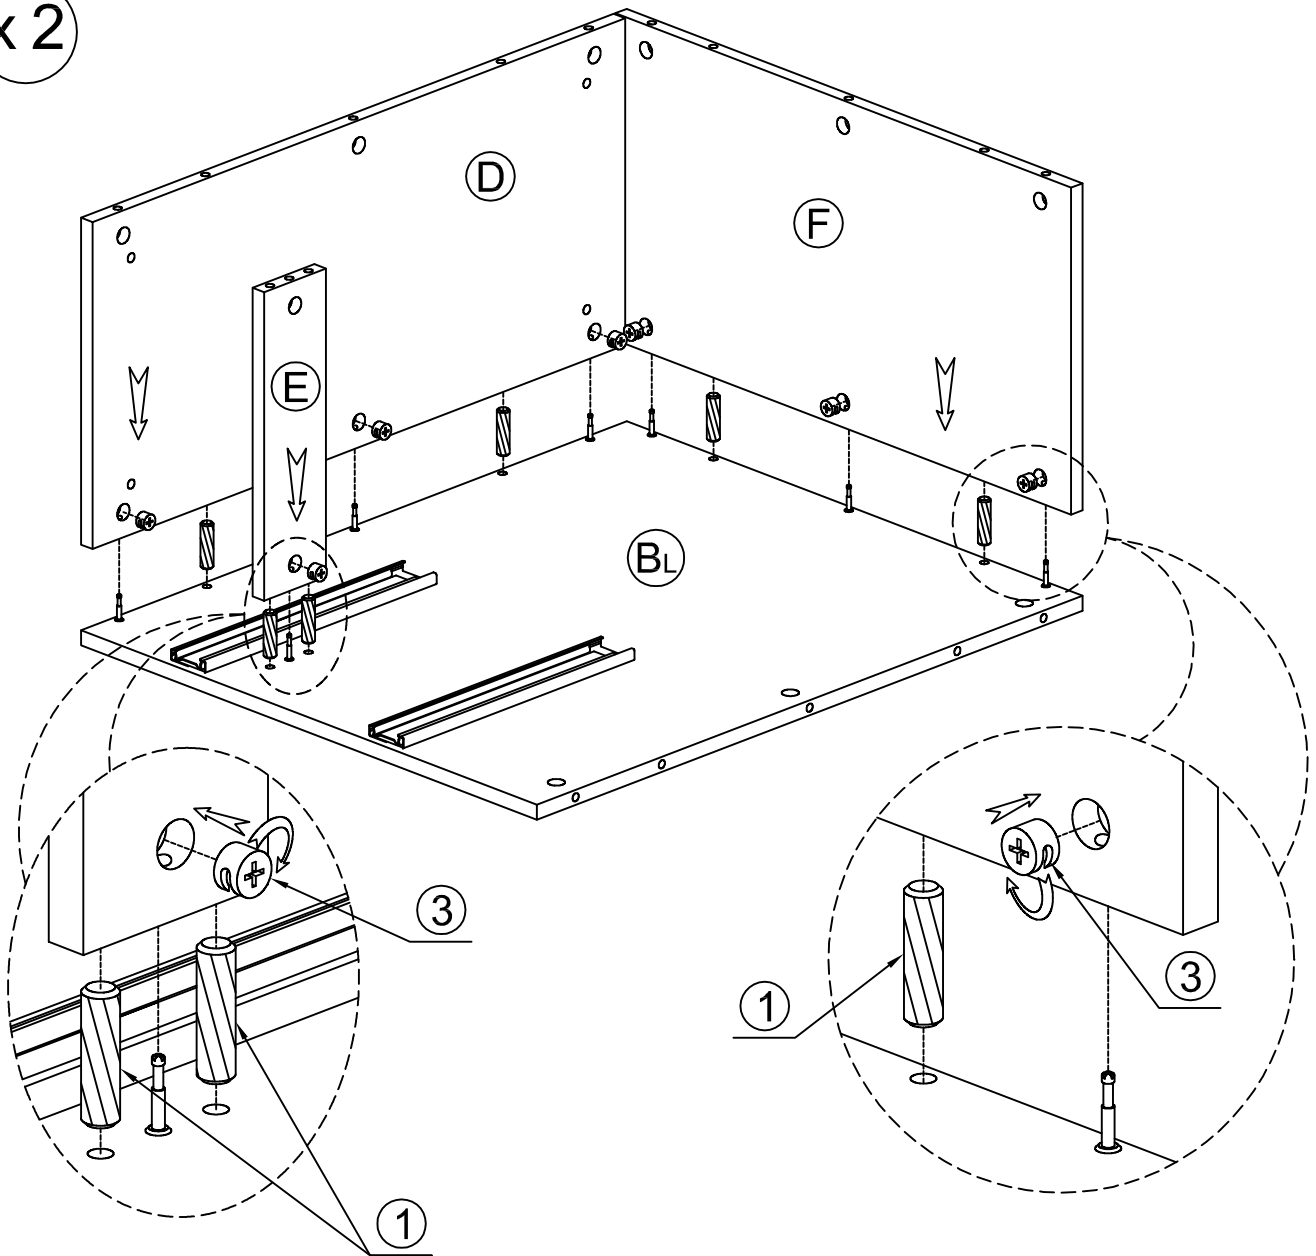

1



Ø8x30mm Dowel 12 PCS

3




Cam Lock 14 PCS

WF315819 Assembly Instructions

STEP 3

x 2

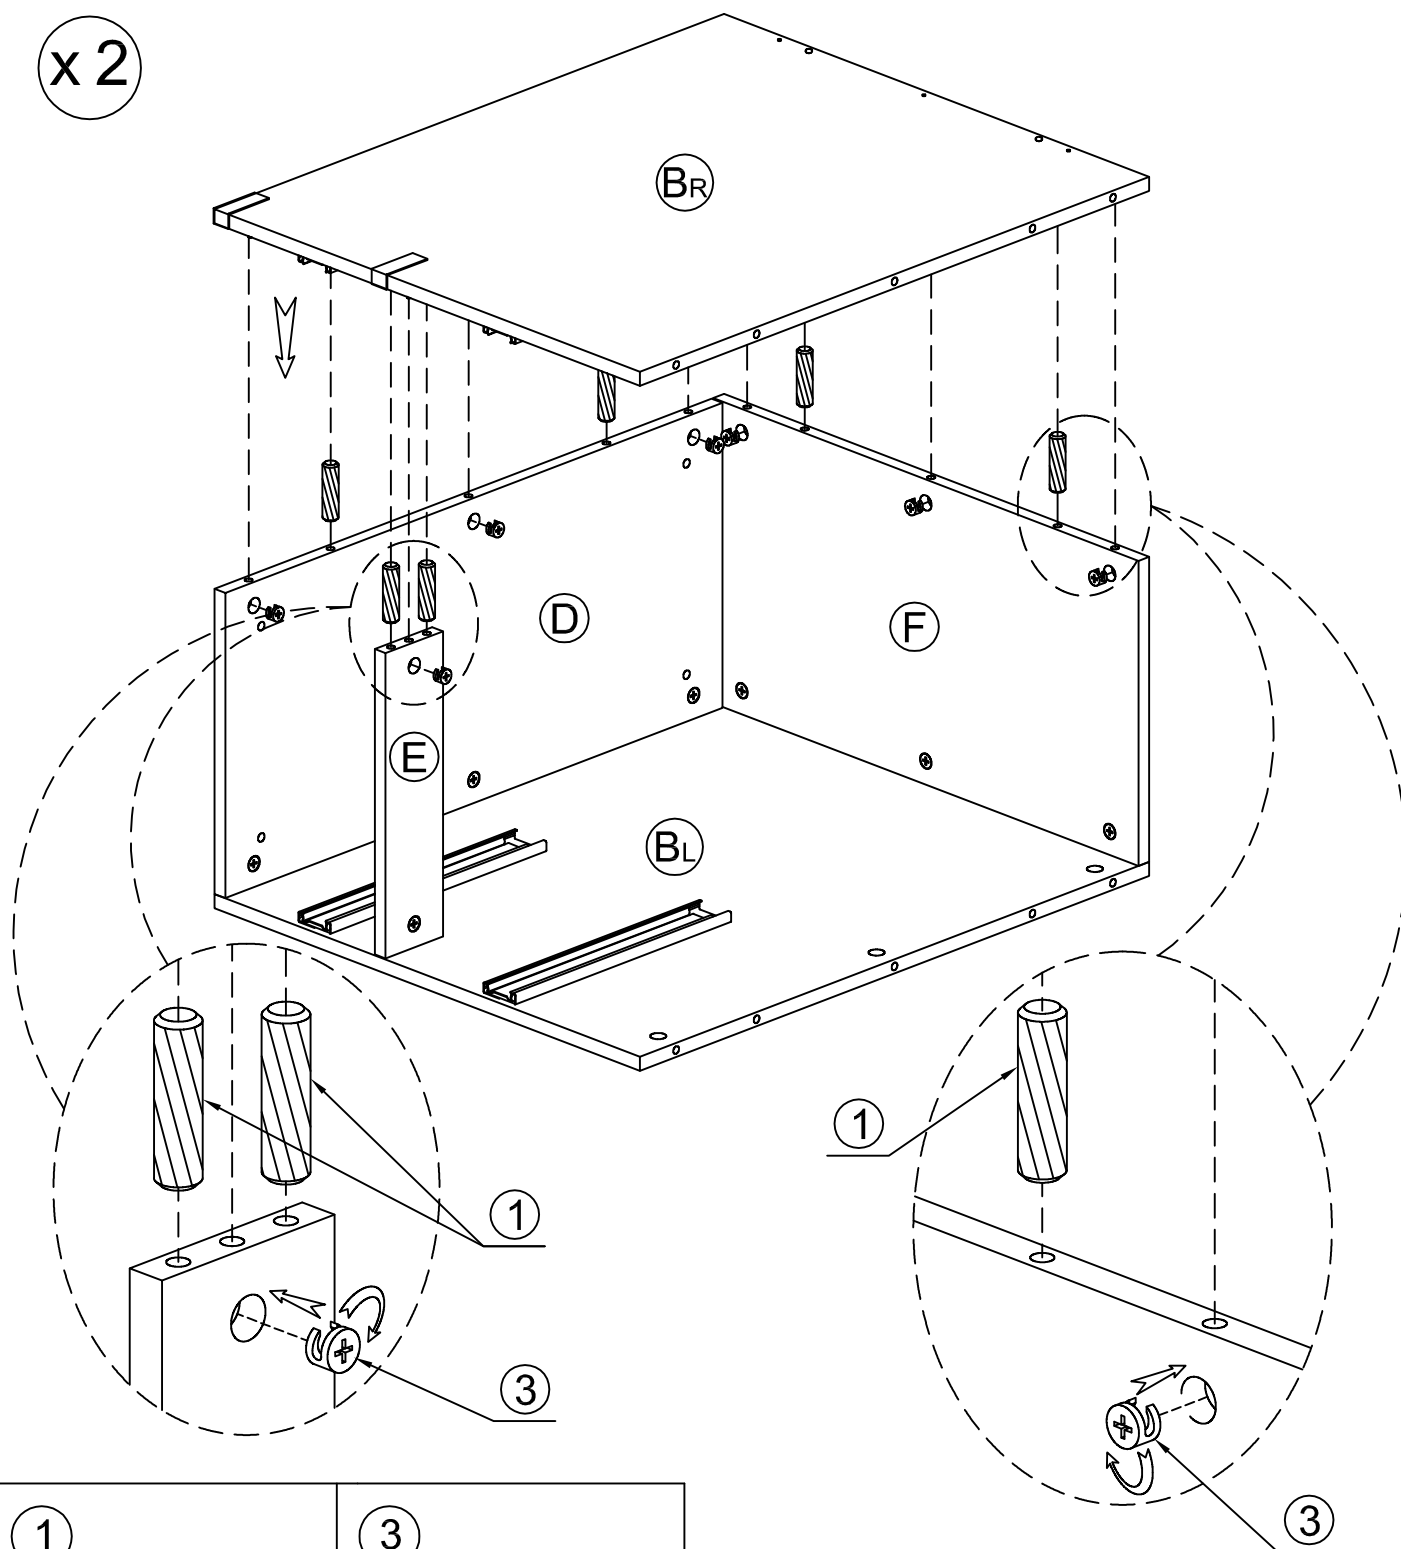

1



Ø8x30mm Dowel 12 PCS

3




Cam Lock 14 PCS

WF315819 Assembly Instructions

STEP 4

x 2

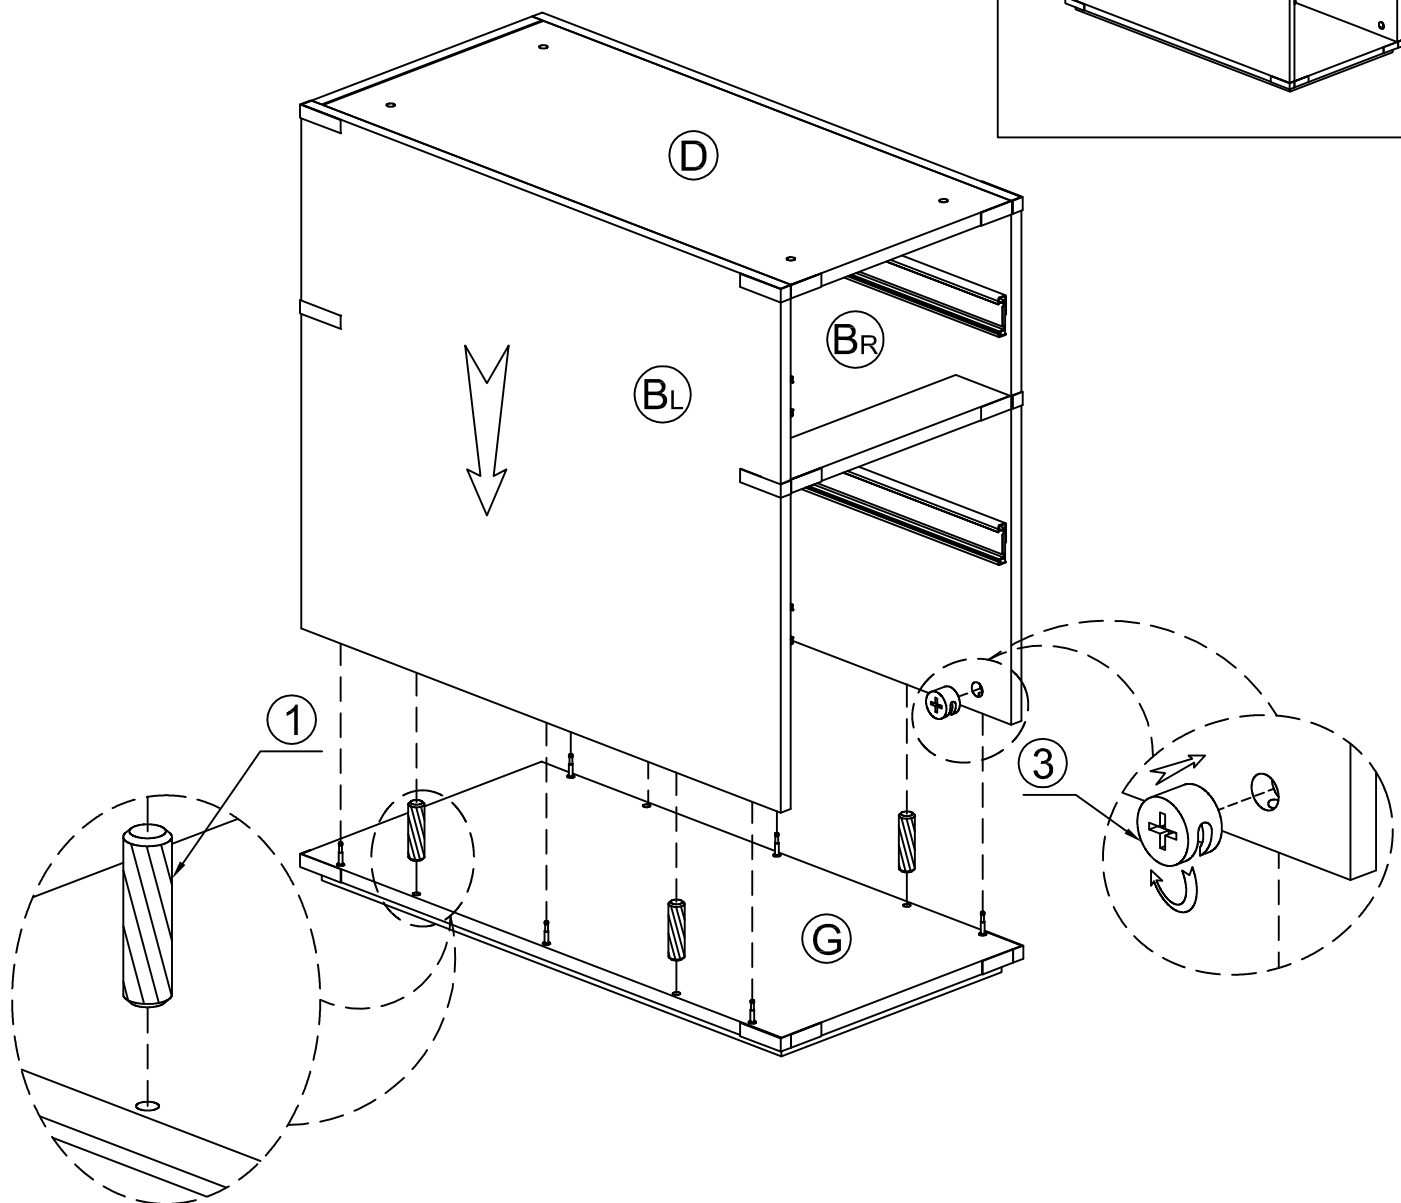

1



Ø8x30mm Dowel 8 PCS


3




Cam Lock 12 PCS

WF315819 Assembly Instructions

STEP 5

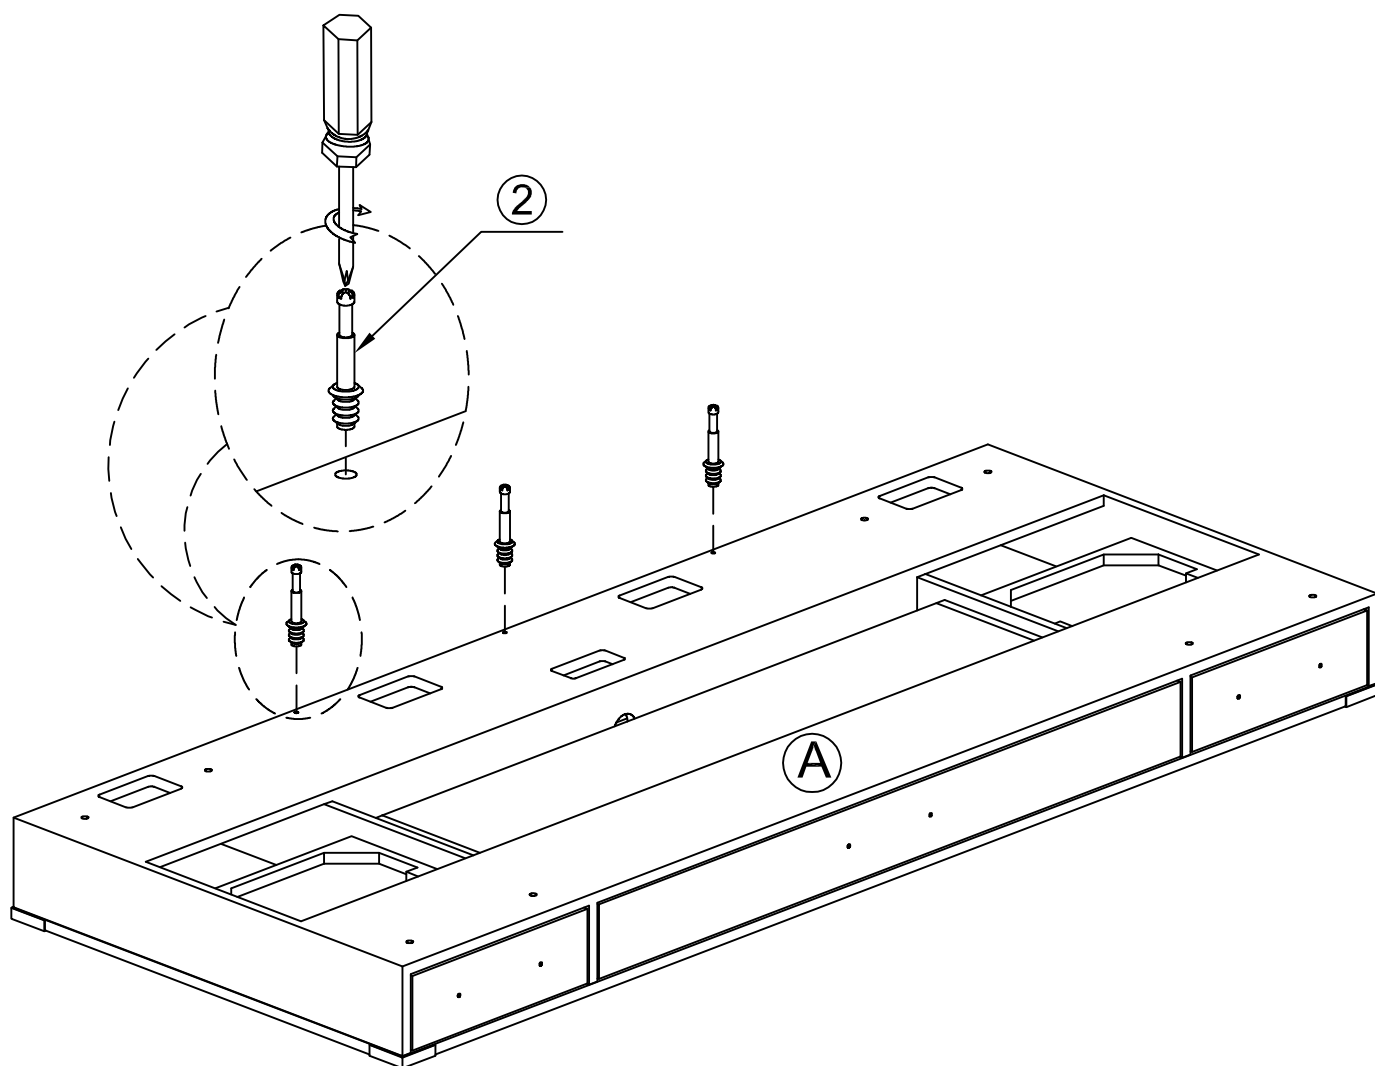


2



Cam Lock 3 PCS

WF315819 Assembly Instructions

STEP 6

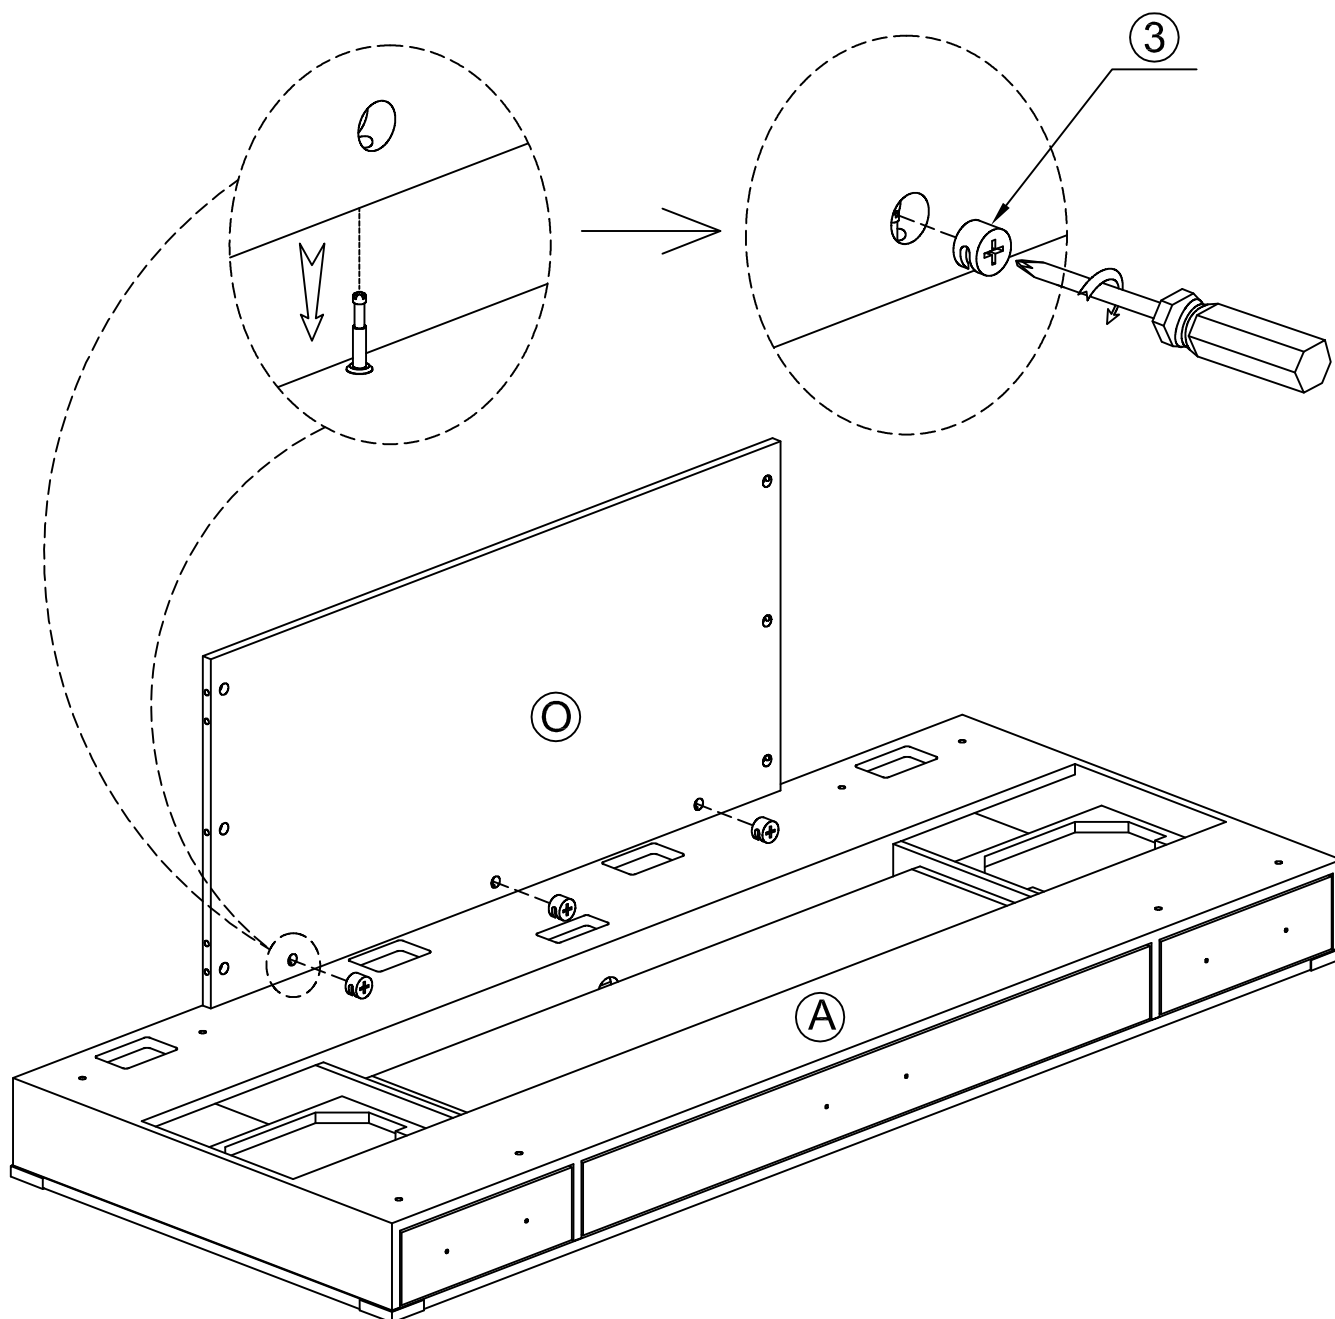


3




Cam Lock 3 PCS

WF315819 Assembly Instructions

STEP 7

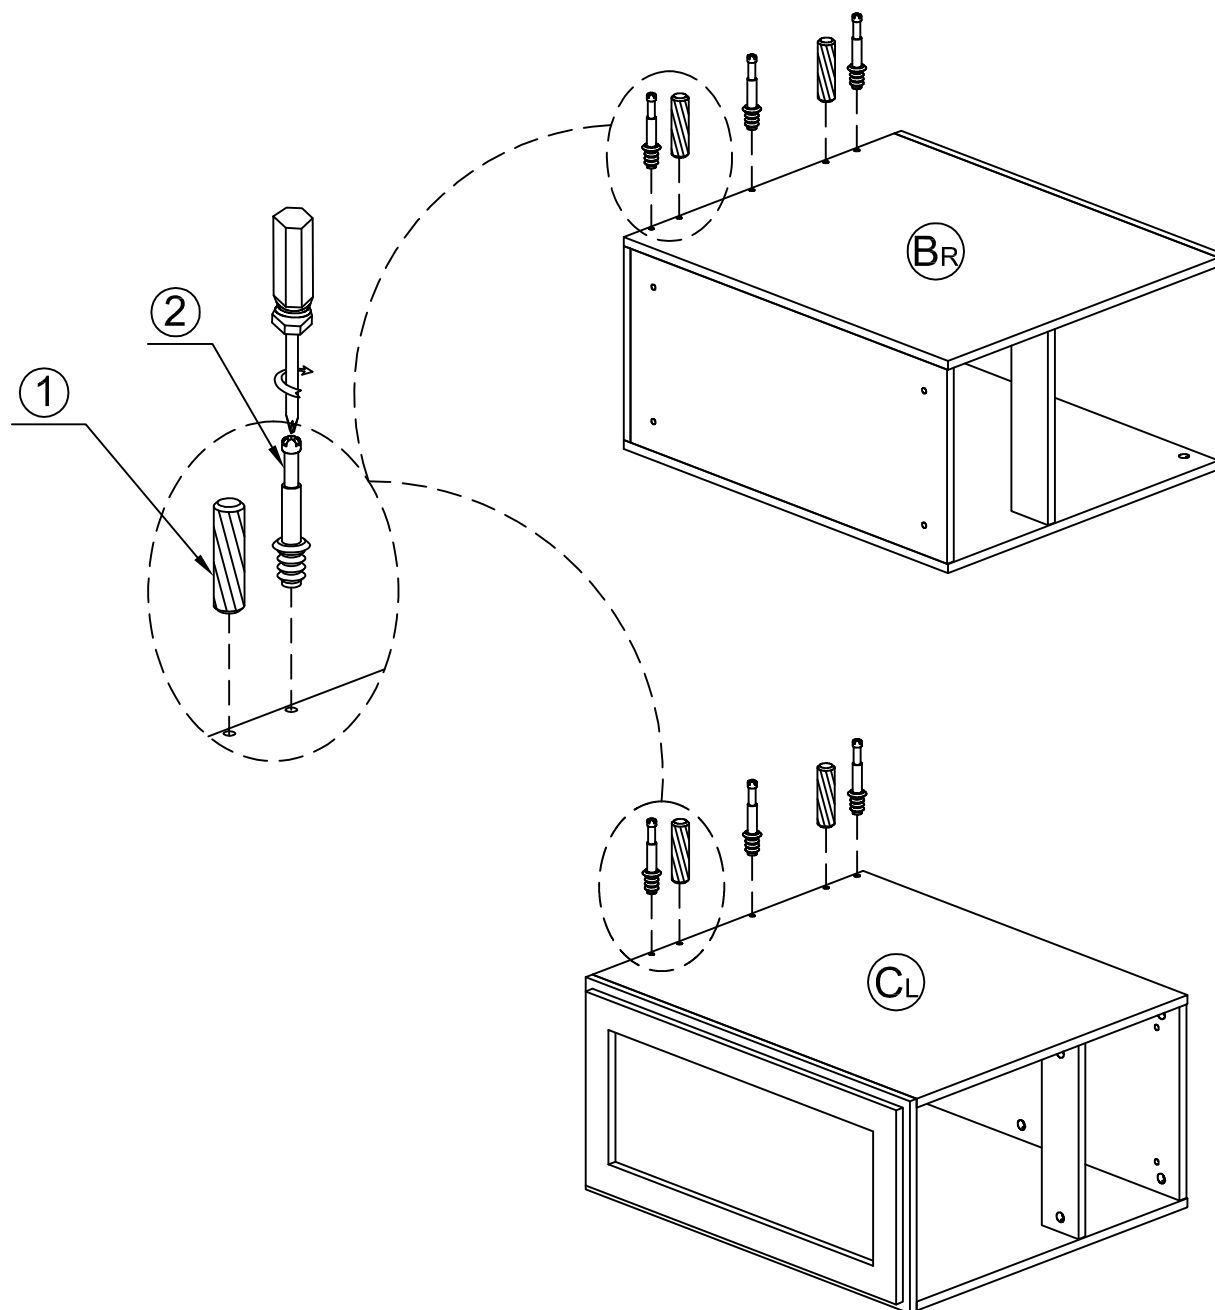


1



Ø8x30mm Dowel 4 PCS


2



Cam Lock 6 PCS

WF315819 Assembly Instructions

STEP 8

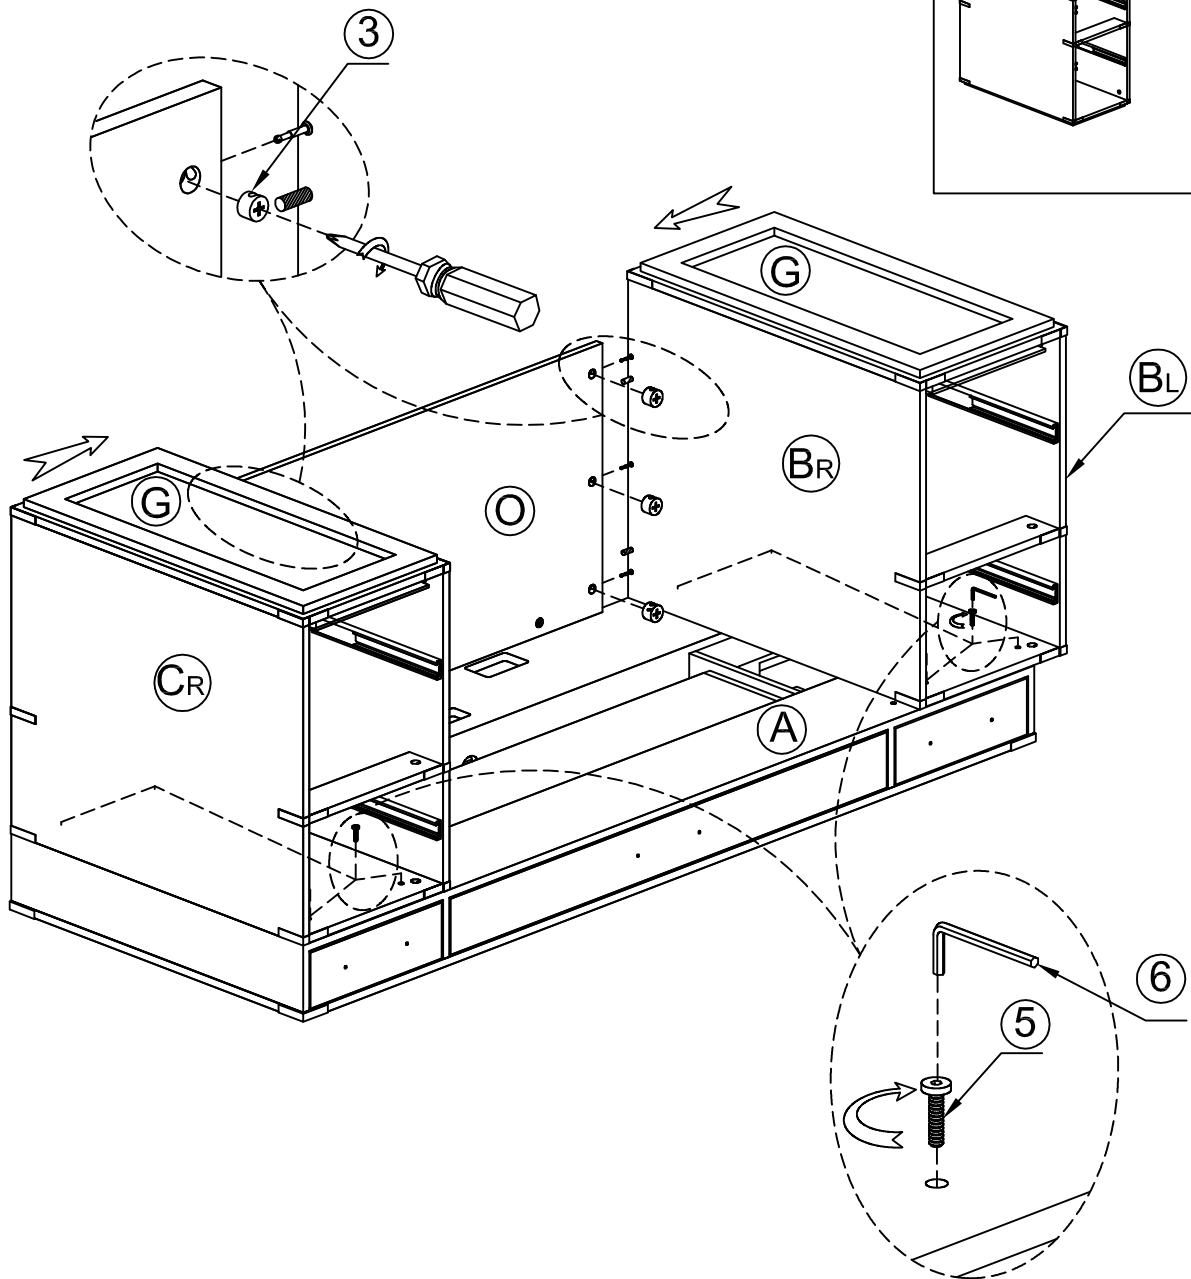


3



Cam Lock 6 PCS

5



Ø1/4"x30mm Bolt 8 PCS

6




4mm Allen Key 1 PC

WF315819 Assembly Instructions

STEP 9




x 2

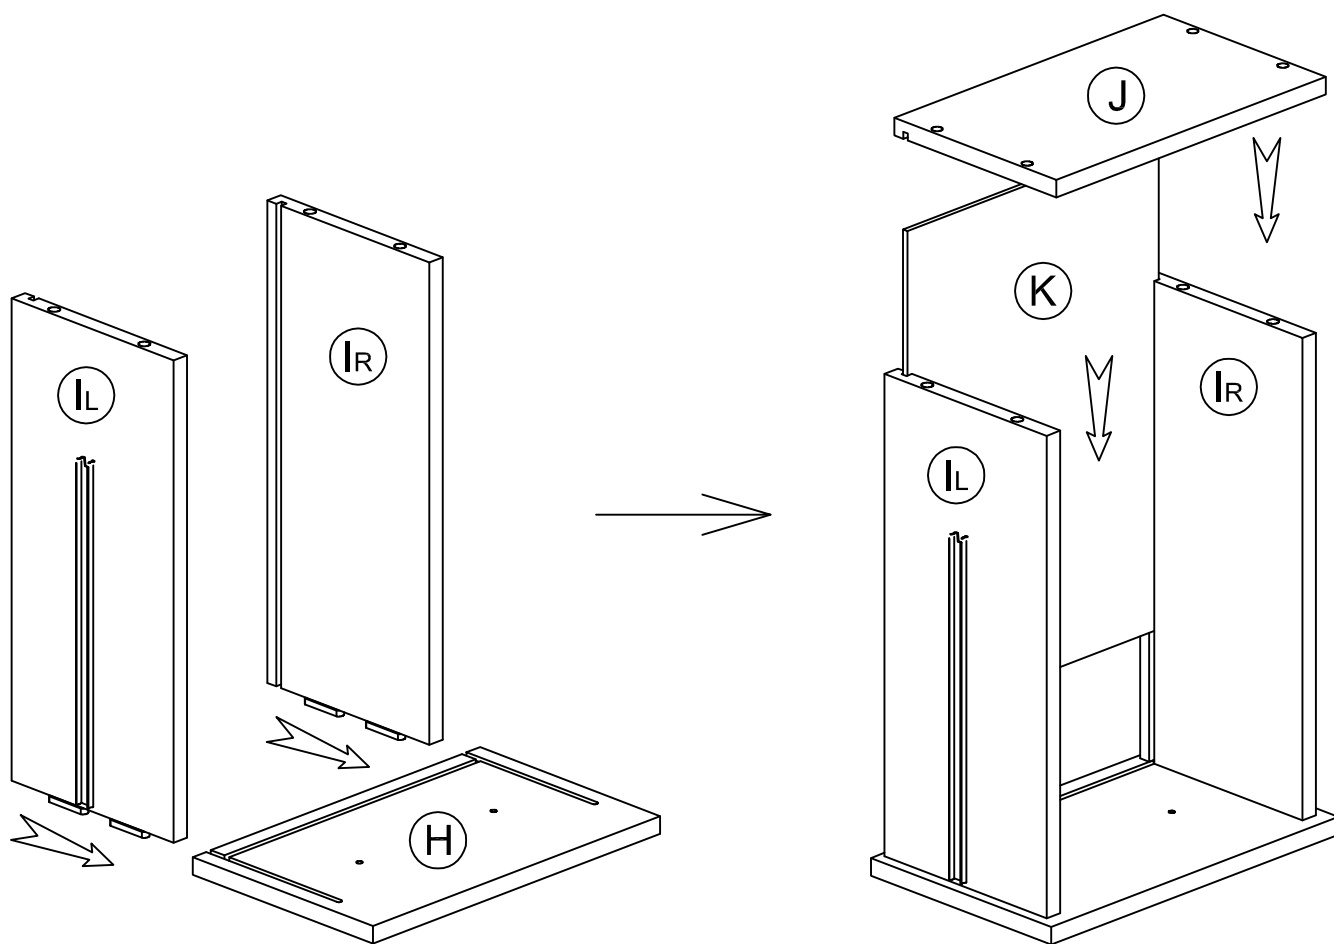


WF315819 Assembly Instructions

STEP 10

x 2

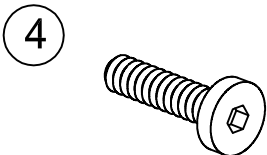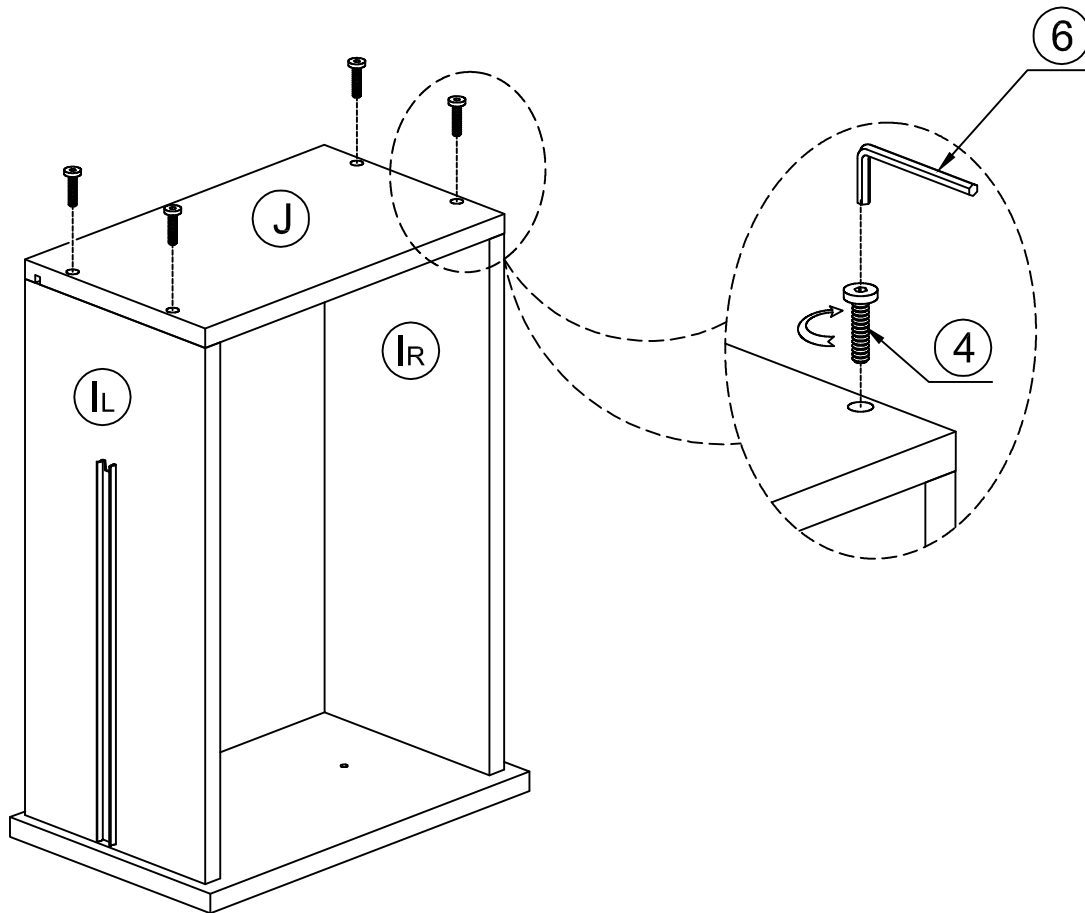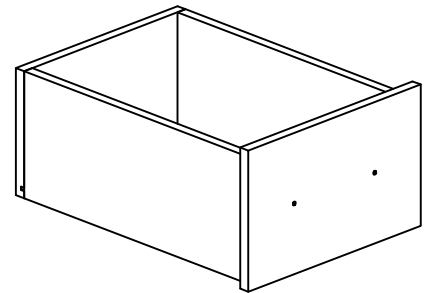

Ø1/4"x25mm Bolt 8 PCS

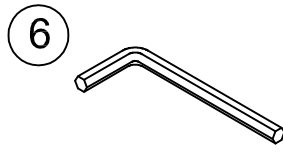


4mm Allen Key 1PC


WF315819 Assembly Instructions

STEP 11

x 2

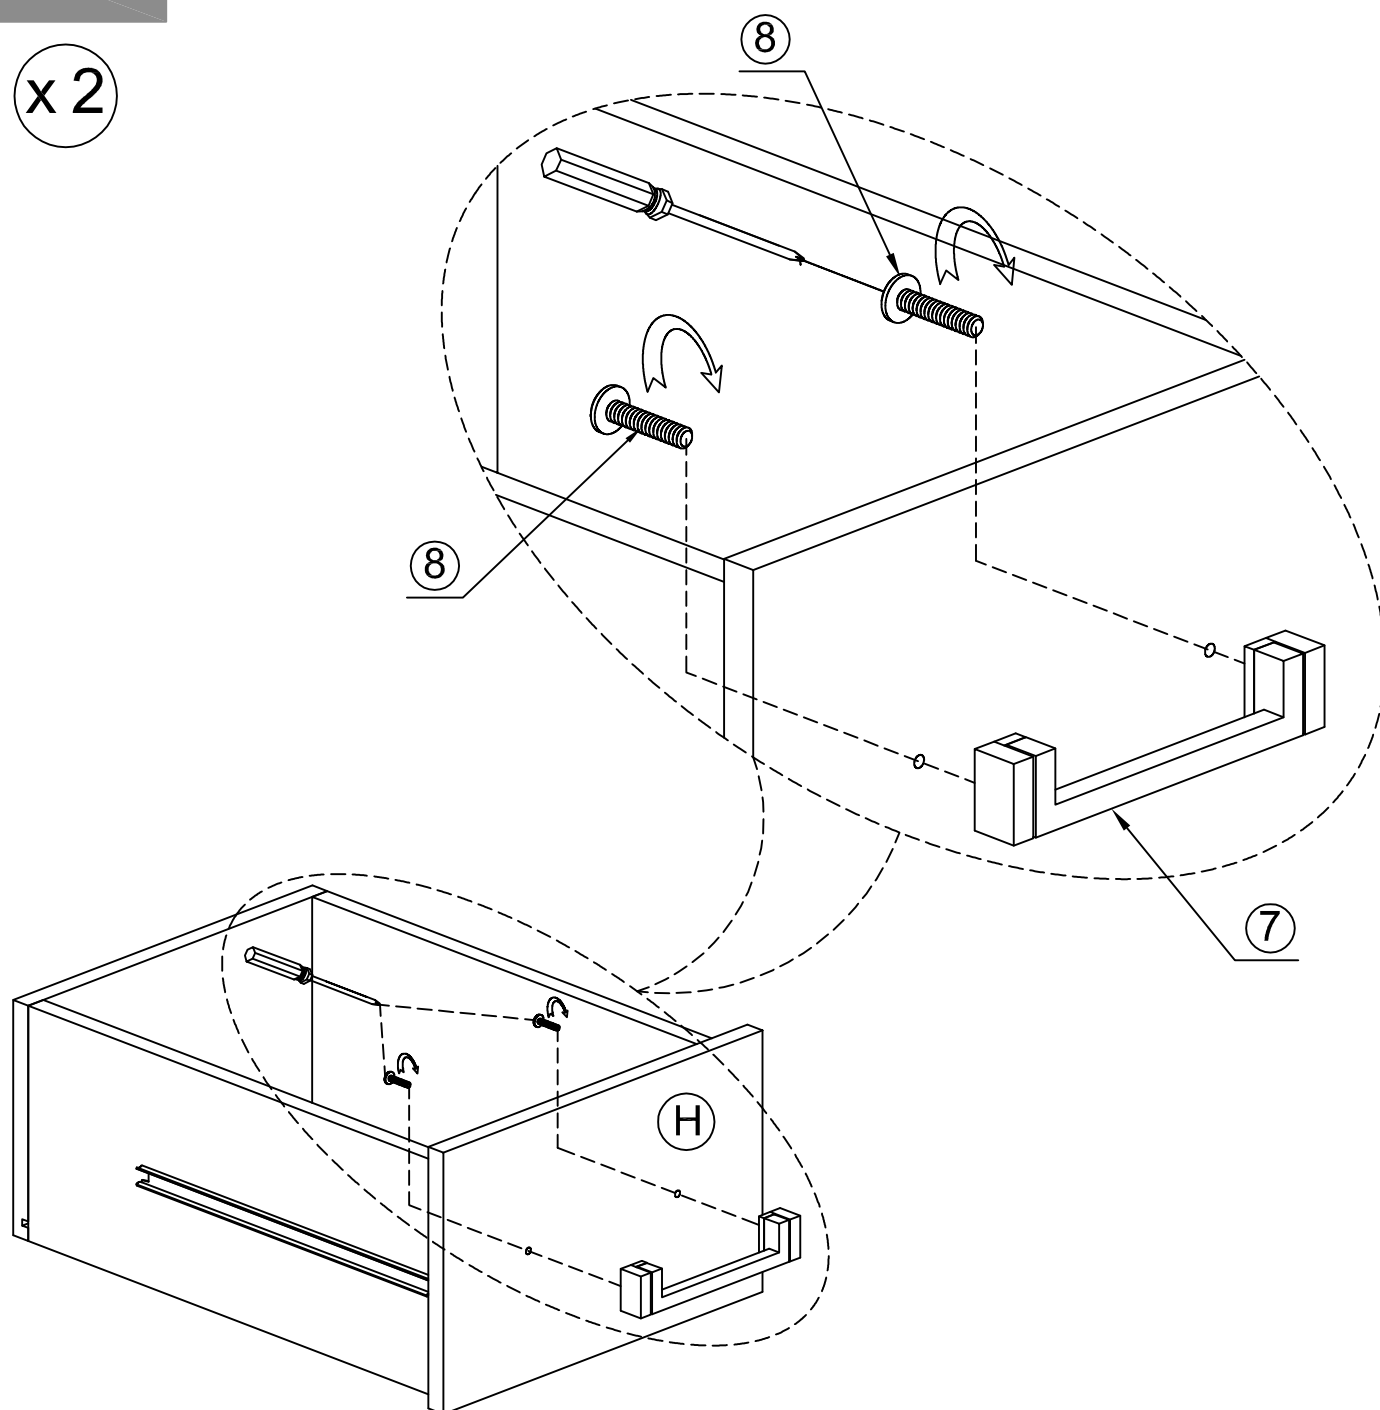


7

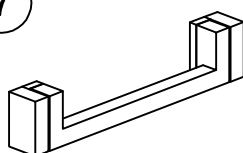

Handle 2 PCS

8




Ø5/32"x22mm Screw
4 PCS

WF315819 Assembly Instructions

STEP 12

x 2

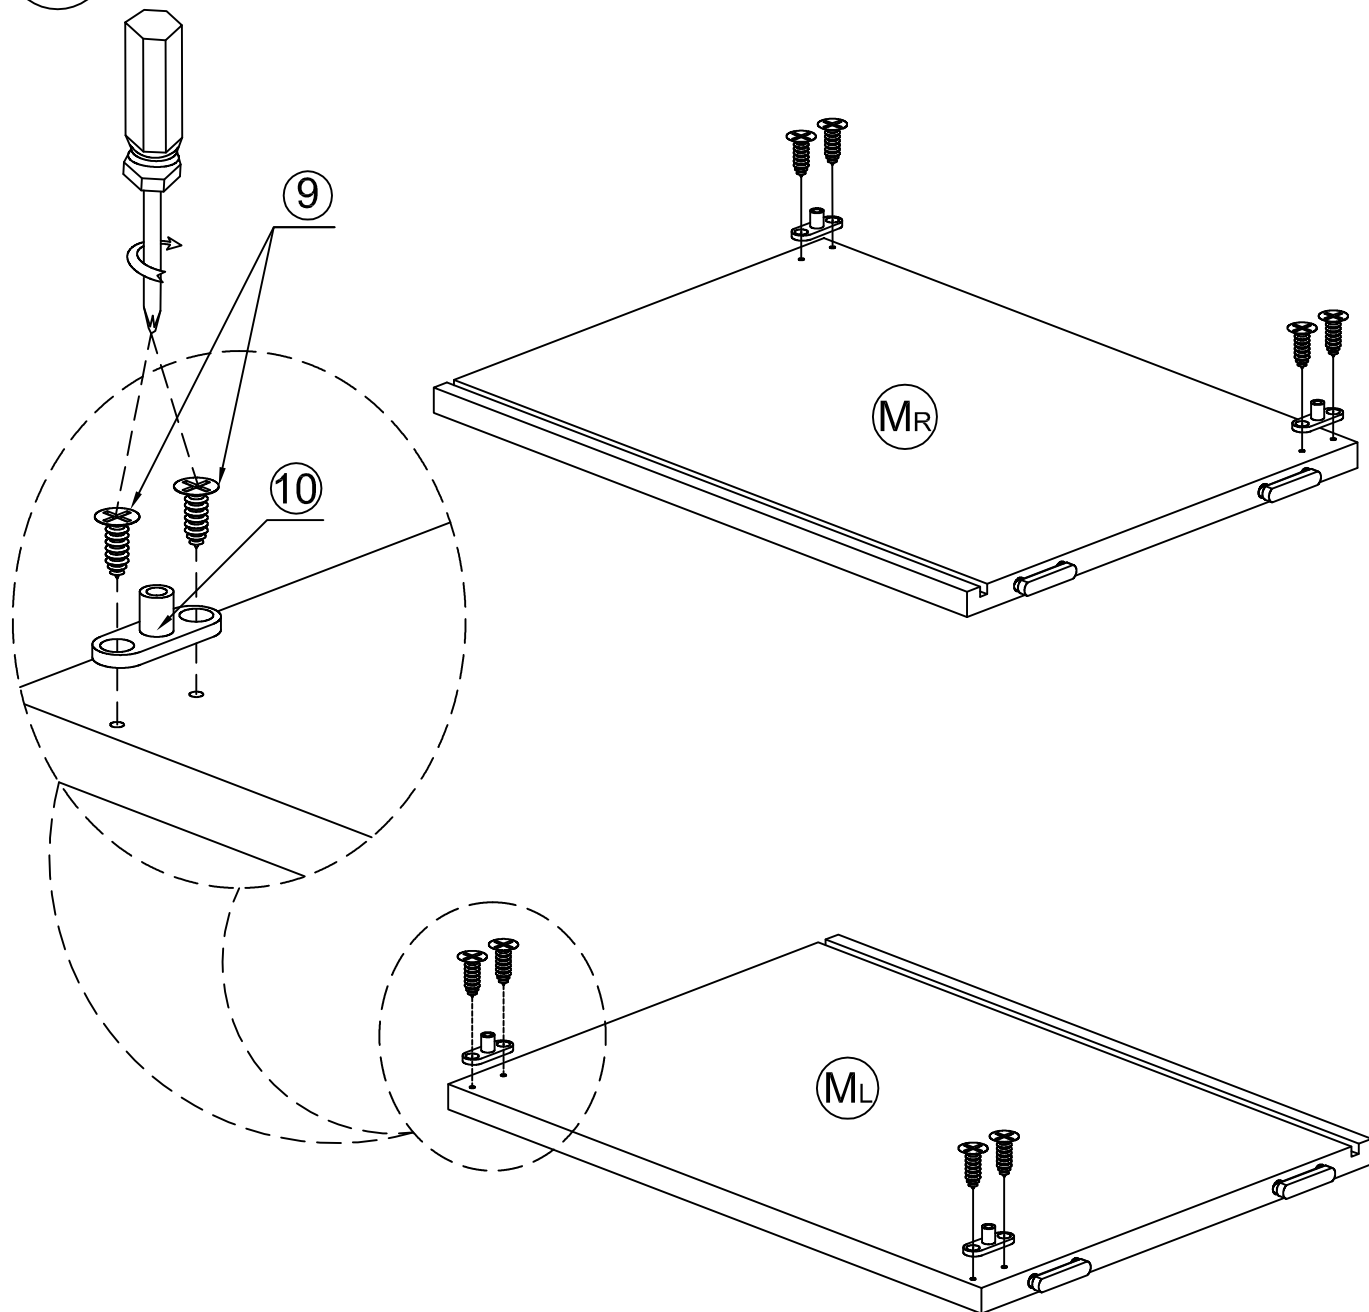


9



#3.5x12mm Screw 16 PCS

10




8 PCS

WF315819 Assembly Instructions

STEP 13

x 2

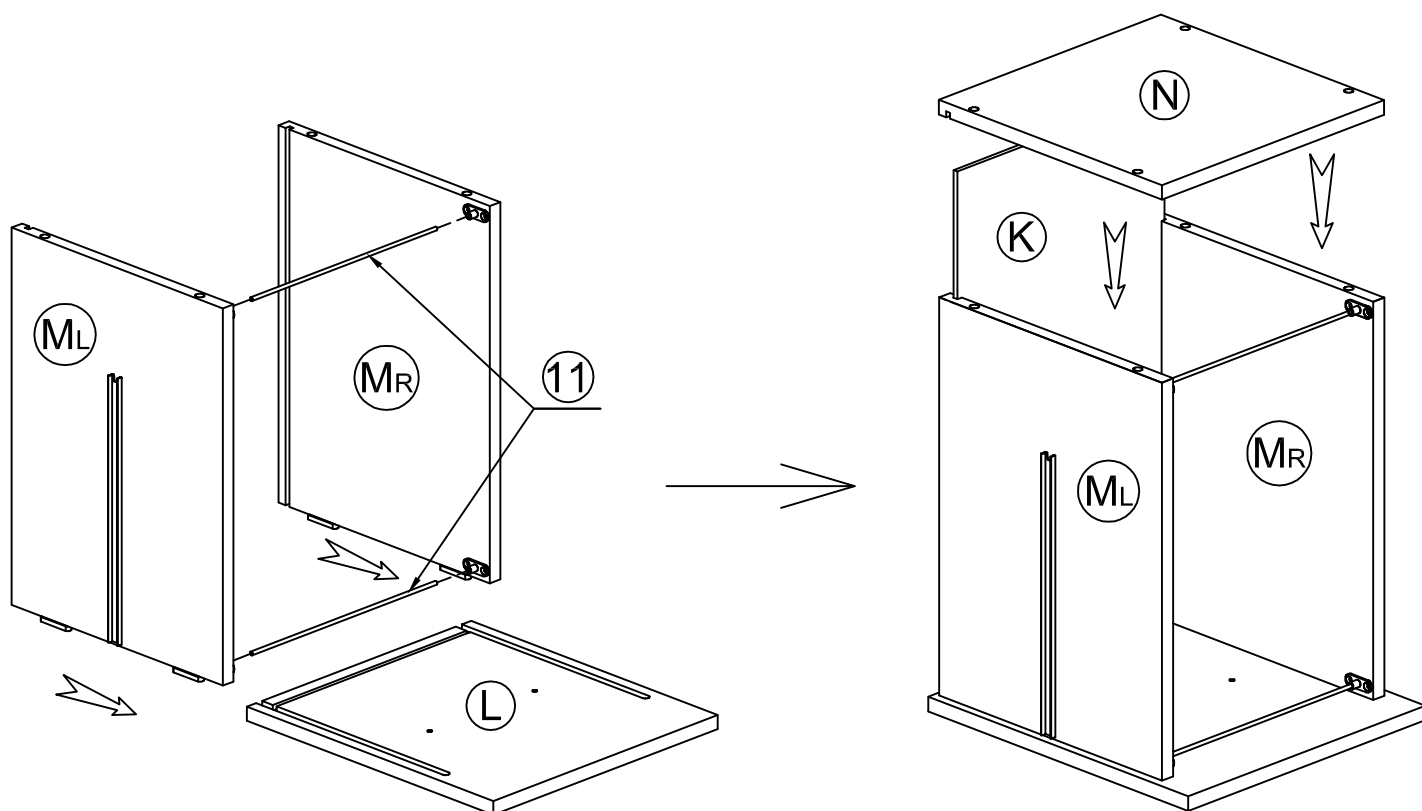

11






Ø5x262mm Round Bar
4 PCS


WF315819 Assembly Instructions

STEP 14

x 2

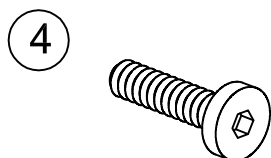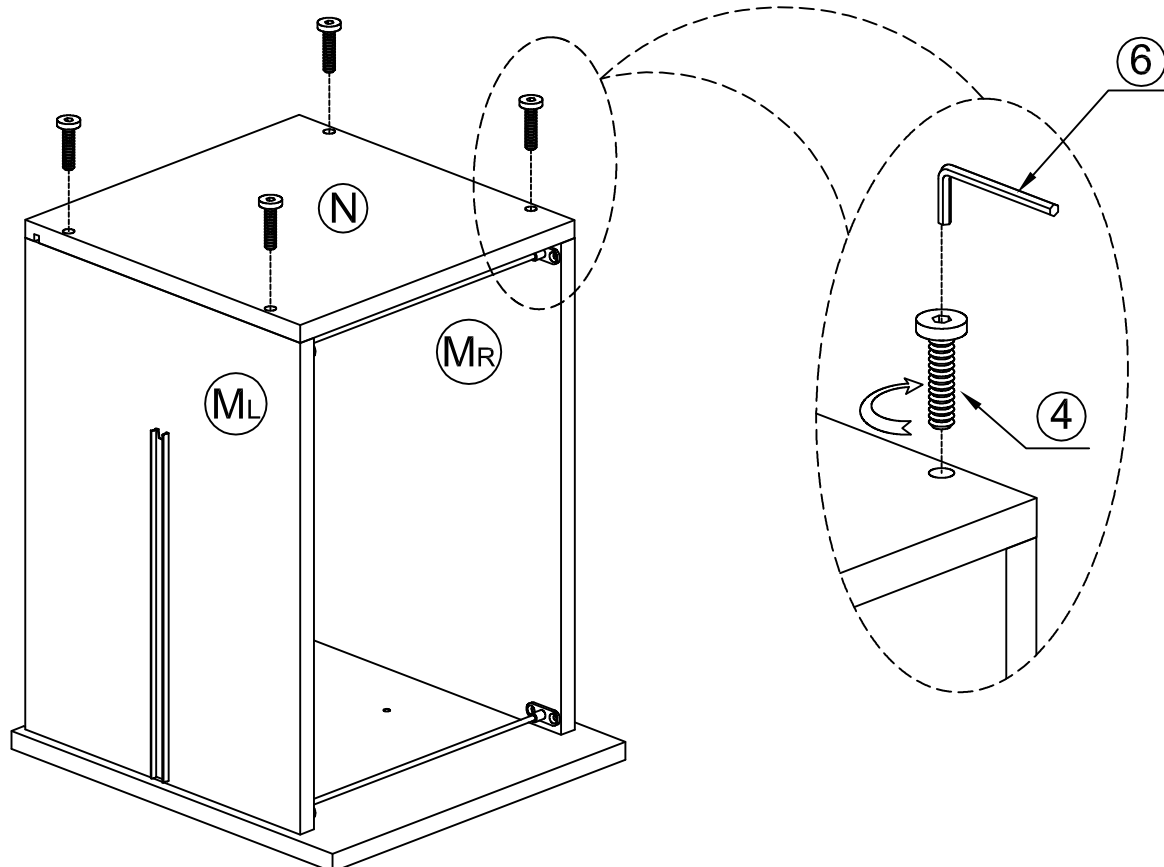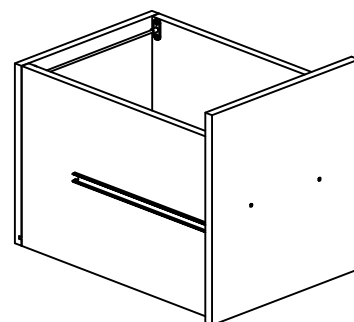

Ø1/4"x25mm Bolt 8 PCS

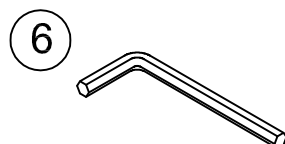


4mm Allen Key 1PC


WF315819 Assembly Instructions

STEP 15

x 2

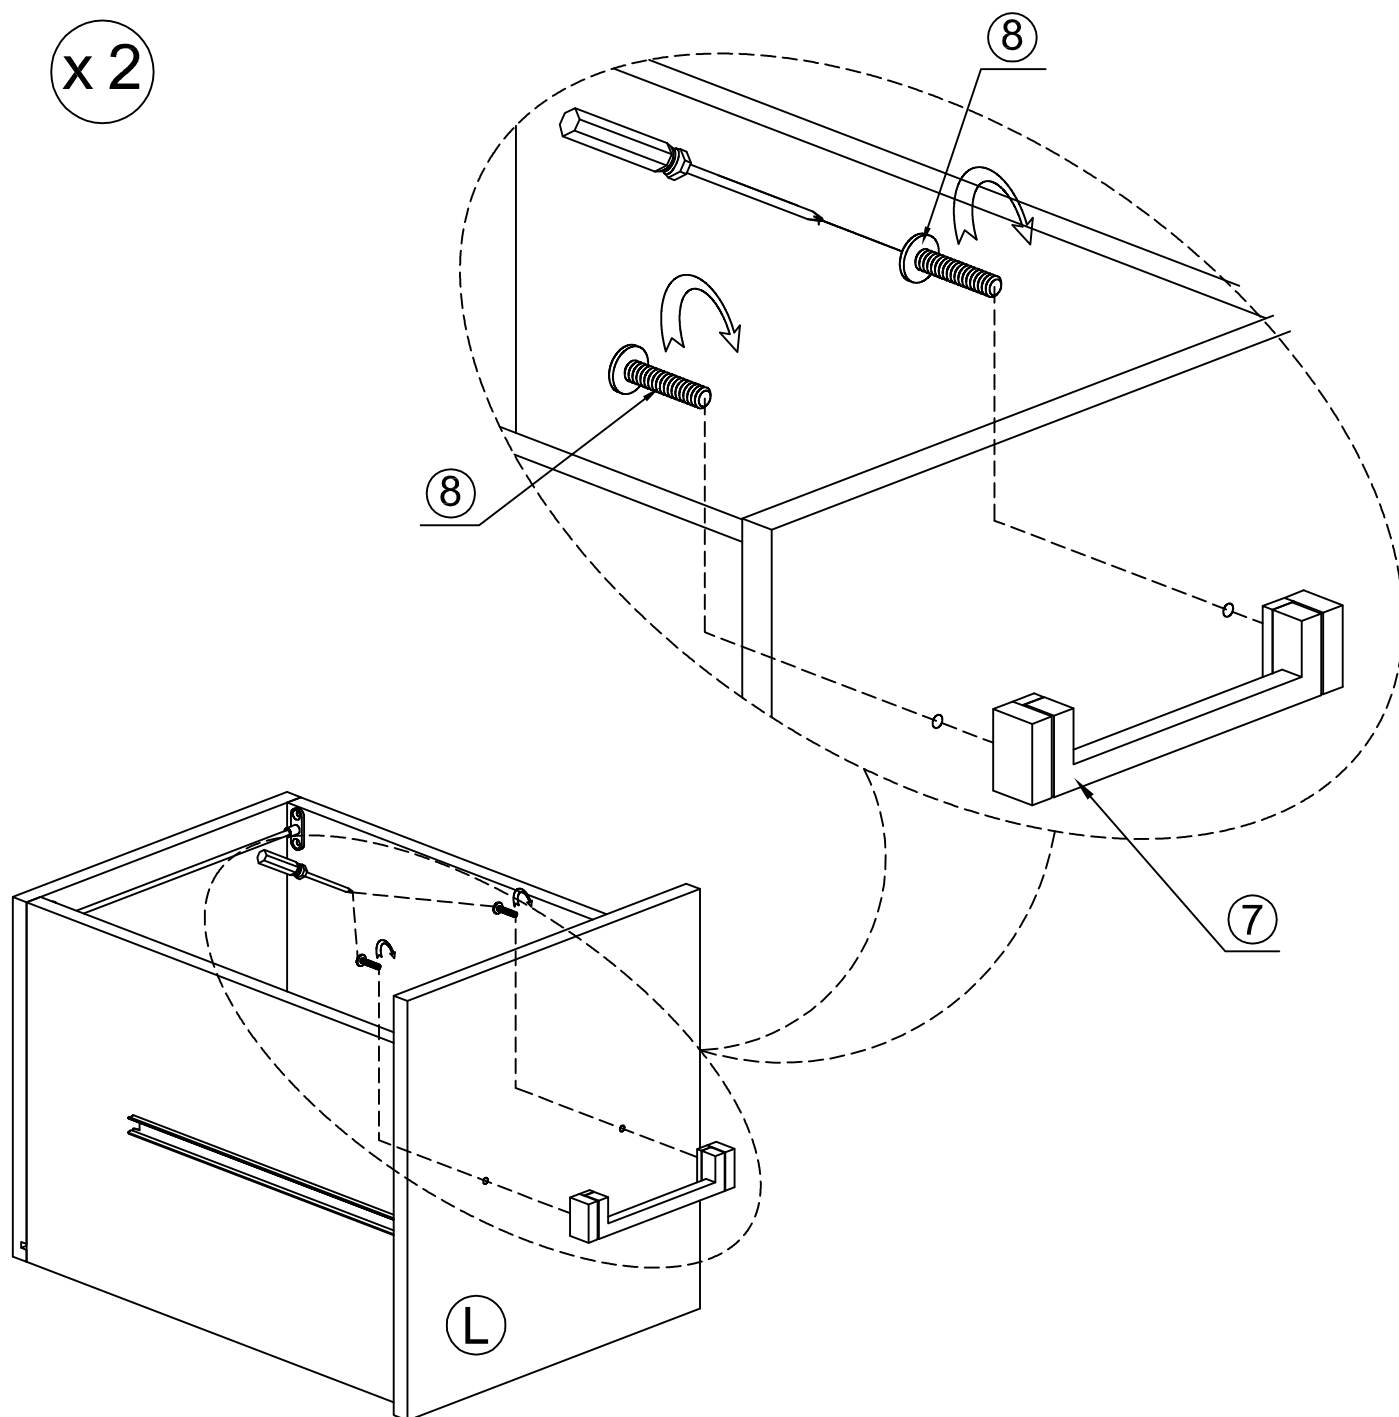


7

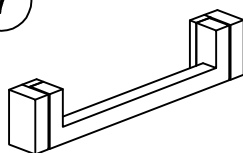

Handle 2 PCS

8





Ø5/32"x22mm Screw
4 PCS

WF315819 Assembly Instructions

STEP 16

Pull slides and slide carrier out to fully extended position.

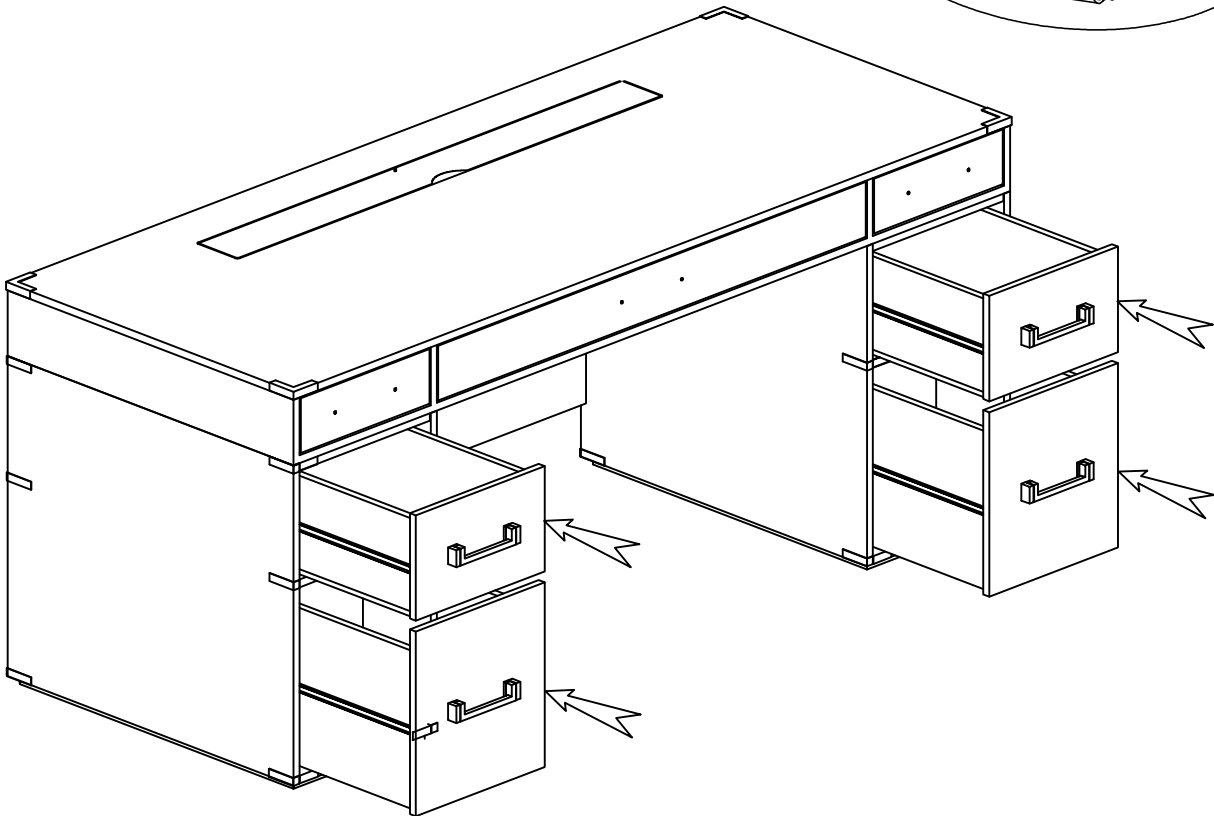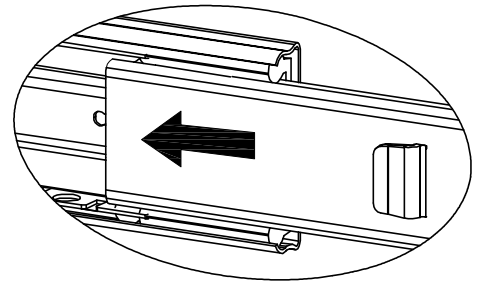


INSTALLING DRAWERS


Pull slides and slide carrier out to fully extended position (see illustration). Hold the slide on the cabinet while aligning it with the slide on the drawer. Slightly insert one side and repeat for the other side. Slowly push the drawer to its fully closed position to engage the slide. Open the drawer and reclose to ensure proper operation.

WF315819 Assembly Instructions

STEP 17

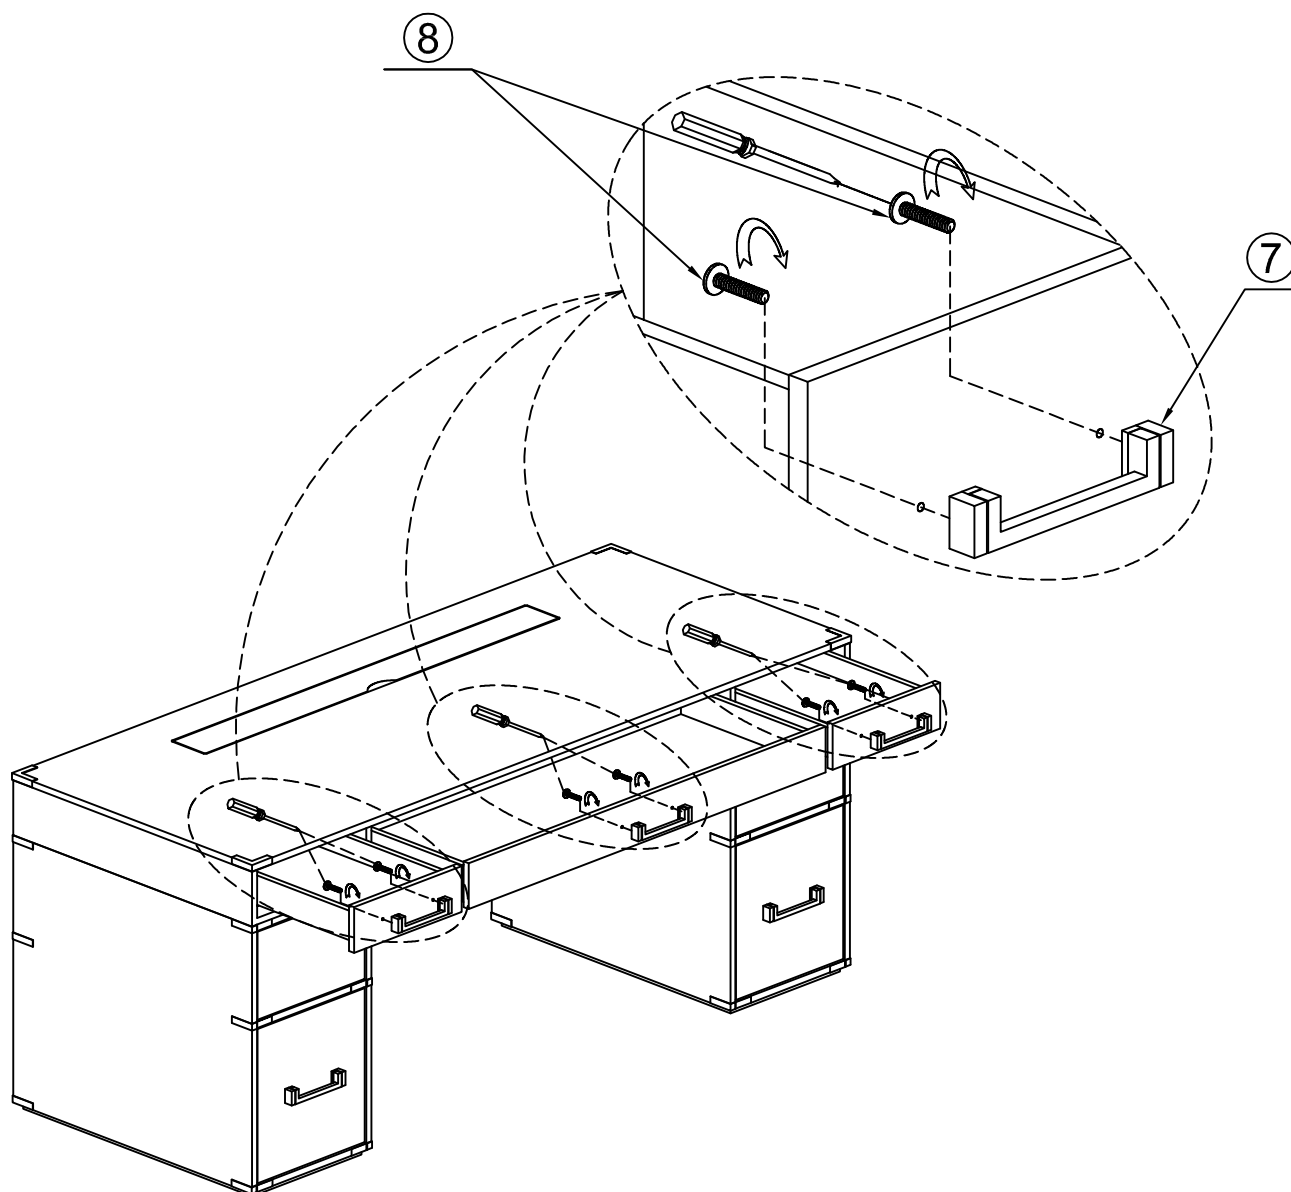

7

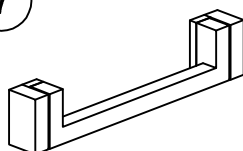

Handle 3 PCS



8



Ø5/32"x22mm Screw
6 PCS

WF315819 Assembly Instructions

STEP 18

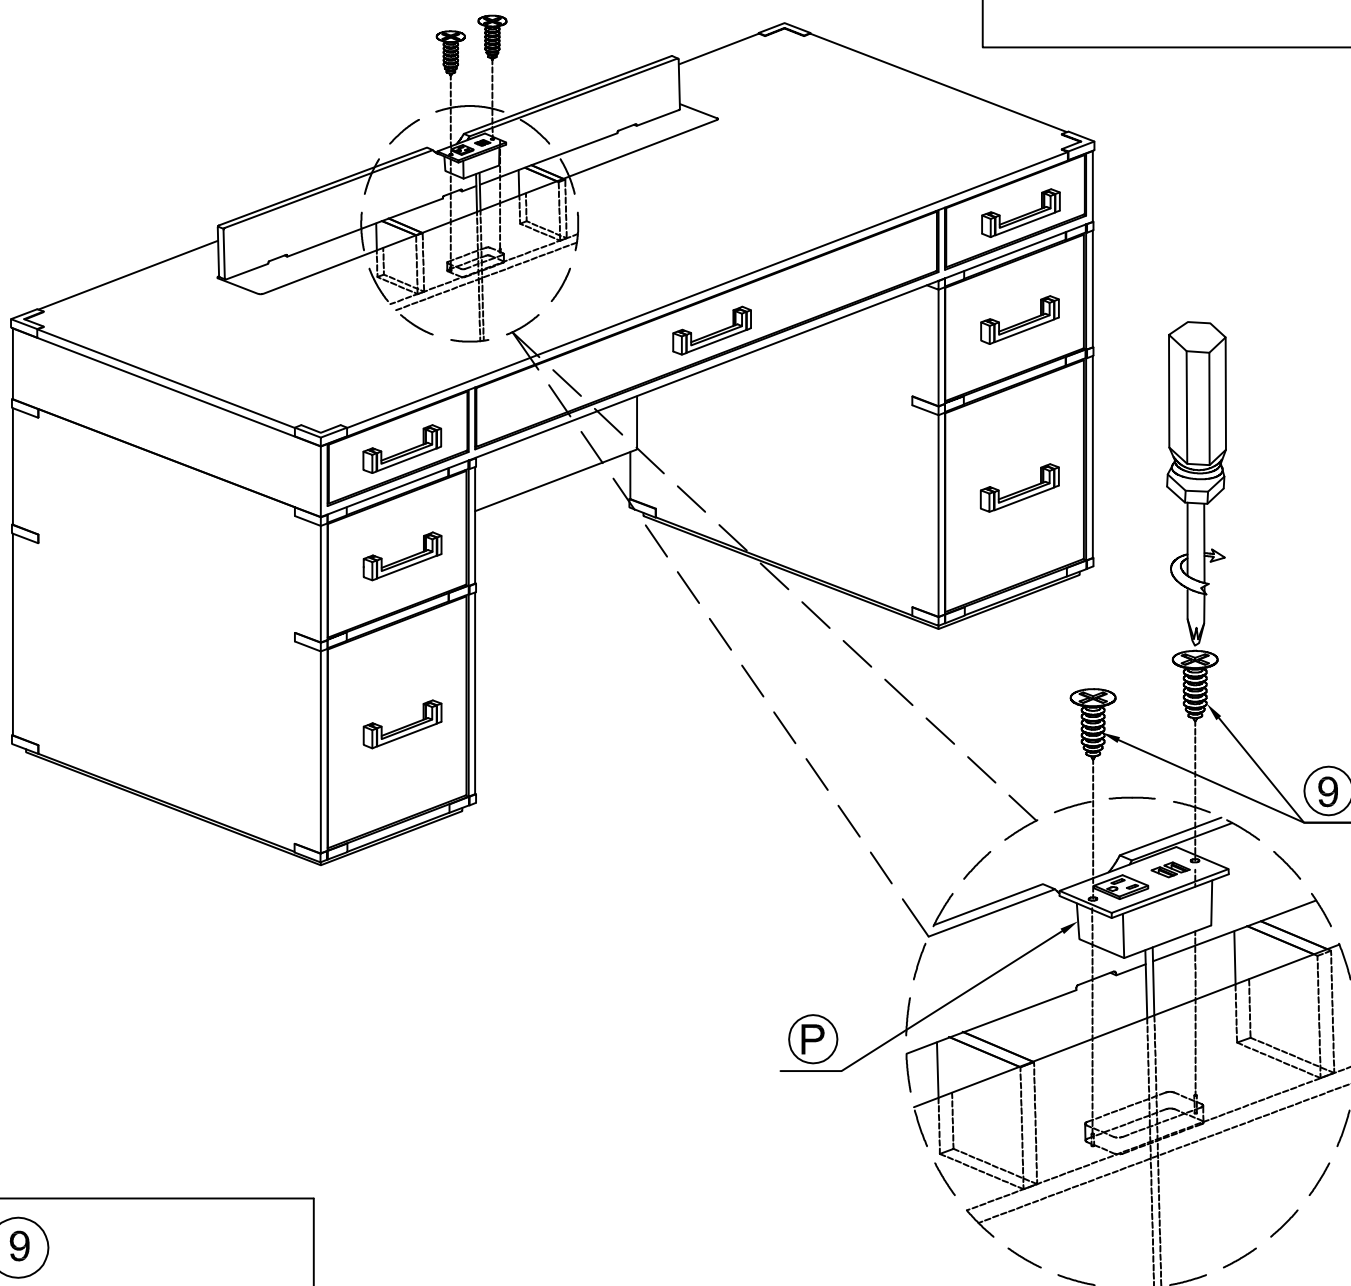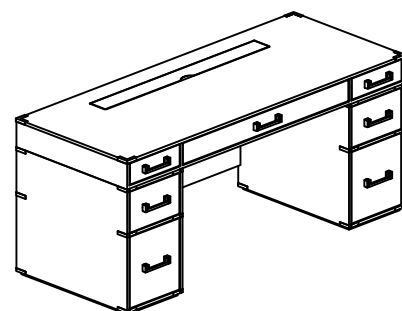

9



#3.5x12mm Screw 2 PCS