


This is the default page when the rotator first sets up. It is set up for my location.


The information at the top tells you the antenna direction in degrees and any channels you may get from that direction.

The city buttons will turn the antenna toward the programmed cities.

To customize the program you will have to alter the city names and headings based on your location.

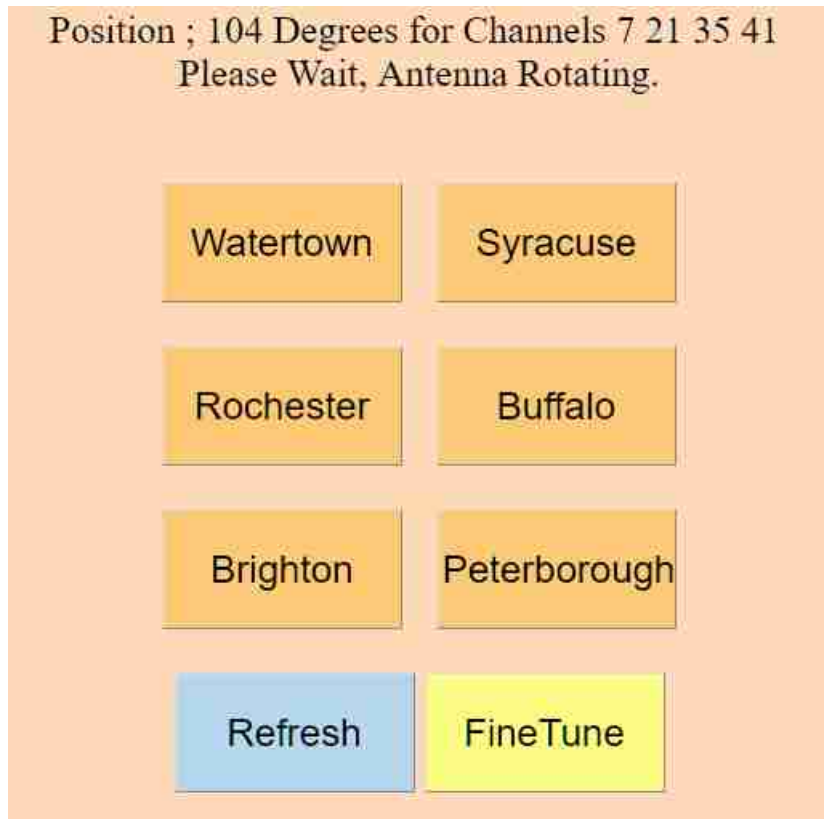

The refresh button will refresh the screen once the antenna has arrived to the selected city. This will give you the channels listing for that heading.

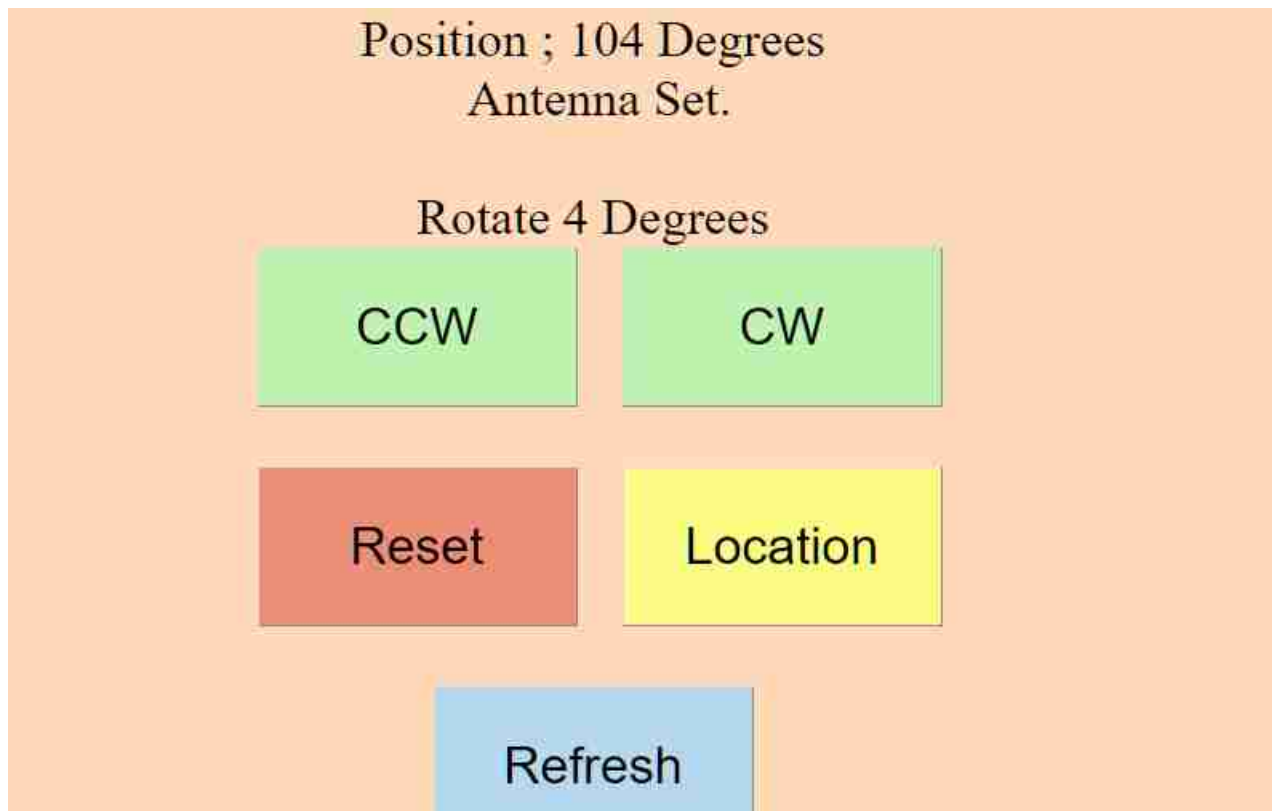

When you press the fine tune on the previous screen, this is what you get. 4 degree incremental rotations are more that incremental enough for a bowtie antenna.

Reset will cause the antenna to rotate back to zero and count back out to the default position in my case Watertown.

The location button brings you back to the location screen.