

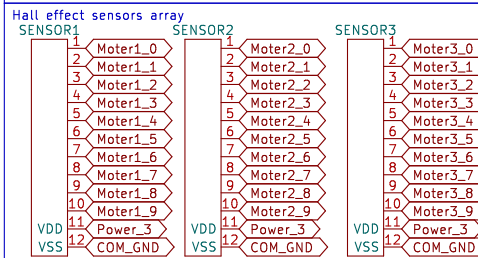



STM32F091

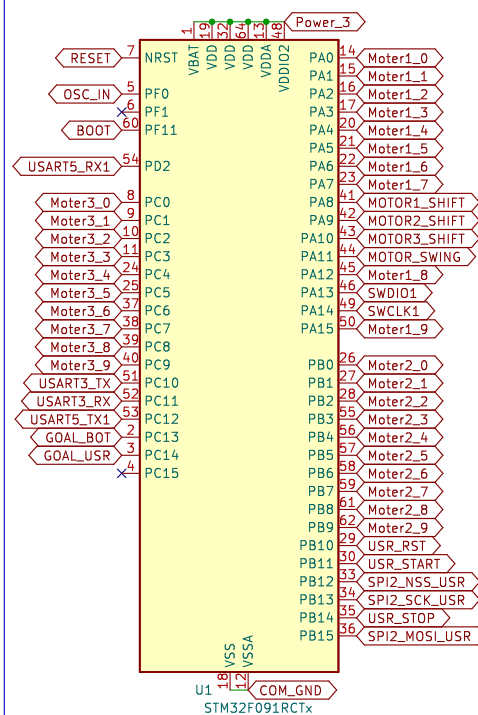


Reset and Boot

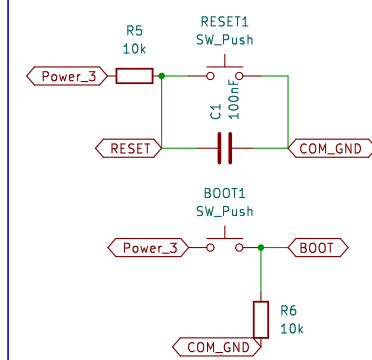


Oscillator

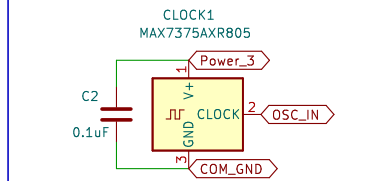


User Interface and Goal Detection

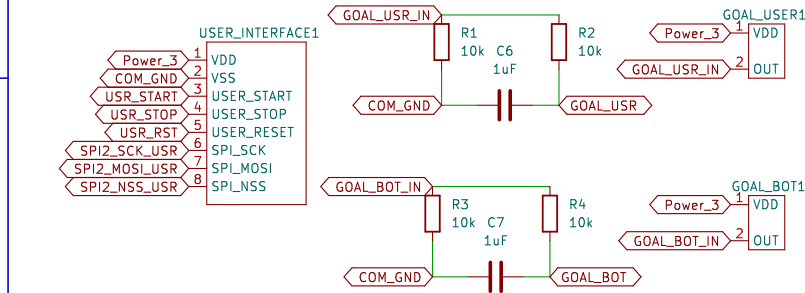


Jetson Nano Port

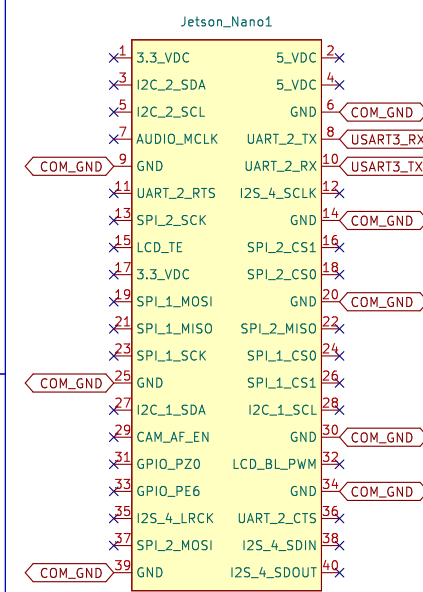


Debuggers

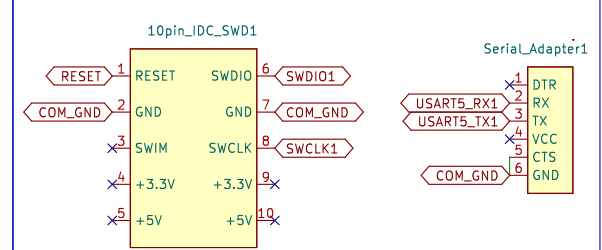

Power Supply and Decoupling Capacitors

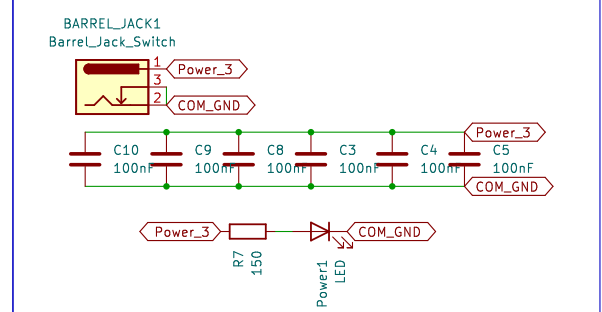

PWM Control

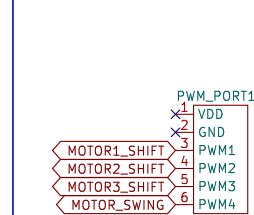

Mounting Holes

