




INDEX OF HM-004



Main Blade Holder Set

HM-004-Z-01

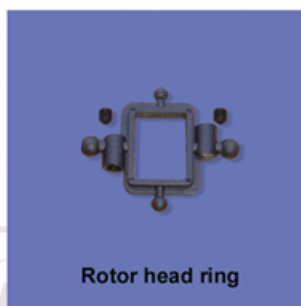

Rotor head ring

HM-004-Z-02



Guiding ring

HM-004-Z-03




Main gear

HM-004-Z-04




Tail rotor blade

HM-004-Z-17

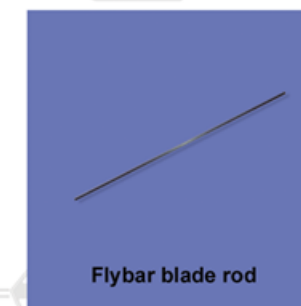


Flybar blade rod

HM-004-Z-18

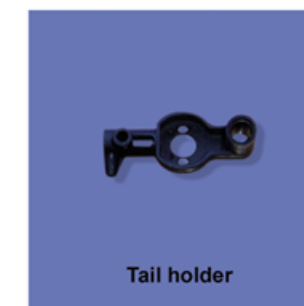

Tail holder

HM-004-Z-19

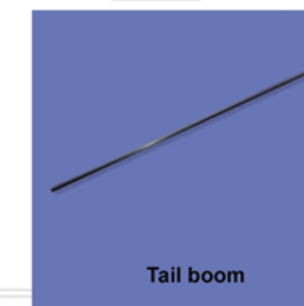

Tail boom

HM-004-Z-20



Tail motor

HM-004-Z-05



Short tiebar

HM-004-Z-06



Skid Landing

HM-004-Z-07



Tail gear

HM-004-Z-08



Swashplate

HM-004-Z-21




Flybar Paddle

HM-004-Z-22



Tail knighthead

HM-004-Z-23

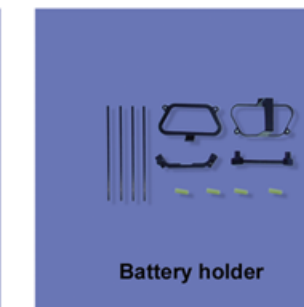


Battery holder

HM-004-Z-24




Main rotor blade

HM-004-Z-09

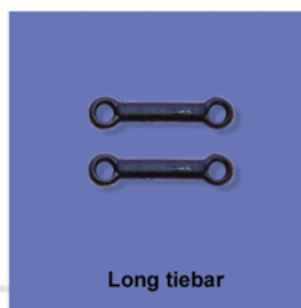


Long tiebar

HM-004-Z-10

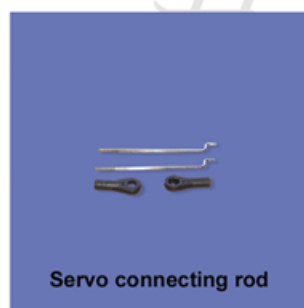


Servo connecting rod

HM-004-Z-11

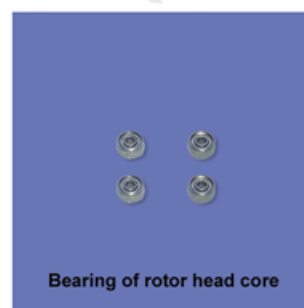

Bearing of rotor head core

HM-004-Z-12

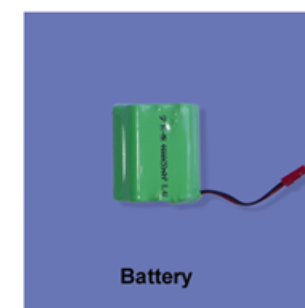


Battery

HM-004-Z-25




9g servo-4

HM-004-Z-26

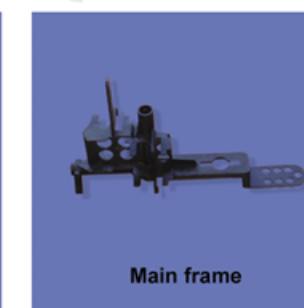

Main frame

HM-004-Z-27

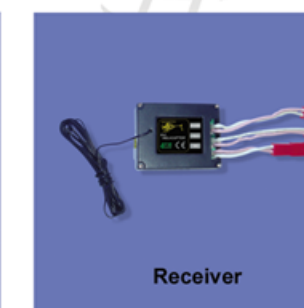


Receiver

HM-004-Z-28




Tail bearing

HM-004-Z-13

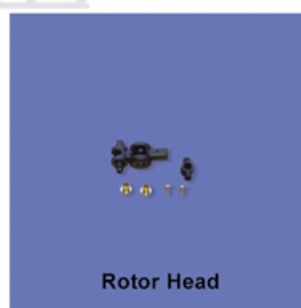

Rotor Head

HM-004-Z-14

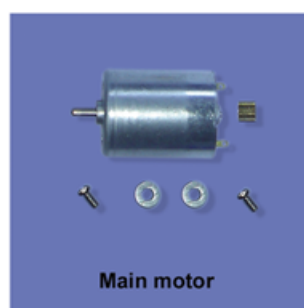

Main motor

HM-004-Z-15




Canopy

HM-004-Z-16



Charger

HM-004-Z-29

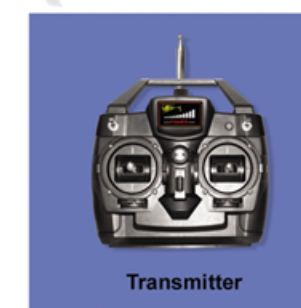

Transmitter

HM-004-Z-30