


Xilinx ISE14.2 Install Manual

1. 双击下面图标，运行“xsetup.exe”





2. 启动软件安装界面，如下图所示：

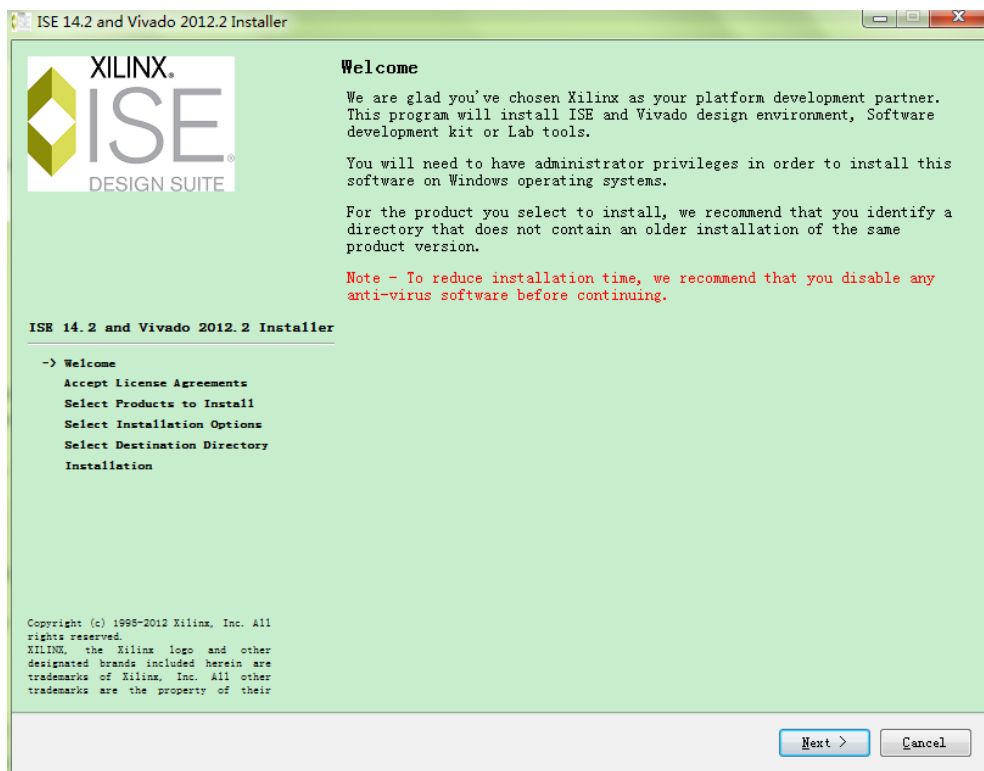


3. 点击“next”，在接下来的两个界面中均勾选“I accept……”并点击“next”



4. 接下来的界面中，保持默认选项，点击“next”，直至出现安装过程界面。

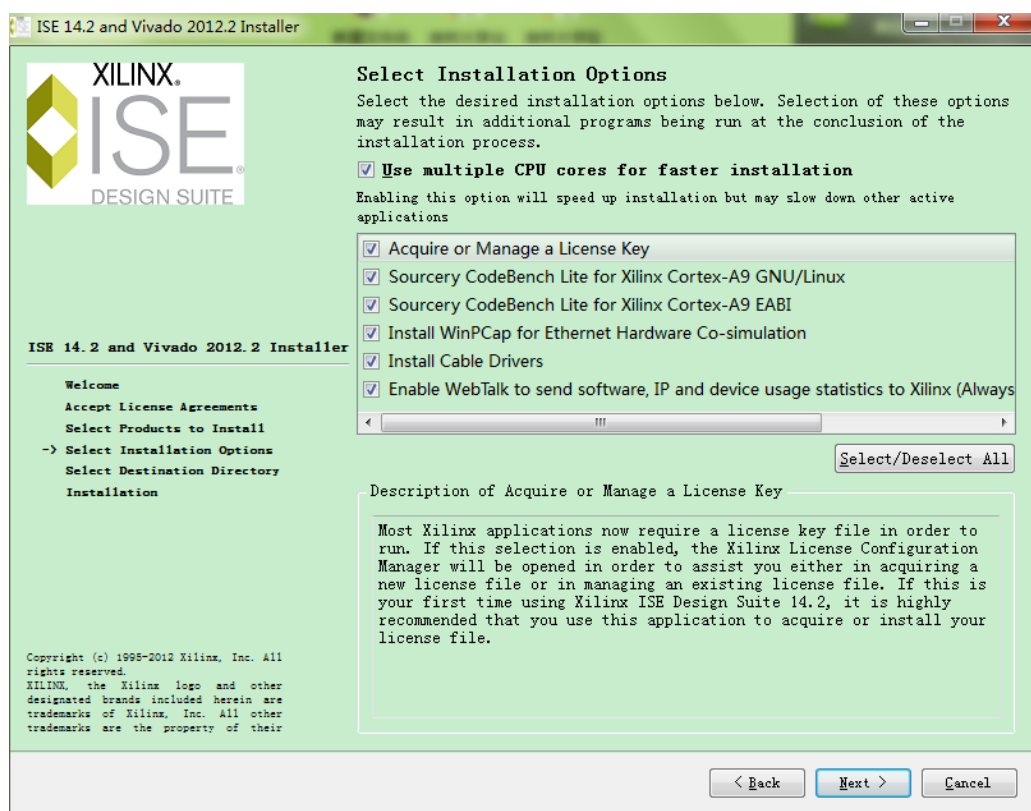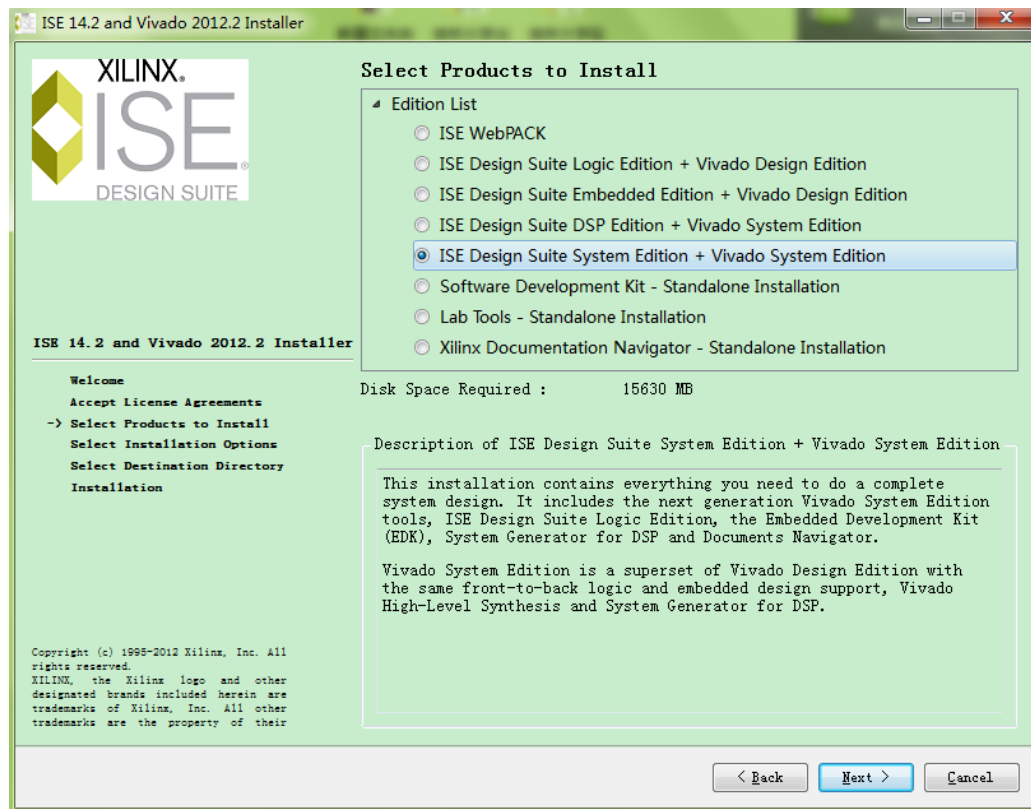


5. 点击“Next”，出现安装目录选择界面，如下图示：

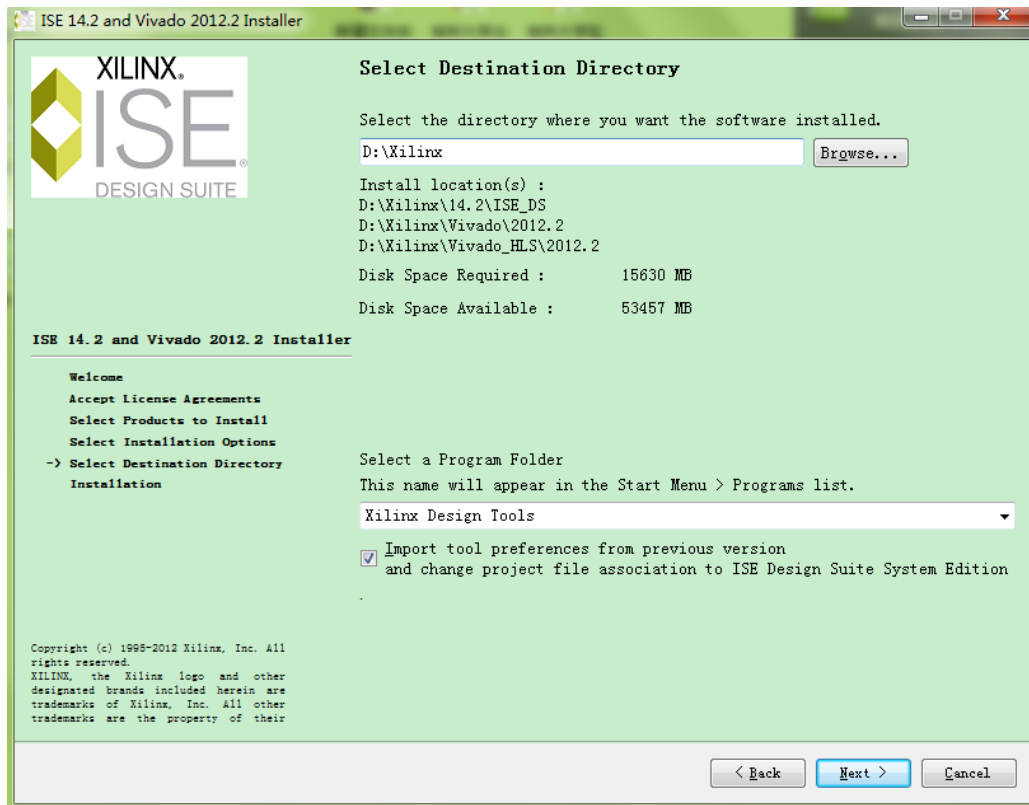


6. 系统默认为 C 盘，这里选择安装在 D 盘。然后点击“Next”。




7. 点击“Install”，进入 ISE14.2 软件安装界面，安装过程开始，如下图示：

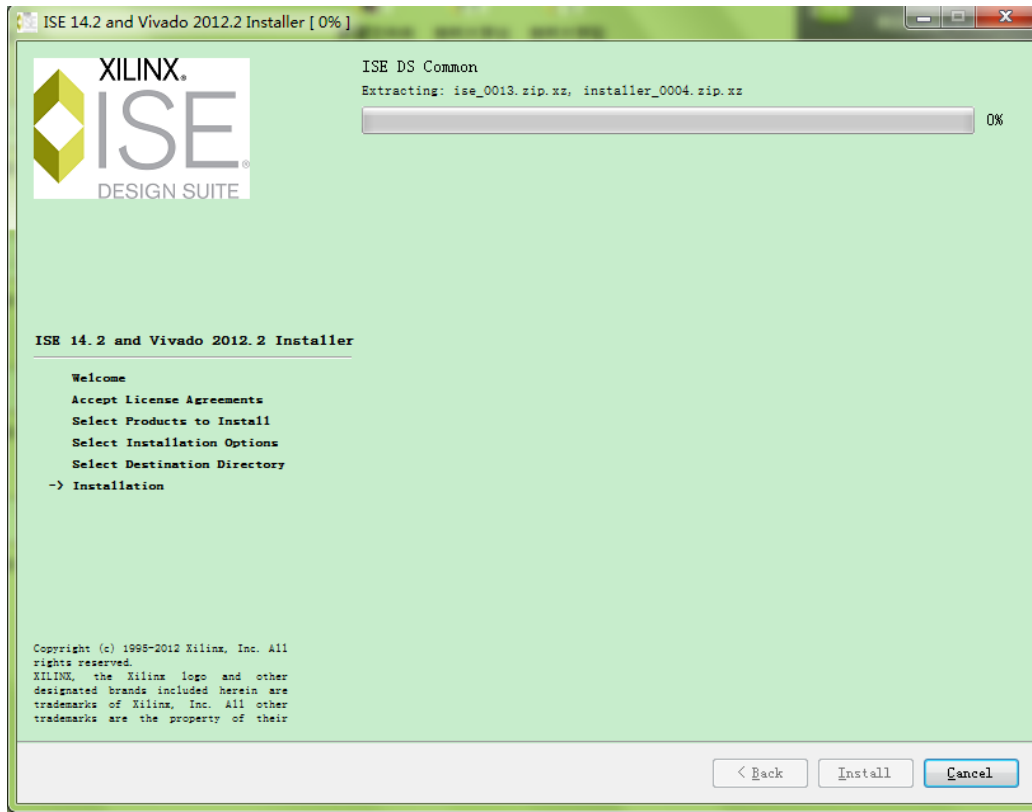


8. 在软件安装到 90%左右的时候，弹出安装 winPcap 的提示，点击“Next”。

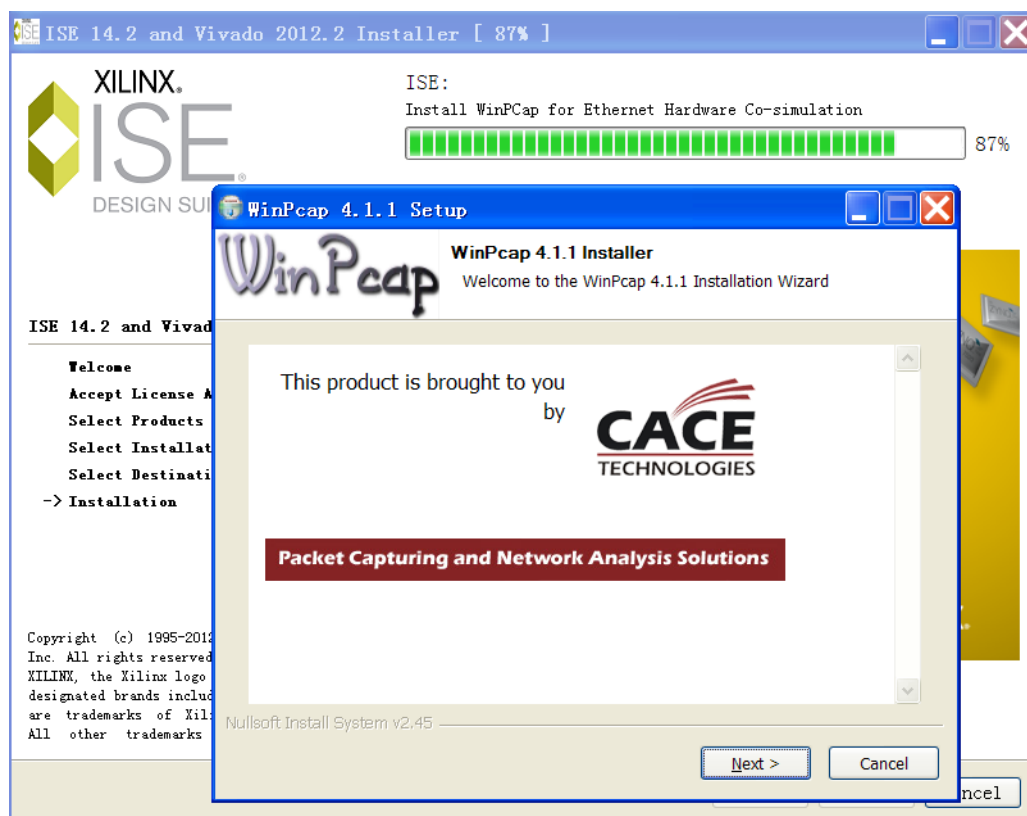


9. 以下是 WinPcap 的安装过程，一直点击“Next”选项，直至出现“I Agree”选项。

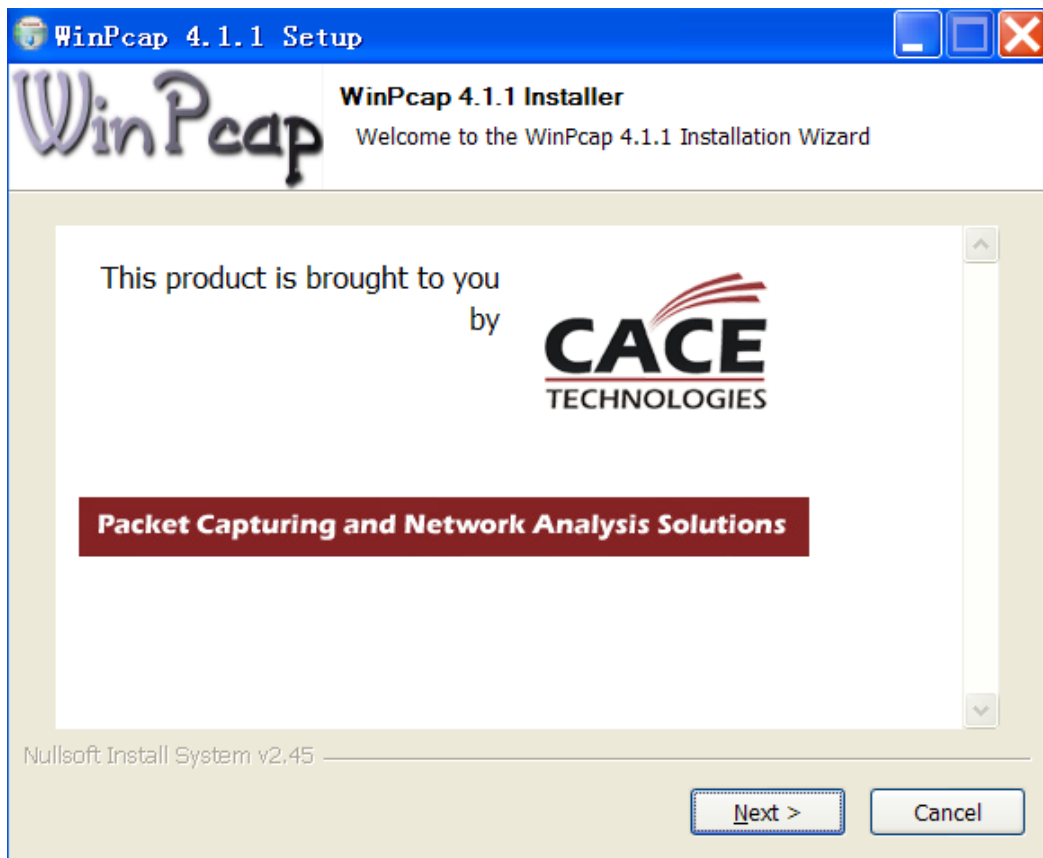


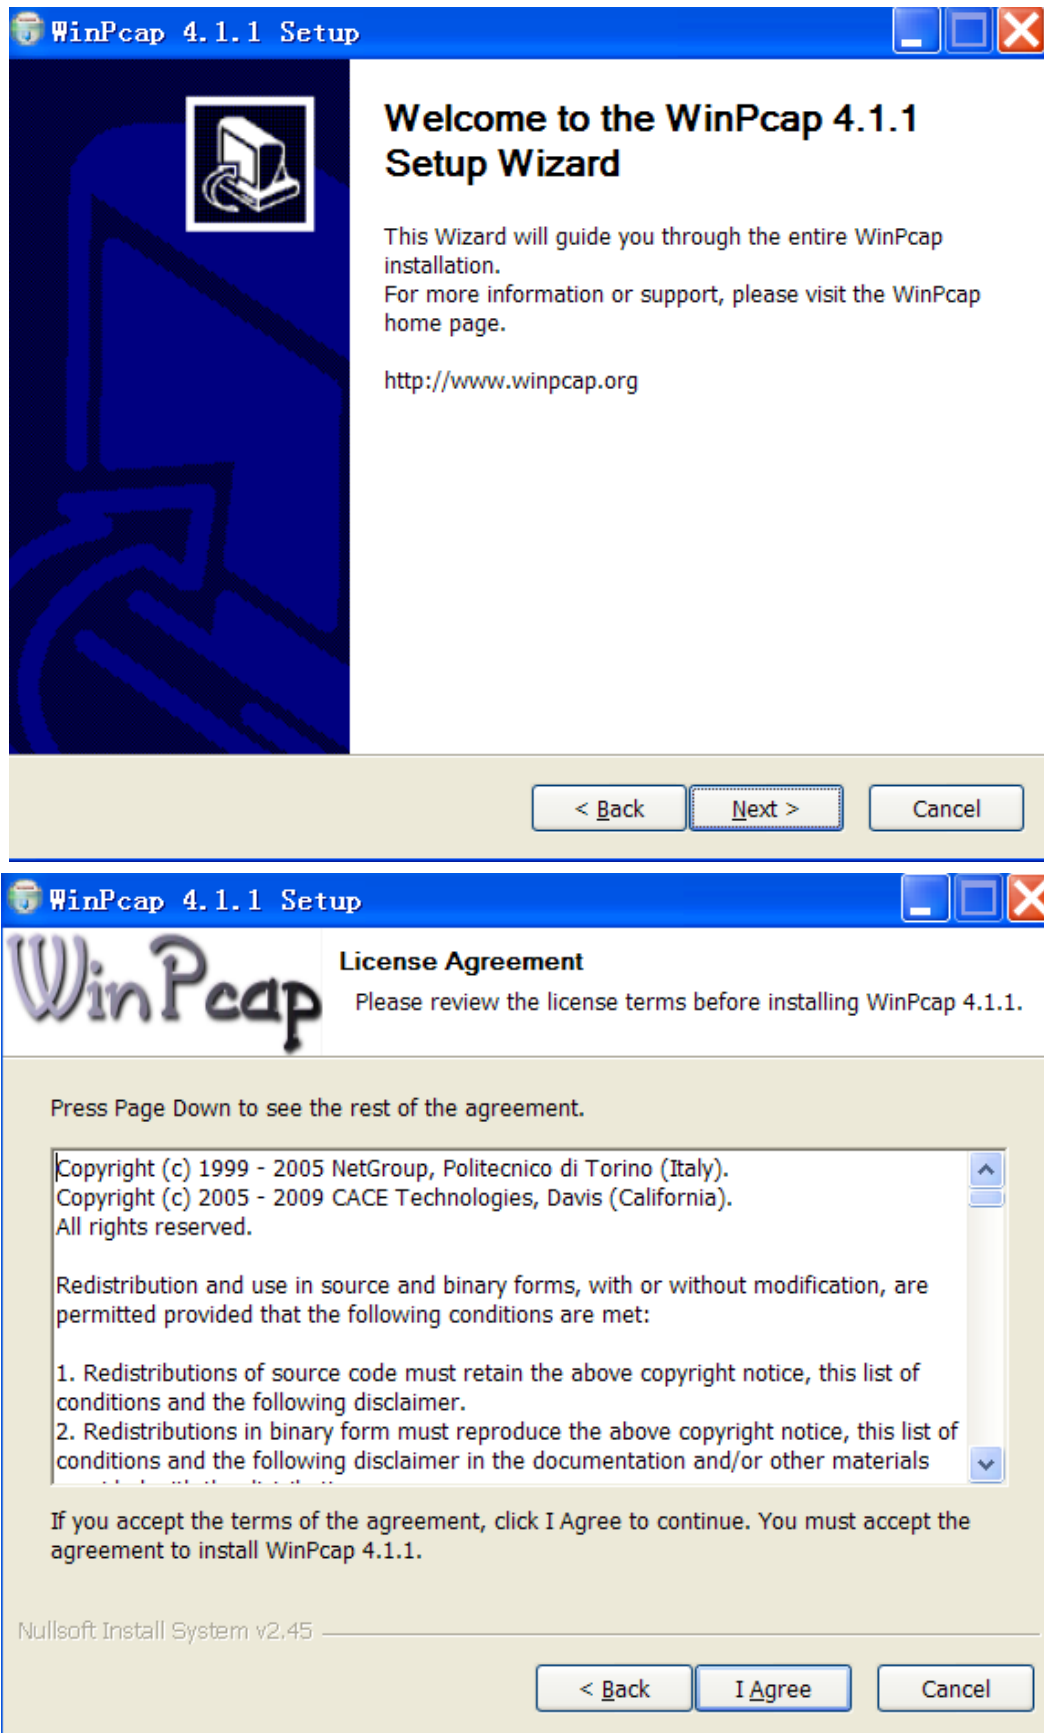


10. 点击 “I Agree”

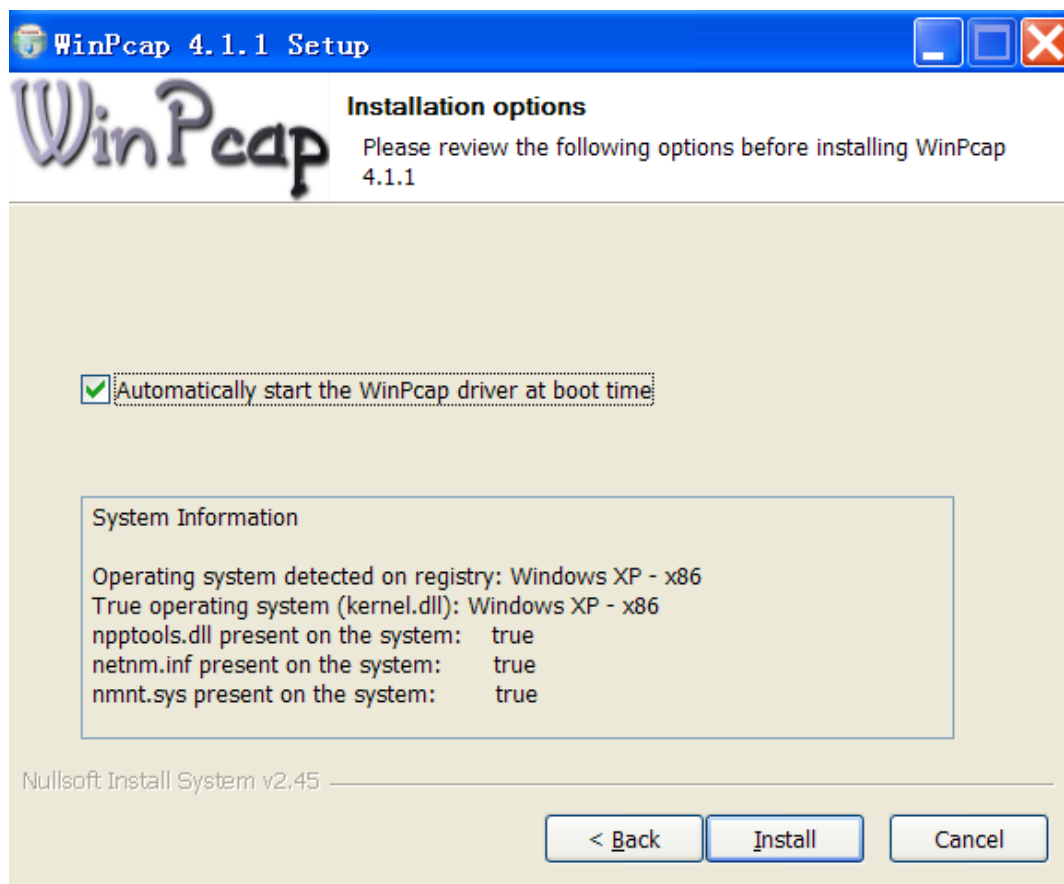


11. 点击 “Install”

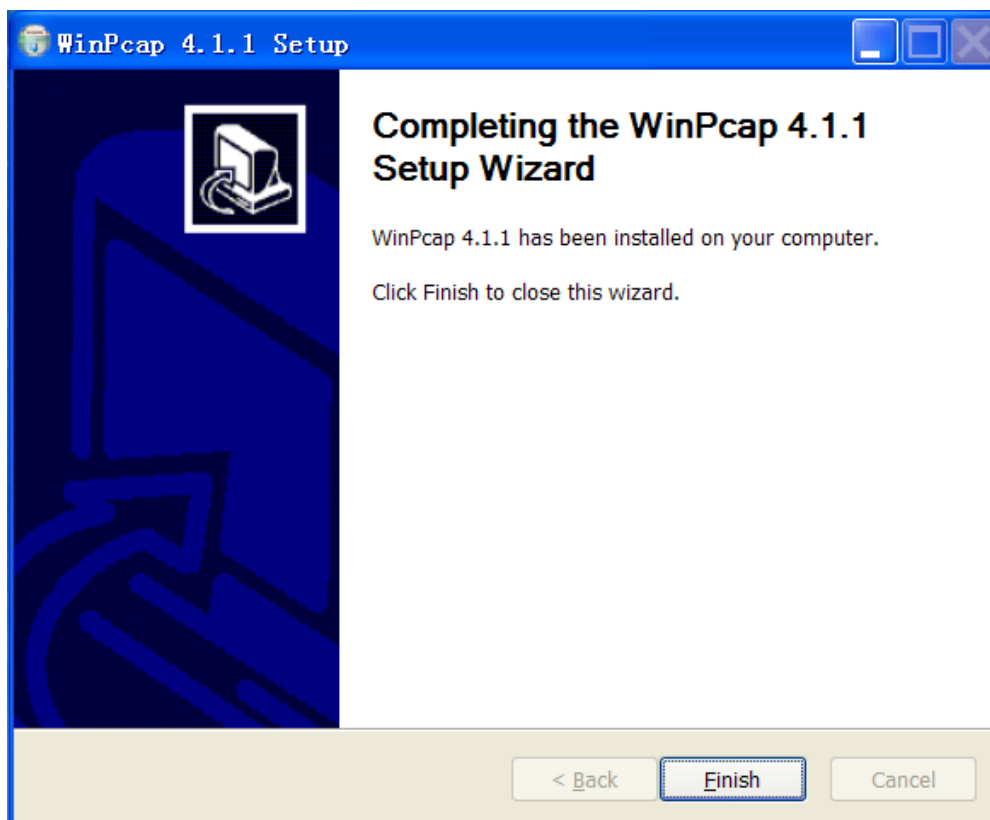

12. 点击“Finish”完成 WinPcap 的安装。接着出现 MATLAB Install 提示框，点击“Ok”。

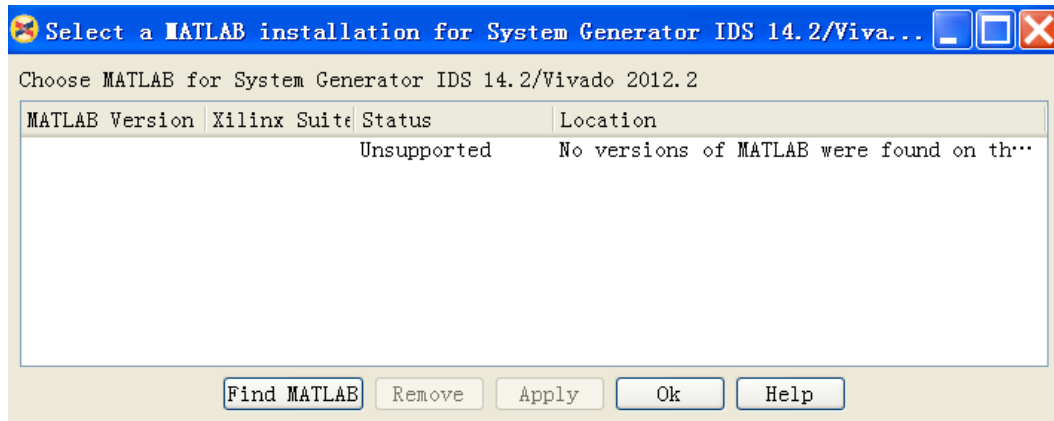


13. 出现 ISE14.2 安装进度 100% 提示，如下图，点击“Finish”。同时，出现 License 安装对话框。

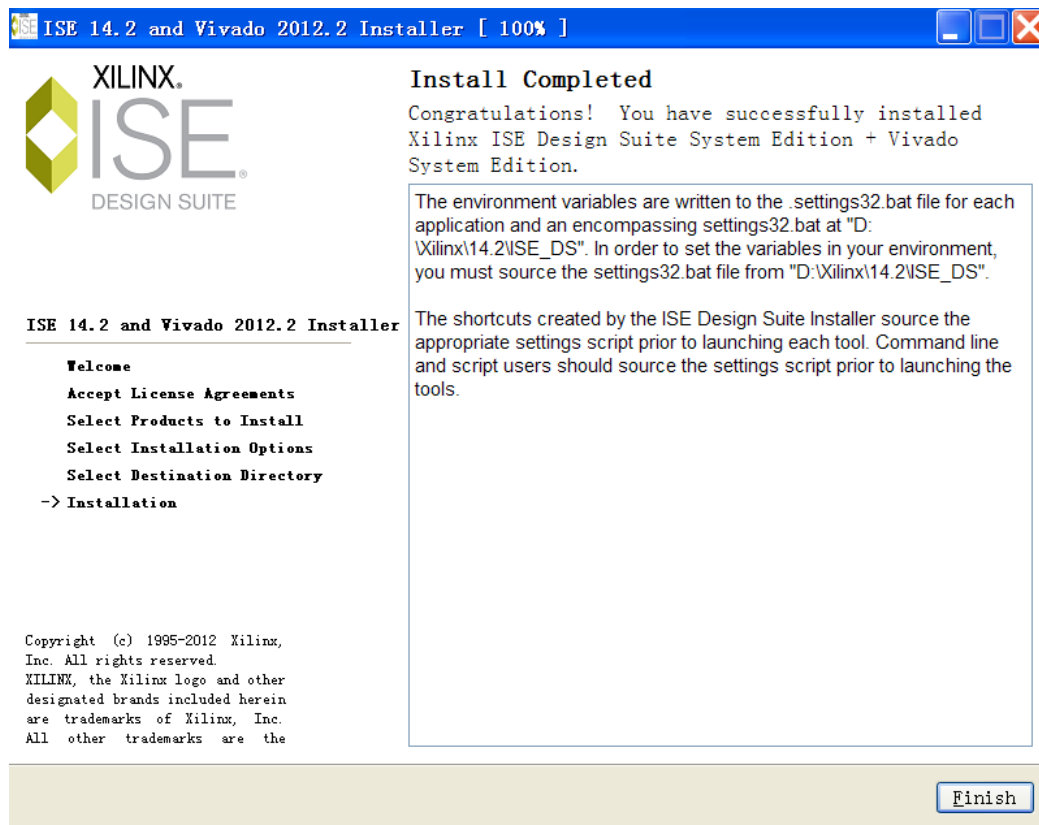


注意:

如果已经有 License 文件，请直接跳至第 **23** 步骤操作；如果没有 License，请接着向下执行。


- 14.** 点击下图中的“Get Free ISE WebPack License”（**注意:** 这里以申请免费的 WebPACK 版的 License 为例操作，如想申请其他类型 License，请在下图中选取相应的选项），获取 WebPack 版免费 License，并点击“Next”

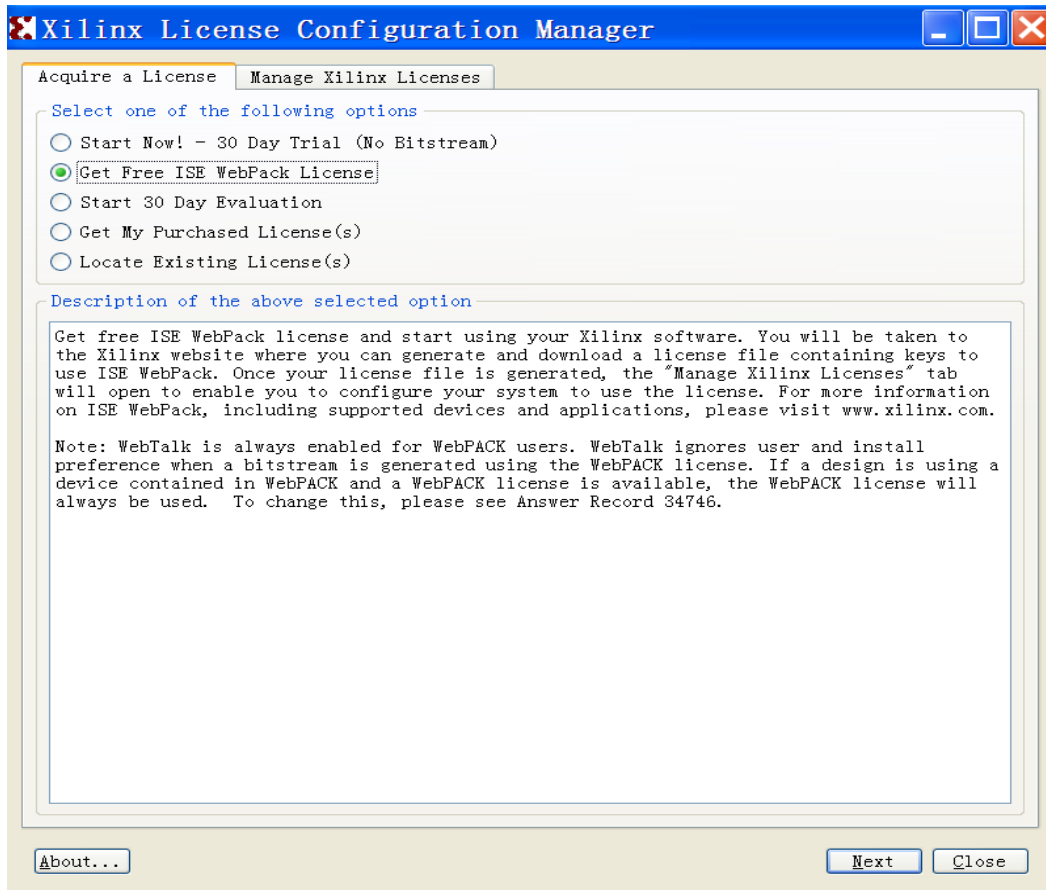

- 15.** 出现提示访问 xilinx 官网获取 License 的对话框，点击“Connect Now”打开 xilinx 官网

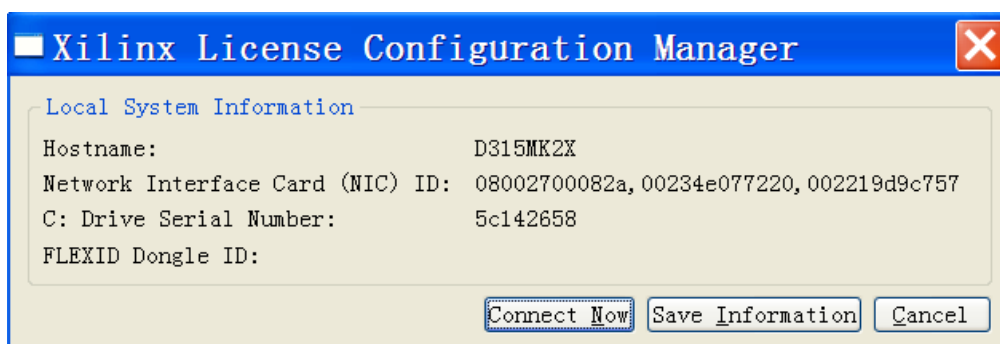


16. 输入在 xilinx 官网注册的用户名和密码，并点击“sign in”

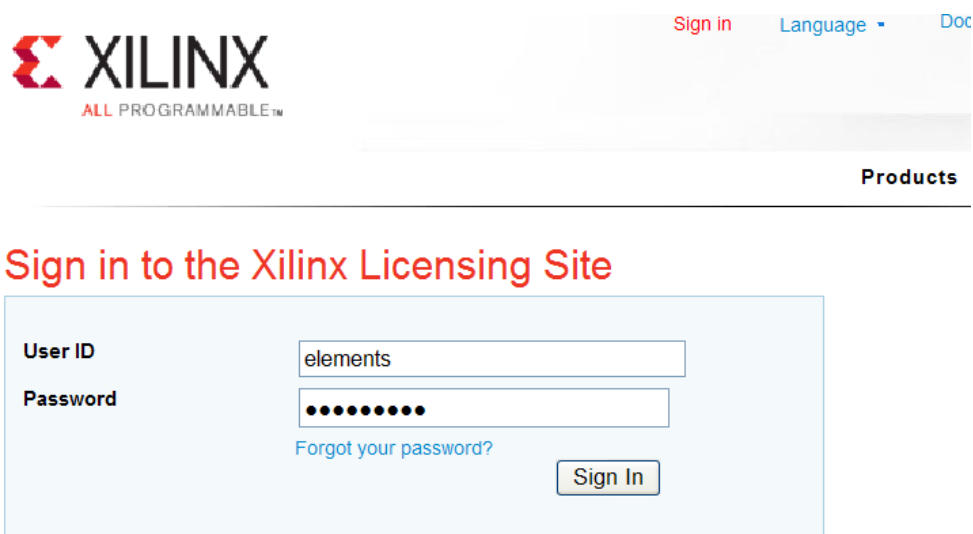


The image shows the Xilinx website header with the Xilinx logo and the tagline "ALL PROGRAMMABLE™". Navigation links include "Sign in", "Language", and "Doc". A "Products" link is also visible. Below the header, the heading "Sign in to the Xilinx Licensing Site" is displayed. The sign-in form contains two input fields: "User ID" with the value "elements" and "Password" with masked characters. A link "Forgot your password?" is located below the password field. A "Sign In" button is positioned to the right of the password field.

17. 点击接下来出现的界面中的“Next”

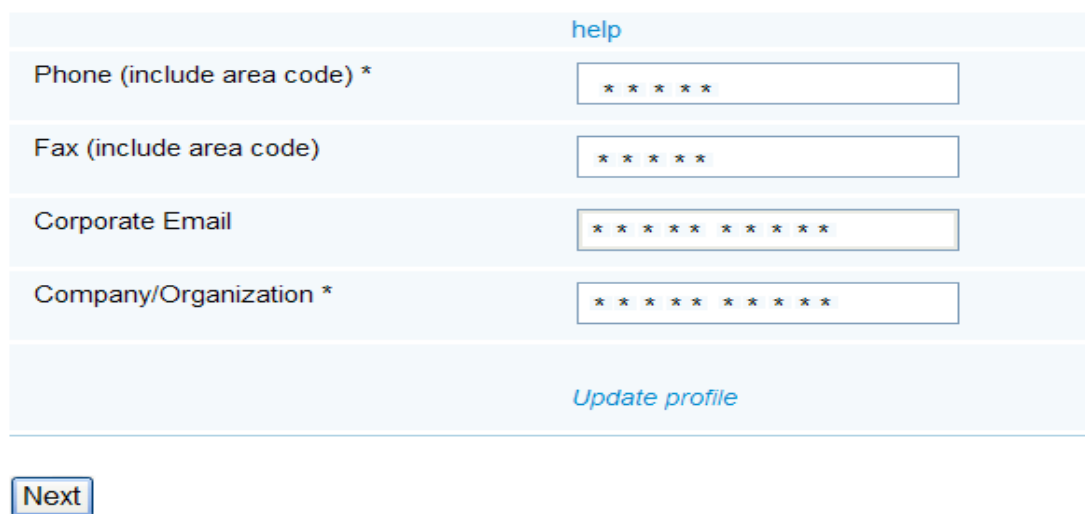


The image shows a form for updating a profile. It includes four input fields: "Phone (include area code) *" with masked characters, "Fax (include area code)" with masked characters, "Corporate Email" with masked characters, and "Company/Organization *" with masked characters. A "help" link is located above the phone field. An "Update profile" link is located below the company field. A "Next" button is located at the bottom left of the form.

18. 在出现的安全警报提示中，点击“是”

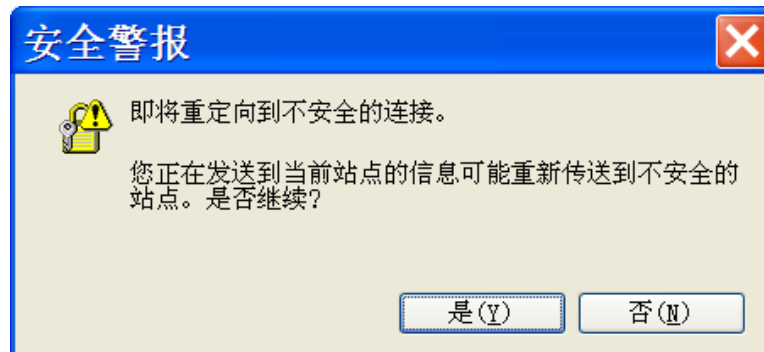

19. 在出现的界面中选择“vivado design suite (includes ISE) : WebPACK License”，并点击“Generate Node-Locked License”按钮

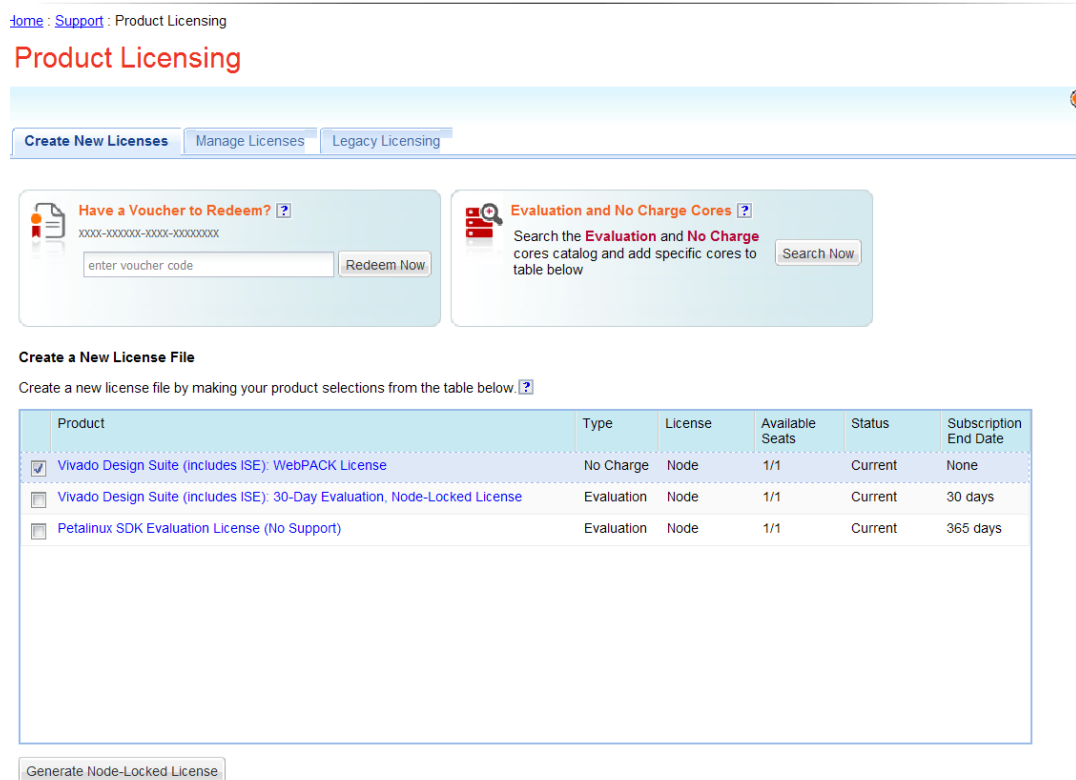

20. 在接下来的对话框中点击“Next”按钮


Generate Node License

Fields marked with an asterisk * are required.

1 PRODUCT SELECTION

| Product Selections * | Product | | | | |
|-------------------------------------|---------------------------------------|-----------|-------|------|----------|
| | Product | License | Count | Cost | Quantity |
| <input checked="" type="checkbox"/> | Vivado Design Suite (includes ISE): V | No Charge | 1/1 | None | 1 |

2 SYSTEM INFORMATION

| License | Node |
|---|------|
| Host ID *  | Any |

3 COMMENTS

| | |
|--|--|
| Comments  | |
|--|--|

Generate Node License

4 REVIEW LICENSE REQUEST

Product Selections


| | | |
|--|-----|---|
| | | |
| Vivado Design Suite (includes ISE): WebPACK Licens | 1/1 | 1 |
| | | |

System Information

| License | Node |
|---------|------|
| Host ID | ANY |


Note: WebTalk is always enabled for WebPACK users. WebTalk ignores user and install preference when a bitstream is generated using the WebPACK license. If a design is using a device contained in WebPACK and a WebPACK license is available, the WebPACK license will always be used. To get additional information on WebTalk, go to www.xilinx.com/ise/webtalk.

21. 系统会自动进行生成 License 的处理，稍等片刻，提示生成 License 成功。如下图示。

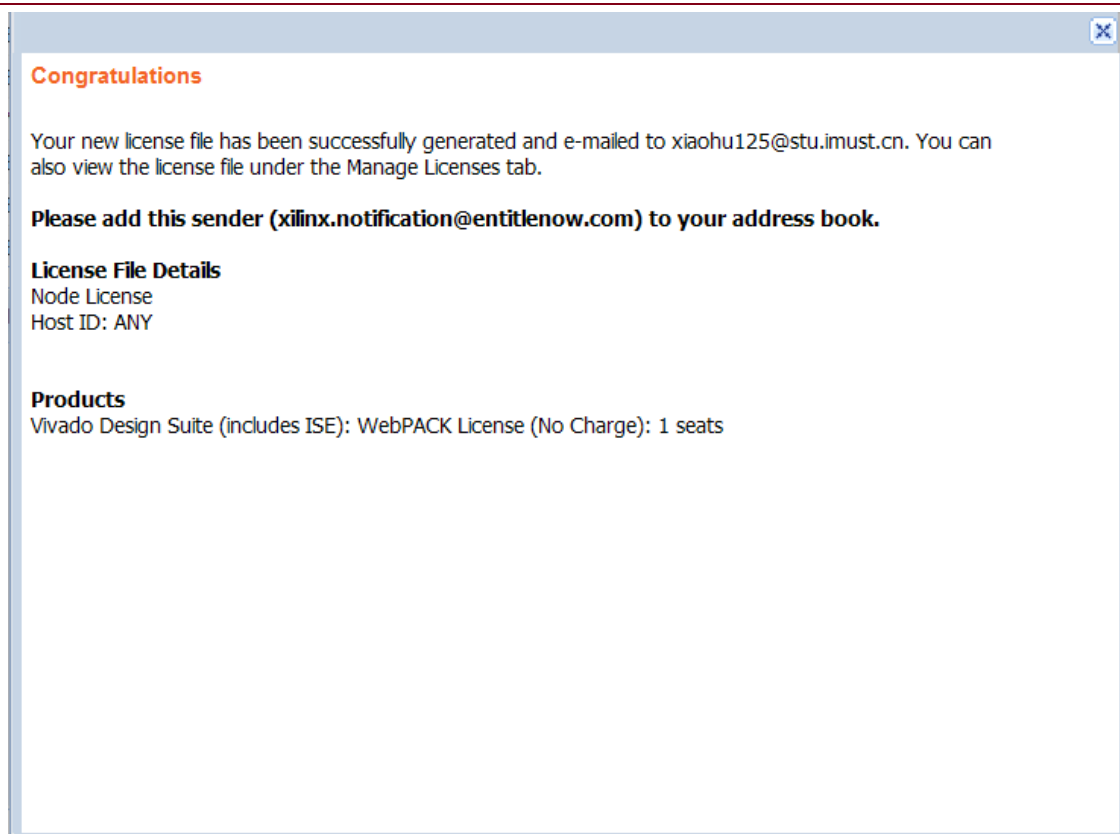


- 22.** 系统会把 License 发送到注册邮箱，请注意查收邮件。收到 License 文件后，请将其放在某个磁盘里保存。


23. 切换至“Manage Xilinx Licenses”选项卡下

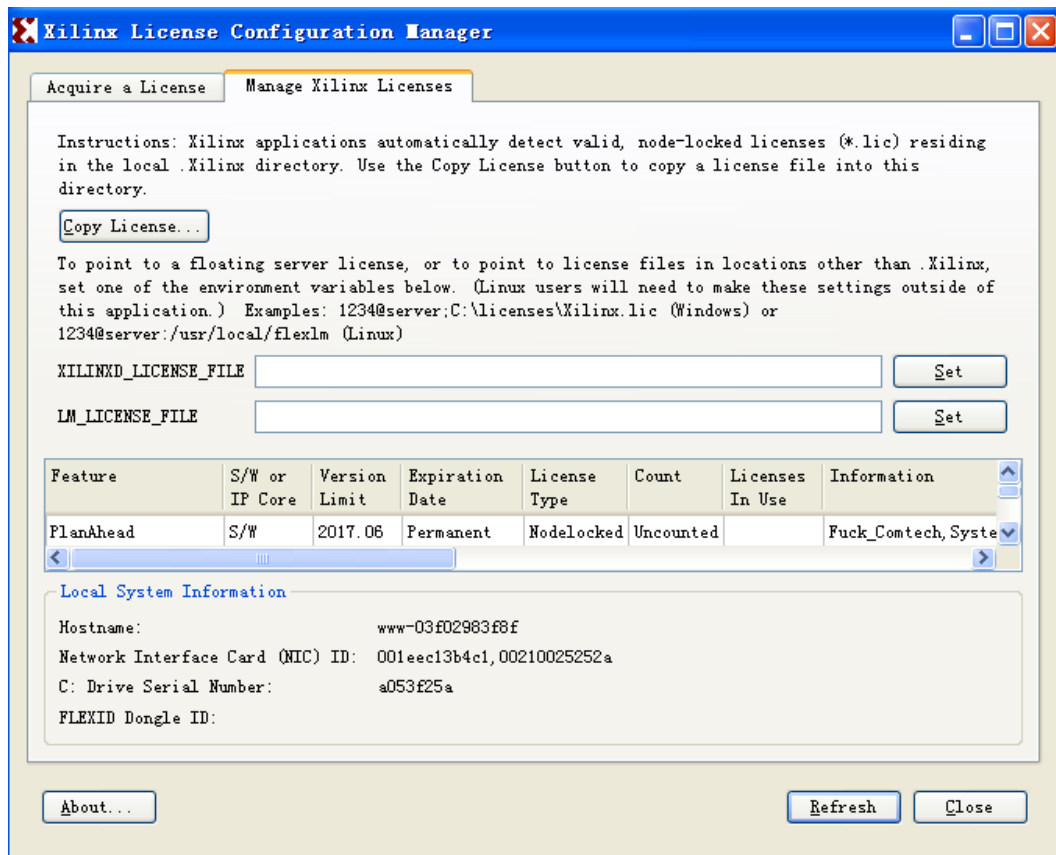


24. 点击上图“Copy License...”，出现以下对话框：

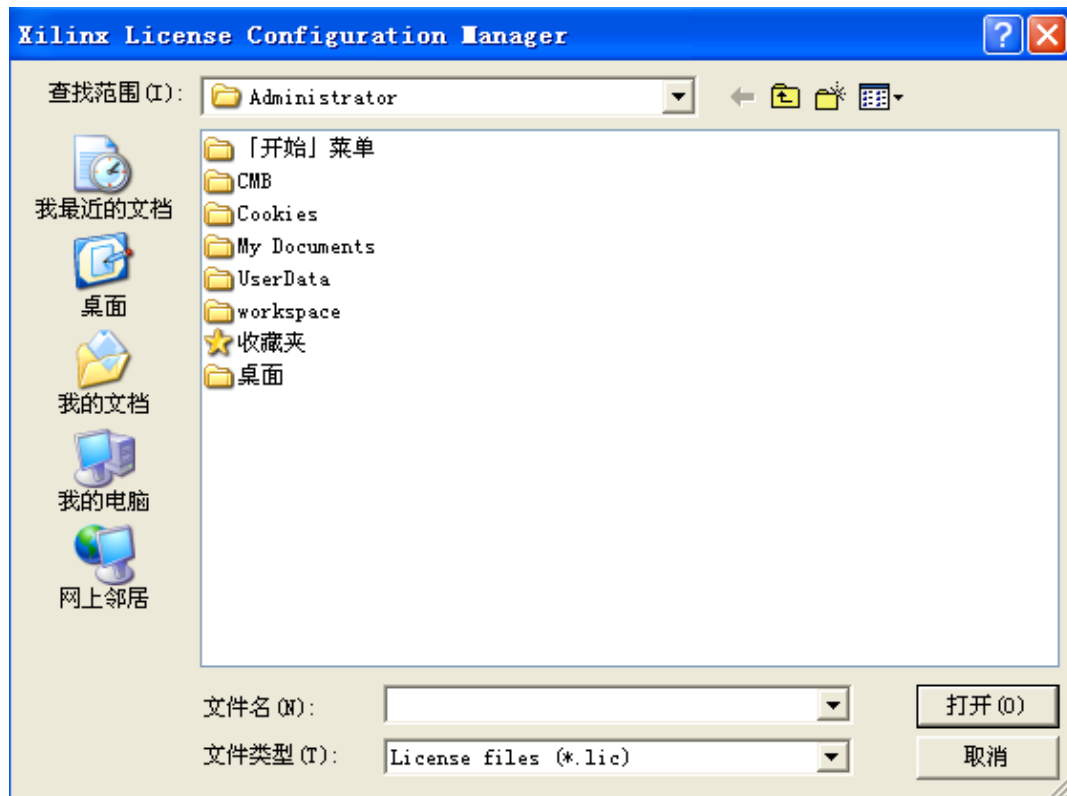


25. 鼠标左键单击上图中的“我的电脑”图标，定位至存放有 license_isel4.2.lic 的文件夹，这里将会打开 C 盘。

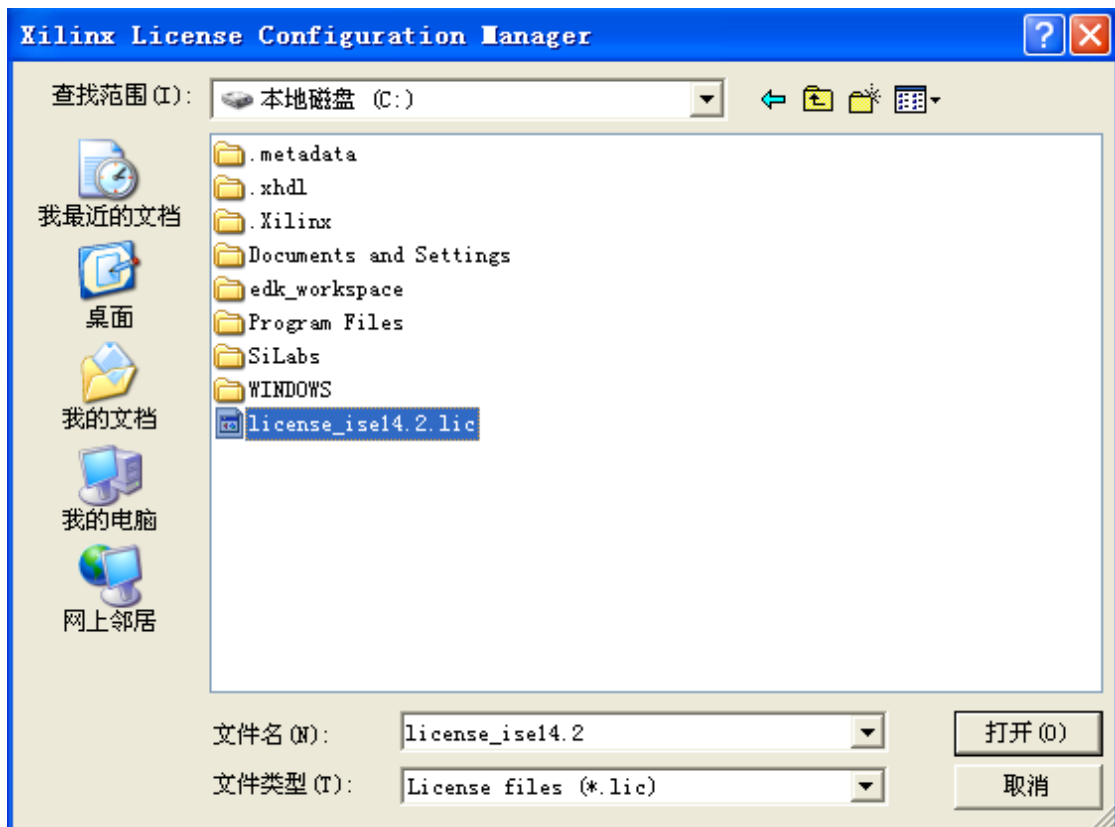

鼠标左键单击此 lic 文件，然后单击“打开”，出现下面对话框，提示 license 安装成功。

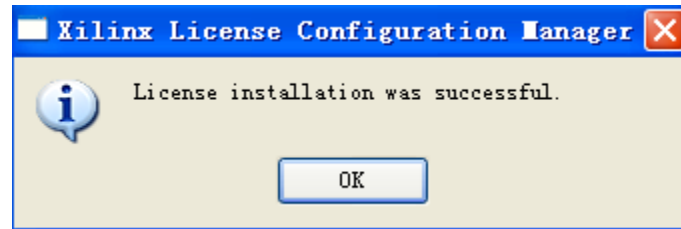

26. 最后点击下图中的“Close”完成安装。

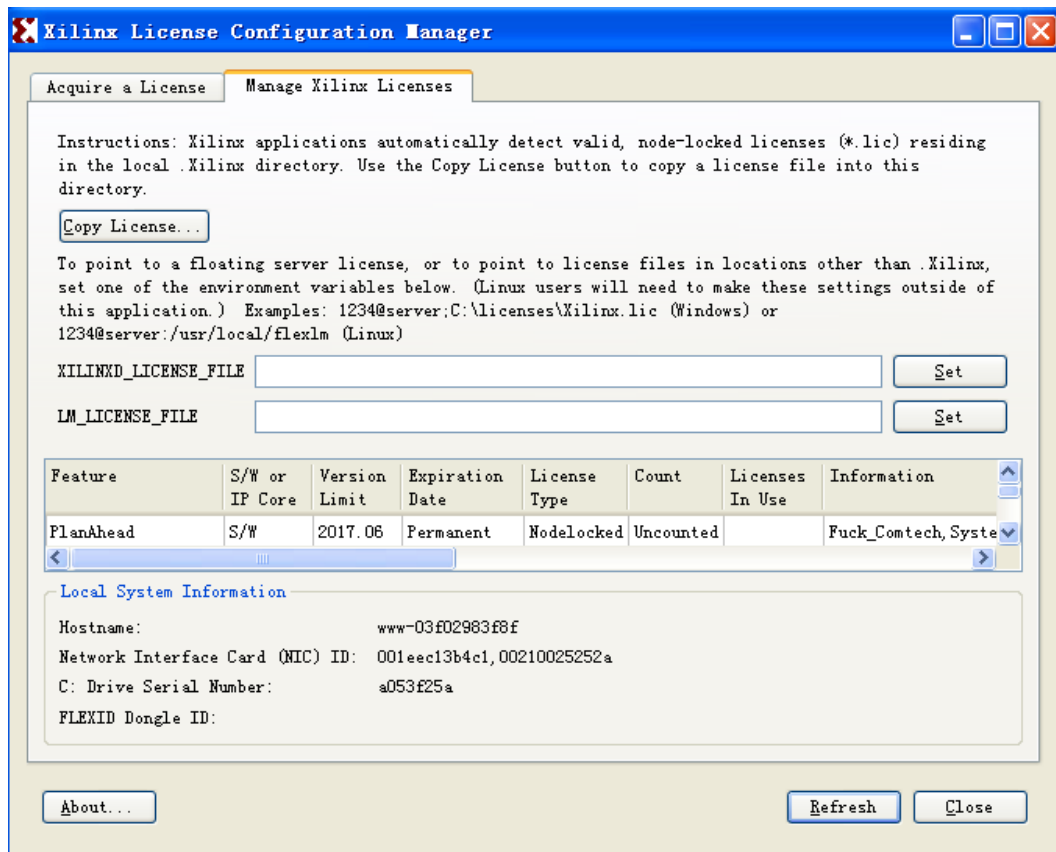

27. 至此，ISE14.2安装全部结束。