

dji MIC MINI

Quick Start Guide

快速入门指南

v1.0

Instrukcja obsługi




<https://s.dji.com/guide87>



1 TX + 1 Mobile RX | 手机版一发一收

2 TX + 1 Mobile RX | 手机版两发一收

A

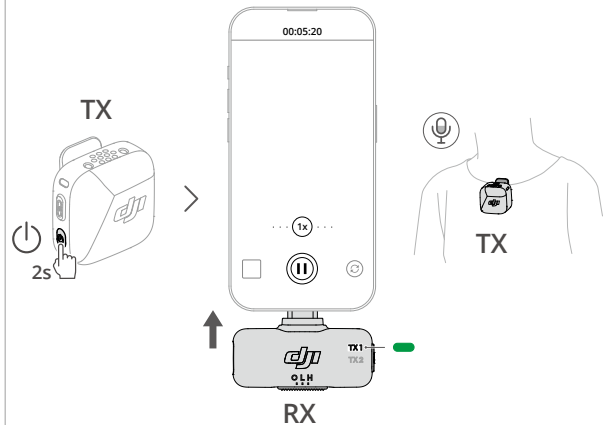

B



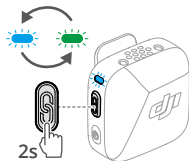
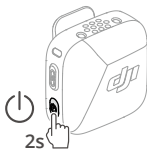


Osmo Action 5 Pro




Osmo Pocket 3



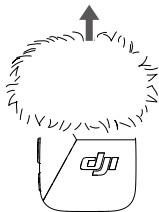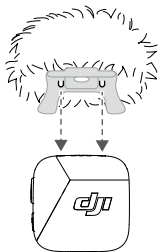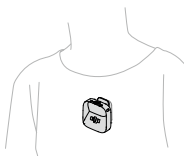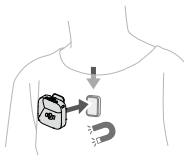

TX

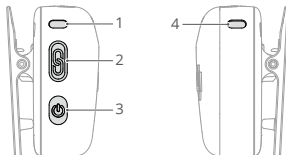

EN

1. System Status LED
2. Linking Button
3. Power Button
4. Noise Cancellation LED


CHS

1. 系统状态指示灯
2. 配对按键
3. 电源按键
4. 降噪指示灯

PL

1. Dioda LED stanu systemu
2. Przycisk łączenia
3. Przycisk zasilania
4. Dioda LED redukcji szumów

RX

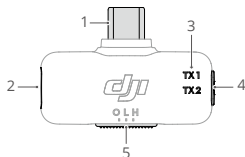

EN

1. USB-C Plug
2. USB-C Charging Port
3. Transmitter Status LED
4. Linking Button
5. Noise Cancellation Mode Switch

CHS

1. USB-C 接头
2. USB-C 充电接口
3. 发射器状态指示灯
4. 配对按键
5. 降噪档位切换开关

PL

1. Wtyczka USB-C
2. Interfejs ładowania USB-C
3. Wskaźnik stanu nadajnika LED
4. Przycisk łączenia
5. Przełącznik trybu redukcji szumu



USB-C



TX



Contact
DJI SUPPORT



微信扫一扫
获取技术支持

This content is subject to change without prior notice.

DJI is a trademark of DJI.

Copyright © 2025 DJI All Rights Reserved.



YCBZSS00358402