


# DJI MIC 3

## Quick Start Guide


## 快速入门指南

v1.0


Instrukcja obsługi

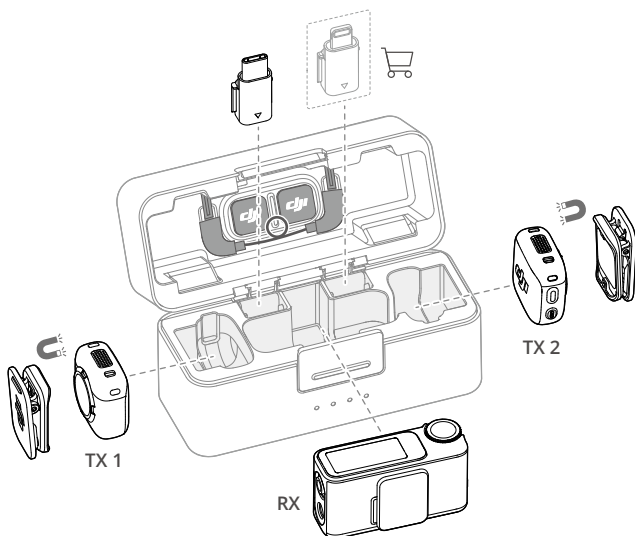

A

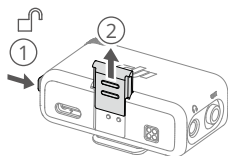

RX

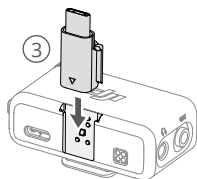


TX 1




TX 2

B

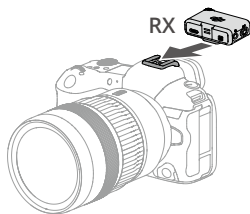

RX

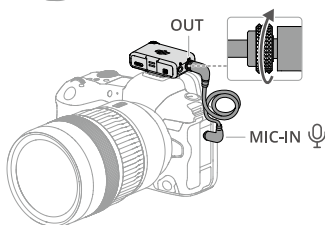

OUT

MIC-IN




TX 1





TX 2





C

TX

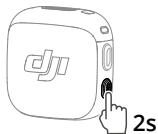Osmo Action 4 /  
Osmo Action 5 Pro

Osmo Pocket 3
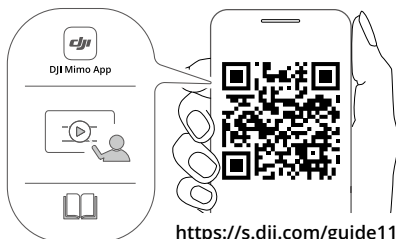
<https://s.dji.com/guide111>

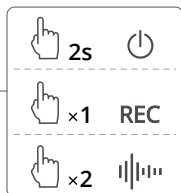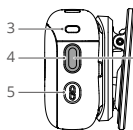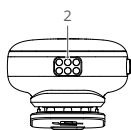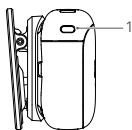

# EN




1. Recording Status LED
2. Charging Contacts
3. System Status LED
4. Power Button
5. Linking Button

# CHS

1. 录音状态指示灯
2. 充电触点
3. 系统状态指示灯
4. 电源按键
5. 配对按键

# PL

1. Dioda stanu nagrywania
2. Styk ładowania
3. Dioda LED stanu systemu
4. Przycisk zasilania
5. Przycisk łączenia

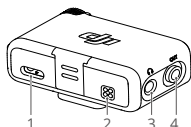

# EN



1. USB-C Port
2. Charging Contacts
3. Monitor Port
4. Output Port
5. Touchscreen
6. Dial
7. Power Button
8. Release Button

# CHS

1. USB-C 接口
2. 充电触点
3. 监听接口
4. 输出接口
5. 触摸屏
6. 拨轮
7. 电源按键
8. 解锁按键

# PL

1. Port USB-C
2. Styk ładowania
3. Port monitora
4. Port wyjściowy
5. Ekran dotykowy
6. Pokrętko
7. Przycisk zasilania
8. Przycisk zwalniania

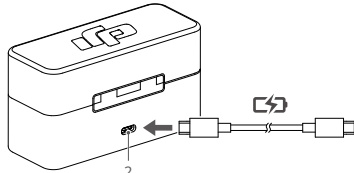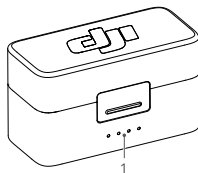

# EN

1. Battery Level LEDs
2. USB-C Port

# CHS

1. 电量指示灯
2. USB-C 接口

# PL

1. Diody LED poziomu naładowania akumulatora
2. Port USB-C