

# CAR MULTIMEDIA SYSTEM USER'S MANUAL



**RIO**



The Power to Surprise

Thank you for purchasing this multimedia system.

This user's manual explains how to use the Kia multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

---

### **Precaution for safe usage**

---

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

## **WARNING**

---

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- 
- The Rear-Camera display is not a substitute for proper and safe backing-up procedures. The Rear-Camera display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

## Read the following safety precautions for your safety

**Before using the product, read the contents of this user's manual carefully and use this product safely.**

※ The design and specifications of this product may change without prior notification for product and service improvement.

The actual images in the vehicle may differ from the illustrations.

For more accurate information about the vehicle, please refer to the catalogue.

※ This Multimedia system contains open source software, including without limitation, software distributed and/or modified under the GNU General Public license, Version 2, June 1991, and the GNU lesser General Public License, Version 2.1, February 1999.

For additional information and to obtain related materials including without limitation, the previous referred to licenses and software, please contact us at [MOBIS\\_OSSrequest@mobis.co.kr](mailto:MOBIS_OSSrequest@mobis.co.kr)

## Notations used within this User's Manual

### **WARNING**

---

- A WARNING indicates a situation in which harm, serious bodily injury or death could result if the warning is ignored.
- 

### **CAUTION**

---

- A CAUTION indicates a situation in which damage to your vehicle could result if the caution is ignored.
- 

### **Information**

---

- Information and tips that provide additional user convenience in using the product.
- 

### **NOTICE**

---

- Information on specific features that facilitate proper product use and functional understanding.
  - Information on terminology used within this manual.
-

# Table of Contents

## 1. Basic

Warnings and Cautions .....	1-2
-----------------------------	-----

Component Names and Functions .....	1-4
-------------------------------------	-----

Head Unit .....	1-4
-----------------	-----

Steering Wheel Controls .....	1-6
-------------------------------	-----

Starting the System for the First Time .....	1-8
--	-----

Turning the System On/Off .....	1-8
---------------------------------	-----

System Reset .....	1-8
--------------------	-----

Battery Warning Message .....	1-9
-------------------------------	-----

Restrictions on Features for Safety Measures .....	1-9
--	-----

Home Screen .....	1-10
-------------------	------

On-Screen Touch Controls .....	1-11
--------------------------------	------

## 2. Radio/Media

FM/AM .....	2-2
-------------	-----

USB .....	2-4
-----------	-----

Before Playing a USB MP3 .....	2-4
--------------------------------	-----

Supported USB music specifications .....	2-6
--	-----

USB Music .....	2-7
-----------------	-----

iPod .....	2-10
------------	------

Using iPod Devices .....	2-10
--------------------------	------

iPod .....	2-14
------------	------

AUX .....	2-17
-----------	------

Connecting an External Device ...	2-17
-----------------------------------	------

Bluetooth® Audio .....	2-18
------------------------	------

Bluetooth Connection .....	2-19
----------------------------	------

## 3. Bluetooth

Before Using the Bluetooth® Handsfree .....	3-2
---	-----

What is <i>Bluetooth</i> ® Wireless Technology? .....	3-2
---	-----

Precautions for Safe Driving .....	3-2
------------------------------------	-----

CAUTIONS upon Connecting Bluetooth® Phone .....	3-3
---	-----

Bluetooth Connection .....	3-4
----------------------------	-----

Pairing a New Device .....	3-4
----------------------------	-----

Connecting Bluetooth Devices .....	3-4
------------------------------------	-----

Disconnecting Bluetooth Devices ...	3-5
-------------------------------------	-----

Deleting Bluetooth Devices .....	3-5
----------------------------------	-----

Bluetooth Phone .....	3-6
-----------------------	-----

Phone Status Icons .....	3-6
--------------------------	-----

Dial .....	3-7
------------	-----

Accept/Reject Call .....	3-7
--------------------------	-----

Using the Menu During a Phone Call .....	3-8
--	-----

Call History .....	3-9
--------------------	-----

Contacts .....	3-10
----------------	------

Favorites .....	3-11
-----------------	------

## 4. Other Features

---

Camera.....	4-2
Steering-linked camera.....	4-3
Using Voice Memo .....	4-4

## 5. Setup

---

Sound Settings.....	5-2
Display Settings .....	5-3
Bluetooth Settings .....	5-3
Bluetooth Connection .....	5-4
Auto Connection Priority .....	5-5
Bluetooth Voice Prompts .....	5-5
Privacy Mode .....	5-5
Bluetooth System Info .....	5-5
Default Factory Settings .....	5-5
Phone Projection Settings .....	5-6
Home Screen Settings.....	5-6
Date/Time Settings .....	5-6
Language Settings .....	5-7
Keyboard Settings .....	5-7
Screen Saver Settings.....	5-7
Advanced Settings .....	5-8
System Info.....	5-8
System Update .....	5-8

## 6. Appendix

---

Product Specification.....	6-2
Troubleshooting .....	6-3
FAQ .....	6-6
About Pairing Mobile Phones .....	6-6
About Making/ Answering Phone Calls.....	6-7
About <i>Bluetooth</i> ® Wireless Technology/Multimedia System Use Environment .....	6-7

---

## **iPod®**

---

iPod® is a registered trademark of Apple Inc.

---

## ***Bluetooth®* Wireless Technology**

---

A compatible *Bluetooth®* Wireless Technology-enabled cell phone is required to use *Bluetooth®* Wireless Technology.

The *Bluetooth®* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license.

Other trademarks and trade names are those of their respective owners.

A Bluetooth® enabled cell phone is required to use *Bluetooth®* Wireless Technology.

*Bluetooth®* Wireless Technology phone compatibility can be checked by visiting <http://www.kia.com>.



# part. 1 Basic

Warnings and Cautions

Component Names and Functions

Starting the System for the First Time



## Warnings

Park the vehicle before operating the device.

- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen. (The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

## Cautions

Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.

Pay attention to traffic conditions while driving.

- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.

- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product concerns, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

# Component Names and Functions

## Head Unit



Name		Description
1	RADIO	Selects FM/AM mode <ul style="list-style-type: none"><li>Each time this is pressed, the mode is changed in the following order: FM → AM → FM.</li></ul>
2	MEDIA	Selects MEDIA mode. <ul style="list-style-type: none"><li>If the media is not connected MEDIA mode will not be activated.</li></ul>
3	SEEK TRACK	When the key is pressed quickly (less than 0.8 seconds), <ul style="list-style-type: none"><li>FM/AM mode: Plays the previous/next frequency.</li><li>MEDIA mode: Changes the track, file or title (except for AUX).</li></ul> When the key is pressed and held (over 0.8 seconds), <ul style="list-style-type: none"><li>FM/AM mode: Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.</li><li>MEDIA mode: Rewinds or fast forwards the track or file (except for AUX and Bluetooth Audio).</li></ul>
4	POWER/ VOL	<ul style="list-style-type: none"><li>When power is off, press to turn power on.</li><li>When power is on, press and hold (over 0.8 seconds) to turn the power off.</li><li>When power is on, press quickly (less than 0.8 seconds) to turn Audio off.</li><li>Turn left/right to adjust the volume.</li></ul>



	Name	Description
5	HOME	Moves to the Home Screen.
6	PHONE	Displays the Bluetooth phone mode.
7	☆	<ul style="list-style-type: none"> <li>Press to use a custom function.</li> <li>Press and hold to access the settings screen for the custom button.</li> </ul>
8	SETUP	Moves to the Setup screen.
9	TUNE	<ul style="list-style-type: none"> <li>FM/AM mode: Changes the frequency.</li> <li>MEDIA mode: Changes the track, file or title (except for AUX and Bluetooth Audio).</li> </ul>
10	RESET	Resets the system settings. (Preset radio channels and other data will not be deleted)

※ The actual image in the vehicle may differ from the illustration.

## Steering Wheel Controls



Name		Description
1		For more details, refer to Phone Projection guide.
2	MODE	<ul style="list-style-type: none"> <li>Each time this is pressed, the mode is changed in the following order: FM → AM → USB or iPod → AUX → Bluetooth Audio → FM.</li> <li><b>i</b> You can select which mode to use in Advanced settings.</li> <li>If the media is not connected, the corresponding modes will be disabled.</li> <li>Press and hold (over 0.8 seconds) to turn the Audio system on/off.</li> <li>When power is off, press button to turn power back on.</li> </ul>
3	VOL + VOL -	Use to adjust the volume of audio or call.
		<p>Mutes the audio. (Media will be paused in some media modes.)</p> <p>Mutes the microphone during a call.</p>
4	 	<p>When the key is pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> <li>FM/AM mode: searches broadcast frequencies saved to Presets.</li> <li>MEDIA mode: changes the track, file or title (except for AUX).</li> </ul> <p>When the key is pressed and held (over 0.8 seconds),</p> <ul style="list-style-type: none"> <li>FM/AM mode: automatically searches broadcast frequencies.</li> <li>MEDIA mode: quickly looks up songs (except for AUX and Bluetooth Audio).</li> </ul>



Name		Description
5		<p>When the key is pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> <li>• When pressed in the dial screen, makes a call.</li> <li>• When pressed in the incoming call screen, answers the call.</li> <li>• When pressed during call waiting, switches to waiting call (Call Waiting).</li> </ul> <p>When the key is pressed and held (over 0.8 seconds),</p> <ul style="list-style-type: none"> <li>• When pressed in Bluetooth® Hands-free, redials the last dialed call.</li> <li>• When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private).</li> <li>• When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected).</li> </ul>
		<p>6</p> <ul style="list-style-type: none"> <li>• When pressed during a call, ends the phone call.</li> <li>• When pressed in the incoming call screen, rejects the call.</li> </ul>

※ The actual image in the vehicle may differ from the illustration.

## Starting the System for the First Time

### Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide.

### NOTICE

- You cannot operate the system while it is booting up. It may take some time for all of features of the system to be ready for use.

Pressing and holding the power key on the head unit will turn off the system.

### Information

- If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.

### NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

## System Reset




The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

---

## Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.

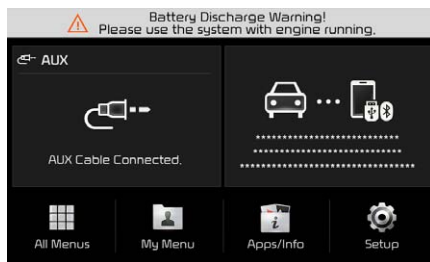

---

## NOTICE

- If you use the system for a long time with the engine off, the battery may become completely discharged.
- 

---

## Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

---

### WARNING

#### - Blank Screen

- Refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock).
- 

---

### WARNING


#### - Touching the Antenna During A Thunder Storm


- Do not touch the antenna during thunder or lightning as such acts may lead to lightning induced electric shock.
-



## Home Screen

### Controls Menu Configuration for the Home Screen

Tap the  icon on any screen to display the Home Screen below.

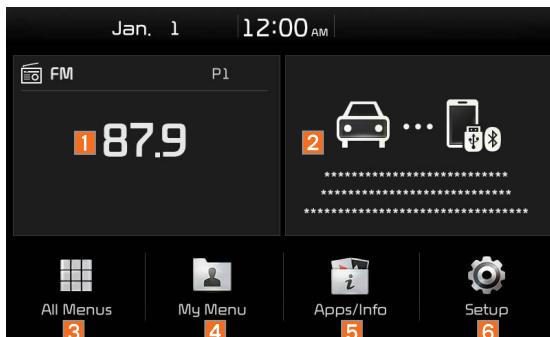











Features	Description
<b>1</b> Radio/ Media Widget	<ul style="list-style-type: none"><li>Shows brief information on the radio or media that is now playing.</li><li>Tap the area to move to the mode that you are listening to.</li></ul>
<b>2</b> Phone Projection Widget	Shows any connected devices such as iPod and Bluetooth.
<b>3</b> All Menus	Shows all of the items in the system menu.
<b>4</b> My Menu	Add your favorite menus to have quick and easy access to them.
<b>5</b> Apps/Info	Moves to the Apps/Info screen.
<b>6</b> Setup	Moves to the Setup screen.

### Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

Icon	Description
	Displayed when the audio is muted.
	Displays the remaining battery of the Bluetooth phone.
	Displayed when connected to Bluetooth for handsfree.
	Displayed when connected to Bluetooth for streaming audio.
	Displayed when connected to Bluetooth for streaming audio and handsfree.
	Displayed when downloading contacts or recent calls from the Bluetooth phone.
	Displayed while on a call with the Bluetooth phone.
	Displayed when the microphone of the Bluetooth phone is muted.
	Displays the signal strength of the Bluetooth phone.
	Voice memo recording.

## Adding a Feature to My Menu

Select **My Menu** on the Home Screen to add the most frequently used menus, change the menu order, or delete menus.



### **i** Information

- Up to 24 menus can be added to My Menu.

## On-Screen Touch Controls

Learn how to touch the screen to operate the system.

### Select


Tap lightly on a menu or an item to select it.

### NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.


## Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

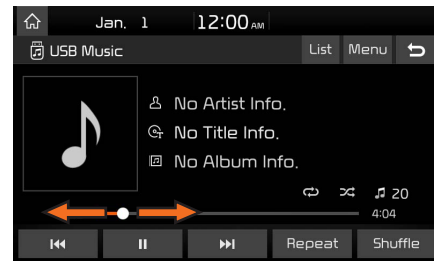

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

## Flick (Quick Scrolling)

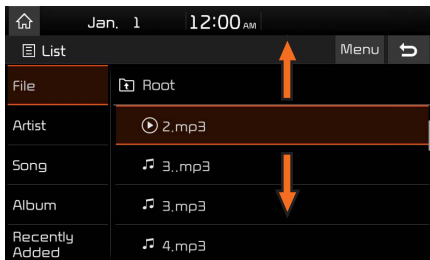



Quickly moves up and down in the list.




### NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler.

## Select and Hold

Selecting and holding the  or  buttons in the music player will rewind or fast forward the music.

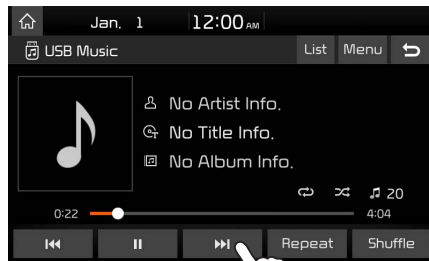



## part.2 Radio/Media

FM/AM

USB

iPod


AUX

Bluetooth® Audio

# Radio/Media

## FM/AM

You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu from **All Menus** on the Home screen.

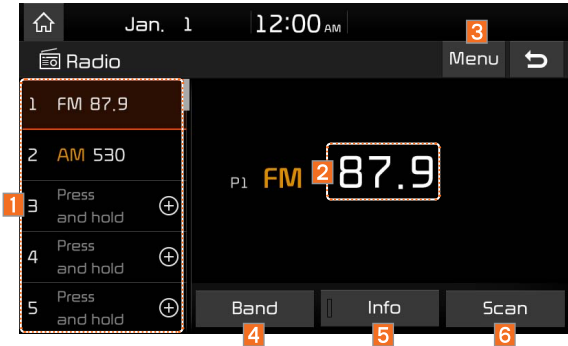


### **i** Information

- If you press the **RADIO** key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

Features	Description
<b>1</b> Preset Frequencies	<ul style="list-style-type: none"><li>• The stored preset frequencies are displayed for user selection.</li><li>• After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.</li><li>• Flick the preset frequencies up/down to scroll quickly through presets.</li></ul>
<b>2</b> Frequency	Displays the current frequency.
<b>3</b> Menu	<ul style="list-style-type: none"><li>• Station List: Moves to the station list.</li><li>• Delete Presets: Delete saved radio stations from the preset list.</li><li>• Sound Settings: Moves to the Sound Settings.</li></ul>
<b>4</b> Band	Changes to the desired band from among FM, AM.
<b>5</b> Info	Turns the Radio text information transmitted from the broadcasting station on and off.
<b>6</b> Scan	Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item.



Features	Description
<b>7</b> SEEK/TRACK	<ul style="list-style-type: none"> <li>When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency.</li> <li>When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.</li> </ul>
<b>8</b> TUNE	Turn the  TUNE knob to manually seek available frequencies.

## USB

---

### Before Playing a USB MP3

---

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps to 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- USB devices, formatted to the FAT12, FAT16, or FAT32 file system, are recommended. File systems other than FAT12, FAT16, FAT32, exFAT, and NTFS are not supported.
- Some USB devices may not be supported due to compatibility issues.
- Take caution so that the USB connector does not come in contact with body parts or objects.
- Repeated connecting/disconnecting of USB devices within short periods of time may result in product malfunction.
- Make sure to connect/disconnect external USB devices with the audio power turned off.
- The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB.
- The use of USB devices for purposes other than playing music files is prohibited.
- Do not use the USB I/F to charge batteries or USB accessories that generate heat. Such acts may lead to worsened performance or damage to the device.
- The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used. Connect the USB directly with the multimedia terminal of the vehicle.
- When using mass storage USB devices with separate logical drives, only files saved to the root drive can be played.
- When application programs are installed to specific USBs, files may not properly play.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- When playing iPods, please use a dedicated iPod car cable.
- Normal operation cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM (Digital Rights Management).
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.
- To play USB MP3, the USB device must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.



Plug Type Connector

Product Name	Manufacturer
XTICK	LG
BMK	BMK Technology
SKY-DRV	Sky Digital
TRANSCEND JetFlash	Transcend
Sandisk Cruzer	SanDisk
Micro ZyRUS	ZyRUS
NEXTIK	Digiworks

#### **i** Information

- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.




## Supported USB music specifications

Name	Description
Audio File Specification	MPEG-1/2 layer3, OGG (Vorbis), FLAC, WAV, WMA (Standard/Professional)
Recommended Bit Rates and Sampling Frequency	MPEG-1/2 layer3 <ul style="list-style-type: none"> <li>• 8 kbps to 320 kbps (CBR or VBR), to 48 kHz</li> <li>• ID3 Tag: Supports ID3v1.0 and ID3v1.1, ID3v2.3, ID3v2.4 ID3 tags</li> </ul>
	OGG (Vorbis): From Q1 to Q10, to 48 kHz
	FLAC: 8/16/24 bit, to 48 kHz WAV: 8/16 bit, to 48 kHz
	WMA <ul style="list-style-type: none"> <li>• Standard (0x161): to support L3 Profile: to 385 kbps, to 48 kHz</li> <li>• Professional (0x162): to support M0b: to 192 kbps, to 48 kHz</li> </ul>
Detailed Specifications	<p>Maximum directory layers: 20 layers</p> <p>Maximum length of folder name/file name: 255 bytes</p> <p>Supported characters for folder name/file name: Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters</p> <p>Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT)</p> <p>Maximum number of files which can be stored onto one USB: 8000</p>

### **i** Information


- The sound quality of audio files that use bitrates exceeding 192 kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not operate properly.

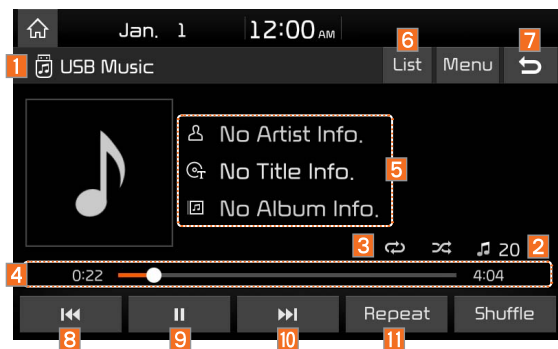


## USB Music




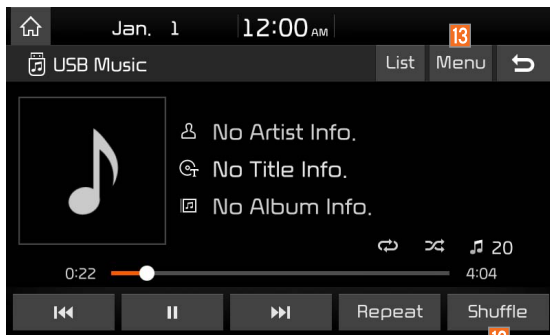

Features	Description
1 Mode	Displays the current operating mode.
2 Number of files	Number of files on the current playlist.
3 Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function.
4 Play Time	Displays the current play time/total play time.
5 Song Info	Displays the artist/title/album info.
6 List	Moves to the list screen.
7 Back Button	Move to the previous screen.

Features	Description
8 Previous File	<ul style="list-style-type: none"> <li>If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (depends on the play time). <ul style="list-style-type: none"> <li>If play time is less than 3 seconds, moves to previous file.</li> <li>If play time is over 3 seconds, play the current file from the beginning.</li> </ul> </li> <li>If the button is selected (over 0.8 seconds) it rewinds the track.</li> </ul>
9 Play/Pause	Plays/pauses the current file.
10 Next File	<ul style="list-style-type: none"> <li>If the button is selected (less than 0.8 seconds): Moves to the next file.</li> <li>If the button is selected (over 0.8 seconds): It fast-forwards the track.</li> </ul>
11 Repeat	<p>Repeats the current file.</p> <ul style="list-style-type: none"> <li>If select the file in the file tab on the list screen: select this button to switch between repeating the current file, repeating folder, and repeating all files.</li> <li>If select the song in the other tabs on the list screen: select this button to switch between repeating the current song and repeating all songs.</li> </ul>

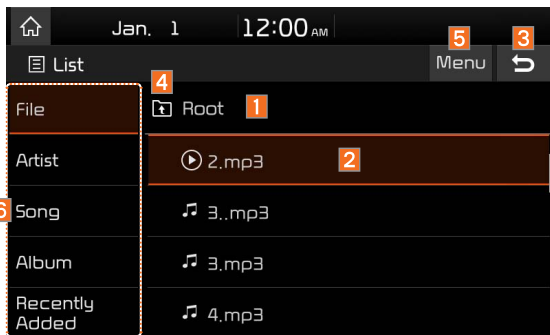

Features	Description
<b>12</b> Shuffle	Plays files in random order. <ul style="list-style-type: none"> <li>Select this button to switch between shuffle and turning shuffle off.</li> </ul>
<b>13</b> Menu	<ul style="list-style-type: none"> <li>Hide Current File: a selected file can be deleted. Deleted file can be found in the "Hidden_" folder.</li> </ul> <i>i</i> This function is only supported when USB format is compatible with FAT16 or FAT32. <ul style="list-style-type: none"> <li>Sound Settings: Moves to the Sound Settings.</li> </ul>
<b>14</b> TUNE	Turn the  TUNE knob to search a desired track. If the desired track is displayed, select the  TUNE knob to play the track. <i>i</i> If you do not anything with the  TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.



Features	Description
<b>1</b> Folder/Category Name	Displays the folder/category name in the list.
<b>2</b> Current Song	Displays the current playing file name.
<b>3</b> Back Button	Move to the previous screen.
<b>4</b> Upper Folder/Category	Moves to Upper Folder/Category.
<b>5</b> Menu	Now Playing: When moving to a different list screen, moves to the list page where the current file is located (becomes disabled when the current list includes the current file).
<b>6</b> Search Menu	Search songs by the list type.
<b>7</b> SEEK/TRACK	<ul style="list-style-type: none"> <li>When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track.</li> <li>When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.</li> </ul>
<b>8</b> TUNE	Turn the  TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press  TUNE knob to play the track.

---

## Using iPod Devices

---

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in a short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/ iPhone products)

- ※ During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the head unit.
  - ※ The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)
  - ※ To play iPod music through cable connection, the iPod/USB cable must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.
- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1 to 2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
  - Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
  - When connecting to iPod Nano/Classic, the Kia logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
  - In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the iPod mode.
  - If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in iPod mode.
  - The screen of multimedia system can be different when you run other music players (e.g. iHeartRadio) on your connected device.

- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimedia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.
- If you control pause, repeat, shuffle, or seek songs when the play time is less than 3s before the song is finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- If the iPhone/iPod Touch supports Bluetooth, the Apple device will not be able to use the Bluetooth function if the device is connected through both the USB port and via Bluetooth. Disconnect the USB connection then use Bluetooth Audio.
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.
- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)

- iPhone and iPod Touch devices are guaranteed to work normally on iOS 9.3.2 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.

Type	1G	2G	3G	4G	5G	6G	6.5G	7G
iPod Mini	Not Supported							
iPod Shuffle								
iPod Nano	○	○	○	○	○	○	Not released	○
iPod Touch	○ (iOS 1.1 not supported)	○	○	○	○	○	Not released	


Type	1G	2G	3G	4G	5G	6G	6.5G	7G
iPad	○ (Unable to charge, Not verified, Normal operation not guaranteed)							
iPad Mini								
iPod Classic	Not Supported			○ (iPod with Video)	○ (iPod Classic)	○ (iPod Classic)	Not released	

Type	3G	3GS	4	4S	5	5C	5S	6	6+	6S	6S+	SE	7	7+
iPhone	Not verified, Normal operation not guaranteed	○	○	○	○	○	○	○	○	○	○	○	○	○





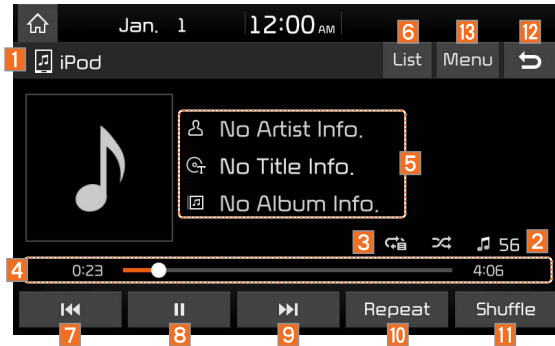

## iPod




Features	Description
<b>1</b> Mode	Displays the current operating mode.
<b>2</b> Number of songs	Number of songs on the current playlist.
<b>3</b> Repeat/Shuffle	From Repeat/Shuffle, displays the current operating function.
<b>4</b> Play Time	Displays the current play time/total play time.
<b>5</b> Song Info	Displays the artist/title/album info.
<b>6</b> List	Moves to the list screen.

Features	Description
<b>7</b> Previous File	<ul style="list-style-type: none"> <li>If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (depends on the play time).</li> <li>If play time is less than 3 seconds, moves to previous file.</li> <li>If play time is over 3 seconds, play the current file from the beginning.</li> <li>If the button is selected (over 0.8 seconds): It rewinds the track.</li> </ul>
<b>8</b> Play/Pause	Plays/pauses the current file.
<b>9</b> Next File	<ul style="list-style-type: none"> <li>If the button is selected (less than 0.8 seconds): Moves to the next file.</li> <li>If the button is selected (over 0.8 seconds): It fast-forwards the track.</li> </ul>
<b>10</b> Repeat	<p>Repeats the current song.</p> <ul style="list-style-type: none"> <li>Select this button to switch between repeating the current song and repeating category all songs. (It all depends on the specification of your Apple device.)</li> </ul>
<b>11</b> Shuffle	<p>Plays songs in random order.</p> <ul style="list-style-type: none"> <li>Select this button to switch between shuffle category and turning shuffle off. (It all depends on the specification of your Apple device.)</li> </ul>
<b>12</b> Back Button	Move to the previous screen.
<b>13</b> Menu	Sound Settings: Moves to the Sound Settings.



Features	Description
14 TUNE	<p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, press the  TUNE knob to play the track.</p> <p> If you do not anything with the  TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.</p>

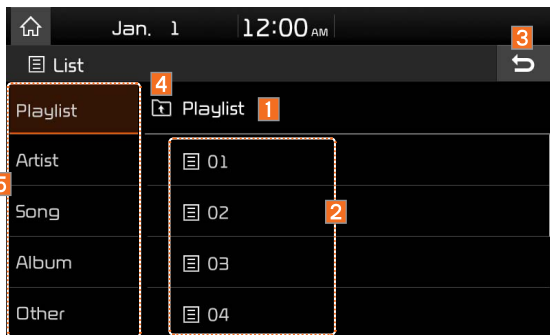


Features	Description
<b>1</b> Category Name	Displays the category name.
<b>2</b> Category List	Displays the contents of selected category. <b>i</b> If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly.
<b>3</b> Back Button	Move to the previous screen.
<b>4</b> Upper Category	Moves to Upper Category.
<b>5</b> Search Menu	Search songs by the list type.
<b>6</b> SEEK/TRACK	<ul style="list-style-type: none"> <li>When the key is pressed quickly (less than 0.8 seconds): Plays previous/next track.</li> <li>When the key is pressed and held (over 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track.</li> </ul>
<b>7</b> TUNE	<p>Turn the <b>TUNE</b> knob to search a desired track. If the desired track is displayed, press the <b>TUNE</b> knob to play the track.</p> <p><b>i</b> If you do not anything with the knob for 5 seconds, the <b>TUNE</b> knob search will be terminated.</p>

# AUX

## Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

- AUX mode can be used only when an external audio player has been connected.
- The AUX volume can also be controlled separately through the connected device.

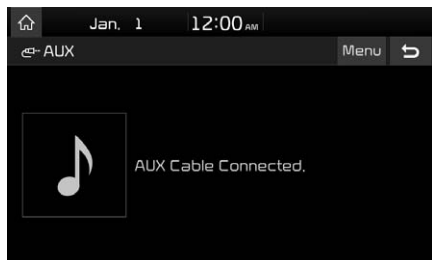


## NOTICE

- If only a cable is connected to the AUX without an external device, the mode will be changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.



※ The actual image in the vehicle may differ from the illustration.

## Bluetooth® Audio

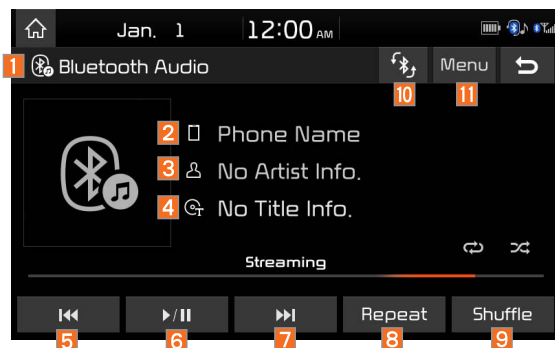


Features	Description
<b>1</b> Mode	Displays the current operating mode.
<b>2</b> Phone Name	Displays name of connected phone.
<b>3</b> Artist Info	Name of current artist.
<b>4</b> Title	Name of current song.
<b>5</b> Previous File	<ul style="list-style-type: none"> <li>If play time is less than 3 seconds, moves to the previous file.</li> <li>If play time is over than 3 seconds, plays the current file from the beginning.</li> </ul> <i>i</i> This function may differ depending on the model of mobile phone.
<b>6</b> Play/Pause	Plays/Pauses Bluetooth Audio.
<b>7</b> Next File	Moves to the next file.
<b>8</b> Repeat	Repeats the current file. <i>i</i> This function may differ depending on the model of mobile phone.
<b>9</b> Shuffle	Plays files in random order. <i>i</i> This function may differ depending on the model of mobile phone.
<b>10</b> Change Device	Search for and connect another Bluetooth device.
<b>11</b> Menu	<ul style="list-style-type: none"> <li>Change Device: Search for and connect another Bluetooth device.</li> <li>Sound Settings: Moves to the Sound Settings.</li> </ul>
<b>12</b> SEEK/TRACK	Plays the previous/next file.
<b>13</b> TUNE	● TUNE is not supported.

### **i** Information

- Artist info and Title may not be supported by mobile phone.
- While in use of other functions after connecting your mobile phone through a USB cable, the Bluetooth audio is disabled.
- Depending on the connected Bluetooth device, mobile phone, or the music player you are using, playback controls may differ.
- Depending on the music player you are using, streaming may not be supported.

## **Bluetooth Connection**

Settings for pairing, connection and disconnection of a Bluetooth device.

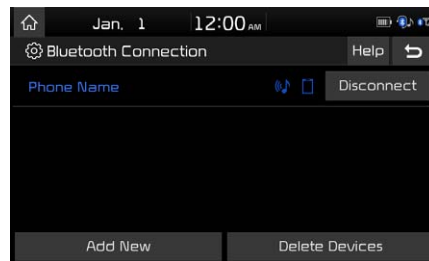

- In Bluetooth Audio play screen, select **Menu** and then **Connections**.

### **i** Information

- If the music in the mobile phone is not played after changing to audio streaming mode, press the play button. Thus check if the music is playing in the Bluetooth device after changing to audio streaming mode. Audio streaming may not be supported for some mobile phones.
- Please check the Bluetooth compatibility in below website: KIA Motors Corporation <http://www.kia.com>

MEMO

# part.3 Bluetooth

Before Using the Bluetooth® Handsfree  
Bluetooth Connection  
Bluetooth Phone



# Bluetooth

## Before Using the Bluetooth® Handsfree

---

### What is Bluetooth® Wireless Technology?

---

- *Bluetooth®* Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, *Bluetooth®* Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.

- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the KIA Motor website - KIA Motors Corporation: <http://www.kia.com>



---

#### WARNING

##### - Distracted Driving

- Focus on the road while driving. The driver's primary responsibility is in the safe and legal operation of the vehicle. Drivers should not use any hand held devices or other equipment or vehicle systems that distract the driver during vehicle operation.
  - Do not stare at the multimedia screen for long periods of time while driving. Staring at the screen for prolonged periods of time can lead to traffic accidents and can result in personal injuries.
- 

---

### Precautions for Safe Driving

---

- Bluetooth® is a feature that enables drivers to make handsfree calls. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phonebook. Before using *Bluetooth®* Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

---

## CAUTIONS upon Connecting Bluetooth® Phone

---

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features.
- Even if the phone supports *Bluetooth®* Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/connecting with the head unit.
- If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
  1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
  2. Turn the mobile phone power OFF/ON and try again.
  3. Completely remove the mobile phone battery, reboot, and then again.
  4. Reboot the Multimedia System and try again.
  5. Delete all paired devices from both of Phone and Head Unit sides and then try again.
- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- If you continue having issue downloading your contacts to your vehicle, contact your mobile phone provider.


## Bluetooth Connection

### Pairing a New Device





Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired. Only one Bluetooth device can be connected at a time.

### Pairing a New Device by Selecting Phone/Call

Press the  key on the steering wheel control. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

### Pairing a New Device Through the Phone Settings

Press the  key. ► Select . ► Select . ► Select . ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.




The default passkey is 0000.


The vehicle name above is an example. Check the actual information on the product.

### Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


### Connecting Devices by Selecting Phone/Call

Press the  key on the steering wheel control. ► Select the name of the device to connect. ► Connect Bluetooth.

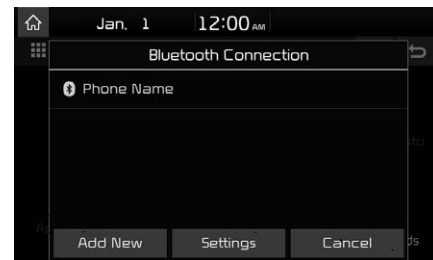

## Connecting Devices Through the Phone Settings


Press the **SETUP** key. ▶ Select **Bluetooth**.  
▶ Select **Bluetooth Connection**. ▶ Select the name of the device to connect. ▶ Connect Bluetooth.

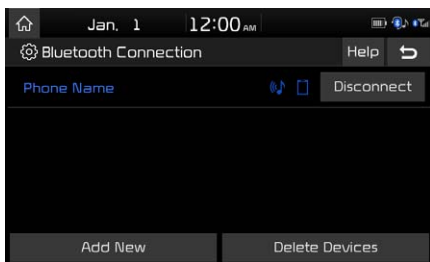

## Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.


Press the **SETUP** key. ▶ Select **Bluetooth**.  
▶ Select **Bluetooth Connection**. ▶ Select the name of the device to disconnect.

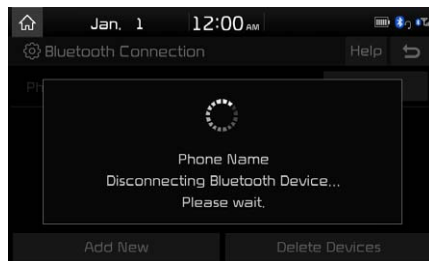

## Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.


Press the **SETUP** key. ▶ Select **Bluetooth**. ▶ Select **Bluetooth Connection**. ▶ Select **Delete Devices**. ▶ Select the device name to delete. ▶ Select **Delete**.

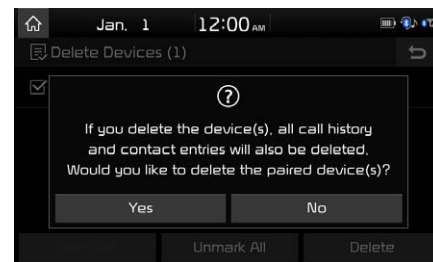

# Bluetooth Phone

## Phone Status Icons


Shows the current phone status in the right top of the display.

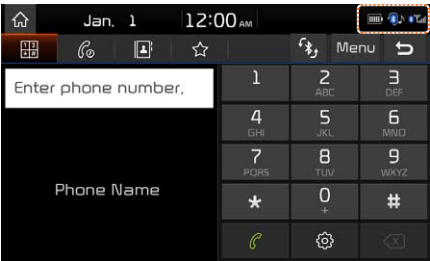



Icons	Description
	You can use Bluetooth phones when a Bluetooth Hands-free connection is established.
	You can use Bluetooth audio features when a Bluetooth audio connection is established.
	You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established.
	Call signal strength indicator.
	Battery level of the Bluetooth devices connected.
	Downloading Call History list.
	Downloading Contacts.
	In a Bluetooth phone call.
	Microphone muted.


**i Information**

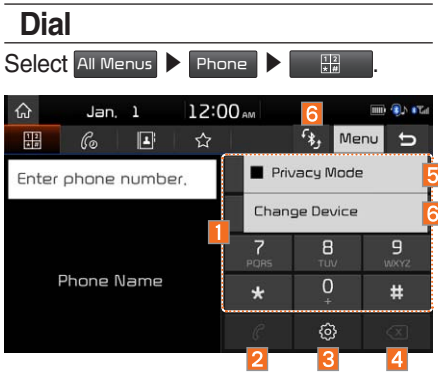- The battery level icon and the call signal strength indicator may not be supported in some Bluetooth devices.
- The battery level may differ from the actual level remaining.



Name	Description
1 Keypad	Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone.
2 Call	Makes a call after you dial a number and select  . If the number is listed in Dialed Calls, you can select the number and select  to automatically dial that number again.
3 Settings	Moves to a screen of Bluetooth Connection.
4 Delete	Deletes the numbers that you entered.
5 Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
6 Change Device	Search for and connect another Bluetooth device.

- i Information**
- Some types of mobile phones may not support the Speed Dial function.

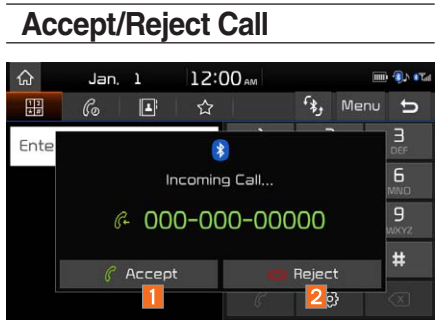


If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

Name	Description
1 Accept	Answers the call.
2 Reject	Ignores the call.

- i Information**
- In some mobile phones, the caller's number may not be displayed, and the Reject feature may not be supported.

## Using the Menu During a Phone Call

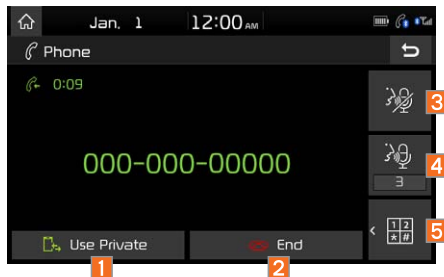

When making a call, you can use the following menu items.

Name	Description
1 Use Private	Switches a voice call from the car Hands-free to the mobile phone.
2 End	Ends a call.
3 Mute	Mutes the microphone during a call.
4 Outgoing Volume	Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 to 5).
5 Keypad	Moves to a screen for entering ARS numbers.
6 Switch	Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call.

### **i** Information

- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Use Private feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Hands-free, you cannot access other modes, such as Radio and Settings.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

## Call History



Name	Description
<b>1</b> All	Lists the all call history.
<b>2</b> Dialed	Lists the calls that you made.
<b>3</b> Received	Lists the calls that you have received.
<b>4</b> Missed	Lists the calls you missed.
<b>5</b> Call History	Displays all of your call history. Select from the list to dial the number.
<b>6</b> Download	Downloads the call history information from your mobile phone.
<b>7</b> Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
<b>8</b> Change Device	Search for and connect another Bluetooth device.


### **i** Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon (📶).
- If the call history download is turned off on the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth Settings or display status are normal.
- Some devices do not support call history download. Check if your Bluetooth device supports download feature. For details regarding Bluetooth-supported devices and their functional compatibility, visit <http://www.kia.com>




## Contacts

Select All Menus ► Phone ► 

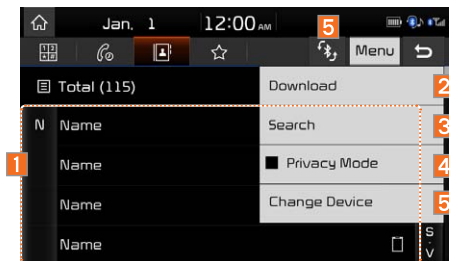

Name	Description
<b>1</b> Contacts List	The list of Contacts. Select from the list to dial the number.
<b>2</b> Download	Downloads contacts from your mobile phone.
<b>3</b> Search	Searches Contacts.
<b>4</b> Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
<b>5</b> Change Device	Search for and connect another Bluetooth device.


### **i** Information

- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the Multimedia system. Keep your important data in a safe place.
- Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- Only supported contacts format can be downloaded and displayed from the Bluetooth device, contacts from some applications will not be included.
- The status bar displays a  while downloading contacts.
- The download will not be available if the contacts download function is turned off on your Bluetooth device.

- Some devices require a device authentication for downloading your contacts. If download fails, check your phone screen and confirm the download if necessary.
- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts download. For Bluetooth supporting devices details and compatibility, visit <http://www.kia.com>

## Favorites

Select All Menus ► Phone ► ☆

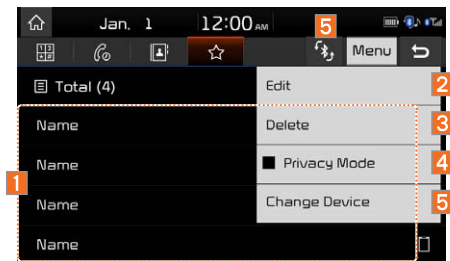

Name	Description
<b>1</b> Favorites	Lists the phone numbers saved as Favorites. Select from the list to dial the number.
<b>2</b> Edit	Add or delete numbers from favorites.
<b>3</b> Delete	Deletes numbers that you select from Favorites.
<b>4</b> Privacy Mode	Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.
<b>5</b> Change Device	Search for and connect another Bluetooth device.

MEMO

# part.4 Other Features

Camera  
Using Voice Memo

# Other Features

## Camera

### WARNING

When backing up, make sure to follow the guidelines below:

- Before entering your vehicle, always check the area behind your vehicle.
- Do not solely rely on the rear view camera when backing up. Always ensure that it is safe to back up by checking behind you and looking in the rearview mirrors.
- Always back up slowly and stop immediately if you suspect that a person, especially a child, might be behind you.

### CAUTION

- The distance shown in the rear view screen may differ from the actual distance. For safety, be sure to visually check the rear, left, and right sides of your vehicle.
- The color of the parking guidelines displayed in the picture may differ from the actual screen.
- When booted up, blinking may occur when you switch to a UI screen.

### NOTICE

- The rear view screen remains active while you are backing up. When you move the transmission shift lever to any position other than the "R" (Reverse) position after backing up, the rear view screen will be deactivated and the system will display the previous screen automatically.
- As you steer your vehicle, the parking guides change accordingly to indicate your vehicle's path.



- Depending on vehicle models, the steering-interactive parking guides may not be supported.
- If an object comes too close to your vehicle as you are parking the vehicle, a warning beep will sound. To prevent an accident that might result if you do not hear the beep, you can set the system to decrease the volume level of any media playing automatically when you are parking the vehicle. On the Home screen, touch All Menus ► Setup ► Sound ► Priority ► Proximity Warning.

## Steering-linked camera

When you put the transmission shift lever in the "R" (Reverse) position while the engine is running, the system screen will automatically display what is behind you.



Driving direction lines (yellow) **1 2**

These lines show the directions of the vehicle according to the steering angle.

Neutral direction lines (blue) **3**

These lines indicate your vehicle's expected path with the steering wheel in the neutral position. It can help you determine whether the vehicle is in the correct position in a parking space and prevent you from parking too close to the next vehicle.


Crash warning lines (red) **4**





These lines are to prevent a collision.

# Using Voice Memo

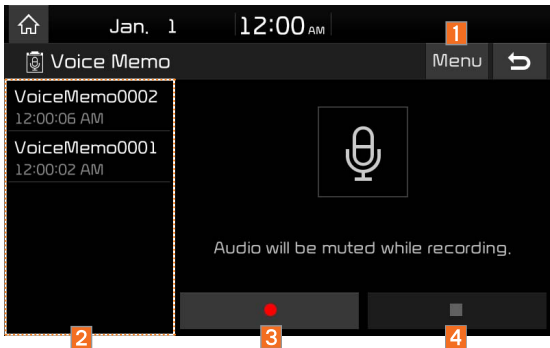You can record voice memos using the microphone installed in your vehicle and play voice memos on your system.

On the Home screen, touch **All Menus** ► **Voice Memo**.



Features	Description
1 Menu	<ul style="list-style-type: none"><li>• Delete: Delete voice memos.</li><li>• Save to USB Device: Save voice memos to a USB storage device. <i>i</i> This option is available only for USB storage devices formatted in FAT16/32 formats.</li><li>• Storage Info: View information on the storage space used for your voice memos.</li></ul>
2 List	List of your voice memos. Touch a voice memo to play it.
3 Record/Pause button	<ul style="list-style-type: none"><li>• Touch  to start recording.</li><li>• Touch  to pause recording.</li></ul>
4 Stop button	<ul style="list-style-type: none"><li>• Touch  to stop recording. The recorded memo is added to the voice memos list on the left of the screen. <i>i</i> You can also press the  button on the steering wheel.</li></ul>

## *i* Information

- Voice memo recording mutes the function in operation or pauses media playback.
- If you make or answer a call while recording a voice memo, the recording pauses. If an emergency call is connected, the recording will stop and the recorded voice memo will be saved automatically.



## part.5 Setup

Sound Settings

Display Settings

Bluetooth Settings

Phone Projection Settings

Home Screen Settings

Date/Time Settings

Language Settings

Keyboard Settings

Screen Saver Settings

Advanced Settings

System Info




# Setup

Setup is the screen to control Multimedia system settings.

To enter the screen, press the **SETUP** key or the **Setup** icon in All Menus.

## Sound Settings

Adjusts the sound effects for the whole system.

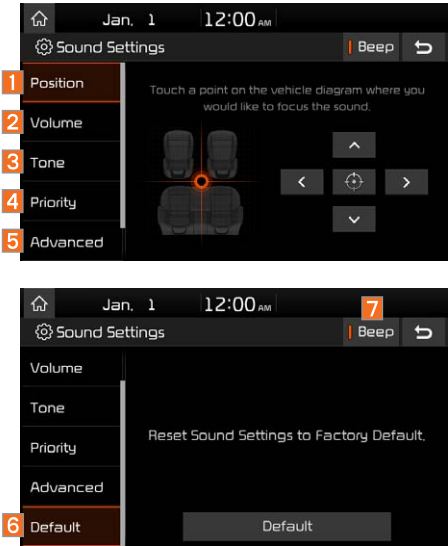


Features	Description
1 Position	Select the Up/Down/Left/Right button to control sound positioning. Select <b>Center</b> to concentrate the sound on the center of vehicle.
2 Volume	Adjust the volume levels for various system features, including phone projection.
3 Tone	Drag the slide bar to control Bass/Midrange/Treble settings. Select <b>Center</b> to initialize the settings.
4 Priority	Sets the volume ratio when parking the vehicle, turning on the vehicle's ignition, etc.
5 Advanced	Select additional audio options such as "Speed Dependent Volume Control" that automatically controls Audio volume according to vehicle speed.
6 Default	Resets the sound to factory default settings.
7 Beep	Select to activate a beep when pressing buttons.

**i Information**

- Advanced sound settings may differ according to selected AMP option.
- The seat shape may differ according to vehicle model.

# Display Settings


Adjusts the level of illumination for the entire system.

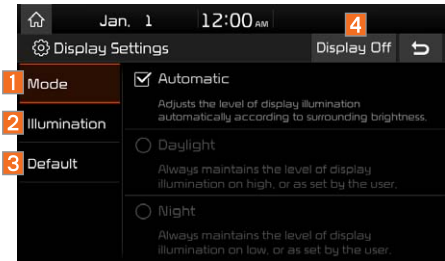

Features	Description
1 Mode	Select any of LCD illumination change modes: Automatic (changes the level automatically), Daylight, and Night.
2 Illumination	Set the levels of illumination for day and night. Select <b>Default</b> to initialize the settings.
3 Default	Resets the display to factory default settings
4 Display Off	Provides the Display Off (touch activation) function.

# Bluetooth Settings


Changes Bluetooth phone settings.  
Press the **SETUP** key ► Select **Bluetooth** icon.

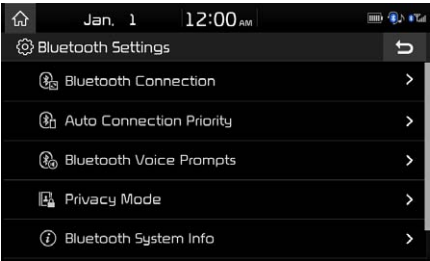

## Bluetooth Connection

Press the **SETUP** key ► Select **Bluetooth**

► Select **Bluetooth Connection**.

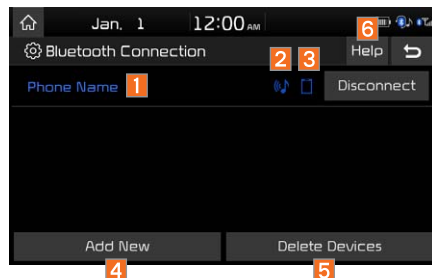

Features	Description
<b>1</b> Paired Device List	Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected.
<b>2</b> Bluetooth Audio Connection Status	An icon appears when you make a Bluetooth Audio connection.
<b>3</b> Bluetooth Hands-Free Connection Status	An icon appears when you make a Bluetooth Hands-free connection.
<b>4</b> Add New	Register a new Bluetooth device.
<b>5</b> Delete Devices	Select and delete a paired device.
<b>6</b> Help	Switches to the Bluetooth Connection Help screen.

### **i** Information


- Some options will be displayed only when a mobile phone is connected to the system.
- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.
- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.

---

## Auto Connection Priority

---

Press the **SETUP** key ► Select **Bluetooth**  
► Select **Auto Connection Priority**.

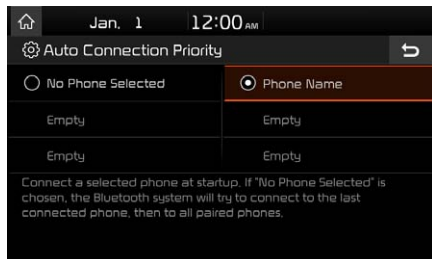

When the engine is running, the selected Bluetooth device is automatically connected. If you fail to connect the selected device, the previously-connected device is automatically connected, and if it also fails, then it tries to connect all paired devices sequentially.

Depending on auto connection priority, connection to a device may take time.

---

## Bluetooth Voice Prompts

---

Press the **SETUP** key ► Select **Bluetooth**  
► Select **Bluetooth Voice Prompts**.

Set whether to hear voice prompts for events related to Bluetooth connections.

---

## Privacy Mode

---

Press the **SETUP** key ► Select **Bluetooth**  
► Select **Privacy Mode**.

Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.

---

## Bluetooth System Info

---

Press the **SETUP** key ► Select **Bluetooth**  
► Select **Bluetooth System Info**.

View or edit your system's Bluetooth information.

---

## Default Factory Settings

---

Press the **SETUP** key ► Select **Bluetooth**  
► Select **Default Factory Settings**.

Delete all paired Bluetooth devices and reset your Bluetooth settings to default values. All data related to Bluetooth devices will also be deleted.

# Phone Projection Settings

For more details, refer to Phone Projection guide.

# Home Screen Settings

You can customize the three menu items at the bottom right of the Home Screen into the ones you want.

On the Home Screen Settings screen, drag the menu items on the right to the area marked in blue in the screen below.




## Information

- You can select the **Default** button to reset to the factory default settings.

# Date/Time Settings


Configure the settings for time and date. Using the arrow buttons, you can change the values. Date/Time settings do not automatically change when crossing into different time zones. The time must be changed manually on this screen.

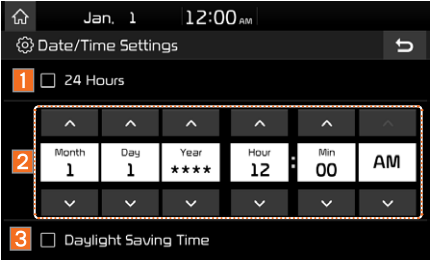

Features	Description
<b>1</b> 24 Hours	The time display is set in 24-hour format.
<b>2</b> Direct entry	If you tap any value, you can directly enter the number in the following screen.
<b>3</b> Daylight Saving Time	The daylight saving time (DST) is applied.

## Language Settings

You can configure the displayed system language.

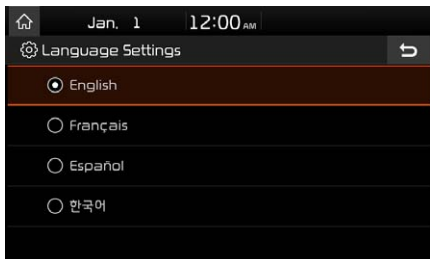

When the language is changed, the system language is automatically changed.

### **i** Information

- This setting will not affect user data, such as MP3 file names.
- Depending on the system language, voice recognition may not be supported.

## Keyboard Settings

You can configure the keyboard layout for each language.



### **i** Information

- Configured keyboard layouts are applied to all input modes.

## Screen Saver Settings


You can select any of the following screen formats to be displayed when the screen or power is turned off (press and hold the Power button).

- Digital clock and date
- Analog clock and date
- None



# Advanced Settings

Sets alerts per function if desired by the user.

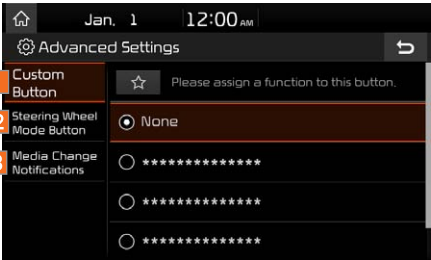

Features	Description
1 Custom Button	You can choose the feature to be accessed when the  key is pressed.
2 Steering Wheel Mode Button	Sets the media to be played when the steering wheel or rear seat (if provided)  button is pressed.
3 Media Change Notifications	Sets whether to display media information at the top of the screen as the next item is played when not on the media screen.

# System Info

System version information and update details are available.



Features	Description
1 SW Info	Select the  button to update the system.
2 Storage	View storage information of your system's memory.
3 Default	When  is selected, the settings are changed to factory defaults.

## System Update

At the System Info screen, insert the USB memory with the latest file downloaded, and then select the button to begin updating. The system will then reboot automatically.

### i Information

- This product needs supplemented software updates and additional functions, which collectively may take some time to complete, depending on the amount of data.

### NOTICE

- Do not turn off the system or remove the storage device while the update is in progress. If the power supply is cut off or the storage device is removed from the system, it may damage the data or cause a system malfunction.
- When is selected, it may delete all of the data and settings so be cautious of your action.

# part.6 Appendix

Product Specification

Troubleshooting

FAQ



# Appendix

## Product Specification

### TFT-LCD

Screen Size	7 inch (152.4 x 91.44 mm)
Resolution	384000 pixels (Resolution: 800 x 480)
Operating Method	TFT(Thin Film Transistor) Active Matrix
Viewing Angle	Left/Right, Top/Bottom: ALL 89°
Internal Lighting	LED

### Radio

Channels	FM: 87.5 MHz to 107.9 MHz(Step: 200 kHz)
	AM: 530 kHz to 1710 kHz(Step: 10 kHz)
Sensitivity	FM: Under 10 dBuV/AM: Under 35 dBu EMF
Distortion Factor	Within 2 %

### Common

Power Supply	DC 14.4 V	Operating Power	DC 9 V to DC 16 V
Dark Current	1 mA or less		
Operating Temperature	-20 to +70 °C (-4 to +158 °F)	Storage Temperature	-40 to +80 °C (-40 to +176 °F)
Dimensions	234 X 147 X 201 mm		
Current Consumption	2.5 A	Weight	1.7 kg

### Bluetooth® Wireless Technology

Frequency Range	2400 to 2483.5 MHz	Supported Bluetooth® Specification	3.0
Supported Profile	Handsfree(1.6), A2DP(1.2), AVRCP(1.5), PBAP(1.1)		
Bluetooth Power Class 2	-6 to 4 dBm		
Antenna power	3 mW (maximum)		
Number of Channels	79 channels		

# Troubleshooting

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your Kia dealer.

Problem	Possible Cause
There are small red, blue, or green dots on the screen	<ul style="list-style-type: none"> <li>• Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels</li> </ul>
The sound or image is not working	<ul style="list-style-type: none"> <li>• Has the Switch for the vehicle been turned to [ACC] or [ON]?</li> <li>• Has the SYSTEM been turned OFF?</li> </ul>
The screen is being displayed but sound is not working	<ul style="list-style-type: none"> <li>• Has the volume been set to a low level?</li> <li>• Has the volume been muted?</li> </ul>
When the power is turned on, the corners of the screen are dark	<ul style="list-style-type: none"> <li>• The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunction</li> <li>• If the screen is very dark, contact your nearest Kia dealer for assistance</li> </ul>
Sound is working from only one speaker	<ul style="list-style-type: none"> <li>• Are the positions of Fader or Balance sound controls adjusted to only one side?</li> </ul>

Problem	Possible Cause
Sound does not work in AUX mode	<ul style="list-style-type: none"> <li>• Are the audio connector jacks fully inserted into the AUX terminal?</li> </ul>
The external device is not working	<ul style="list-style-type: none"> <li>• Is the external device connected with a standard connector cable?</li> </ul>
Upon turning power on, the most recent mode screen is not displayed	<p>Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth<sup>®</sup> streaming mode, the most recently played mode screen prior to turning off power may not properly load</p> <ul style="list-style-type: none"> <li>• If the corresponding device is not connected, the mode operated prior to the most recent mode will operate</li> <li>• If the previous mode still cannot be properly played, the mode operated prior to that will operate</li> </ul>

Problem	Possible Cause	Countermeasure
The power does not turn on	<ul style="list-style-type: none"> <li>The fuse is disconnected</li> </ul>	<ul style="list-style-type: none"> <li>Replace with a suitable fuse</li> <li>If the fuse is disconnected again, please contact your point of purchase or Kia dealer</li> </ul>
	<ul style="list-style-type: none"> <li>Device is not properly connected</li> </ul>	<ul style="list-style-type: none"> <li>Check to see that the device has been properly connected</li> </ul>
The system does not play	<ul style="list-style-type: none"> <li>The vehicle battery is low</li> </ul>	<ul style="list-style-type: none"> <li>Charge the battery If the problem persists, contact your point of purchase or Kia dealer</li> </ul>

Problem	Possible Cause	Countermeasure
The image color/tone quality is low	<ul style="list-style-type: none"> <li>The brightness, saturation, hue, and contrast levels are not set properly</li> </ul>	<ul style="list-style-type: none"> <li>Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup</li> </ul>
Sound does not work	<ul style="list-style-type: none"> <li>The volume level is set to the lowest level</li> <li>The connection is not proper</li> </ul>	<ul style="list-style-type: none"> <li>Adjust the volume level</li> <li>Check to see that the device has been properly connected</li> </ul>
	<ul style="list-style-type: none"> <li>The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode</li> </ul>	<ul style="list-style-type: none"> <li>The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode</li> </ul>
The sound or image quality is low	<ul style="list-style-type: none"> <li>Vibration is occurring from where the conversion switch has been installed</li> <li>Image color/tone quality is low</li> </ul>	<ul style="list-style-type: none"> <li>The sound may be short-circuited and the image distorted if the device vibrates</li> <li>The device will return to normal once vibrations stop</li> </ul>

Problem	Possible Cause	Countermeasure
The USB does not work	<ul style="list-style-type: none"> <li>• USB memory is damaged</li> </ul>	<ul style="list-style-type: none"> <li>• Please use the USB after formatting it.</li> </ul>
	<ul style="list-style-type: none"> <li>• USB memory has been contaminated</li> </ul>	<ul style="list-style-type: none"> <li>• Remove any foreign substances on the contact surface of the USB memory and multimedia terminal</li> </ul>
	<ul style="list-style-type: none"> <li>• A separately purchased USB HUB is being used</li> </ul>	<ul style="list-style-type: none"> <li>• Directly connect the USB memory with the multimedia terminal on the vehicle</li> </ul>
	<ul style="list-style-type: none"> <li>• A USB extension cable is being used</li> </ul>	<ul style="list-style-type: none"> <li>• Directly connect the USB memory with the multimedia terminal on the vehicle</li> </ul>
	<ul style="list-style-type: none"> <li>• A USB which is not a Metal Cover Type USB Memory is being used</li> </ul>	<ul style="list-style-type: none"> <li>• Use standard USB Memory</li> </ul>
	<ul style="list-style-type: none"> <li>• An HDD type, CF, SD Memory is being used</li> </ul>	<ul style="list-style-type: none"> <li>• Use standard USB Memory</li> </ul>
	<ul style="list-style-type: none"> <li>• There are no music files which can be played</li> </ul>	<ul style="list-style-type: none"> <li>• Only MP3, WMA file formats are supported. Please use only the supported music file formats</li> </ul>

Problem	Possible Cause	Countermeasure
The iPod is not recognized even though it has been connected	<ul style="list-style-type: none"> <li>• There are no titles which can be played</li> </ul>	<ul style="list-style-type: none"> <li>• Use iTunes to download and save MP3 files into the iPod</li> </ul>
	<ul style="list-style-type: none"> <li>• The iPod firmware version has not been properly updated</li> </ul>	<ul style="list-style-type: none"> <li>• Use iTunes to update the firmware version and reconnect the iPod with the device</li> </ul>
	<ul style="list-style-type: none"> <li>• The iPod device does not recognize downloads</li> </ul>	<ul style="list-style-type: none"> <li>• Reset the iPod and reconnect with the device</li> </ul>
Bluetooth does not work or its limited functions are available	<ul style="list-style-type: none"> <li>• Bluetooth on your mobile phone is set to OFF</li> </ul>	<ul style="list-style-type: none"> <li>• Set it to ON</li> </ul>
	<ul style="list-style-type: none"> <li>• The Bluetooth connection is not made</li> </ul>	<ul style="list-style-type: none"> <li>• Make the connection active</li> </ul>

### **i** Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (more than 1 second). The device power will turn off and the system will reset.

## FAQ

### About Pairing Mobile Phones

---

**Q** I cannot pair my mobile phone. What is the cause?

**A** Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

**Q** What is the difference between pairing a mobile phone and connecting a mobile phone?

**A** Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

**Q** What is a Passkey?

**A** A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with **SETUP** ►


**Bluetooth** ► **Bluetooth System Info** ► **Passkey** menu options.


---

## About Making/Answering Phone Calls


---

**Q** How can I answer a call?

**A** When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the **Accept** button on the screen or the  key on the steering wheel control.

To reject the call, select the **Reject** button on the screen or press the  key on the steering wheel control.

**Q** What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

**A** While on a call, press and hold (more than 0.8 seconds) the  key on the steering wheel control or select the **Use Private** button at the bottom of the Phone screen to switch the call to your mobile phone.

---

## About *Bluetooth*® Wireless Technology/ Multimedia System Use Environment

---

**Q** What is the range of my wireless connection?

**A** The wireless connection can be used within 15 yards.

**Q** How many mobile phones can be paired?

**A** It is possible to pair up to five mobile phones.

**Q** Why is call quality sometimes poor?

**A** Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

# Index

## A

---

About <i>Bluetooth</i> ® Wireless Technology/Multimedia System Use Environment.....	6-7
About Making/	
Answering Phone Calls .....	6-7
About Pairing Mobile Phones.....	6-6
Accept/Reject Call .....	3-7
Advanced Settings .....	5-8
Auto Connection Priority .....	5-5
AUX .....	2-17

## B

---

Battery Warning Message .....	1-9
Before Playing a USB MP3 .....	2-4
Before Using the <i>Bluetooth</i> ®	
Handsfree .....	3-2
<i>Bluetooth</i> ® Audio .....	2-18
<i>Bluetooth</i> Connection .....	2-19, 3-4, 5-4
<i>Bluetooth</i> Phone .....	3-6
<i>Bluetooth</i> Settings .....	5-3
<i>Bluetooth</i> System Info.....	5-5
<i>Bluetooth</i> Voice Prompts .....	5-5

## C

---

Call History .....	3-9
Camera .....	4-2
CAUTIONS upon Connecting	
<i>Bluetooth</i> ® Phone .....	3-3
Component Names and	
Functions .....	1-4
Connecting an External Device .....	2-17
Connecting <i>Bluetooth</i> Devices .....	3-4
Contacts .....	3-10

## D

---

Date/Time Settings .....	5-6
Default Factory Settings .....	5-5
Deleting <i>Bluetooth</i> Devices .....	3-5
Dial .....	3-7
Disconnecting <i>Bluetooth</i> Devices ...	3-5
Display Settings .....	5-3

## F

---

FAQ .....	6-6
Favorites .....	3-11
FM/AM .....	2-2

## H

---

Head Unit.....	1-4
Home Screen .....	1-10
Home Screen Settings .....	5-6

## I

---

iPod .....	2-10, 2-14
------------	------------

## K

---

Keyboard Settings .....	5-7
-------------------------	-----

## L

---

Language Settings .....	5-7
-------------------------	-----

## O

---

On-Screen Touch Controls ..... 1-11

## P

---

Pairing a New Device ..... 3-4

Phone Projection Settings ..... 5-6

Phone Status Icons ..... 3-6

Precautions for Safe Driving ..... 3-2

Privacy Mode ..... 5-5

Product Specification ..... 6-2

## R

---

Restrictions on Features for Safety  
Measures ..... 1-9

## S

---

Screen Saver Settings ..... 5-7

Sound Settings ..... 5-2

Starting the System for the  
First Time ..... 1-8

Steering-linked camera ..... 4-3

Steering Wheel Controls ..... 1-6

Supported USB music  
specifications ..... 2-6

System Info ..... 5-8

System Reset ..... 1-8

System Update ..... 5-8

## T

---

Troubleshooting ..... 6-3

Turning the System On/Off ..... 1-8

## U

---

USB ..... 2-4

USB Music ..... 2-7

Using iPod Devices ..... 2-10

Using the Menu During a  
Phone Call ..... 3-8

Using Voice Memo ..... 4-4

## W

---

Warnings and Cautions ..... 1-2

What is *Bluetooth*® Wireless  
Technology? ..... 3-2



## Important Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual ("User's Guide"). Not following precautions found in this User's Guide can lead to an accident or other serious consequences.

### **Keep User's Guide in Vehicle**

When kept in the vehicle, the User's Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User's Guide and read its instructions and safety information carefully.

### **Warning**

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since while setting up or changing some functions as you may to distract your attention away from the road and remove your hands from the wheel.

# General Operation

## **Prolonged Views of Screen**

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

## **Volume Setting**

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

## FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this device not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.



H9MS7-DA000

DA7  
(영어 | 미국) 디오디오2