

# SPORTAGE

## CAR MULTIMEDIA SYSTEM

### | QUICK REFERENCE GUIDE



The Power to Surprise



## LOOKING FOR MORE INFORMATION?

This Quick Reference Guide does not replace your System Owner's Manual.

If you require additional information or are unsure of a specific issue, refer to the System User's Manual for additional information.

---

### iPod®

---

iPod® is a registered trademark of Apple Inc.

---

### Bluetooth® Wireless Technology

---

The *Bluetooth®* Wireless Technology word mark and logos are registered trademarks owned by *Bluetooth®* Wireless Technology SIG, Inc. and any use of such marks by KIA is under license.

A *Bluetooth®* Wireless Technology enabled cell phone is required to use *Bluetooth®* Wireless Technology.

---

### HD Radio™ Technology

---

HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents.

HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.



Maps for Life

All Map Database cannot be copied without permission.

**Warning:** This is protected by U.S. copyright laws. All rights not expressly granted are reserved.

You may not otherwise reproduce, modify, and distribute the content without M&Soft, Inc's prior written consent.

Please ensure that this information is accurately stated and approved for use in this context.

- SiriusXM service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. If you decide to continue your SiriusXM service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call Sirius XM at 1-866-635-2349 to cancel. See our Customer Agreement for complete terms at [www.siriusxm.com](http://www.siriusxm.com). Programming subject to change. Sirius satellite service is available only to those at least 18 and older in the 48 contiguous USA, D.C., and PR (with coverage limitations). Traffic information not available in all markets. See [siriusxm.com/traffic](http://siriusxm.com/traffic) for details. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

### **WARNING**

---

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle."
- 
- Infinity is a trademark of Harman International Industries, Inc.
  - UVO eServices is compatible with many popular smartphone devices. Please see [MyUVO.com](http://MyUVO.com) for phone compatibility.
  - App Store and Google Play are service marks of Apple Inc. and Google Inc. respectively. No charge for the UVO eServices App. App runs on your smartphone cellular data service. Normal data rates will apply.
  - HD Radio and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.
  - 24-hour Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via Bluetooth within the cellular service coverage area is required.
  - Vehicle Diagnostics do not take the place of regularly scheduled maintenance. Feature checks powertrain, chassis, and airbag systems only. For factory-recommended maintenance schedule, see the Maintenance Feature of UVO eServices or the Owner's Manual.
  - 911 Connect activates after an airbag deployment. Feature requires a connected mobile phone via Bluetooth. Dependant on cellular service coverage.
  - The REAR-CAMERA display is not a substitute for proper and safe backing-up procedures. The REAR-CAMERA display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

# Table of Contents

---

Controls and Functions	2
Sound Settings	5
Display Settings	7
FM/AM Mode	8
HD Radio™ Mode	11
SIRIUS Mode	13
CD Mode	16
MP3 CD Mode	18
USB Mode	21
iPod Mode	25
AUX Mode	27
Bluetooth® Audio	28
My Music Mode	29
Navigation	32
<i>Bluetooth®</i> Wireless Technology	48
Voice Recognition	60

# Controls and Functions

## Control Panel

### 1 ● PWR key ● VOL Knob

- When power is off, press to turn power on.
- When power is on, press and hold (over 0.8 seconds) to turn power off.
- When power is on, press shortly (under 0.8 seconds) to turn Audio off.
- Turn left/right to control volume.

### 2 FM/AM

- Selects FM/AM mode.
- Each time the key is pressed, the mode is changed in order of FM1 → FM2 → AM → FM1.

### 3 PHONE

Takes user to phone screen.

### 4 SAT

#### Converts to SIRIUS mode

Each time the key is pressed, the mode is changed in order of SIRIUS1 → SIRIUS2 → SIRIUS3 → SIRIUS1.

### 5 MEDIA

- Displays CD, MP3, USB, iPod, AUX, Bluetooth® Audio Streaming, My Music modes.
- If the media is not connected or a disc is not inserted, corresponding modes will be disabled.

### 6 SEEK TRACK

#### Pressed shortly. (under 0.8 seconds)

- In FM/AM mode, plays previous/next frequency.
- In SIRIUS mode, plays the previous/next channel.
- In CD/MP3/USB/iPod/My Music modes, changes the track, file or chapter.

#### Pressed and held. (over 0.8 seconds)

- In FM/AM mode, continuously changes the frequency until the key is released and plays the current frequency.
- In SIRIUS mode, continuously changes the channel until the key is released and plays the current channel.
- In CD/MP3/USB/iPod/My Music modes, rewinds or fast-forwards the track or file.



# Controls and Functions

---



Press to insert or eject disc.



Displays the map for the current position.



Displays Route menu screen.



Displays the Destination setup menu.



Displays the Setup mode.



- In FM/AM mode, changes the frequency.
- In SIRIUS mode, changes the channel.
- In CD, MP3, USB, iPod, My Music modes, changes the track, file or chapter.



Displays current time and date.



SD Card insert slot.

## CAUTION

- Always give your full attention to driving. Do not operate your system in such a way that you may be distracted from driving your vehicle.

# Controls and Functions

## Steering wheel

### 1

Controls the volume.

### 2

Mutes the sound.

### 3

#### **Pressed shortly. (under 0.8 seconds)**

- In FM/AM mode, searches broadcast frequencies saved to Presets.
- In SIRIUS modes, searches broadcast channels saved to Presets.
- In CD/MP3/USB/iPod/My Music modes, changes the track, file or chapter.

#### **Pressed and held. (over 0.8 seconds)**


- In FM/AM mode, automatically searches broadcast frequencies and channels.
- In SIRIUS modes, automatically searches broadcast channels.
- In CD/MP3/USB/iPod/My Music modes: rewinds or fast forwards the track of file.

### 4

- Each time this key is pressed, the mode is changed in order of FM1 → FM2 → AM → SIRIUS1 → SIRIUS2 → SIRIUS3 → USB or iPod → AUX → Bluetooth® Audio → My Music.
- If the media is not connected or a disc is not inserted, corresponding modes will be disabled.
- Press and hold the key (over 0.8 seconds) to turn the Audio system on/off.
- When power is off, press the key to turn power back on.

### 5

#### **When pressed shortly. (under 0.8 seconds)**

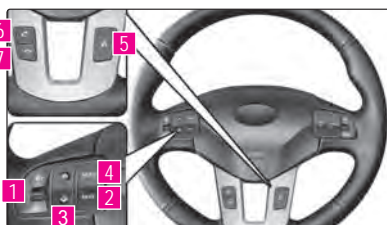

- Activates voice recognition.

#### **When pressed and held. (over 0.8 seconds)**

- Ends voice recognition.

### 6

#### **Pressed shortly. (under 1.2 seconds)**

- When pressed in the phone screen, displays call history screen.
- When pressed in the dial screen, makes a call.
- When pressed in the incoming call screen, answers the call.
- When pressed during call waiting, switches to waiting call (Call Waiting)

#### **Pressed and held. (over 1.2 seconds)**

- When pressed in the Bluetooth® Handsfree phone mode, redials the last call.
- When pressed during a Bluetooth® Handsfree call, switches call back to mobile phone (Private).
- When pressed while calling on the mobile phone, switches call back to Bluetooth® Handsfree (Operates only when Bluetooth® Handsfree is connected).

### 7

- When pressed during a call, ends the phone call.
- When pressed in the incoming call screen, rejects the call.

## Sound Settings



Press the **Sound** button to display the sound setting screen.

※ UVO eServices are an optional feature equipped in select vehicles.




### Setting Balance/Fade

Press the **Sound** button ►

Press **Fade/Balance** ► Set and press **Done** .

Use the , , , buttons to move the cursor on the control screen to the desired position.

Press **CENTER** to restore sound to the center position.

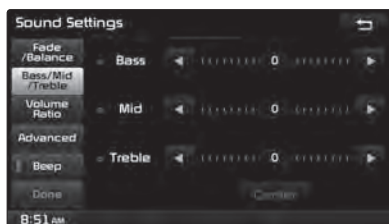


### Setting Bass/Mid/Treble

Press the **Sound** button ►

Press **Bass/Mid/Treble** ► Set and press **Done** .

Use the or buttons to adjust the Bass/Mid/Treble settings.

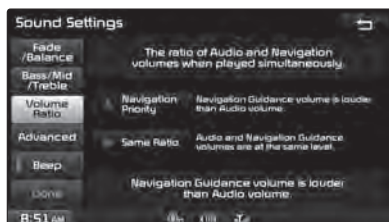

### Setting Volume Ratio

Press the **Sound** button ►

Press **Volume Ratio** ► Set and press **Done** .

These options are used to set the volume ratio by selecting from Navigation Priority/ Audio Priority/Same Ratio.



# Sound Settings


## Advanced

### Speed Dependent Volume Control

Press the  **Sound** button ▶

Press **Advanced** ▶ Turn the feature **On** ▶ Set and press **Done** .

The volume level is controlled automatically according to the vehicle speed.

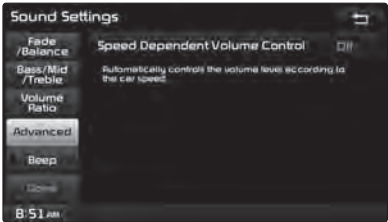


### Setting Beep

Press the  **Sound** button ▶

Press **Beep** ▶ Set and press **Done** .

Each press of this button turns the BEEP tone on/off.

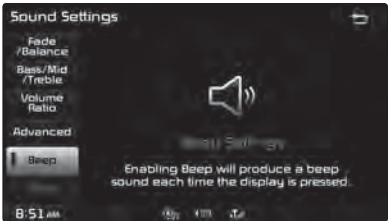


## Display Settings



Press the **SETUP** key ► Press

**Setup** ► Press **Display** .

※ UVO eServices are an optional feature equipped in select vehicles.

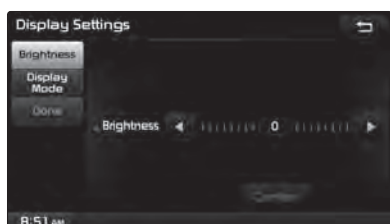

### Adjusting Brightness

Press the **Display** button ►

Press **Brightness** ► Set and press

**Done** .

Use the ◀ or ▶ buttons to adjust the display brightness.



### Setting Display Mode

Press the **Display** button ►

Press **Display Mode** ► Set and press **Done** .

Press the button for the desired display mode from **Automatic** ,

**Daylight** , and **Light** modes.

# FM/AM Mode

## Starting Mode

Press the **FM/AM** key to change the mode in order of FM1 → FM2 → AM.

When the power is OFF, pressing the **FM/AM** key will turn the power on and play a radio broadcast



### Using Seek

Press the **SEEK** (up arrow) or **TRACK** (down arrow) key to automatically search for frequencies.

- Shortly press the key (under 0.8 seconds) :  
Plays previous/next frequency
- Press and hold the key (over 0.8 seconds) :  
Changes the frequency while pressed and receives the next frequency upon release.

### Using TUNE

Turn the **TUNE** knob left/right to select the frequency.

- FM1/FM2 : Increases/decreases by 200kHz
- AM : Increases/decreases by 10kHz




### Selecting Presets

From the 6 presets, select the frequency you want to listen to.



## Saving Radio Frequency

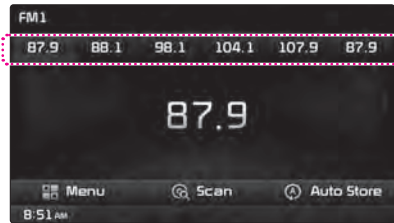

### Saving Manually

After selecting frequency ► Press and hold (over 0.8 seconds) the preset button.

- A 'beep' will sound and the frequency will be saved to the selected preset button.

### Saving Automatically

Press the **Auto Store** to automatically save receivable frequencies to Preset buttons.

A total of 18 frequencies with six preset frequencies each for FM1/FM2/AM modes can be saved.

## Scanning Radio Frequency



Press the **Scan** button to scan all radio frequencies.

Starting from the current frequency, frequencies with superior reception are scanned for 5 seconds and the previous frequency is restored.

# FM/AM Mode

---

## Using the Menu Buttons

Press the **Menu** button to use the Preset Scan menu.

---

### Preset Scan

Press the **Menu** button ► Press **Preset Scan**.

- Frequencies saved to the 6 preset buttons are each played for 5 seconds and the previous frequency is restored.



---

### Text On/Text Off

Press the **Menu** button ► Press **Text On**.

The Text feature is turned on/off.

- If the **Text On** button is displayed (Text off state), information will not be displayed even if there is information being transmitted from the broadcast station.
- If the **Text Off** button is displayed (Text on state), then broadcast information will be displayed. Information may not be displayed if there is no information being transmitted from the broadcast station.

# HD Radio™ Mode

---

## Starting Mode



Press the **FM/AM** key to turn on Radio mode.

If an HD Radio™ broadcast is received, the radio mode will switch from analog broadcast to HD Radio™ broadcast.

## Operating HD Radio™ Mode



---

### Selecting a Frequency

As HD Radio™ reception is included within FM/AM mode, the methods of moving between channels, saving presets, searching, or methods of searching frequencies are identical. However, while the HD Radio™ related icon display will become active when within regions where an HD Radio™ signal can be received.

---

### Using TUNE

Turn the **TUNE** knob left/right to select the frequency.

---

### Selecting through Preset

From the 6 presets, select the HD Radio™ broadcast you want to listen to.

# HD Radio Mode

---

## Song-Tagging


The song tagging feature provides a way to capture broadcasted song information from the radio for future purchase in iTunes®.

Upon connection of an Apple audio playback device , the "tagged songs" will be transferred to your iTunes® account in your Tagged songs folder.

## HD Radio™ Digital Broadcast On/Off

Press the **SETUP** key ► Press **Setup** ► Press the **HD Radio** ► Press **On** / **Off** .

HD Radio™ Broadcasts can be turned On and Off for HD Radio™ FM and AM mode.

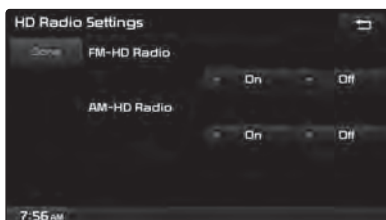

## Starting Mode



Press the **SAT** key to change the mode in order of SIRIUS1 → SIRIUS2 → SIRIUS3.

When the power is OFF, pressing the **SAT** key will turn the power on and play an SIRIUS Radio broadcast.

---

## Using SEEK

Press the **SEEK** key, **TRACK** key on the control panel for under 0.8 seconds.

The previous or next channel will be selected.



---

## Using TUNE

Turn the **TUNE** knob to display the previous or next channel information.

After a brief moment, the selected channel will be played.



---

## Selecting Presets

From the 6 presets, select the channel you want to listen to.



# SIRIUS Mode

## Selecting through Channel/Category List

Press the **List** button ► Select the desired category and channel. Once selected, the previous screen will be restored and the selected channel will begin playing.



## Saving SIRIUS Channels

### Saving Manually

After selecting channel ► Press and hold (over 0.8 seconds) the preset button.

- A confirmation 'beep' will be heard and the channel will be saved to the selected preset button.



## Using the Menu Buttons



Press the **Menu** button to use the Search, Preset Scan, and Scan menus.



### Search

Press the **Menu** button ► Press **Search** ► Enter numbers and press **OK** .

Enter the number of the channel you want to receive.

### Preset Scan

Press the **Menu** button ► Press **Preset Scan** .

Channels saved to the 6 preset buttons are each played for 10 seconds and then the previous channel is restored.

### Scan

Press the **Scan** button to scan all channels.

Starting from the current channel, channels with superior reception are scanned for 10 seconds and the previous channel is restored once scanning is complete.

# CD Mode

---


## Starting Mode

Press the **MEDIA** key ► Press **CD**.

---

### Playing a CD

- Press the **▶** button to play the track.
- Press the **||** button to pause the track.

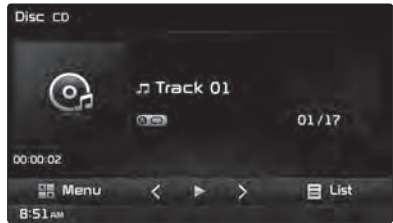

---

### Fast-forwarding or Rewinding CD Tracks

While playing ► Press and hold the **SEEK** (up arrow) or **TRACK** (down arrow) key. (over 0.8 seconds)

This will rewind or fast-forward the track.


While the **SEEK** (up arrow) or **TRACK** (down arrow) key is being pressed, the track will rewind or fast-forward at 20x speed.

Once released, the track will begin playing at normal speed.


---

### Searching CD Tracks

Turn the **TUNE** knob ► Search tracks ► Once the desired track name is displayed, press the **TUNE** knob. When searching tracks, the track number is displayed in orange. Pressing the **TUNE** knob will play the corresponding track.

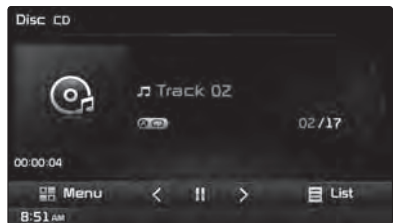

## Using the Menu Buttons

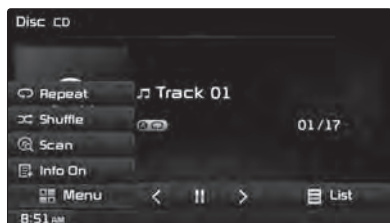

Press the **Menu** button to set the repeat, shuffle, scan and Info On/Info Off menus.

### Repeat

Press the **Menu** button ► Press **Repeat** .

The current track is repeated.

### Shuffle

Press the **Menu** button ► Press **Shuffle** .

Tracks within the disc are played in random order.

### Scan

Press the **Menu** button ► Press **Scan** .

The beginning (approx. 10 seconds) of all tracks within the CD are scanned.

### Info On/Info Off

Press the **Menu** button ► Press **Info On** .

The amount of information displayed on the screen can be selected. When the title, artist, and album info are displayed, the button will automatically change to **Info Off** .

Press **Info Off** to restore the previous information display setting.

# MP3 CD Mode

## Starting Mode

Press the **MEDIA** key ► Press **MP3**.

### Playing MP3

- Press the **▶** button to play the file.
- Press the **⏸** button to pause the file.

### Selecting MP3 files

#### Selecting from the Mode Screen

- Press the **⏮**, **⏭** key to select the previous or next file.
- Pressing and holding the **⏮**, **⏭** key will rewind or fast-forward the current file.

#### Using Menus within List Screen

Press the **List** button ► Select the file from the list.

#### Fast-forwarding or Rewinding MP3 Files



While playing ► Press and hold the **⏮**, **⏭** key (over 0.8 seconds).

This will rewind or fast-forward the file. While the **⏮**, **⏭** key is being pressed, the file will rewind or fast-forward at 20x speed.


Once released, the file will begin playing at normal speed.

#### Searching MP3 Files

Turn the **TUNE** knob ► Search files ► Once the desired file name is displayed, press the **TUNE** knob.

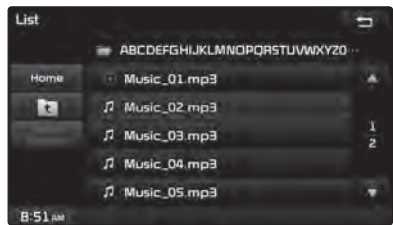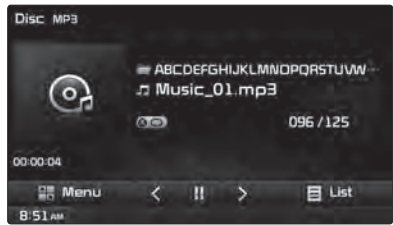

## Using the Menu Buttons

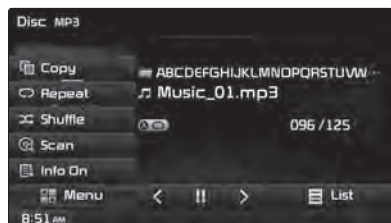

Press the **Menu** button to set the copy, repeat, shuffle, scan, and Info On/Off options.

---

### Copy

Press the **Menu** button ► Press **Copy** .

The currently playing file is copied and saved in My Music.

---

### Repeat

Press the **Menu** button ► Press **Repeat** .

---

### Shuffle

Press the **Menu** button ► Press **Shuffle** .

---

### Scan

Press the **Menu** button ► Press **Scan** .

# MP3 CD Mode

## Info On/Info Off

Press the **Menu** button ► Press **Info On** .

The amount of information displayed on the screen can be changed.

When the title, artist, and album info are displayed, the button will automatically change to **Info Off** . Press **Info Off** to restore the previous information display setting.


## Using Menus within the List Screen

### Moving between Lists

Press the **List** button ► Press the **▲** , **▼** buttons.

If five (5) or more files or folders exist in the same folder, the list will be displayed across two or more pages.

Press the **▲** , **▼** cursor buttons to quickly find the desired page.

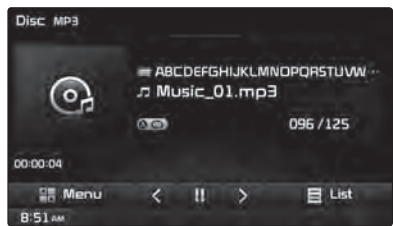


### Moving between Folders

Press the **Folder** button ► Select folder from the folder list.


Pressing the **Folder** button will move to the folder one level above the current folder.

Pressing the **Home** button folder will move to the root folder.

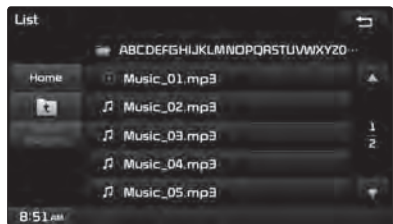


### Returning to Current Location

While searching files within other folders, press the **Now Playing** button to return to the currently playing file screen.

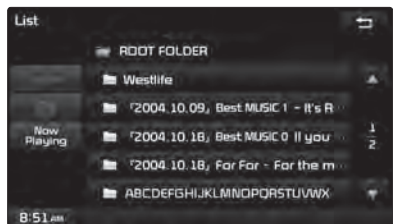

## Starting USB Music Mode

Press the **MEDIA** key ► Press **USB Music** . If the USB is not connected, then the **USB Music** button will be disabled.

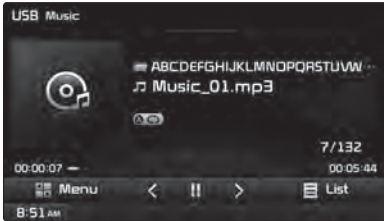

## Playing USB Music

- Press the **▶** button to play the USB Music.
- Press the **||** button to pause USB Music.

## Searching USB Music Files

While Playing ► Press the **<** , **>** buttons or the **SEEK** , **TRACK** key to play the previous/next file.

- Pressing and holding the **SEEK** , **TRACK** key (over 0.8 seconds) will rewind or fast-forward the current file.
- While the **SEEK** , **TRACK** key is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the USB Music will begin playing at normal speed.



# USB Mode

---

## Using the Menu Buttons

Press the **Menu** button to set the Copy, Repeat, Shuffle, Scan, Info On (Info Off) menus.

---

### Copy

Press the **Menu** button ► Press **Copy** .

The currently playing file is copied and saved in My Music.

---

### Repeat

Press the **Menu** button ► Press **Repeat** .

---


### Shuffle

Press the **Menu** button ► Press **Shuffle** .

---

### Scan

Press the **Menu** button ► Press **Scan** .

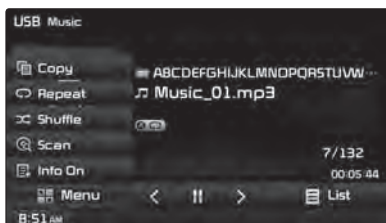

## Info On/Info Off

Press the **Menu** button ► Press **Info On** .

When the title, artist, and album info are displayed, the button is changed to **Info Off** .

Press **Info Off** to restore the previous information display setting.



## Starting USB Image Mode

Press the **MEDIA** key ► Press **USB Image** .



## Searching USB Image Files

While playing ► Press the **<** , **>** buttons to view the previous/next image.



## Using the Menu Buttons


Press the **Menu** button to set the Slideshow, Rotate Image, Adjust Image Size, Save Image and Info menus.

# USB Mode

## Slideshow Interval

Press the **Menu** button ► Press **Slideshow** .

Image Slideshow intervals can be set at **5sec** , **10sec** , **20sec** , or **30sec** intervals.

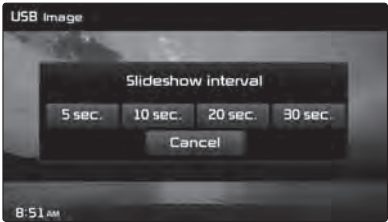

## Rotating Image

Press the **Menu** button ► Press **Rotate Image** ► Press **Done** .

Each time the **Rotate** button is pressed, the image is rotated from 0° → 90° → 180° → 270° degrees.



## Adjusting Image Size

Press the **Menu** button ► Press **Adjust Image Size** ► Press **Done** .

Press the **-** , **+** buttons to enlarge or reduce the image size. The scale can be changed to x1/4, x1/2, x1, x2, x4.



## Saving Image

Press the **Menu** button ► Press **Save Image** .

## Viewing Info

Press the **Menu** button ► Press **Info** .


This menu is used to check image information, such as the image resolution and file type.

## Starting Mode

Press the **MEDIA** key ► Press


**iPod**.

If an iPod is not connected, then the **iPod** button will be disabled.

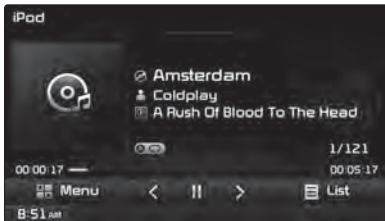

### Playing iPod


- Press the **▶** button to play the iPod.
- Press the **⏸** button to pause the iPod.

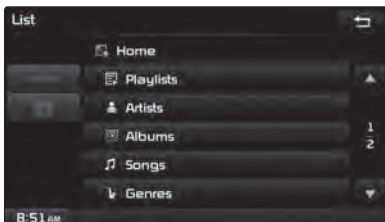

### Searching iPod

Press the **List** button to display the initial iPod list screen.

When searching an iPod, it is possible to search by Playlists, Artists, Albums, Songs, Genres, Composers, Audiobooks, and Podcasts.

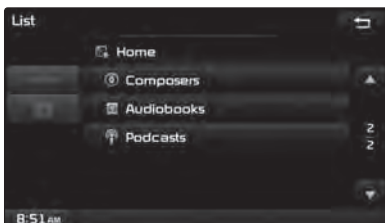

# iPod Mode

---

## Selecting iPod File

---

While playing ► Press the **<** , **>** buttons or the **SEEK** ,

**TRACK** key to play the previous/next file.

Pressing and holding the **SEEK** , **TRACK** key (over 0.8 seconds) will rewind or fast-forward the current song.

## Searching iPod Files

---

Turn the ● TUNE knob to search files. Once the desired file name is displayed, press the ● TUNE knob. When searching files, the file number is displayed in orange. Pressing the ● TUNE knob will play the corresponding file.

## Using the Menu Buttons

Press the **Menu** button to set the Repeat, Shuffle, and Info On (Info Off) menus.

### Repeat

---

Press the **Menu** button ► Press **Repeat** .


The currently playing file is repeated.

### Shuffle

---

Press the **Menu** button ► Press **Shuffle** .

Each time the button is pressed, the option is changed from Shuffle Category → Shuffle Album → Off(Repeat All).

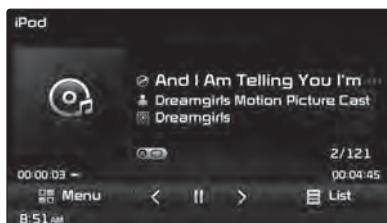


### Info On/Info Off

---

Press the **Menu** button ► Press **Info On** .

The screen display can be set differently depending on user selection. When the title, artist, and album info are displayed, the button **Info Off** . Press **Info Off** to restore the previous display setting.

## Starting Mode

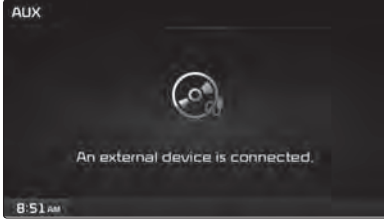

Press the **MEDIA** key ► Press **AUX**.

## External Device

External AUDIO players can be played through a dedicated cable. The position of the AUX jack is at the top of the gear shifter located between the driver and passenger seats.



# Bluetooth® Audio

## Starting Mode

Press the **MEDIA** key ▶ Press **Bluetooth Audio** .

### Playing Bluetooth® Audio

- Press the **▶** button to play files saved within the Bluetooth® phone.
- Press the **||** button to pause the file.




### Selecting Bluetooth® Audio Files

While playing ▶ Press the **SEEK** , **TRACK** key ▶ Selects the previous/next file.

### Setting Connection


Press the **Connections** button to add a new Bluetooth® phone, connect/disconnect, delete, delete all, or view the Help section.

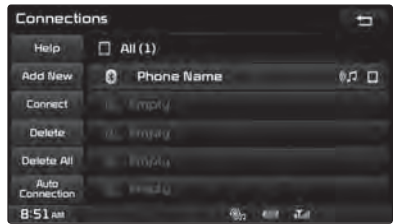

## Starting Mode



Press the **MEDIA** key ► Press **My Music**.

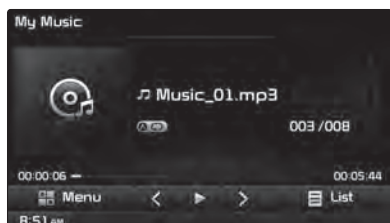

## Playing My Music

- Press the **▶** button to play the file.
- Press the **⏸** button to pause the file.

## Selecting My Music

While playing ► Press the **<**, **>** buttons or the **SEEK**, **TRACK** key to play the previous/next file.

- Pressing and holding the **SEEK**, **TRACK** key (over 0.8 seconds) will rewind or fast-forward the current file.
- While the **SEEK**, **TRACK** key is being pressed, the track will rewind or fast-forward at high speeds. Once the key is released, the Music will begin playing at normal speed.



# My Music Mode

---

## Using the Menu Buttons

Press the **Menu** button to set the Repeat, Shuffle, Scan, Info On (Info Off) menus.

---

### Repeat

Press the **Menu** button ► Press **Repeat** .

The currently playing file is repeated.

---

### Shuffle

Press the **Menu** button ► Press **Shuffle** .

When turned on, files are played in random order.

---

### Scan

Press the **Menu** button ► Press **Scan** .

The beginning (approx 10 seconds) of all files are scanned.

---


### Info On/Info Off

Press the **Menu** button ► Press **Info On** .

The screen display can be set differently depending on user selection.

When the title, artist, and album info are displayed, the button is changed to **Info Off** .

Press **Info Off** to restore the previous information display setting.

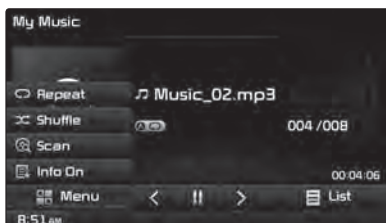






## Using Menus within the List Screen

### Moving between Lists

Press the **List** button ► Press **▲** , **▼** .

If six (6) or more files or folders exist in the same folder, the list will be displayed across two or more pages.

Press the **▲** , **▼** cursor buttons to quickly find the desired page.

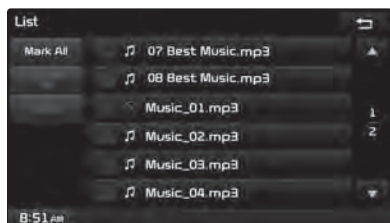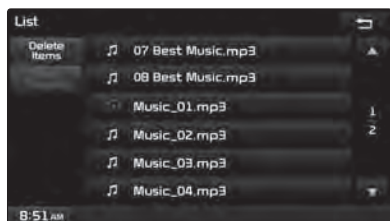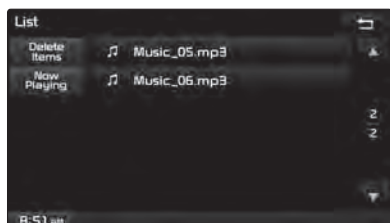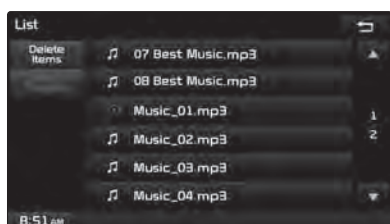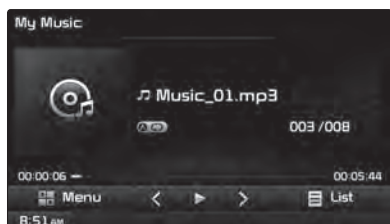

### Retuning to Current Location

While searching files within other folders, press the **Now Playing** button to return to the currently playing file screen.

### Deleting Files

Press the **List** button ► Select the files to delete ► Press **Delete Items** .

# Navigation

## Starting Navigation

### Current Position


Press the **MAP VOICE** key or the **Ⓐ** button displayed at the upper right side in some map conditions to display the map of the current position and the neighboring area.



### Map Display Settings

Press the **MAP VOICE** key ▶ Press the **Ⓐ** button.

Each press of this button changes the direction between Heading-up and North-up.

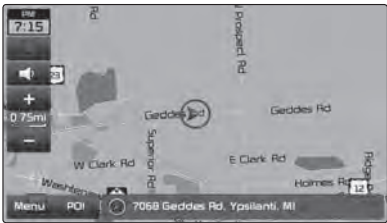

### Changing Map Scale

Press the Scale **+** / **-** button to display a popup showing all scales. To adjust the scale, press the **+** / **-** button or push the desired scale on the scale pop-up window.



### Map Menu

Press **Menu** button.

The Set as Destination, Add Waypoint, Add to address Book, Navi Vol. features can be used.


Some buttons are disabled in states when they cannot be used.





## Adjusting Navigation Volume

**Menu** ► **Navi Vol.** ► Adjust volume.

Press the  button to turn the navi guidance volume on/off.

Press **Menu** ► **Navi Vol.** button to display a popup used to adjust volume and adjust the navi guidance volume to the desired loudness.

0~45 through the **+** / **-** button.


Press the **Mute** button to turn off the sound.



## POI Display

Press **POI** .

When POI menus are displayed, pressing one of the 6 POI icon buttons will display the corresponding POI icons.

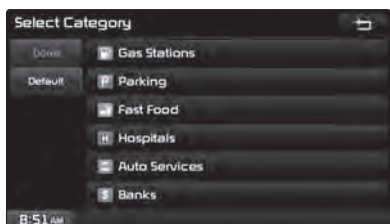

## Editing POI Icons

Press **POI** ► Press the **Edit POI Icon** button ► Press **Done** .

Press the **Edit POI Icon** button to select the desired facility from the various facility types.

Up to six favorite facilities can be set.

Press the **Default** button to reset the displayed POI icons. Initially, Gas Station, Parking, Fast Food, Hospital, Auto Service, and Bank are set as default.



# Navigation

## Searching POIs

Press the **Search by local POI** button.

This feature is used to search nearby POIs.

Use the Select Area feature to change the area.

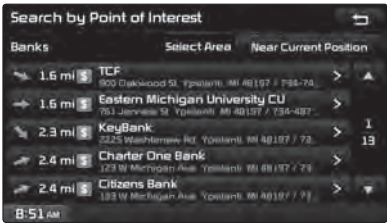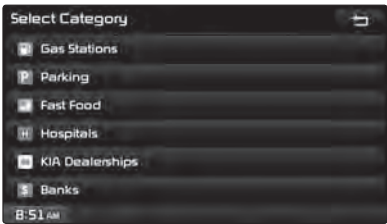

## Adding a My Place

Feature used to save the current position or scroll position.



## Destination Search

### Address

Press the **DEST** key ► Press **Address** .

Feature used to search destinations through addresses, including House No., Street name, City name, etc.



### Previous Destinations

Press the **DEST** key ► Press **Previous Destination** .

Name	Description
<b>1</b> By Date	Sorts POIs and locations by added date
<b>2</b> By Name	Sorts POIs and locations by name
<b>3</b> Delete Items	From various entries, items can be selected and deleted all at once

### POI (Point of Interest) Search

This feature is used to search facilities using POI categories. It is possible to search through previous search history.

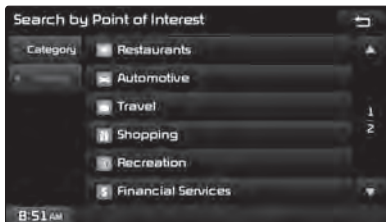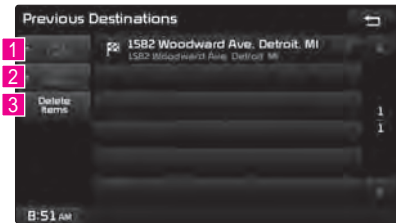

# Navigation

## Gas Station

Press the **DEST** key ► Press **Gas station** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.



## Restaurants

Press the **DEST** key ► Press **Restaurants** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.





## Emergency

Press the **DEST** key ► Press **Emergency** .

This search feature is used to search for police stations, hospitals, and dealerships in emergency situations.



## My Places

Press the **DEST** key ► Press **My Places** ► Press **Group** .

This search feature is used to search destinations by selecting previously saved My Places to set as destinations. My Places can be placed in groups, and group names can be edited within Setup.



## Phone Number

Press the **DEST** key ► Press **Phone Number** .

This search feature is used to search the locations of POIs by entering the phone number of the desired POI destination.

- Area codes must be entered to complete the search.




# Navigation

## Intersection Search

Press the **DEST** key ► Press  **Intersection Search** .

This search feature is used to search destinations by street intersections throughout the map.

Enter the name of the Street, City and State corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.

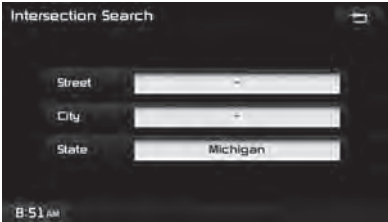

## Exit/Entrance

Press the **DEST** key ► Press  **Exit/Entrance** .

This search feature is used to search destinations by entering the Exits and Entrances of corresponding expressways.

Enter the name of the Freeway corresponding to the desired destination. Once search is complete, press the **Search** button to select the desired location from the list.





(Alternative Route)



(Route Overview)

## Setting a Destination

Press the **DEST** key ► Search for the Destination ► Press

**Set as Destination** .

- To conduct a destination search through the desired search method, select the desired destination from the list. (For more information on destination search methods, refer to the 'Destination Search' section.)
- After verifying the location of the searched destination, press the **Set as Destination** button to calculate the route. The Route Overview or Alternative Route screen will be displayed.
- Within the Route Overview or Alternative Route screen, press the **MAP VOICE** key or the **Start Guidance** button to start route guidance.

## One Touch Scroll Setting

The destination can be set to the current map display.

- While in the map screen, touching a position on the map will move the map to the center of the selected position and display the scroll mark.
- Press the **Menu** button to set the selected position as a waypoint or destination.

# Navigation

## Route Calculation

- Once you have set a destination, calculate the route. The route overview and route option menus will be displayed.
- After checking the Route Overview, press the **MAP VOICE** key or the **Start Guidance** button or just drive for over 3 mph or for approximately 5 seconds to start guidance.



## Demo

After a route has been calculated, press the **Demo** button to begin simulated driving of the calculated route.

- Within the Route Overview screen, press the **Demo** button.
- During Demo, press the **MAP VOICE** key to end the demo and display the current map position. If you start driving while viewing the route demo, demo will end and route guidance will start.



## Add Waypoint

After searching for waypoints, press the **Add Waypoint** button to add the waypoint to the current route.





## Route Recalculation

Once a route has been set, the

**Recalculate** button is displayed at the top of the menus.

Pressing the **Recalculate** button will display a pop-up that allows you to change route options. Once the settings are changed, the route is recalculated by reflecting the changes.



## Cancel Route

In the Map menu screen, press the

**Cancel Route** button.



# Navigation

## Route Guidance

Preliminary guidance, highway mode, turn list guidance, and other guidance screens are displayed according to the current road condition.

Within the guidance map screen, if the current position is on route, then intersection guidance will be provided once you are nearby an intersection. Also, the intersection zoom screen is displayed when nearby an intersection.



### Preliminary Guidance Mode

At the top right side of the screen, the next/ after next turn info, remaining distance, direction, and other information are displayed.



### Intersection Zoom Mode

This mode provides detailed guidance nearby intersections before the next turn.

This mode is displayed starting from 0.5mi before the intersection.





## Highway Mode

Upon entering a highway during route guidance, the highway mode will automatically be displayed. This mode is displayed when driving on a highway and mainly displays highway related POIs.

You can check information for various POIs by using the **View All** , **Summary** , and **Rest Area** buttons.

When scrolling through POIs by using the **▼** , **▲** buttons, pressing the **⌂** button will select the POI closest to the current position.

Name	Description
<b>1</b> View All	Guidance for all POIs on the highway
<b>2</b> Summary	Shows list of turn points and other directional route guidance while driving within highway
<b>3</b> Rest Area	Guidance for only the rest areas on the highway



## Turn List Mode

Turn List Mode shows turn information on the current route.

# Navigation

## Route Menu

Press the **ROUTE** key to use, edit, or optimize various route options.

### Cancel Route

Press the **ROUTE** key ► Press **Cancel Route** .



### Route Overview

Press the **ROUTE** key ► Press **Route Overview** .

Within the Route Overview screen, press the **Alternative Route** button to display other potential routes to the set destination.


From the alternative route options, select the desired route.




### Route Info

Press the **ROUTE** key ► Press **Route Info** .

The turn points and distance information by key roads within the set route are played. Press the **MAP** button next to each road name to display the map position for the corresponding location.

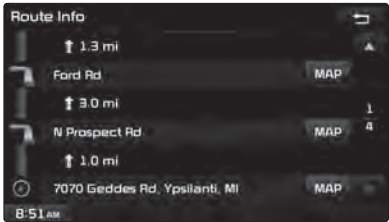


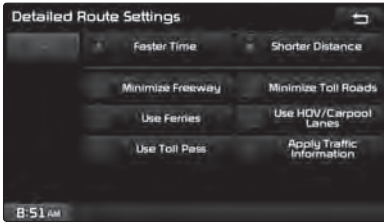

## Route Option

Press the **ROUTE** key ► Press **Route Option** ► Set and press **Done** .


Route Options refer to conditions used to calculate the route to the destination. The route is automatically recalculated if the route options and detailed route settings are changed.

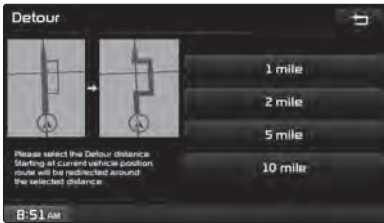

## Detour

Press the **ROUTE** key ► Press **Detour** .

The Detour menu is used to redefine the route by setting a detour to a certain distance from the current position.

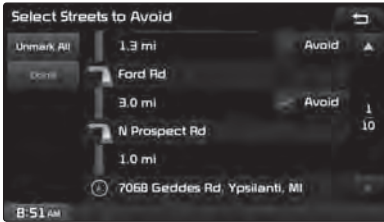

## Avoid Streets

Press the **ROUTE** key ► Press **Avoid Streets** ► Select the streets you want to avoid and press **Done** .

This feature is used to select specific streets to avoid within the current route. Select **Avoid** to avoid the particular streets in the route overview that are desired to be avoided.



## Edit Route

Press the **ROUTE** key ► Press **Edit Route** ► Set and press **Done** .

The Edit Route menu displays the start point, waypoints, and the destination in list format and is used to edit corresponding positions or the order of destinations within the route.



# Navigation

---

## Avoid Area


---

Press the **ROUTE** key ► Press **Avoid Area** ► Set and press **Done** .

This feature is used by creating a rectangle over the area to avoid.

An area set as an avoid area is excluded from the calculated route. If a route had been calculated prior to creating an avoid area, the route will automatically be recalculated.


The screen will prompt to select the first corner of the square of the avoid area, followed by the second corner.

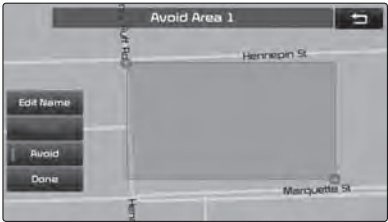

## Using Bluetooth® Handsfree



### Pairing from the Bluetooth® Device

Press the  key on the steering wheel or press the **PHONE** ► Press **Yes** .

In the Search from Device screen  
► Search for the car name and pair the device ► Enter the Passkey ► Bluetooth® becomes connected.

- When searching from the Bluetooth® device, the car name is Kia Motors and the default passkey is '0000', then press Ok.
- To learn more about searching from Bluetooth® devices and pairing, refer to the user's manual for your Bluetooth® device.
- The Bluetooth® Audio screen is displayed once audio streaming is available.

### NOTICE

- This process may take a few minutes. Radio may play during the wait.
- Some phones (i.e., iPhone, Android and Blackberry phones) may offer an option to allow acceptance of all future Bluetooth® connection requests by default.
- Phonebook transfer will occur automatically at initial pairing. Wait until complete before placing a call.
- Visit <http://www.kia.com> for additional information on pairing your Bluetooth® enabled mobile phone, and to view a phone compatibility list.

# Making/Answering Calls

## Calling by Dialing a Number



Enter number on the dial pad ► Press the **Send** or the **End** key on the steering wheel.

If you press the **Send** button without entering a number, the Call History screen is displayed. Press and hold the dial pad **0+** (over 0.8 seconds) to enter a "+".




Name	Description
1 Send	Calls the entered phone number
2 End	Deletes all entered numbers

## Answering a Call

Incoming call notice ► Press the **Accept** button or the **End** key on the steering wheel.

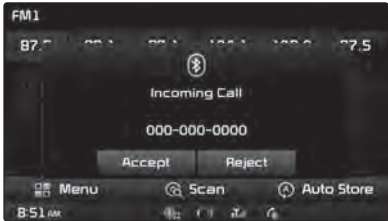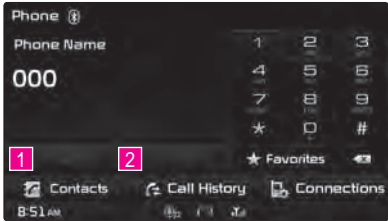

## Operating Menus during a Call

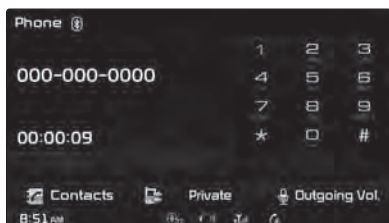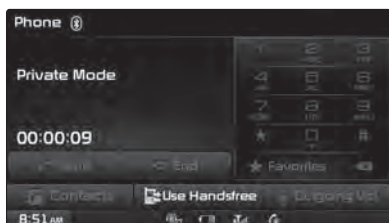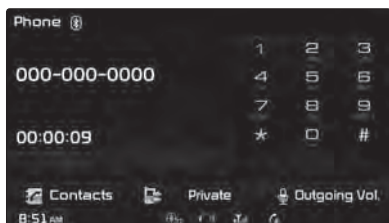

### Switching Call to Bluetooth® Phone

During handsfree call ► Press the **Private** button or press and hold the **C** key (over 0.8 seconds) on the steering wheel.

The call will be switched from the handsfree to the Bluetooth® mobile phone.

### Switching Call to the Handsfree

During call on mobile phone ► Press the **Use Handsfree** button or press and hold the **C** key (over 0.8 seconds) on the steering wheel.

The call will be switched from the Bluetooth® mobile phone to the handsfree.

### Ending a Call

While on a call ► Press the **End** button or the **P** key on the steering wheel.

The Bluetooth® handsfree call will end.



## Contacts

### Downloading Mobile Phone Contacts

Press the **Contacts** button ►

Press the **Download** button ►





Press **Yes** .

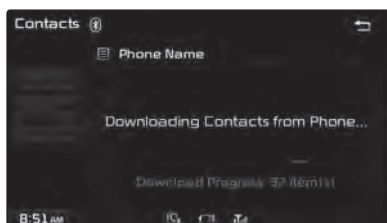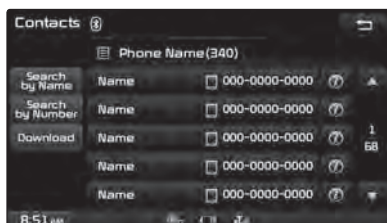

## Favorites

### Calling Favorites

In Phone screen ► Press **★ Favorites** ► Select the desired Favorite ► Call is connected.

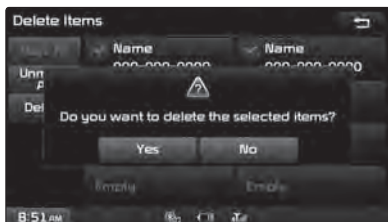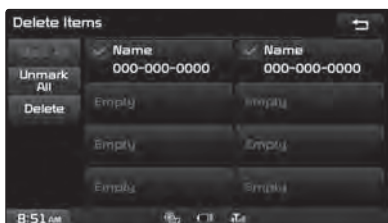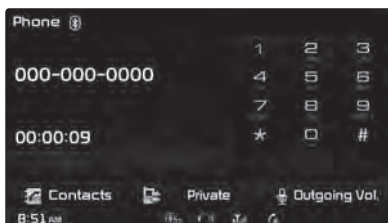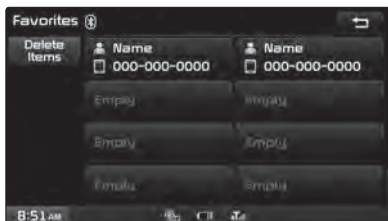


### Selecting/Deleting Favorites

In Favorites screen ► Press **Delete Items** ► Select items you want to delete and press **Delete** ► Press **Yes**.

## Searching Contacts

---

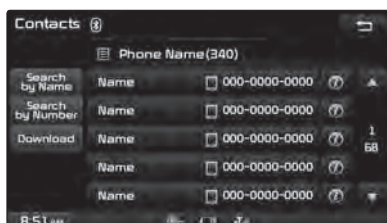

### Search by Name

Press the **Search by Name** button

► Enter name and press **Search** .



### Searching by Number

Press the **Search by Number**

button ► Enter number and press **Search** .



### **i** Information

---

- When searching a number, it is possible to search by entering just a part of the entire number.

(ex : if you enter “1544”, all numbers that include “1544” will be searched.)




---

## Setting Bluetooth® Connection

### Connecting a Device

Press the **Connect** button on the Phone screen.



The Phone screen is displayed once Bluetooth® Handsfree is connected, and the Bluetooth® Audio screen is displayed once audio streaming is available.

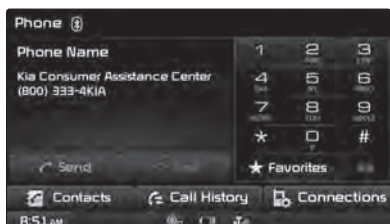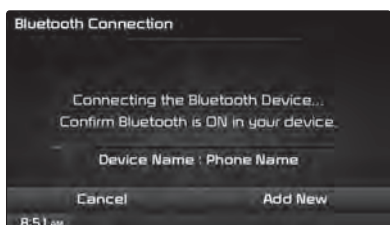
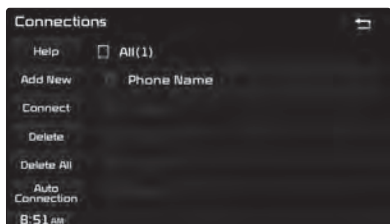




## Disconnecting a Device

Select the device you wish to disconnect  
▶ Press **Disconnect**  
▶ Press **Yes** .

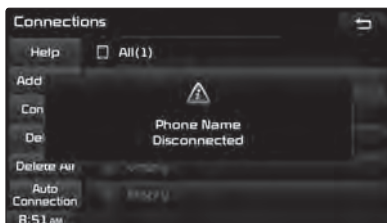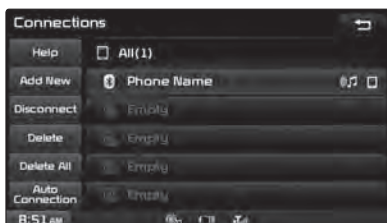

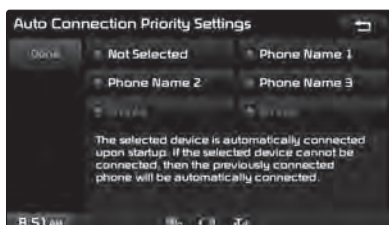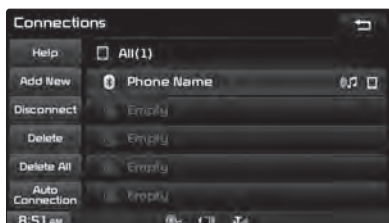

## Setting Auto Connection

Press the **Auto Connection** button  
► Select the desired phone ► Set and press **Done** .



The Bluetooth® device will automatically be connected according to the option set when the car ignition is turned on. When the user selected phone cannot be connected, the system automatically attempts to connect the most recently connected phone. When the most recently connected phone cannot be connected, the system attempts to connect all paired phones. If you do not want to connect automatically, turn off Bluetooth within your mobile phone.

# Bluetooth® Wireless Technology

## Device Information


Press the **SETUP** key ► Press **Setup** ► Press **Phone** ► **Device Information**.


- This feature allows you to check device information.

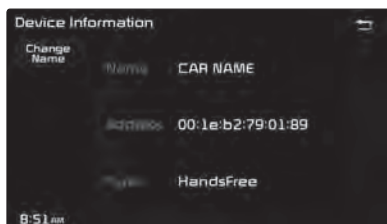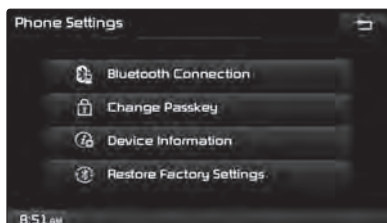

## Adjusting the Ring/Call Volume

While on a call ► Use the **VOL** knob on the head unit or the **VOL +** , **VOL -** keys on the steering wheel to adjust the ring/call volume.

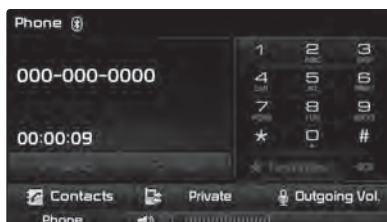


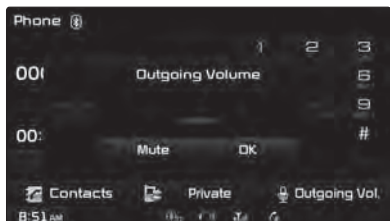

## Setting Mic Volume

While on a call ► Press the **Outgoing Vol.** ► Set Outgoing Volume ► Press **OK**.

If you press the **Mute** button, the outgoing volume is muted and blocked to the other party.

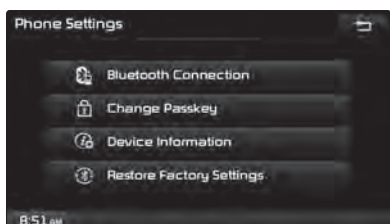

## Restore Factory Settings


Press the **SETUP** key ► Press **Setup** ► Press **Phone** ► Press **Restore Factory Settings**.



# Voice Recognition

## Starting Voice Recognition


### Starting Voice Recognition

Shortly press the  key on the steering wheel (under 0.8 seconds)

► Say a command.


Once voice recognition starts, the voice command entry window and the six representative commands are displayed.

- If voice recognition is in [Normal Mode], then the system will say “Please say a command after the beep,” followed by a beep tone.
- If voice recognition is in [Expert Mode], then you will only hear a beep a “Beep~”.

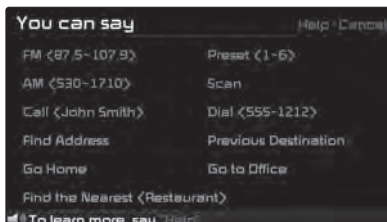


### Skipping Prompt Messages

Skipping Prompt Messages While prompt message is being stated

► Briefly press the  key on the steering wheel. (under 0.8 seconds)

The prompt message is immediately ended and the beep tone will sound. After the “beep”, say the voice command.

### Re-starting Voice Recognition

While system waits ► Briefly press the  key on the steering wheel. (under 0.8 seconds)

The command wait state will end and the beep tone will sound. After the “beep”, say the voice command.


## Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation. To maximize the use of Voice Recognition, consider these guidelines when storing contacts:

- Do not store single-name entries (e.g., “Bob”, “Mom”, etc.). Instead, always use full names (including first and last names) for these contacts
- Do not use special characters (e.g., ‘@’, ‘,’, ‘\*’, ‘&’, etc.)
- Do not use abbreviations (i.e., use “Lieutenant” instead of “Lt.”) or acronyms (i.e., use “County Finance Department” instead of “C. F. D.”; Be sure to say the name exactly as it is entered in the contacts list.


## Ending Voice Recognition

While Voice Recognition is operating


► Press and hold the  key on the steering wheel. (over 0.8 seconds)

While using voice recognition, pressing a steering wheel remote control or a different key will end voice recognition.

## Illustration on Using Voice Recognition (Setting Home as the Destination)

Press the  key. (under 0.8 seconds)


The system awaits for your command and display a list of accessible commands on the screen.

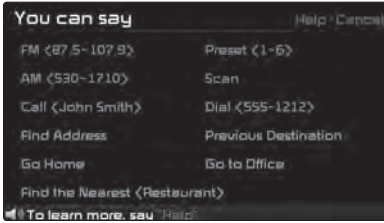

Please say a command after the beep

"Beep"

Destination

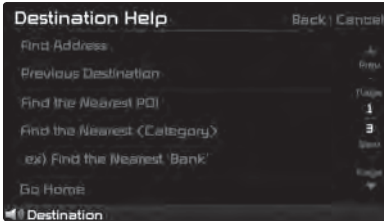

Destination  
Please say a command after the beep

"Beep"

Go Home



# Voice Recognition

## Voice Command List

Voice commands within this system are categorized into “Common Commands” and “Mode Commands.”

- Common Commands (●) : commands that can be used in all situations.
- Mode Commands (○) : commands that can be used in specific multimedia/navigation/Bluetooth® mode states.

Command		Operation
●	Help	Displays the main Help screen
●	Destination Help	Displays the Destination related command list
●	Map Help	Displays the Map related command list
●	Radio Help	Displays the FM/AM radio related command list
●	SIRIUS Help	Displays the SIRIUS radio related command list
●	Disc Help	Displays the DISC mode related command list for the disc inserted in the CD Player
●	iPod Help	Displays the iPod related command list
●	USB Help	Displays the USB related command list
●	Phone Help	Displays the Phone related comand list
●	UVO eServices Help(Optional)	Display the UVO eServices releated command list

## Audio System Command List

### FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recently operated band
●	AM	Plays the most recent frequency for the corresponding band
●	FM	Plays the most recent frequency for the corresponding band. In the case of FM, The most recent frequency within the most recently played FM1 or FM2 band is played
●	FM1/FM2	Plays the most recent frequency for the corresponding band
●	AM <530~1710>	Plays the desired AM band frequency (e.g. AM "Five-Hundred Thirty")
●	FM <87.5~107.9>	Plays the desired FM band frequency (e.g. FM "Eighty-Seven point Five")
●	AM Preset <1~6>	Plays the desired AM band preset frequency
●	FM1 Preset <1~6>	Plays the desired FM1 band preset frequency
●	FM2 Preset <1~6>	Plays the desired FM2 band preset frequency
○	Preset <1~6>	Plays the desired preset frequency for the current band
○	Scan On	Scans receivable frequencies from the current broadcast and plays for 10 seconds each
○	Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset



# Voice Recognition

## SIRIUS Radio

Command		Operation
●	SIRIUS	Plays the last channel within the last band from SIRIUS1, SIRIUS2, and SIRIUS3
●	SIRIUS1/ SIRIUS2/ SIRIUS3	Plays the most recent channel for the corresponding band
●	SIRIUS Channel <0~255>	Plays the desired SIRIUS band channel (e.g. SIRIUS channel "Eleven")
●	SIRIUS1 Preset <1~6>	Plays the desired preset channel for SIRIUS1 band
●	SIRIUS2 Preset <1~6>	Plays the desired preset channel for SIRIUS2 band
●	SIRIUS3 Preset <1~6>	Plays the desired preset channel for SIRIUS3 band
○	Channel <0~255>	Plays the desired channel of the current band
○	Preset <1~6>	Plays the desired preset channel of the current band
○	Scan	Scans receivable channels from the current broadcast and plays for 10 seconds each
○	Preset Scan	Plays through all presets for 10 seconds each, beginning with the current preset

## CD(Audio Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
●	CD Track <1~99>	If the DISC inserted in the CD Player is a CD, then CD Mode will start and plays the desired track
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current track
○	Repeat Off	Cancels repeat play to play tracks in sequential order
○	Shuffle	Randomly plays the tracks within the CD
○	Shuffle Off	Cancels random Play to play tracks in sequential order
○	Track <1~99>	Plays the desired track number

## CD(MP3 Type)

Command		Operation
●	CD	If the DISC inserted in the CD Player is either a CD or MP3 DISC, then the CD or MP3 will be played
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the CD in random order
○	Shuffle Off	Cancels random play to play files in sequential order

## USB Music

Command		Operation
●	USB	If the USB has been connected to the device, play the MP3 or image files on the USB
●	USB Music	If the USB has been connected to the device, plays the MP3 files within the USB
○	Play	Plays the currently paused song
○	Previous File	Plays the previous track
○	Next Folder	Plays the first file in the next folder
○	Previous Folder	Plays the first file in the previous folder
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the USB in random order
○	Shuffle Off	Cancels random play to play files in sequential order

# Voice Recognition

---

---

## iPod

---

Command		Operation
●	iPod	Plays the songs within the iPod if the iPod has been connected to the device
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

---

## My Music

---

Command		Operation
●	My Music	Plays the songs within the My Music
○	Play	Plays the currently paused song
○	Pause	Pauses the current song
○	Repeat	Repeats the current file
○	Repeat Off	Cancels repeat play to play files in sequential order
○	Shuffle	Plays all files within the current category in random order
○	Shuffle Off	Cancels random play to play files in sequential order

## Others

Command	Operation
● Bluetooth Audio	Plays Bluetooth® Audio
● Auxiliary	Plays the connected auxiliary device

## Phone Command List

Name	Description
● Call	Displays list of saved contacts. Say the name to connect the call to the corresponding contact.
● Call <Name>	Call <Name> saved in Contacts (e.g. Call "John Smith")
● Dial Number	Makes the call to the number
● Dial <Number>	Call can be made by dialing the spoken numbers (e.g. Dial "111 555 1234")
● Call History	The user can select a number from the outgoing, incoming, and missed calls
● Redial	Connects the most recently called number

## UVO eServices Command List(Optional)

Name	Description
● UVO eServices	Display the UVO eServices related command list
● Roadside Assist	Connect with a Roadside Assist agent.
● eService Guide	Provides guidance on how to use UVO eServices
● Vehicle Diagnostics	Informs you if a diagnostic issue is found in your vehicle
● My POIs	Show Points of Interest list which downloaded from Google Maps™ and MyUVO.com

## Navigation Command List

### Destination

Name		Description
●	Find Address	Sets the destination through address search for route guidance
●	Previous Destinations	Sets the previous destination as the current destination
●	Find Nearest POI	Sets a POI near the current position as the destination for route guidance through the POI category search
●	Find the Nearest <POI Category>	Sets a POI near the current position as the destination by directly inputting the POI name for route guidance (e.g. Find the Nearest "Restaurants"), For more information on <POI Category>, refer to Page 3-30.
●	Find Emergency Policestation	Searches for a police station near the current position and sets it as the destination for route guidance
●	Find Emergency Hospital	Searches for a hospital near the current position and sets it as the destination for route guidance
●	Find an Emergency Dealership	Searches for a dealership near the current position and sets it as the destination for route guidance
●	Go Home	Sets the previously registered home address as the destination for route guidance
●	Go to Office	Sets the previously registered office address as the destination for route guidance

## Map

Name		Description
●	Voice Guidance On	Turns the Voice Guidance On
●	Voice Guidance Off	Turns the Voice Guidance Off
●	Voice Guidance Louder	Increases the Voice Guidance volume by 1 level
●	Voice Guidance Softer	Decreases the Voice Guidance volume by 1 level
●	Repeat Voice Guidance	Repeats the route guidance
●	Cancel Route	Deletes the designated destination and terminates the route guidance
●	Distance to Destination	Reports the remaining distance until destination by voice
●	Time to Destination	Reports the remaining time until destination by voice
●	Replan Faster Time Route	Recalculates the route with faster time route
●	Replan Shorter Distance Route	Recalculates the route with shorter distance route
○	Zoom In / Zoom Out	Decreases/Increases the map zoom by one level
○	Zoom Maximum	Displays the map screen in the maximum zoom level
○	Zoom Minimum	Displays the map screen in the minimum zoom level
○	View Route	If the destination has been set, displays the entire route on the screen until the destination
○	Auto Zoom On	Turns the Auto Zoom feature on
○	Auto Zoom Off	Turns the Auto Zoom feature off
○	Auto Mode	Automatically converts the map display between daylight and night mode
○	Daylight Mode	Converts the map display into daylight mode
○	Night Mode	Converts the map display into night mode

# Voice Recognition

## POI Category List

Restaurants	Parking	Amusement Park	Services
African Restaurants	Rest Area	Cinema	Attorney
American Restaurants	Road Assistance	Golf Course	Cleaning & Laundry
Asian Restaurants	Travel	Museum	Communication Services
Chinese Restaurants	Airport	Recreation Area	Dentist
Coffee Shop	Bus Station	Ski Resort	Funeral Home
Continental Restaurants	Campground	Sports Activities	Hair & Beauty
Fast Food	City Center	Sports Complex	Hospital
French Restaurants	Ferry Terminal	Video & Game Rental	Medical Service
Italian Restaurants	Hotel	Winery	Mover Services
Japanese Restaurants	Local Transit	Other Recreation	Photography
Korean Restaurants	Rental Car Agency	Financial Services	Physician
Latin American Restaurants	Tourist Attraction	ATM	Social Service
Mexican Restaurants	Tourist Information	Bank	Tailor & Alteration
Seafood Restaurants	Train Station	Check Cashing Service	Tax Service
Vegetarian Restaurants	Travel Agent	Money Transfer	
Other Restaurants	Shopping	Community	
Automotive	Bookstore	Business Facility	
Auto Parts	Clothing Shop	City Hall	
Auto Service	Convenience Store	Civic Center	
Kia Dealership	Department Store	Convention Center	
Car Wash	Electronics Store	Court House	
Gas Station	Gift Shop	Fire Department	
Hyundai Dealership	Grocery Store	Government Offices	
Motorcycle Dealership	Home Specialty Store	Library	
	Music Store	Police Station	
	Pharmacy	Post Office	
	Shoe Store	School	
	Shopping Center	Utilities	
	Sporting Goods Store	Waste & Sanitary	
	Recreation		











3WENE07



3WMS7-B4001