

UVO

Powered by **Microsoft**

UVO SYSTEM USER'S MANUAL

SEDONA



The Power to Surprise

Congratulations on the Purchase of your new UVO system!

Your new UVO system allows you to enjoy various audio and multimedia features through the main audio system.

For the latest information about this product or other Kia products and accessories, visit <http://www.Kia.com>

Please read this manual to get the full benefit of the system.

These operating instructions are designed to help ensure that you can operate the UVO system in a convenient way.

We recommend that this manual be kept in the car so that it will be easier for you to find information in case of an emergency.

If you cannot find the information you need in this manual or in the "Troubleshooting" section, your local authorized retailer will be pleased to help you with the system or operations.

Kia motors recommends the use of only parts and accessories that have been tested and approved by Kia motors in terms of function, safety and suitability.

iPod®

iPod®, iPhone® and iTunes® are registered trademark of Apple, Inc.

Bluetooth®

The *Bluetooth®* word mark and logos are registered trademarks owned by *Bluetooth®* SIG, Inc. and any use of such marks by Kia is under license.

A *Bluetooth®* enabled cell phone is required to use *Bluetooth®* wireless technology.

HD Radio™ Technology

HD Radio™ Technology manufactured under license from iBiquity Digital Corp. U.S. and Foreign Patents. HD Radio™ and the HD and HD Radio logos are proprietary trademarks of iBiquity.

Microsoft®

Microsoft is a registered trademark of Microsoft Corporation in the United States and/or other countries.

zune®

zune® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

SIRIUSSM

Sirius™, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.



Copyright(c) 2011 Kia motors. All Rights Reserved.

Warning: The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offense. This equipment should not be used for such purposes.

Table Of contents

Controls and Features	2
Sound Settings	6
Display Settings	7
Listening to the FM/AM radio	8
Listening to the SIRIUS™ radio	10
Listening to an Audio CD	11
Listening to an MP3 CD	12
Listening to USB music	14
Listening to music from your <i>Bluetooth</i> ® wireless technology enabled device	16
Listening to JUKEBOX	17
Pairing a <i>Bluetooth</i> ® wireless technology enabled device for the first time	19
Answering an incoming call	20
Placing a call	21
SMS	23
Operating Voice Command	24
Voice Command List	25

Controls and Features

Control Panel



※No ∞Infinity will be shown if the exterior Amplifier feature is not supported.



1 DISC EJECT

Ejects the inserted disc.

2 FM/AM

Turns on FM/AM mode. Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.

3 SAT

Turns on SIRIUS™ mode.

4 MEDIA

Turns on MEDIA mode. Each press of the **MEDIA** key will change the mode in the order of CD → USB/ iPod®/zune® → JUKEBOX → AUX → BT Audio → PANDORA → CD.

5 POWER/VOL

Push : Turns Power On/Off.

Dial : Turns Volume Up/Down.

6 V SEEK/TRACK ^

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file.

In PANDORA Radio, PANDORA Radio skip (Seek up).

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

7 V CATEGORY ^

In SIRIUS™ mode, moves to the previous or next SIRIUS™ category.

8 TUNE/ENTER

In FM/AM mode, turn the knob to

manually search for frequencies.

In SIRIUS™ mode, turn the knob to manually search for channels. Press the knob to receive the selected channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®), turn the knob to manually search for the previous or next track, song, or file. Press the knob to receive the selected track, song, or file. In PANDORA Radio, searches PANDORA Radio stations. In JUKEBOX mode, turn the knob to manually search for the previous or next track. Press the knob to receive the selected track.

9 SETUP

Displays SETUP mode.

10 PHONE

Displays *Bluetooth*® wireless technology Phone mode.

11 eServices(Optional)

Displays UVO eServices mode.

12 JUKEBOX

Displays JUKEBOX mode.

13 DISP

Turns off the screen.

14 RESET

Reset the system to be used if system is acting abnormally.

Controls and Features

Steering Wheel



1 **V SEEK/TRACK ^**

Short (under 0.8 seconds)

In FM/AM mode, automatically searches and plays the previous or next preset frequency.

In SIRIUS™ mode, automatically searches and plays the previous or next preset channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), plays the previous or next track, song, or file.

In PANDORA Radio, PANDORA Radio skip (Seek up).

In JUKEBOX mode, plays the previous or next track.

Long (over 0.8 seconds)

In FM/AM mode, quickly moves through the frequencies when the button is pressed and held. Once

released, automatically searches and plays the previous or next frequency.

In SIRIUS™ mode, quickly moves to the previous or next channel.

In MEDIA mode (CD, MP3, USB, iPod®, zune®, BT AUDIO), REW/FF the current track, song, or file.

In JUKEBOX mode, REW/FF the current track.

2 **+ VOLUME -**

Turns Volume Up/Down.

3 **MODE**

Short (under 0.8 seconds)

Changes the mode. Each press will change modes in the order of FM → AM → SIRIUS™ → CD → USB/

iPod®/ zune® → JUKEBOX → AUX
→ BT Audio → PANDORA → FM.

Long (over 0.8 seconds)

While the system is off, turn the system on.

While the system is on, turn off the system.

4 MUTE

Mutes the sound.

5 Voice Command

Short (under 0.8 seconds)

If Voice recognition is off, turns on Voice recognition.

If system is speaking, interrupts speaking and enters listening mode.

Long (over 0.8 seconds)

If Voice recognition is on, turns off Voice recognition.

6 SEND (Bluetooth® wireless technology Phone)

Pressing this key will receive an incoming call. If the Audio is on, the Bluetooth® wireless technology phone screen will be displayed.

When a SMS message is received, reads back message.


7 END (Bluetooth® wireless technology Phone)

Pressing this key will reject an incoming call. If pressed during a call, the current call will be ended.

When a SMS message is received, ignores message.

Sound Settings

Sound Settings

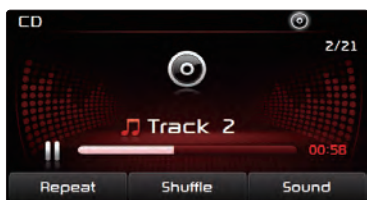

Press the **Sound** button on the main screen of each audio mode (FM/AM, SIRIUS™, MEDIA, PANDORA Radio, JUKEBOX) to enter Sound Setup.

1. FADER/BALANCE

1. Press the Fader/Balance setting button.




2. Use the **▲**, **▼**, **◀**, **▶** buttons to make adjustments to the sound position.
3. Press the **↩** button to return to Sound Setup.

Note

- Press the **Default** button to restore the default setting.

2. TONE

1. Press the Tone setting button.

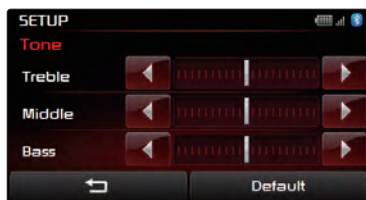

2. Use the **◀**, **▶** buttons to make adjustments to the Treble, Middle and Bass. Press the **↩** button to return to Sound Setup.

3. Touch Screen Beep

1. In Sound Setup, press the **● On** or **● Off** button next to the Touch Screen Beep menu to turn the feature on or off.

4. Speed Dependent Volume Control


1. Press the **● On** or **● Off** button next to the Speed Dependent Volume Control menu to turn the feature on or off.

Display Settings

Display Settings



1. Press the **SETUP** key on the control panel.

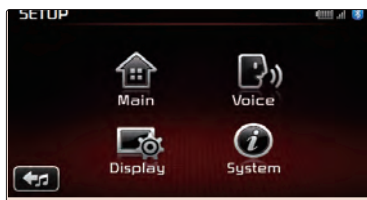

2. Press the **Display** button to enter Display Setup mode.

1. Setting Brightness

• Automatic Brightness Control

When the Display brightness is set to automatic, the brightness will be controlled automatically by assessing the amount of ambient light.



1. Press the **Automatic** button.

• Manual Brightness Control



1. Press the **Daylight** or **Night** buttons.
2. Use the **◀**, **▶** buttons to make adjustments to the display brightness.

Turning Display On and Off



1. Press the **Display off** button.
2. Press any key on the control panel or steering wheel mounted controls to turn the display back on.

Listening to the FM/AM radio

Listening to the FM/AM radio





1. Press the **FM/AM** key on the control panel. The most recently played FM/AM radio band will automatically begin playing.
2. Press the **FM/AM** key to switch to the desired radio band.

Note

- Each press of the **FM/AM** key will change the band in the order of FM → AM → FM.

1. Selecting a broadcast frequency

• Selecting through SEEK

Press the **SEEK TRACK**  or **SEEK TRACK**  keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next radio broadcasts with sufficient reception will automatically be searched and played.

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will increase or decrease the

frequency by 1 step (FM: 0.2MHz, AM: 10kHz).


2. When you find the desired radio broadcast, stop turning the **TUNE** knob to listen to the selected frequency.

• Selecting through preset

1. Press the **Preset** button.



2. Select the desired preset and press the button to start listening.

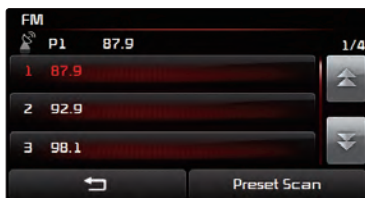


2. Storing presets

1. Select the desired radio broadcast.
2. From the preset list, press and hold (over 0.8 seconds) the preset number button to which you wish to save.



3. Listening to HD Radio™ Stations (Optional)

1. While listening to the radio, the HD Radio™ icon will become displayed if receiving an HD Radio™ broadcast.
2. Press the **HD ►** button to change to a different HD Radio™ station.

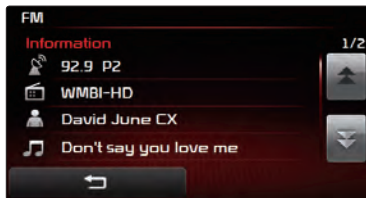

4. Viewing FM/AM Station information

1. Press the Radio icon.
2. Information about the current station (frequency, station, artist, title) will be displayed.



Listening to the SIRIUS™ radio

Listening to the SIRIUS™ radio

Press the **SAT** key on the control panel. The most recently played SIRIUS™ channel will automatically begin playing.

1. Selecting a SIRIUS™ channel

• Selecting through SEEK

Press the **SEEK TRACK**  or **SEEK TRACK**  keys on the control panel for under 0.8 seconds. As SEEK operates, the previous or next SIRIUS™ channel will automatically be searched and played.

• Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display the corresponding channel information.
2. When you find the desired SIRIUS™ channel, press the **TUNE** knob to listen to the selected channel.

• Selecting through preset


1. Press the **Presets** button.



2. Select the desired preset and press the button to start listening.


• Selecting through channel search

1. Press the **Search** button. The channel search screen will be displayed.

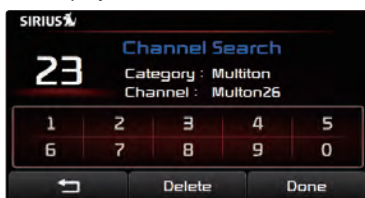

2. Input the desired channel number and press the **Done** button. To delete entries, press the **Delete** button.

• Selecting through SIRIUS™ category list

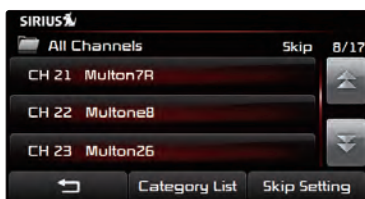


1. Press the **List** button.
2. Select the desired channel to start listening or press the **Category List** button to display the channels in the selected category

Listening to an Audio CD

Listening to an Audio CD

1. Insert a CD or press the **MEDIA** key on the control panel if the CD has already been inserted.

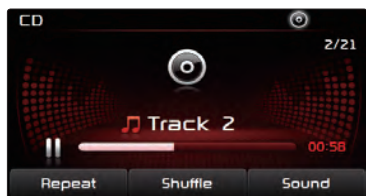

2. When a track is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the track.

Selecting a CD track

1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** **▲** or **▼** **SEEK TRACK** keys on the control panel or the **▲** or **▼** keys on the steering wheel controller to play the desired track.
2. The previous or next track will begin playing.


2. Selecting through manual search

1. Turn the **TUNE** knob on the control panel in clockwise or counter-clockwise direction. Each click will display information about the selected track.
2. Press the **TUNE** knob to play the selected track.

Listening to an MP3 CD

Listening to an MP3 CD

1. Insert an MP3 CD or press the **MEDIA** key on the control panel if the CD has already been inserted.

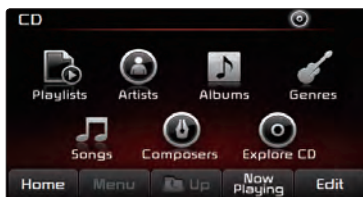

2. Choose the category through which you wish to select the song. MP3 CD mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

Selecting an MP3 CD song

1. Selecting through song Up/Down

1. Press the **SEEK TRACK** or **SEEK TRACK** keys on the control panel or the or keys on the steering wheel controller to play the desired track or song.


2. By Artists, Albums, Genres, Songs, Composers



1. Press the **Menu** button.

Viewing song information

When listening to an MP3 CD song, you can browse through song details and information.

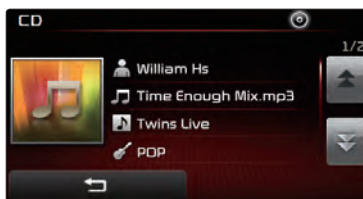

1. Press the Album art icon.
2. The song information (Artist, Title, Album, Genre) for the current MP3 song will be displayed.
3. Press the button to return to the previous screen.


Copying songs into JUKEBOX

1. Copying the current song

The UVO system allows you to copy songs from an MP3 CD into JUKEBOX.



1. Press the **Copy** button.

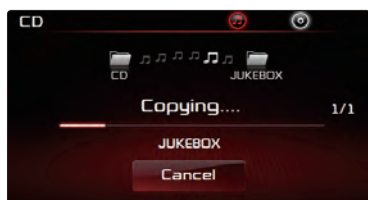

2. Once copying is complete, you can listen to stored music in JUKEBOX mode.

2. Copying songs from list


Copying MP3 songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.



1. Press the **Menu** button.



2. Press the **Now Playing** button.

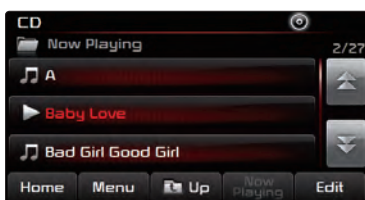

3. Press the **Edit** button.



4. Select the songs you wish to copy.

When selected, a ☒ will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.



6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Listening to USB music

Listening to USB music

1. Connect a USB device or press the **MEDIA** key on the control panel if a USB device has already been connected.



2. When a song is playing and you wish to pause, press the **II** button next to the progress bar. Press the **▶** button to restart the song.

Selecting USB music


1. Selecting through song Up/Down

Press the **SEEK TRACK** **^** or **SEEK TRACK** **v** keys on the control panel or the **^**, **v** keys on the steering wheel controller to play the desired song.

2. By Folders, Artists, Albums, Genres, Songs, Composers




1. Press the **Menu** button.

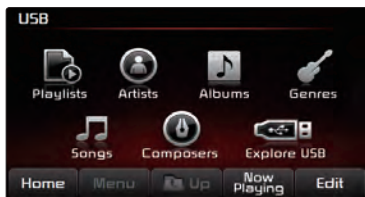


2. Choose the category through which you wish to select a song. USB Mode allows you to select by Playlists, Artists, Albums, Genres, Songs, and Composers.

Viewing song information

When listening to USB music songs, you can browse through song details and information.

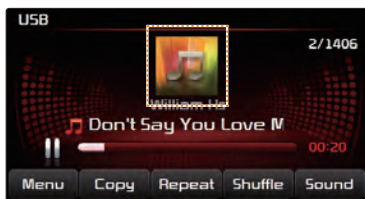

1. Press the Album art icon.

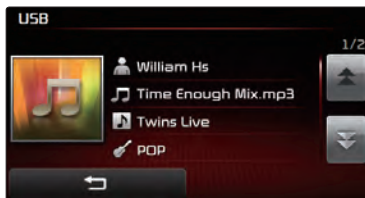

2. The song information (Artist, Title, Album, Genre) for the current USB song will be displayed. Press the **←** button to return to the previous screen.


Copying song into JUKEBOX

1. Copying the current song

The UVO system allows you to copy songs from your USB device into JUKEBOX.



1. Press the **Copy** button.

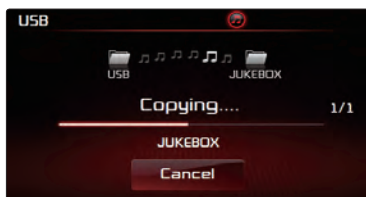


2. Once copying is complete, you can listen to copied music in JUKEBOX mode.

2. Copying songs from list


Copying USB music songs from lists allows you to simultaneously select several songs to copy into JUKEBOX.




1. Press the **Menu** button.

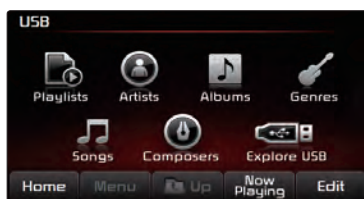

2. Press the **Now Playing** button.

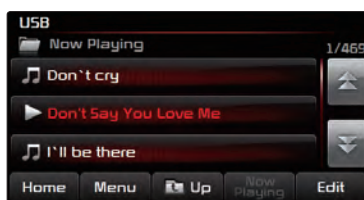


3. Press the **Edit** button.

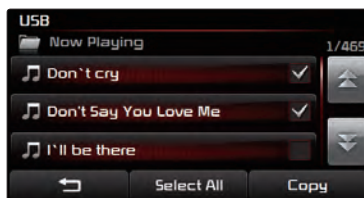

4. Select the songs you wish to copy.

When selected, a ☒ will be displayed next to the song. To select all songs in the list, press the **Select All** button.

5. After selecting the desired songs, press the **Copy** button.

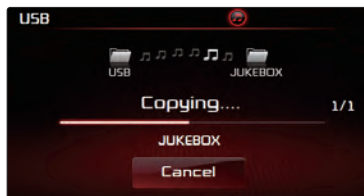

6. Once copying is complete, you can listen to copied music in JUKEBOX mode.

Listening to music from your *Bluetooth*[®] wireless technology enabled device

Listening to music from your *Bluetooth*[®] wireless technology enabled device

1. Pair your *Bluetooth*[®] wireless technology enabled device to the handsfree system. *For more information on pairing your *Bluetooth*[®] wireless technology enabled devices, refer to the 'Pairing a *Bluetooth*[®] wireless technology enabled device for the first time' section.
2. Press the **MEDIA** key on the control panel to turn on BT audio mode.
3. When streaming music from your *Bluetooth*[®] wireless technology enabled device and you wish to pause, press the **▶||** button next on the screen. Press the **▶||** button to restart music.



Note

- While music saved in the *Bluetooth*[®] wireless technology enabled device may automatically begin playing after converting to the BT Audio screen, this music player function may not be supported in some *Bluetooth*[®] wireless technology enabled devices.

- If music does not begin playing even after displaying the BT Audio screen, try starting the music directly from the *Bluetooth*[®] wireless technology enabled device.

Selecting a song

1. Press the **SEEK TRACK ^** or **SEEK TRACK v** keys on the control panel or the **^**, **v** keys on the steering wheel controller to play the desired song.
2. The previous or next song will begin playing.

Note

- File selection may not be supported by some *Bluetooth*[®] wireless technology enabled devices.

Listening to JUKEBOX

JUKEBOX Mode

The UVO system offers you the convenience of allowing you to copy songs from your MP3 CD or USB to the Jukebox mode within the system. For more information on copying songs into JUKEBOX, refer to the 'Copying songs into JUKEBOX' section.

Listening to JUKEBOX

1. Press the **MEDIA** key on the control panel to turn to JUKEBOX mode.
2. The system will automatically restart the most recently played song.



Selecting a JUKEBOX song


1. Selecting through Track Up/Down

1. Press the **SEEK TRACK** or **SEEK TRACK** keys on the control panel or the or keys on the steering wheel controller to play the desired track.
2. The previous or next song will begin playing.

2. By Artists, Album, Genres, Songs, Composers



1. Press the **Menu** button.

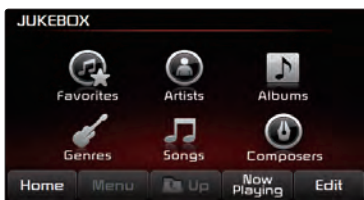


2. Choose the category through which you wish to select. JUKEBOX mode allows you to select by Favorites, Artists, Albums, Genres, Songs, and Composers.

Listening to JUKEBOX



Adding Favorites

The Favorites feature allows you to create a Favorites list of songs.




1. While listening to JUKEBOX, press the  button.




2. The  icon will be displayed on the screen to signify that the song has been saved in Favorites.
3. To delete a song from Favorites, press the  button.


Playing Favorites



1. While playing JUKEBOX, press the  button.

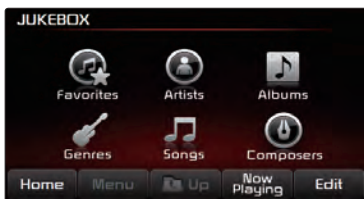

2. In the JUKEBOX Menu screen, press the  button.

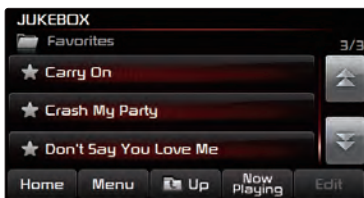

3. Press the name of the song from the list. The song will begin playing.


Pairing a *Bluetooth®* wireless technology enabled device for the first time




Caution


- For your safety, only pair devices to the system when the vehicle is parked.

Pairing a *Bluetooth®* wireless technology enabled device for the first time

- Press the  button on the steering wheel or the **PHONE** key on the control panel.

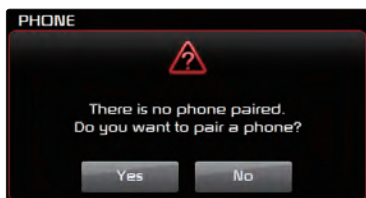


- Press the **Yes** button.
- Perform a device discovery from the handset device. For details on device discovery for your handset device, refer to the handset device user's manual.

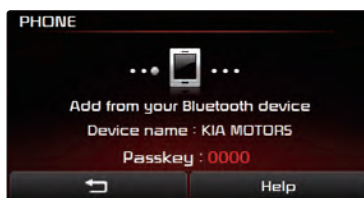


Non SSP(Secure Simple Pairing) supported device

- Once the device is discovered, input the passkey in the handset device.

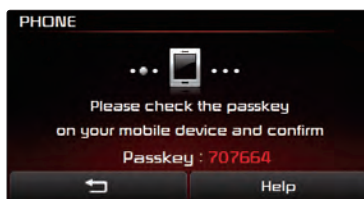

SSP(Secure Simple Pairing) supported device

- Once the device is discovered, check the passkey on your handset device and confirm.

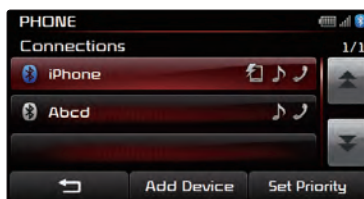


- Once pairing is complete, the handset device will be shown in the Connections list.


Answering an incoming call

Connecting a handset device


The system automatically connects the *Bluetooth*® wireless technology enabled device set at the highest priority. As a result, in order to connect a different phone, follow the following steps.

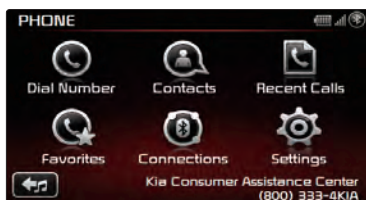

1. While in Phone mode, press the **Connections** button.

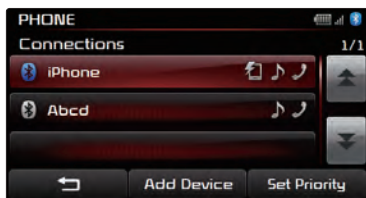



2. Select the handset device you want to connect.

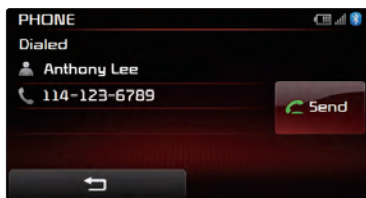


3. Press the **Connect** button.


Answering an incoming call

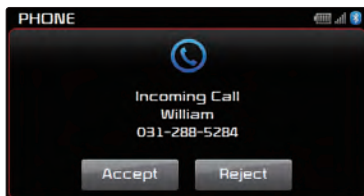

1. When there is an incoming call, an incoming call window will be displayed on the screen. Press the **Accept** button on the screen or the  key on the steering wheel controller to answer the call.
2. The call will be connected.

Rejecting an incoming call

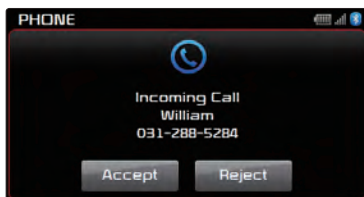


1. Press the **Reject** button on the screen or the  key on the steering wheel controller.
2. The call will be rejected.


Placing a call

Placing a call


1. By dialing a number

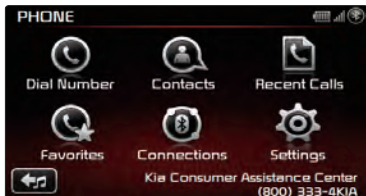

1. While in Phone mode, press the **Dial Number** button.

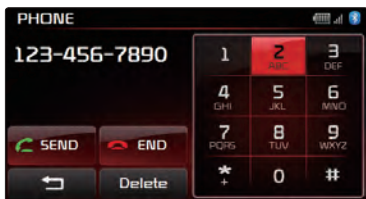


2. Use the dial pad on the right side of the screen to enter the phone number.

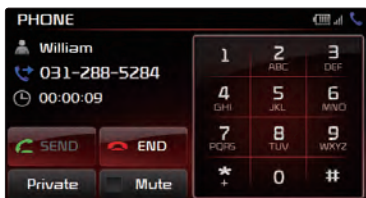

3. Press the **SEND** button on the screen or the **SEND** key on the steering wheel controller to connect the call.


2. By contact list

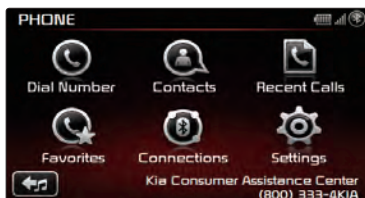


1. While in Phone mode, press the **Contacts** button.



2. Press the spell you wish to find.

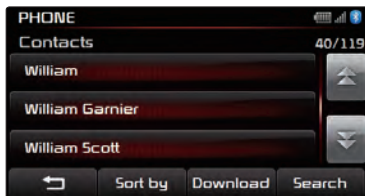


3. Select the contact you want to call from the list.

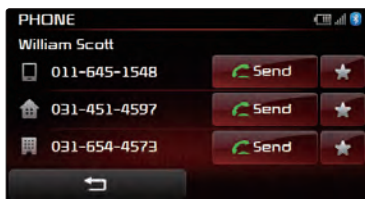


4. Press the **SEND** button on the screen or the **SEND** key on the steering wheel controller to connect the call.

Placing a call


3. By recent calls

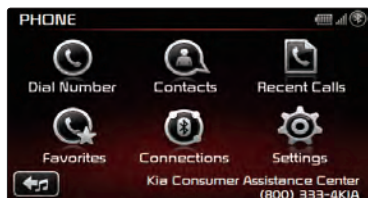


1. While in Phone mode, press the **Recent Calls** button.

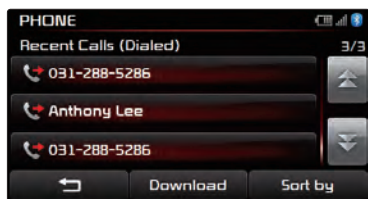


2. Select the contact you want to call from the list.

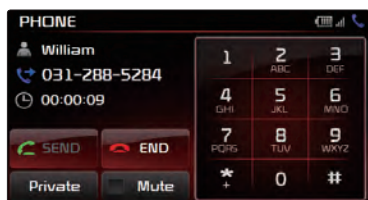

By favorites

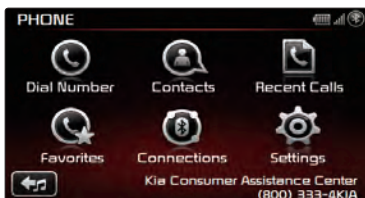

1. While in Phone mode, press the **Favorites** button.

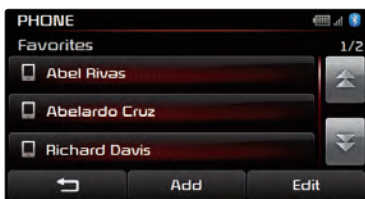


2. Select the contact you want to call from the list.

SMS

1. Downloading SMS messages (from mobile phone)


When an SMS enabled mobile phone is paired with the system, unread messages will automatically be downloaded to the system. While you will not be able to check SMS messages through the system due to legal regulations, the system will read back messages for you for added convenience. The SMS read back is also possible when the vehicle is in motion.


2. Checking an SMS message

1. Press the  key on the steering wheel.
2. Say the command 'Read SMS'.
3. The system will read back the new message.

Note

- To listen to the message again, say 'Read again'. To listen to the next message, say 'Next'. To send a reply, say 'Reply'. To call the sender, say 'Call'.
- When an SMS enabled mobile phone is paired, new incoming messages will automatically be notified through the system.

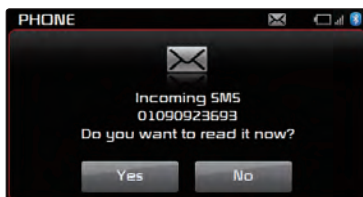

- When the notification window is displayed, press the  button to check the new incoming message.

3. Sending an SMS message (Custom Messages)

The UVO system allows you to respond to incoming messages through voice commands.

1. After listening to a received message, say 'Reply'.
2. The UVO system will provide information pertaining to the 6 Custom Messages.
3. Select the desired message to send a response.

Note


- You can modify custom messages through Phone Settings.
 - The SMS function may not be supported in some handset devices.
-

Operating Voice Command

Using Voice Command





1. Press the  key on the steering wheel controller.

A  display will be shown at the top of the screen followed by a “Please say a command after the beep” system comment.

2. Once the  Listening... icon becomes displayed, say the desired voice command (ex: “What’s Playing”)

Note

- Press the  key shortly to interrupt the system command feedback and enter a voice command.
- To terminate the voice control system, either say “Exit” or press the  key for over 0.8 second.
- The system voice comment “Please say a command after the beep” will not be stated when the Command Feedback option is turned off.
- For more information on the various voice commands supported by the system, refer to the “Voice Command List” section.

Voice Command List

The voice commands for this system are divided into Global commands and Local commands.

- Global commands (●) : Commands that operate in all modes.
- Local commands (○) : Commands that operate only in corresponding modes or when screens of corresponding modes are displayed.

Voice Command List

Command List - General Commands

Command		Operation
●	Exit / Quit / Cancel	Terminate the voice control system
○	Go back	Returns to the previous step.
●	Repeat	Repeats the system prompt.
●	Help	Provides instruction on the voice command necessary for the current situation.
●	Voice command feedback {on, off}	Turns command feedback on/off.
●	Tutorial	Provides guidance on how to use voice recognition and Bluetooth connections

Command List - Audio Commands

1. FM/AM Radio

Command		Operation
●	Radio	Plays the most recent frequency for the most recent band
●	Radio {FM, AM}	Plays the most recent frequency for the corresponding Band.
●	Radio {87.5 - 107.9} FM	Plays the selected FM band frequency.
●	Radio {530 - 1710} AM	Plays the selected AM band frequency.
●	Radio FM preset {1 - 12}	Plays the selected FM preset.
●	Radio AM preset {1 - 6}	Plays the selected AM preset.
○	What's playing?	Reads back HD Radio™ (Optional) station information.

2. SIRIUS™

Command		Operation
●	SIRIUS™	Plays the most recent SIRIUS™ channel.
●	SIRIUS™ preset {1 - 18}	Plays the selected SIRIUS™ preset.
●	SIRIUS™ channel {0 - 223}	Plays the selected SIRIUS™ channel.
●	SIRIUS™ channel {name}	Plays the channel searched through the SIRIUS™ channel name.
●	SIRIUS™ category {name}	Plays the channel searched through the SIRIUS™ category name.
○	What's playing?	Reads back SIRIUS™ channel information.

Voice Command List

3. MEDIA

Command		Operation
●	Play {zune®, iPod®, USB, CD}	Plays the selected media mode.
●	Play {Bluetooth® audio, AUX}	Plays the selected media mode.
●	Play artist {artist name}	Plays songs of the selected artist.
●	Play album {album name}	Plays songs of the selected album.
●	Play track {track name}	Plays the selected track.
●	Play playlist {playlist name}	Plays songs of the selected playlist.
●	Play genre {genre}	Plays songs of the selected genre
●	Play audiobook {title}	(iPod® only) Plays the selected audiobook.
●	Play podcast {podcast}	(iPod® only) Plays the selected iPod® podcast.
●	Play composer {composer}	Plays songs for the selected composer.
○	What's playing?	Reads back the current song information.
○	Repeat {on, off}	Turns the repeat feature on or off.
○	Shuffle {on, off}	Turns the shuffle feature on or off.
●	Play {CD, zune®, iPod®, USB} artist {name}	Plays songs for the selected artist in the selected media mode.
●	Play {CD, zune®, iPod®, USB} album {name}	Plays songs for the selected album in the selected media mode.
●	Play {CD, zune®, iPod®, USB} track {name}	Plays the selected track in the selected media mode.
●	Play {CD, zune®, iPod®, USB} playlist {name}	Plays the selected playlist in the selected media mode.
●	Play {CD, zune®, iPod®, USB} genre {genre}	Plays songs for the selected genre in the selected media mode.
●	Play {CD, zune®, iPod®, USB} composer {name}	Plays songs for the selected composer in the selected media mode.
●	Play iPod® audiobook {title}	(iPod® only) Plays the selected iPod® audiobook.
●	Play iPod® podcast {podcast}	(iPod® only) Plays the selected iPod® podcast.

4. JUKEBOX

Command		Operation
●	Play JUKEBOX	Plays the selected JUKEBOX mode.
●	Play JUKEBOX Favorites	Plays songs of JUKEBOX Favorites
●	Play artist {artist name}	Plays songs of the selected artist
●	Play album {album name}	Plays songs of the selected album.
●	Play track {track name}	Plays the selected track.
●	Play playlist {playlist name}	Plays songs of the selected playlist.
●	Play genre {genre}	Plays songs of the selected genre
●	Play composer {composer}	Plays songs of the selected composer.
○	What's playing?	Reads back the current song information.
○	Add to favorites	Adds the current song to favorites.
○	Remove from favorites	Removes the current song from favorites.
○	Repeat {on, off}	Turns the repeat feature on or off.
○	Shuffle {on, off}	Turns the shuffle feature on or off.
●	Play JUKEBOX artist {artist name}	Plays songs of the selected JUKEBOX artist.
●	Play JUKEBOX album {album name}	Plays songs of the selected JUKEBOX album.
●	Play JUKEBOX track {track name}	Plays the selected JUKEBOX track.
●	Play JUKEBOX playlist {name}	Plays the selected JUKEBOX playlist.
●	Play JUKEBOX genre {genre}	Plays songs of the selected JUKEBOX genre.
●	Play JUKEBOX composer {name}	Plays songs of the selected JUKEBOX composer.

Voice Command List

5. PANDORA Radio

Command		Operation
●	Play PANDORA	Plays the PANDORA Radio mode.
●	Play PANDORA Station {stationname}	Plays the station searched through the PANDORA Radio station name.
○	Shuffle	Calls the desired person at the home number.
○	Skip	Calls the desires person at the office number.
○	Thumbs Up	Calls the desires person on the mobile number.
○	Thumbs Down	Starts dial by number operation.
○	Bookmark this track	Starts call by name operation.
○	Bookmark this artist	Turns on Phone mode screen.
○	What's playing	Reads back the current song information.

Command List - UVO eServices Commands(Optional)

Command		Operation
●	eServices	Displays UVO eServices mode.
●	Roadside Assist	Makes call to Roadside Assist agent.
●	eServices Guide	Receive guidance on methods of using UVO eServices.
●	Vehicle Diagnostics	Starts the Vehicle Diagnostics process.

Command List - Phone Commands

Command		Operation
●	Call {name}	Calls the desired name.
●	Dial {number}	Dials the desired number.
●	Call {name} at home	Calls the desired person at the home number.
●	Call {name} at office	Calls the desired person at the office number.
●	Call {name} on mobile	Calls the desired person on the mobile number.
●	Call {name} on Other	Calls the desired person on the other number.
●	Dial by number	Starts dial by number operation.
●	Call a contact	Starts call by name operation.
●	Phone	Turns on Phone mode screen.
●	Dial international	Starts international call operation.
●	Phone connections	Turns on Phone connections screen.
●	Phone settings	Turns on Phone settings screen.
●	SMS	Reads back new SMS message for <i>Bluetooth</i> [®] wireless technology SMS capable phones.
●	Read SMS	Reads back new SMS message for <i>Bluetooth</i> [®] wireless technology SMS enabled devices.
●	Recent calls	Turns on Recent Calls list screen.
●	Redial	Calls the last dialed call.







A9ENE09



A9MS7-F2001

