

SEDONA

Rear Seat Entertainment

QUICK MANUAL



The User Guide is available in the Rear Entertainment System.
In the Settings screen, press [User Guide].



The Power to Surprise



RC8Z6001A
YPPEUSARSE

Component Names and Functions

Display Monitors

Front

Power Key

Press to turn the unit on/off.

Power Indicator LED



Left Side



Reset

USB Port

Headphone Jack


AV IN

HDMI

DVD Deck

Disc Insert Slot

Eject Key

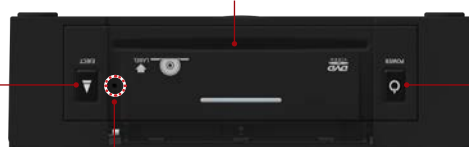

Power Key

Ejecting Hole

Wireless Headphones(Optional)




Charging Port

Connect Mini-USB plug to charging port.

Right

Power Button

Press and hold (over 3 seconds) to turn the headphone on.

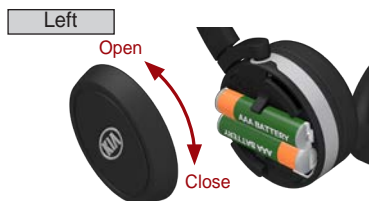

Battery Compartment


Slide the cover on the left headphone from right to left to open the battery compartment. Then replace the batteries.
* Battery charging through the Charging Port is possible with the provided rechargeable batteries.

Using the System for the First Time





Connecting the Wireless Headphones

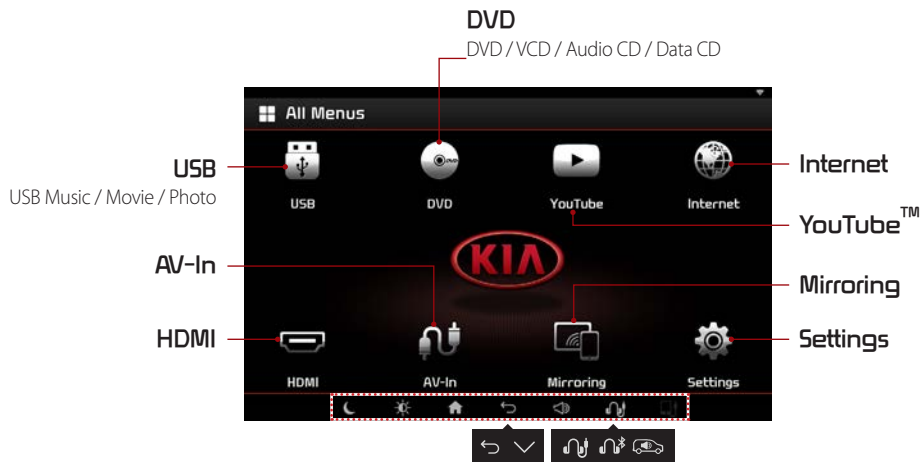1. Remove the protective film on the battery cover.
2. Press and hold the power button for over 5 seconds until the LED starts flashing quickly. The wireless headphones will be ready to start the connection process.
3. Press Settings → Bluetooth® on the Display Monitor you wish to connect.
4. Select the device name from the list.
5. Once the wireless headphones are properly recognized, a message appears on the RSE display and the LED will flash slowly.
6. Repeat the process for the second wireless headphones.
7. Attach the Left / Right stickers on the inside of the left / right wireless headphones.

Home Screen



Button	Description
	Turns display off.
	Adjusts brightness.
	Displays the Home screen.
	Moves to the previous screen.
	Hides keyboard (displayed when keyboard active).
	Adjusts volume.

Button	Description	
	Earjack Headphones	Speaker Mode
	Bluetooth® Headphones	
	Vehicle Speaker – RSE Monitor	
	Vehicle Speaker – Media Box	

Setting the Speaker Mode


Each time the Speaker Mode button is pressed, the mode will change between the headphones and vehicle speaker. Vehicle speaker is unavailable in Mediabox mode.

Key Features

Media

The user can enjoy music, videos, and images from various media types, such as **USB**, **DVD**, **CD** and **external device**.

In the Home screen, press the desired media.

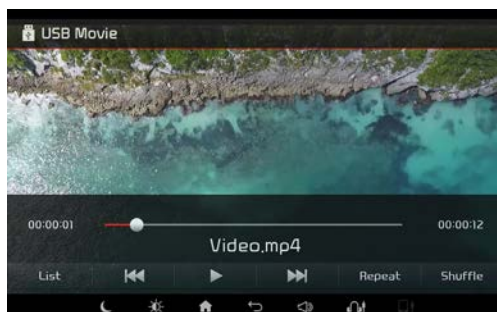

Connectivity

The user can enjoy **YouTube™**, **Internet** or **Mirroring** with Wi-Fi connection or mirroring connection.

In the Home screen, press the desired connectivity feature.

To use the Mirroring feature, first turn off the WiFi connection in the system.



Settings

The user can change various system settings, such as languages, Bluetooth®, network, power setting, and factory reset.

In the Settings screen, select and set the desired option.



Period Warranty	Warranty Coverage
3 years	36,000 mile
*Whichever occurs earlier.	

For more information, please refer to the User Guide in the system.

In the Settings screen, press [User Guide].

All feature images are for illustrative purposes only.



The Power to Surprise

Trademarks and Disclaimers

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.



Bluetooth® Wireless Technology: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG Inc., and any use of such marks by Kia is pursuant to license. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology



YouTube™ is a trademark of Google Inc.