



SA-260MB Autoclave Quick Operation Guide

Keep these instructions with or near your autoclave for easy reference.

For detailed maintenance and operation instructions, refer to SA-260MB Instruction Manual.



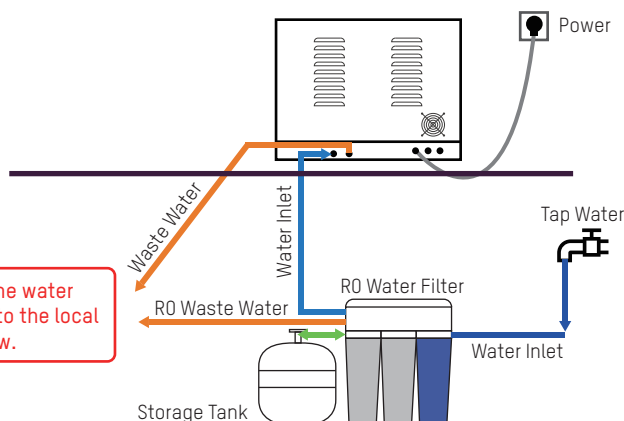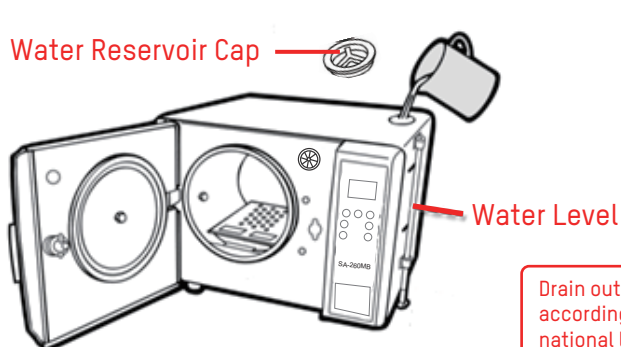

Installation

- 1 Open the water tank cap; Fill the water for sterilization or distilled water into the tank.



- 2 Connect drain pipe to a drain tank.
- 3 A separate (dedicated) circuit is recommended for the sterilizer. The sterilizer should not be connected to an electrical circuit with other appliances or equipment.


Sterilization Operation

- 1 Check the Pressure Gauge is reading ZERO, and then press the "unlock button"  to open the door by turning the door knob 90° counterclockwise.
- 2 Put the sterilization object into the sterilizer/autoclave (Be careful not to overlap, ensure the sterilization dryness and effect) and close the door.
- 3 Select a program to sterilize by  UP or  Down and pressing the ENTER  key 2 times to start the sterilization cycle.
- 4 The end of successful cycle.

MENU	
Unwrapped	121°C
Wrapped	121°C
Unwrapped	134°C
Wrapped	134°C
Flash	
PRION	
LIQUID	
Dry	
Customization	
Function Test	
System Setting	

Wrapped 134°C
Pre-Vacuum
Ster. Temp: 134°C
Ster. Time: 15 m00s
DryTime:30m

Program Complete
Sterilization: Finish
TC: 85.0°C
Pres.: -0.02bar
Total Time: 65m04s

- 5 Press unlock button  to open the door and use the tray holder to remove the load object from the sterilizer/autoclave.

Maintenance

Keep these instructions with or near your autoclave for easy reference.

For detailed maintenance and operation instructions, refer to SA-260MB Instruction Manual.

Regular maintenance is required to optimize the performance of the sterilizer.


BI and CI are often used for sterilization verification and regular checking of sterilization cycles.

Daily


- Perform B & D test and Helix Test.
- Clean the external surfaces inside of the chamber, door, and gasket with a soft cloth.
- Ensure the vent holes are not blocked and check the status of the power cord.

Weekly


- Clean the trays, frame, heater cover with detergent and water.
- Replace the water for sterilization water in the water tank.
- Please take out the filter, flush it with running water until clean, and assemble it back.

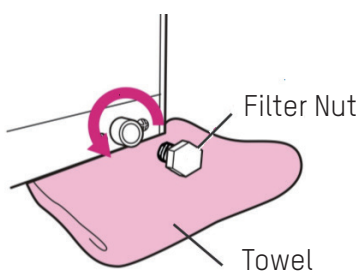

Counterclockwise

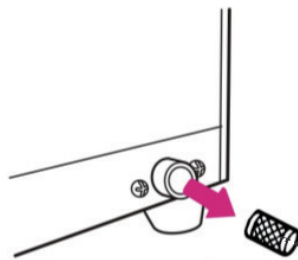


Take out the filter and clean it.

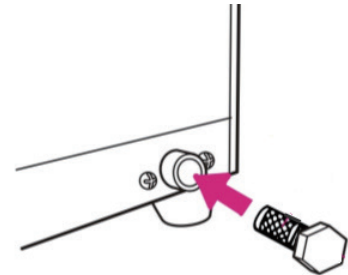


Install the filter following the direction of the arrow.
Lock the filter nut clockwise.

Monthly


- Check safety valve. Turn off the power, followed by removing the water tank cap. Use a screwdriver to pull the metal ring off the safety valve check 3 times. Put the cap back.
- Use non-corrosive cleaner and sponge to clean the water level sensor of the chamber.
- Clean the chamber with chamber cleaner following the instructions on the sachet.
- Check the Air Filter if too dirty. Replace a new Air Filter with the same part number.

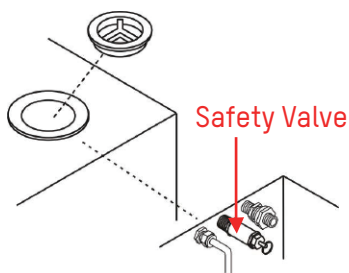

Safety Valve

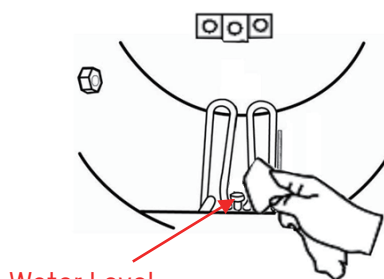

Water Level

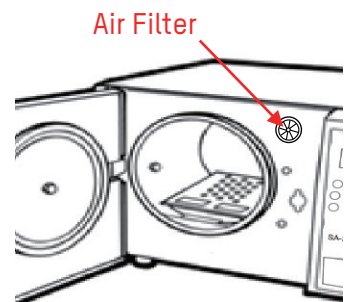

Air Filter

Annually

- Check if the silicone door gasket is chapped or worn. Replace the door gasket every year.