


# IRQ Circuit on Interface board<sub>2</sub>

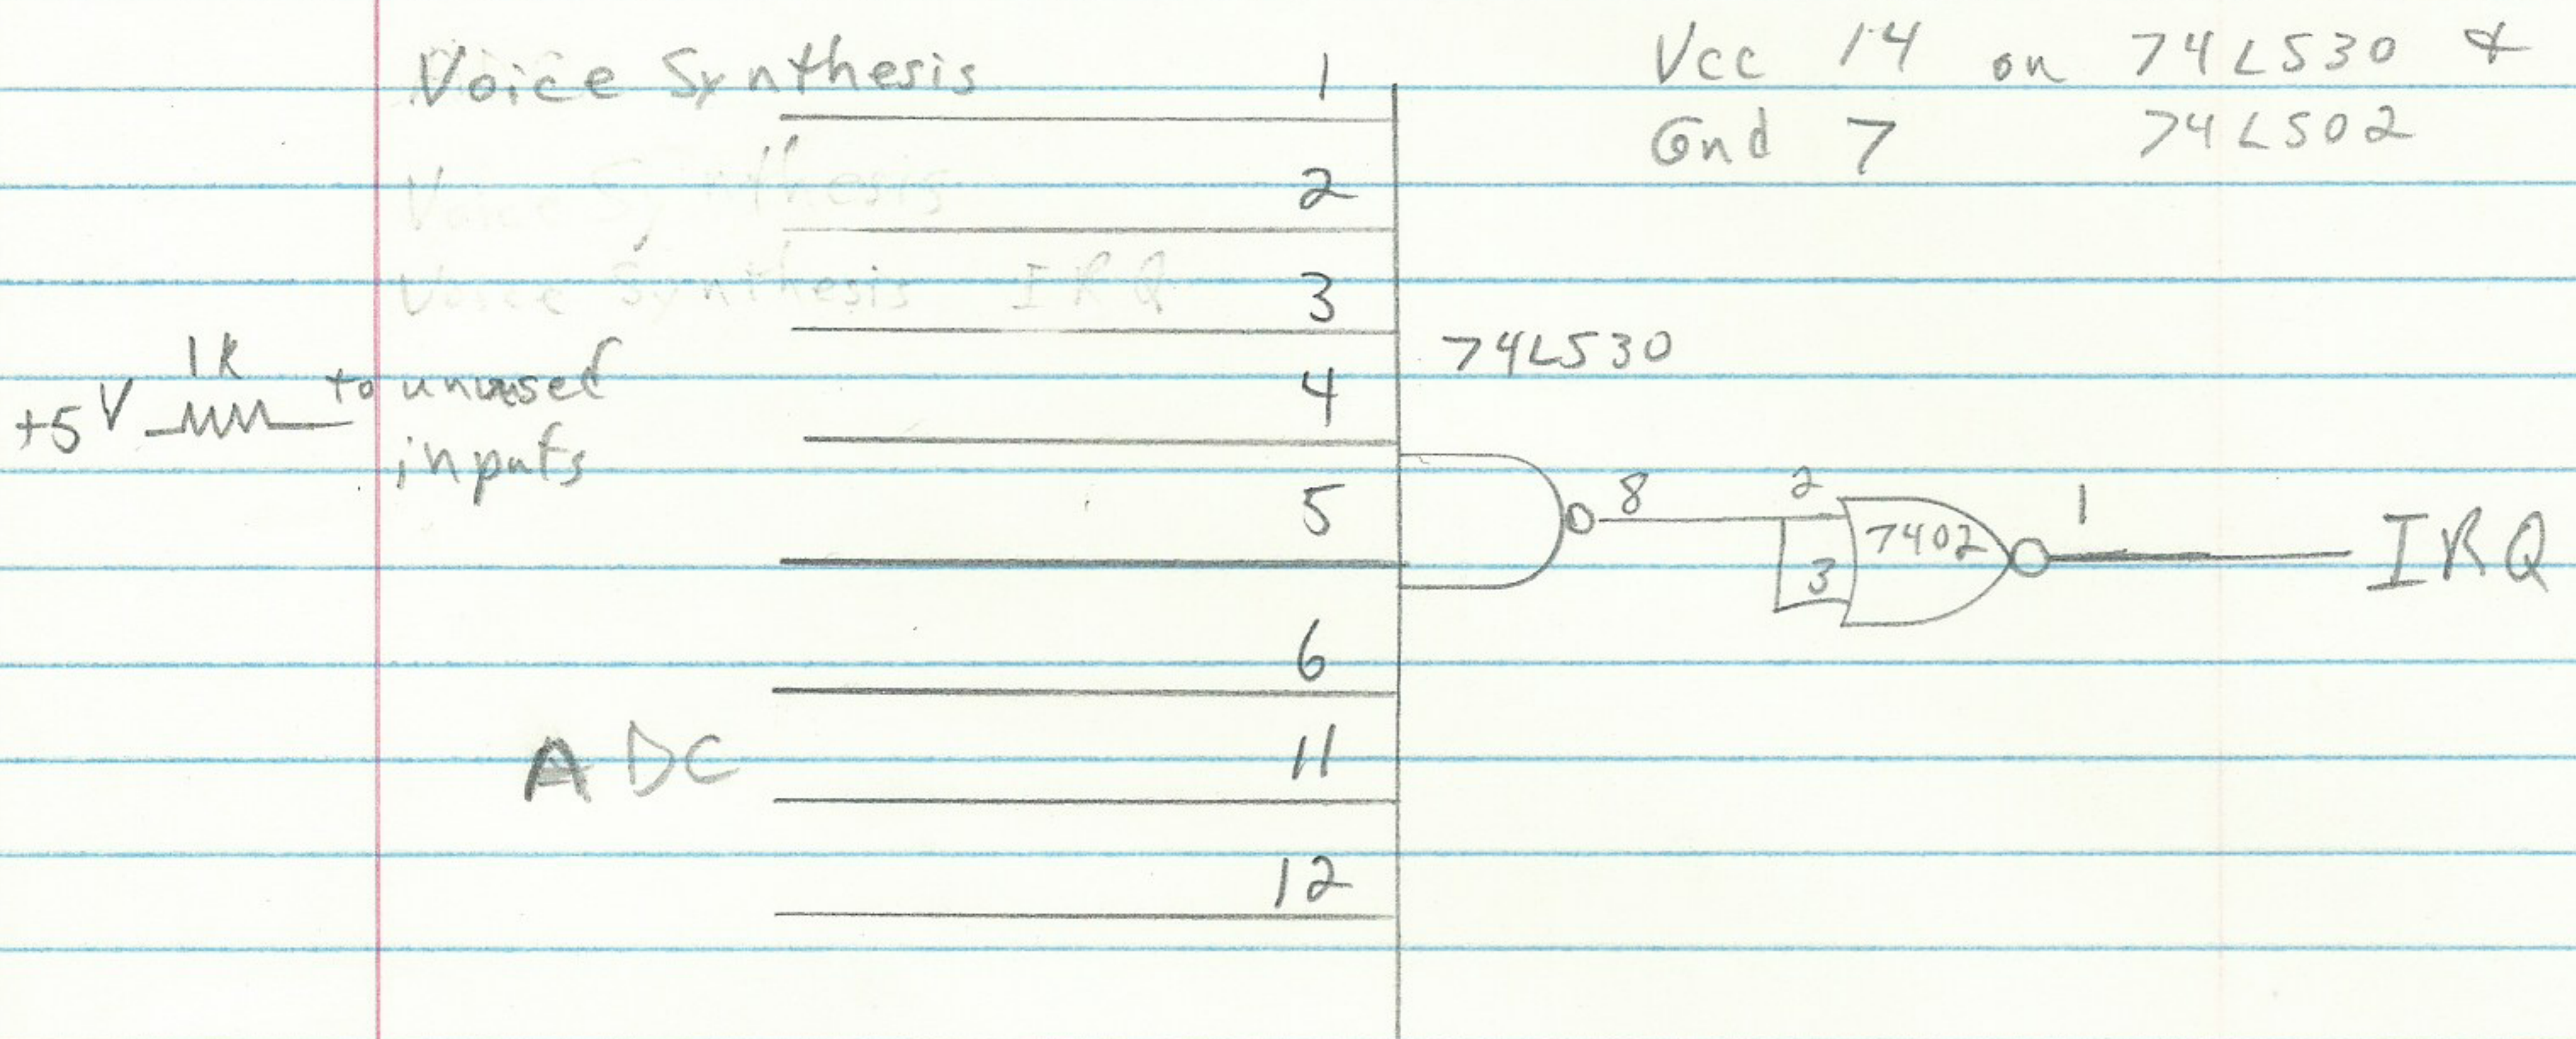

Note: All unused inputs of 74LS30 must be connected to +5V