

# **SFM10R**

# **Setup & Test Manual**


# CONTENTS

---

**1** PC Connection


**2** Setup & Test

## DUT & PC Connection.

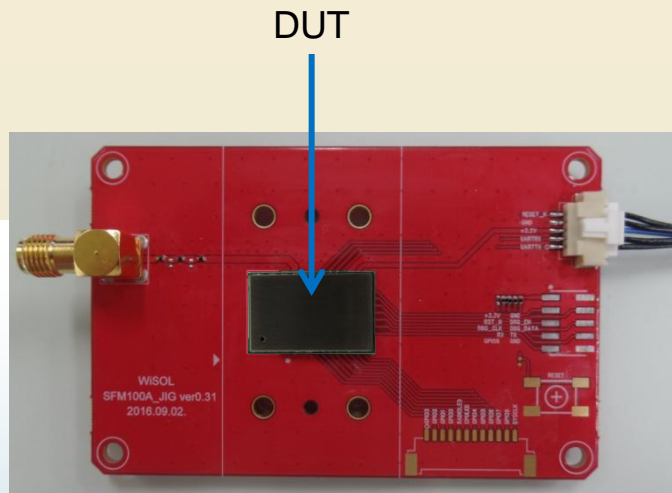

RF in/out

DUT

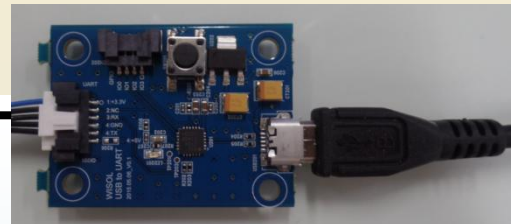


Uart to USB JIG




COM port

DUT Cable connect to COM port in PC.

## PC COM port Setting

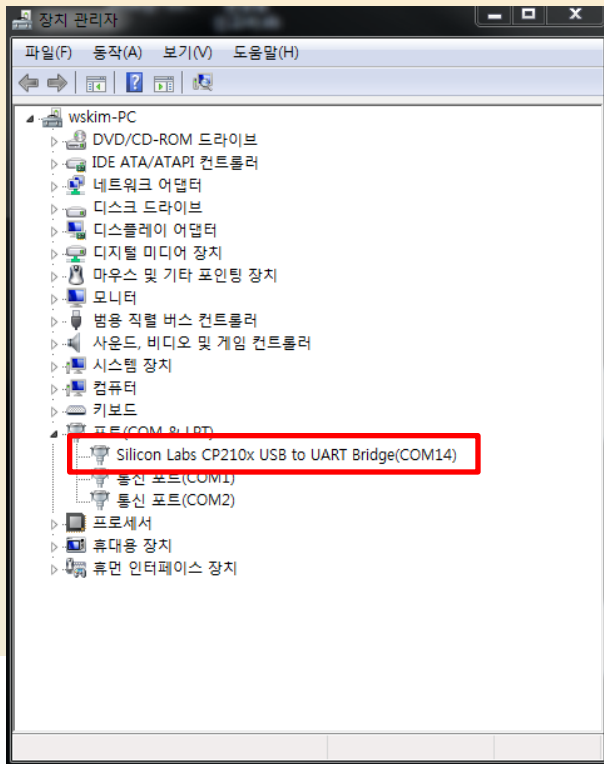

Check the COM port in Device Manager.

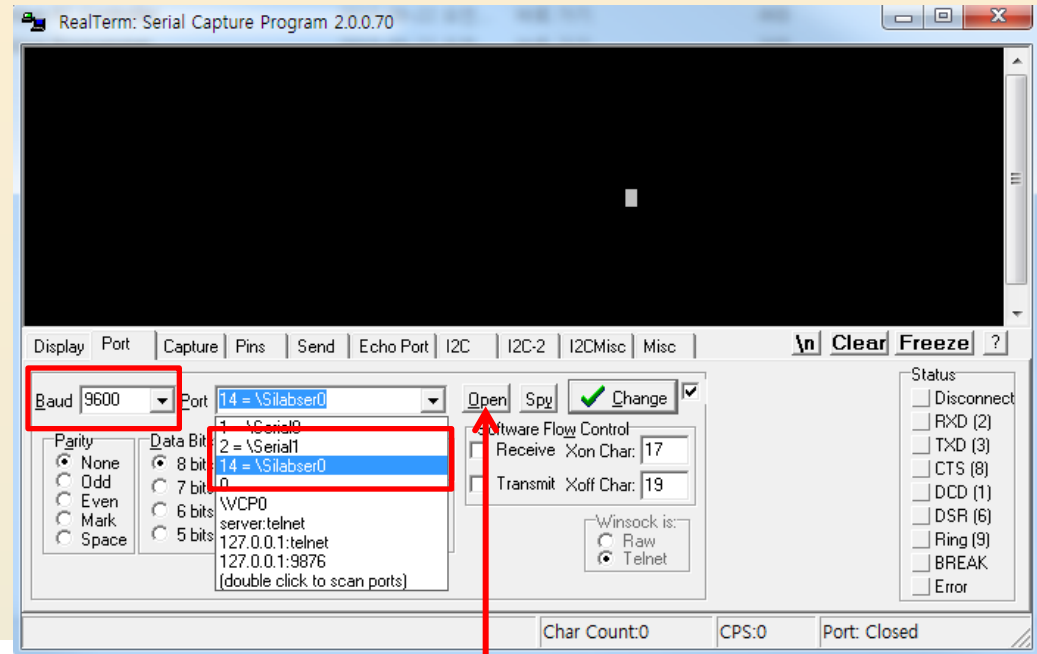


Click

Run serial communication program and the setting, as shown in Figure

**\*\*Use Consol Tool: Real Term**

## Test Command

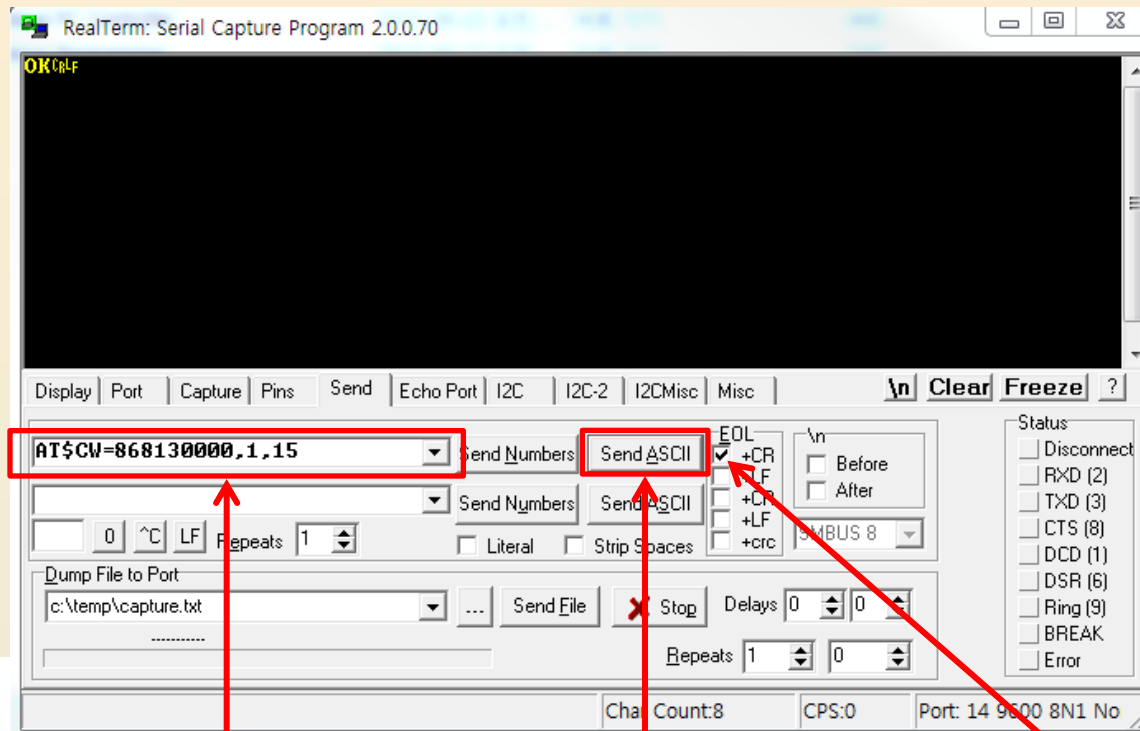

Write AT-command.

Click to send.

Check.

### \*\*AT-Command(FCC)

```
TX CW: AT$CW=902200000,1,24
      AT$CW=902200000,0,24(CW off)
TX MOD: AT$IF=902200000
      AT$CB=-1,1
RX: AT$RL
Tx Hopping: AT$TM=1,3
Tx non-Hopping: AT$TM=0
```

---

***Thank you!***