



# Interfacing LCD with Arduino using AVR-GCC



Arpita Mishra and G V V Sharma\*

## CONTENTS

1	Components	1
2	Display Number on LCD	1

**Abstract**—This manual shows how to interface an Arduino to a  $16 \times 2$  LCD display using AVR-GCC. This framework provides a useful platform for displaying the output of AVR-Assembly programs.

## 1 COMPONENTS

Component	Value	Quantity
Breadboard		1
Arduino	Uno	1
LCD	$16 \times 2$	1
Jumper Wires		20

TABLE 0

## 2 DISPLAY NUMBER ON LCD

1. Plug the LCD in Fig. 2 to the breadboard.
2. Connect the Arduino pins to LCD pins as per Table 2.
3. Download the following directory from

svn checkout <https://github.com/gadepall/arduino/trunk/avr-gcc/lcd/codes>

Arpita Mishra is an intern with the TLC, IIT Hyderabad. \*The author is with the Department of Electrical Engineering, Indian Institute of Technology, Hyderabad 502285 India e-mail: gadepall@iith.ac.in. All content in the manual released under GNU GPL. Free to use for anything.

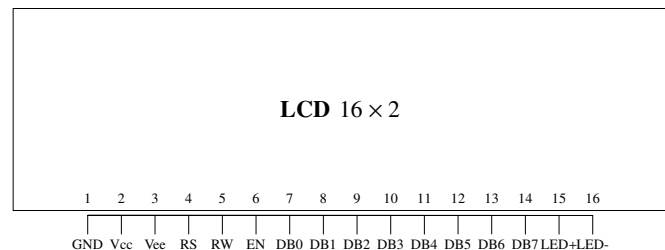


Fig. 2: LCD

TABLE 2: Arduino to LCD Pin Connection.

Arduino Pins	LCD Pins	LCD Pin Label	LCD Pin Description
GND	1	GND	
5V	2	Vcc	
GND	3	Vee	Contrast
D8	4	RS	Register Select
GND	5	R/W	Read/Write
D9	6	EN	Enable
D10	11	DB4	Serial Connection
D11	12	DB5	Serial Connection
D12	13	DB6	Serial Connection
D13	14	DB7	Serial Connection
5V	15	LED+	Backlight
GND	16	LED-	Backlight

and execute **main.c**

4. Modify the above code to obtain a decayed

counter so that the numbers from 0 to 9 are displayed on the lcd repeatedly.

5. Write assembly routines for driving the lcd.