

V-5 Errata

Regretfully, a number of inaccuracies appear in the Owner's Manual for Roland Video mix/Title Processor V-5. It should read as shown below. We apologize for any inconvenience this may cause.

Page 4 "Important Notes" Concerning Copyrights and Related Matters

Supplement

If copy-protected source material such as DVD, video tapes and television programs is input to the V-5, it may not be shown correctly on the connected monitor. This is normal, and does not indicate a problem with your equipment.

Page 49 "Setting PICTURE/TITLE" PICTURE/TITLE settings

Supplement

H-POSI : Adjusts horizontal positions.

-127 to +128

*H-POSI can be adjusted on the V-5 PAL only.

*Captured still images in PICTURE files will have slightly different size and position than their source

videos on the V-5 PAL.

Page 54 "TITLE IN/OUT settings" Step 8

8. Use [<] and [>] to select the item, and then adjust the setting with [+][-] and the value dial.

Supplement

You can monitor the status of the key settings in the title file by moving the video fader all the way to the sub source. But the title file settings are reflected to the monitor only during V-5 is in the title file set-up page.

To show the title as it is set in the title file, move the video fader to the main source and press [TITLE IN] or [TITLE OUT] button.

Page 57 "Memory Card Preparation(Formatting)" Step 2

(incorrect): If the display shows a message "MEM-CARD FORMAT Are you sure?", proceed to step 6..

(should read): If the display shows a message "MEM-CARD FORMAT Are you sure?", press [ENTER/YES] button and format the card. A message "Complete" will be displayed and go back to "AUTO SPEED=" display when formatting is completed.

Page 69 "P in P settings" VERTICAL POSITION

(incorrect): 0 to 225

(should read): NTSC : 0 to 225, PAL : 0 to 235

Page 77 – Page 78, “Revising the time set in the program” Step 10

10. Press [TITLE IN] at the correct time to insert the title while watching the monitor, or [TITLE OUT] for title out. The timing for the title in/out will be changed.

Supplement


- * If you play back the video normally, title in/out will be executed at the assigned time.
- * If you play back the video in special ways such as frame-by frame, slow, or picture search FF/REW in the pause status, title in/out will not be executed at the assigned time.

If the current time of the video tape which is running is before the assigned time for title in/out, you can revise the assigned time by pressing [TITLE IN] or [TITLE OUT] button, and title in/out will be executed.

If you wish to revise the title in/out time after it is executed, please follow the procedure below.

- (1) Pause the video.
- (2) Press [<] button four times to go back to the page to assign the time for last-executed title in/out.
- (3) Search the time of the video you wish to re-assign by playing back in special ways such as frame-by-frame, slow, etc.
- (4) Press [TITLE IN] or [TITLE OUT] button. Title in/out time is revised and executed.
- (5) If you wish to revise again, repeat the above steps (1) to (4).

* At the time you can assign the title in/out, following sign appears at the left of the time code in the upper line in the display. If this sign does not appear, you can not assign even if you press [TITLE IN] or [TITLE OUT] button.

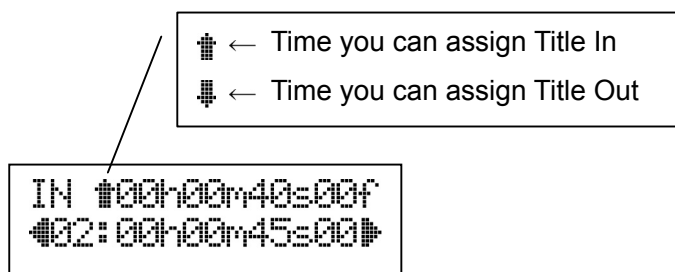


You can revise the next title in/out time in succession.

But if you wish to revise the distant title in/out time which is not next to the last revised time, press [EXIT/NO] button and return to the step 7.

Wipe Patterns List**P5. Wipe Pattern 075 Correction**

(incorrect) 075

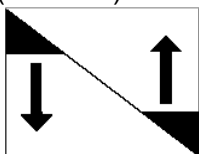

(correct) 075

