


# STM32F4CubeMx安装

进入STM32官方网址

点击获取软件



点击Get laster进入协议界面

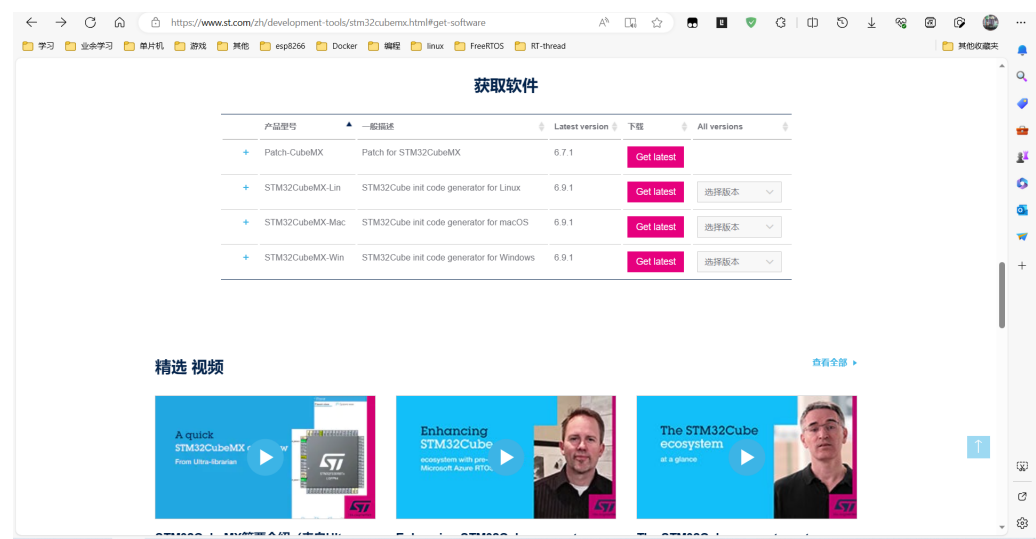

直接点接受后会弹出填写信息的界面,填一下就行了,之后会向你填的邮箱里发送一封邮件，点击里面的链接就可以下载了。

STMicroelectronics - Start your software download



STMicroelectronics <st@envelope.st.com>  
14:32



收件人: tqht7h@126.com

[View in browser](#)

**Start your software download**

**Hi Tang**

Please click on this button to validate your email address and start the download of STM32CubeMX-Win

**Download now**

If you have any further issues, please send your request to our [online support](#) using the subject line: Software download issues.

Thank you,

STMicroelectronics  
[www.st.com](http://www.st.com)

下载完之后直接无脑下一步就行了(记得改下安装目录)