

Touch Hallway

Primary Contact: Taylor Matson (-----)

Boot Sequence:

Turn speakers on using volume dial (Speakers are located above wall closest to Centralia)

Click the power button on the back right of the Mac Mini.

If the display is still off, the power button for the TV is on the bottom right, on the side panel.


- The menu buttons are there if further troubleshooting is needed

After Boot, enter password OtherWorldTaylor for the account of Taylor Matson


Make sure ADJ MyDMX Buddy, Logic Pro X, Arduino, and Audio MIDI Setup are all open.




Make sure both TouchBoards are connected in the Audio MIDI Setup (Picture below shows them disconnected, a connected board will light up the icon and make the gray lines into white lines)

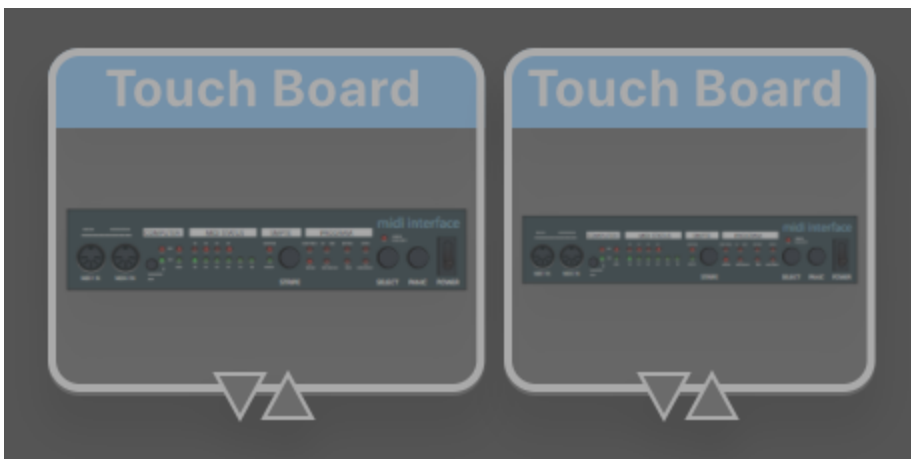

In Logic Pro X, make sure the record button on the Watery Bells is solid red and the track is selected

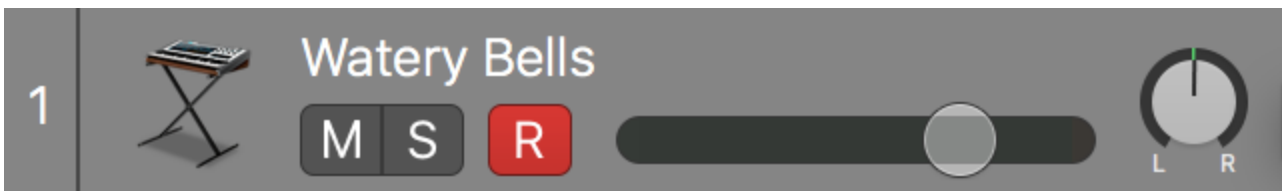

In the MyDMX Buddy Software Program, open the OtherWorld.dlm project file, then click on the LIVE tab

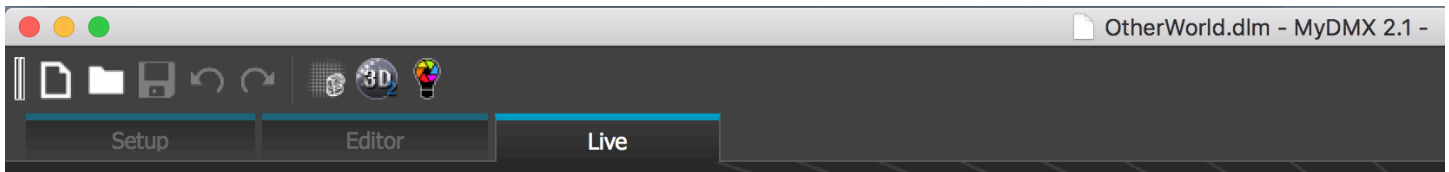

Shutdown Sequence:

Click the Apple Logo and click Shut Down...

Check Reopen windows when logging back in!

Troubleshooting Sequence:

1. Turn off TouchBoard using its switch located on the top right of the board.
2. Wait 5 Minutes before turning it back on
3. If the TouchBoard is still not working correctly, click the reset button
4. If problems persist, call Taylor Matson 615-925-0918
5. Turn off speakers by using the volume knob (Speakers are located above wall closest to Centralia)

