


CONFIGURATION OF BUTTONS IN RIGHT-HANDED MODE

To set the positions of the 12 buttons located on the base to right-handed mode, set the selector switch (12) located under the joystick's base to "RIGHT HANDED":

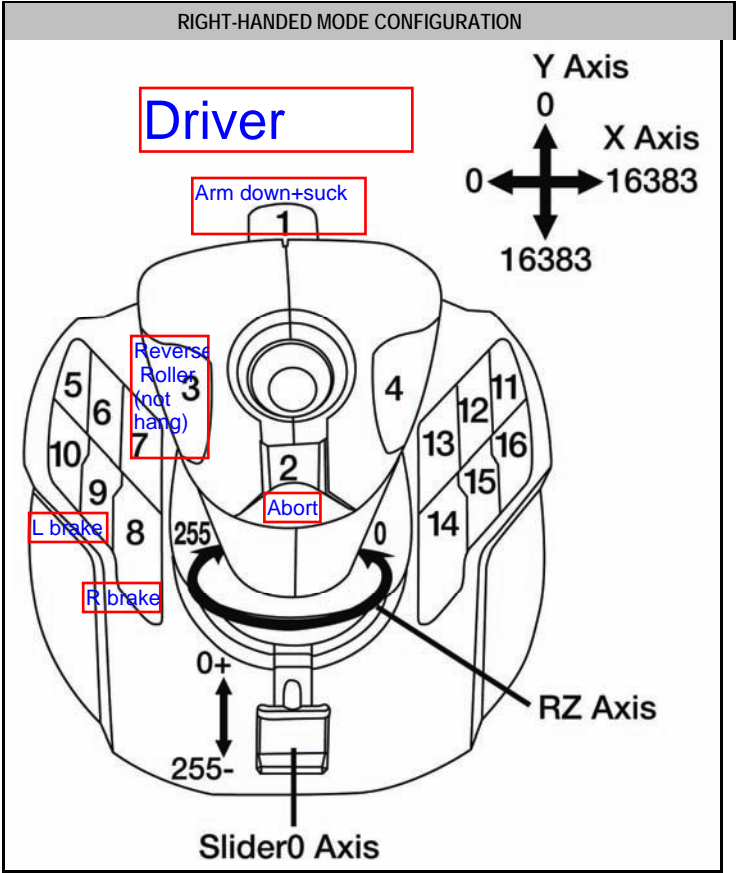

CONFIGURATION OF BUTTONS IN RIGHT-HANDED MODE

To set the positions of the 12 buttons located on the base to right-handed mode, set the selector switch (12) located under the joystick's base to "RIGHT HANDED":

