


SucceX Whoop-VTX


25mW/100mW/200mW

Pinout

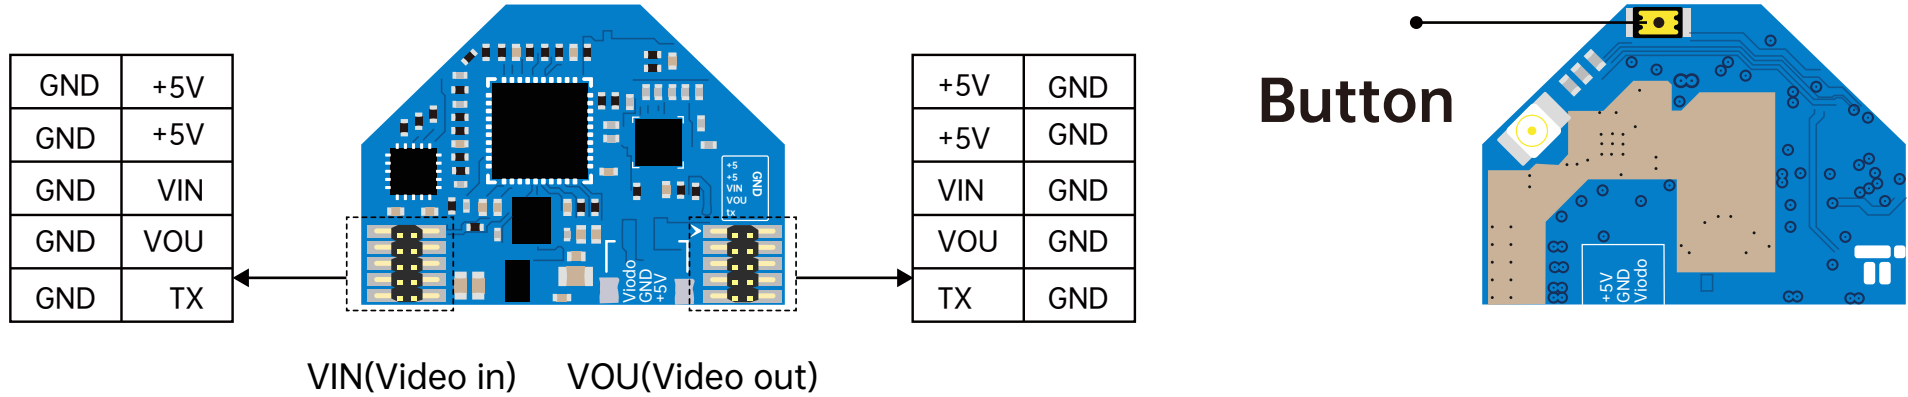

LED Indicator and Function Button

Long press to switch between the menu, short press to change the setting.

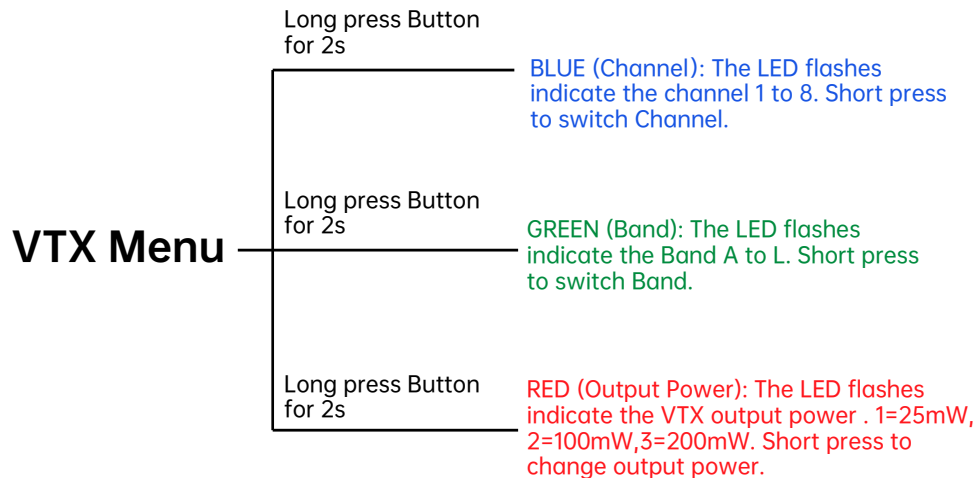

Frequency Table

Note: Antennas must be installed BEFORE powering on. The VTX can be damaged when using without proper cooling.

BAND	CHANNEL							
	CH1	CH2	CH3	CH4	CH5	CH6	CH7	CH8
A	5865M	5845M	5825M	5805M	5785M	5765M	5745M	5725M
B	5733M	5752M	5771M	5790M	5809M	5828M	5847M	5866M
E	5705M	5685M	5665M	5645M	5885M	5905M	5925M	5945M
F	5740M	5760M	5780M	5800M	5820M	5840M	5860M	5880M
R	5658M	5695M	5732M	5769M	5806M	5843M	5880M	5917M
L	5362M	5399M	5436M	5473M	5510M	5547M	5584M	5621M