


NAVAIR 01-F14AAP-1



NATOPS FLIGHT MANUAL NAVY MODEL F-14B AIRCRAFT

THIS PUBLICATION IS INCOMPLETE WITHOUT
NAVAIR 01-F14AAP-1.1 AND NAVAIR 01-F14AAP-1A

TACTICAL SOFTWARE EFFECTIVITY: 320A TAPE

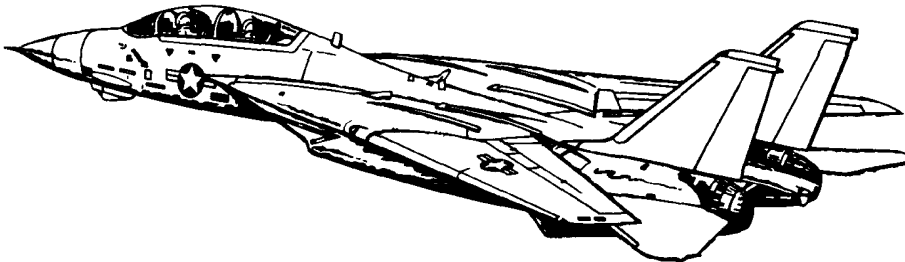

DISTRIBUTION STATEMENT C — Distribution authorized to U.S. Government Agencies and their contractors to protect publications required for official use or for administrative or operational purposes only (1 January 1991). Other requests for this document shall be referred to Commanding Officer, Naval Air Technical Data and Engineering Service Command, Naval Aviation Depot North Island, Bldg. 90, Distribution, P.O. Box 357031, San Diego, CA 92135-7031.

DESTRUCTION NOTICE — For unclassified, limited documents, destroy by any method that will prevent disclosure of contents or reconstruction of the document.

ISSUED BY AUTHORITY OF THE CHIEF OF NAVAL OPERATIONS AND
UNDER THE DIRECTION OF THE COMMANDER,
NAVAL AIR SYSTEMS COMMAND.

THE
AIRCRAFT 1

INDOCTRI-
NATION 2

NORMAL
PROCEDURES 3

FLIGHT
CHARAC 4

EMERGENCY
PROCEDURES 5

ALL-WEATHER
OPERATION 6

COMM
PROCEDURES 7

WEAPONS
SYSTEMS 8

FLIGHTCREW
COORD 9

NATOPS
EVAL 10

PERFORM
DATA 11

INDEX &
FOLDOUTS