



## G17613 - How to setup your DH-485 Network with a Standard PanelView

Last Modified: 12/03/2004  
Previously Released as #11527


General Category:s EOI  
Product(s): PanelView  
Catalog #: 2711ND3  
Series / Revision:  
Subject  
(Keyphrases):  
Summary of  
Technote  
Information:


### How to setup your DH-485 Network with a Standard PanelView


These examples show a single DH-485 network connection to an SLC-5/03 processor via channel 1. Connection requirements are based on cable distance. Maximum DH-485 network distance is 8000 ft.

**Don't forget to remove pin 8 (or 7 if twisted in the null modem adapter) on any PV550 RS232/DH485 units.**



For Distances up to 20 FT For Distances > 20 FT but < 40 FT For Distances > 40 FT

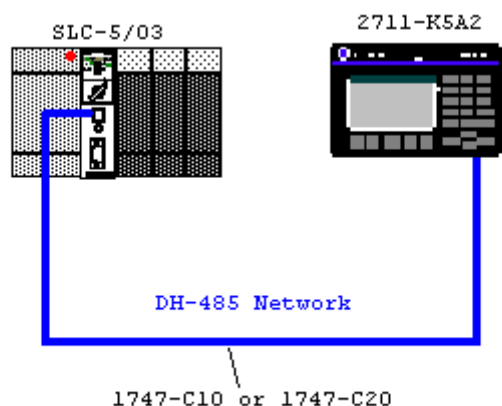


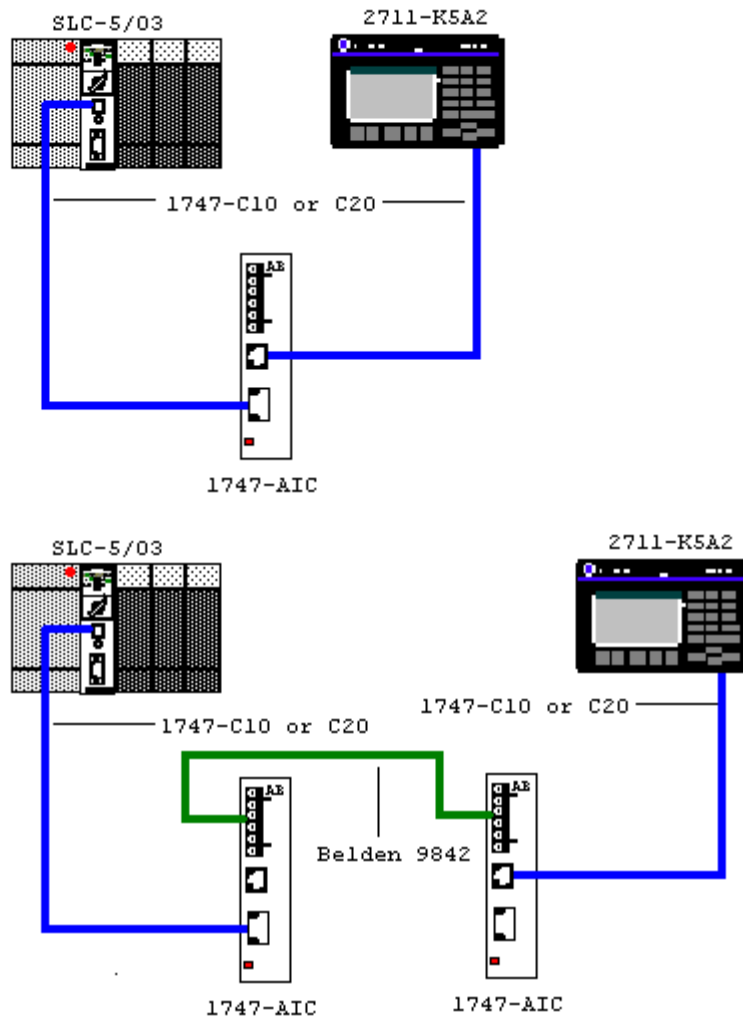

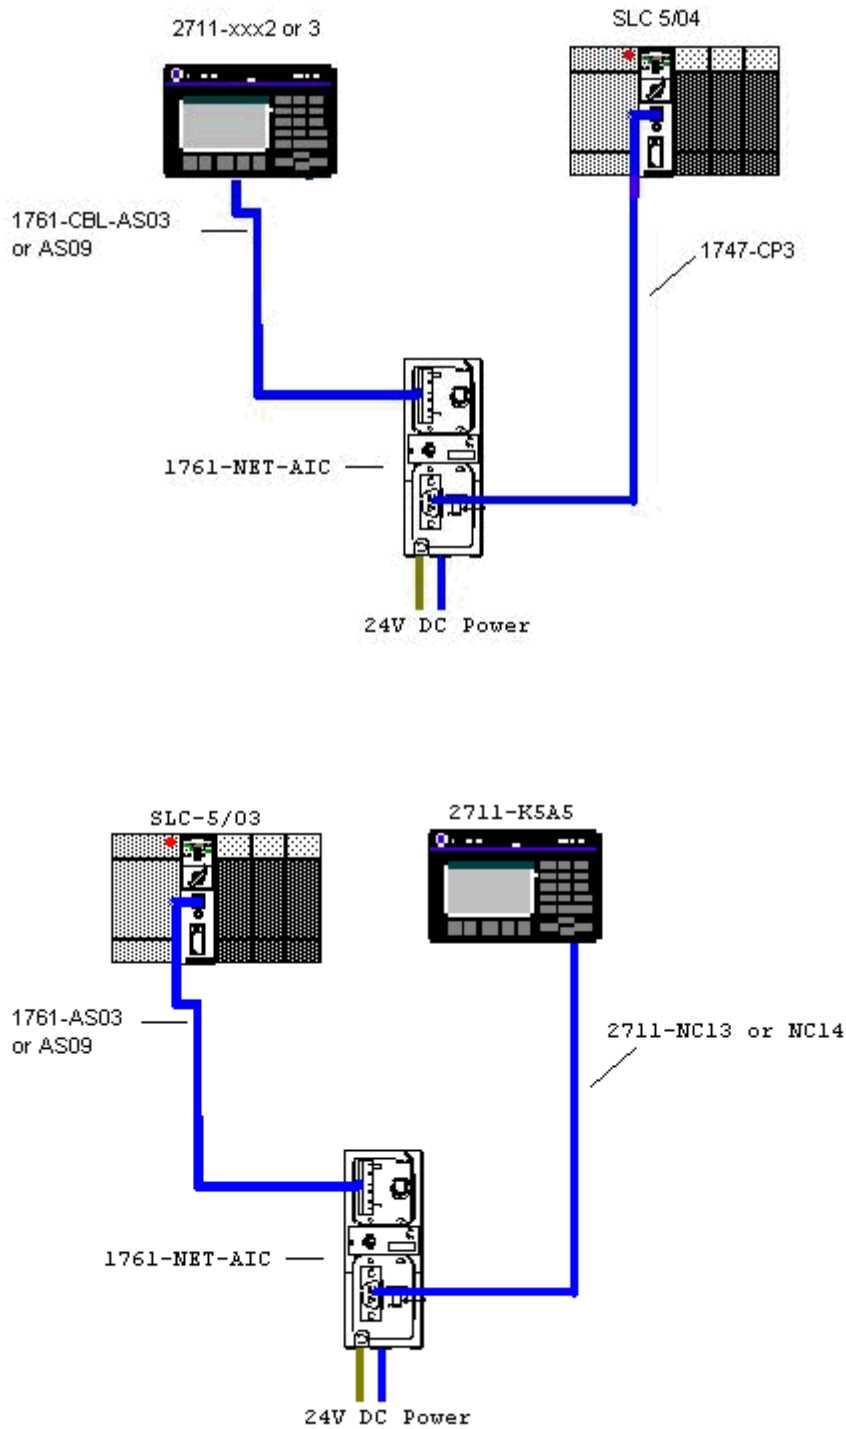


These examples show a single DH-485 network connection to a SLC-5/03, 5/04, or 5/05 processor via channel 0.

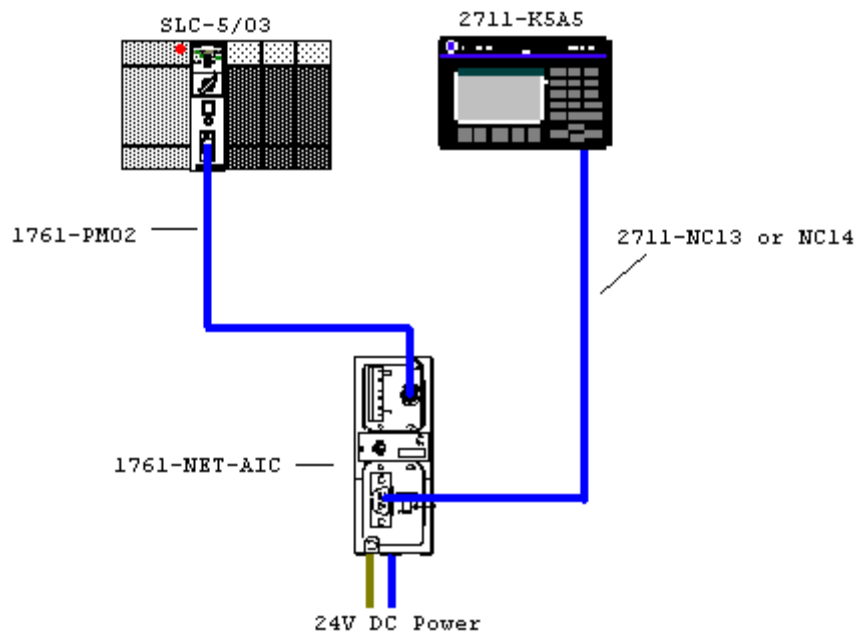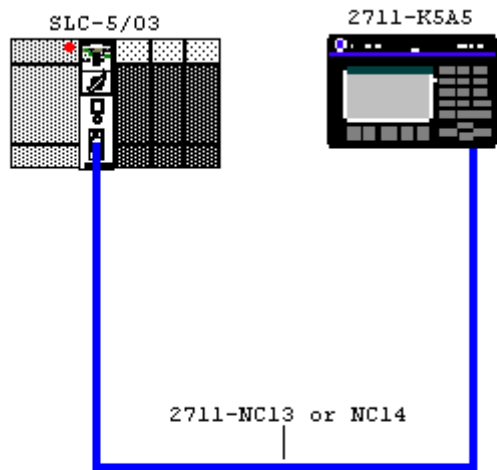

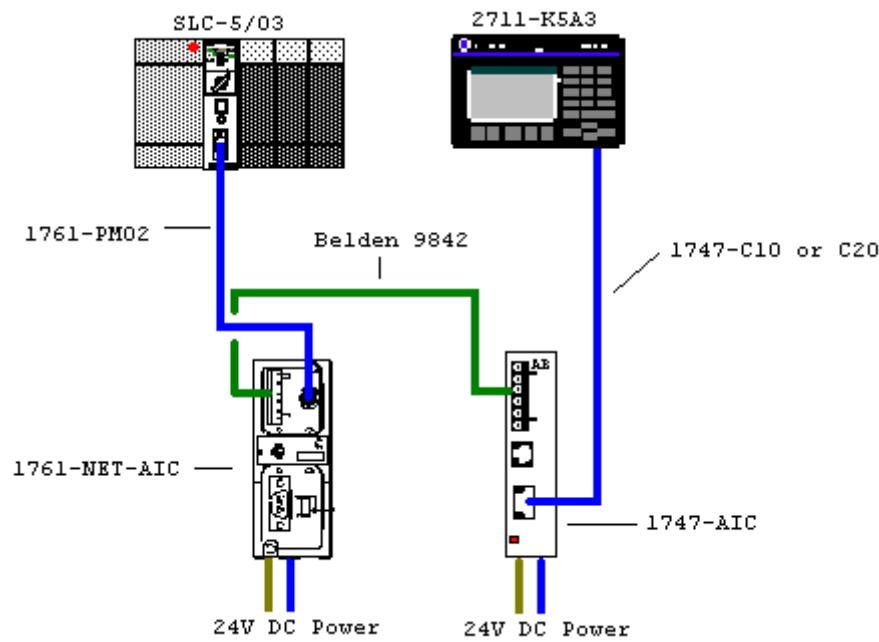

This Example shows multiple DH-485 connections to different SLC processors

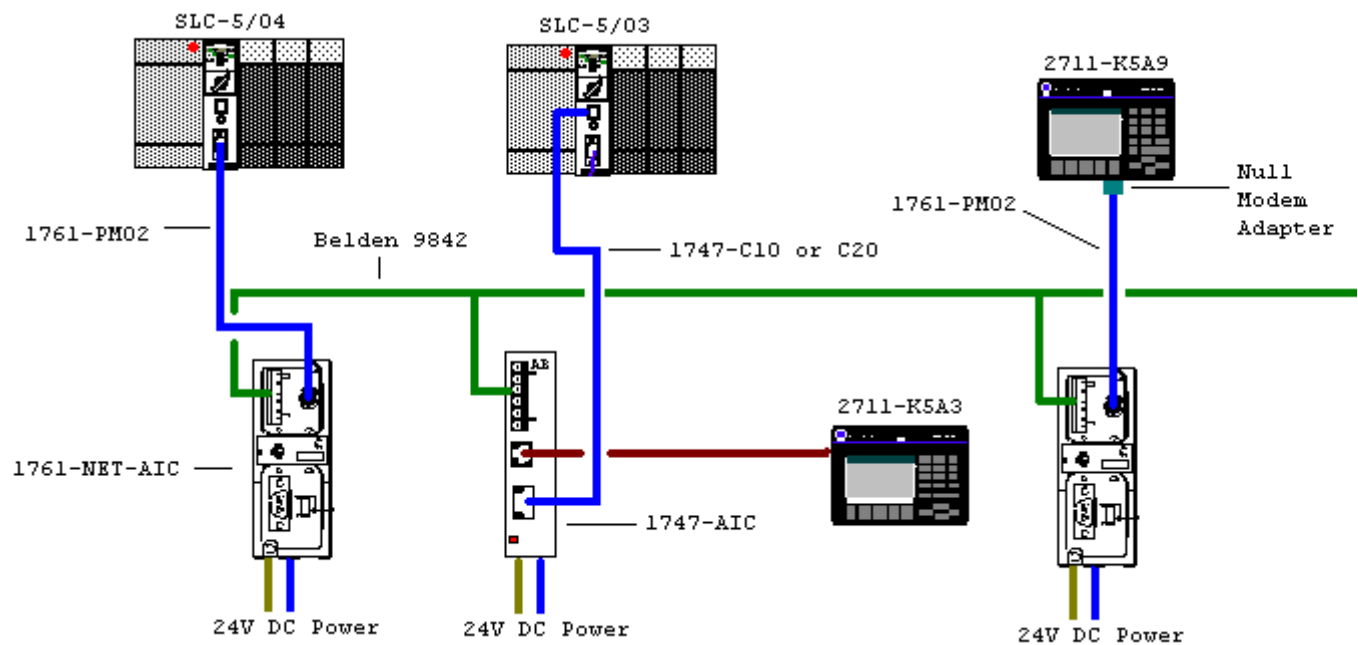

Keywords AIC AIC+

**Related Links:**

---

**DISCLAIMER**

This knowledge base web site is intended to provide general technical information on a particular subject or subjects and is not an exhaustive treatment of such subjects. Accordingly, the information in this web site is not intended to constitute application, design, software or other professional engineering advice or services. Before making any decision or taking any action, which might affect your equipment, you should consult a qualified professional advisor.

ROCKWELL AUTOMATION DOES NOT WARRANT THE COMPLETENESS, TIMELINESS OR ACCURACY OF ANY OF THE DATA CONTAINED IN THIS WEB SITE AND MAY MAKE CHANGES THERETO AT ANY TIME IN ITS SOLE DISCRETION WITHOUT NOTICE. FURTHER, ALL INFORMATION CONVEYED HEREBY IS PROVIDED TO USERS "AS IS." IN NO EVENT SHALL ROCKWELL BE LIABLE FOR ANY DAMAGES OF ANY KIND INCLUDING DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, LOSS PROFIT OR DAMAGE, EVEN IF ROCKWELL AUTOMATION HAVE BEEN ADVISED ON THE POSSIBILITY OF SUCH DAMAGES.

ROCKWELL AUTOMATION DISCLAIMS ALL WARRANTIES WHETHER EXPRESSED OR IMPLIED IN RESPECT OF THE INFORMATION (INCLUDING SOFTWARE) PROVIDED HEREBY, INCLUDING THE IMPLIED WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, AND NON-INFRINGEMENT. Note that certain jurisdictions do not countenance the exclusion of implied warranties; thus, this disclaimer may not apply to you.

[Copyright © 2006 Rockwell Automation. All rights reserved.](#)

Close

Print this Page