



How to Easily View 5% Settling Time in MatLab Itview

- 1) Right click on the plot and select: Characteristics > Settling Time

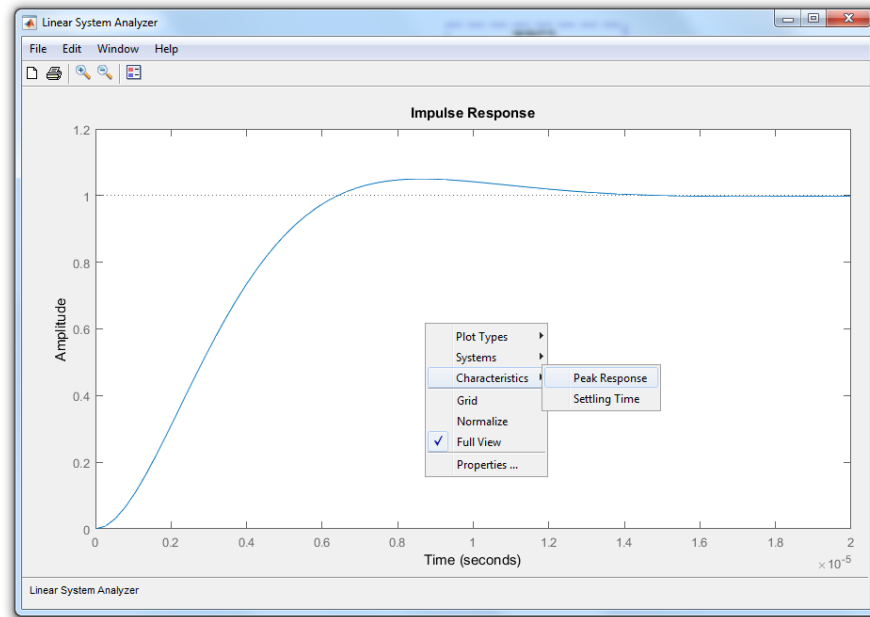

- 2) Double click on the graph. Go to: Options > Change “Show settling time within” to 5% > Close

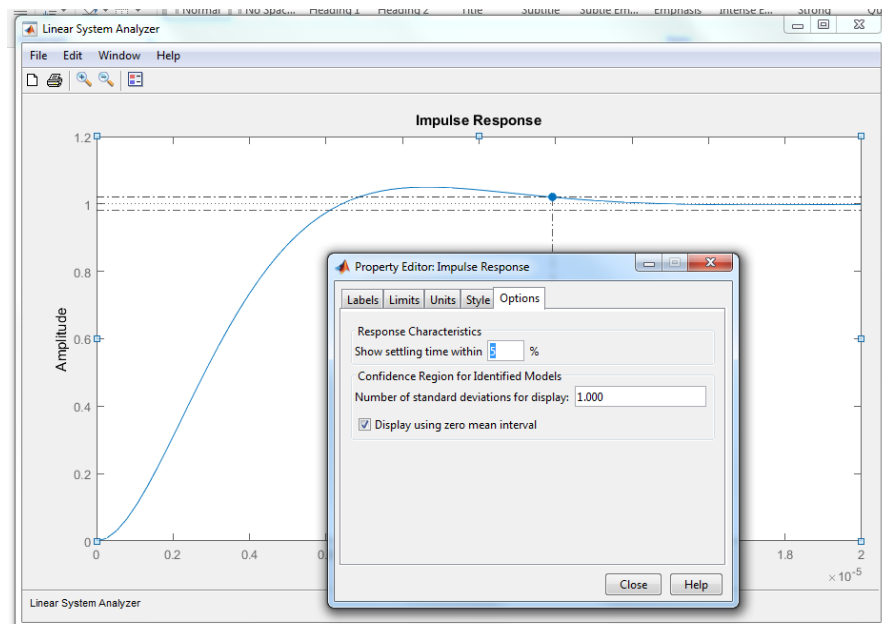

- 3) Mouse over the point to see the settling time, or double click it to keep it on the screen to screenshot.

