


Model 460, 461, 463

Shown: Model 240

- 1 Belt
- 2 Seat belt buckle tongue
- 3 Plastic rivet

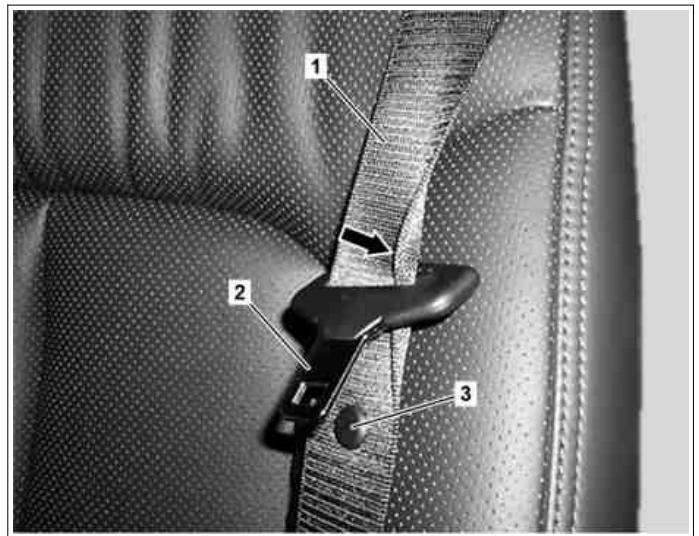

P91.40-3574-11

<1	Check		
1	Pull belt (1) all the way out and check for any signs of damage	<p>1 The seat belt and/or seat belt buckle must be replaced if damaged, not functioning correctly or defective. If the customer rejects replacement of a damaged seat belt or seat belt buckle, a corresponding remark should be made on the repair order.</p> <p>If complaint present</p> <p style="text-align: center;">↓</p> <p>Rectify problem subject to separate repair order.</p>	
2	Inspect seat belt (1) for twisting	<p>If complaint present</p> <p style="text-align: center;">↓</p> <p>Rectify problem subject to separate repair order.</p>	
3	Check blocking function of seat belt retractor by pulling out the belt (1) abruptly	<p>With seat belts with inertia reel.</p> <p>If complaint present</p> <p style="text-align: center;">↓</p> <p>Rectify problem subject to separate repair order.</p>	
4	Check belt buckle for damage and correct latching of belt tab (2)	<p>If complaint present</p> <p style="text-align: center;">↓</p> <p>Rectify problem subject to separate repair order.</p>	
5	Check plastic rivet (3) for damage and correct seat	<p>If complaint present</p> <p style="text-align: center;">↓</p> <p>Replace subject to separate repair order.</p>	