


**MODEL 463 as of model year 2013
/facelift 2012**

- 1 *Rear seat cover*
- 2 *Caps*
- 3 *Gas-operated strut*
- 4 *Pneumatic spring pin*
- 5 *Pin*
- 7 *Clip*

X54/23 *Left rear seat heater electrical connector*
X54/24 *Right rear seat heater electrical connector*

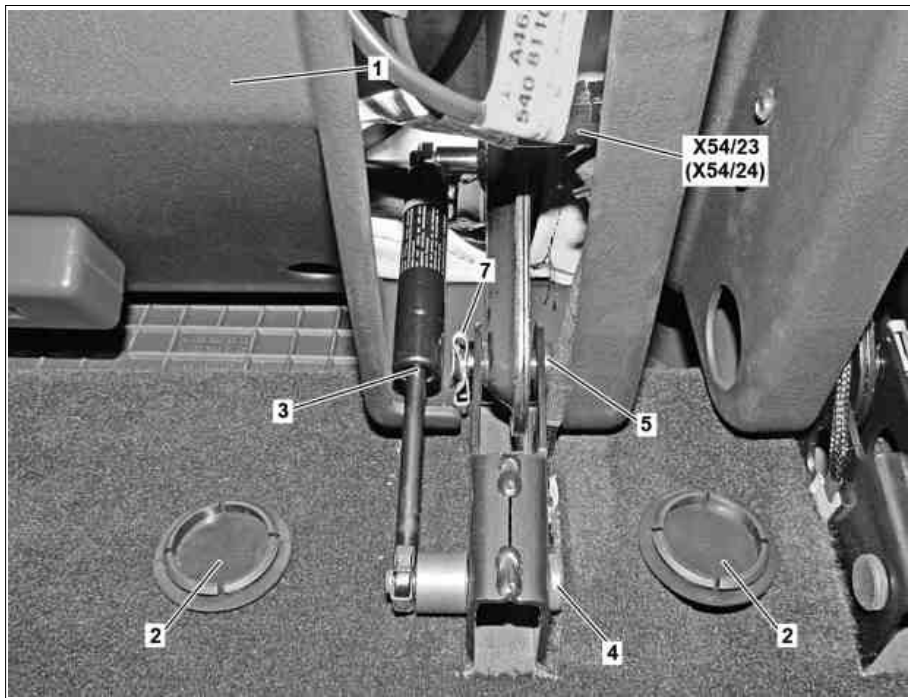

P91.12-3610-06

6 *Rear seat console*



P91.12-3608-11

	Remove/install		
1	Release rear seat and fold forward		
2	Remove covering caps (2)		
3	Disconnect left rear seat heater electrical connector (X54/23) or right rear seat heater electrical connector (X54/24)		
Danger!	Risk of injury caused by body parts being pinched or crushed when working on gas-filled struts under tension	Only remove or install gas-operated struts when device is in stress-relieved position and components are in proper working order and correctly secured.	AS00.00-Z-0012-01A
4	Unlock pin (4) of pneumatic spring (3) and remove	Installation: Install spacer sleeve.	
5	Detach clamp (7) and remove pin (5)		
6	Remove rear seat	Aid of helper required.	
7	Remove rear seat mounting console (6)	If necessary 	*BA91.12-P-1003-03J
8	Install in the reverse order		

Nm **Rear seats**

Number	Designation	Model 463
BA91.12-P-1003-03J	Bolt, rear seat mounting console to floor	Nm 63