


wena 3 Start guide

Name of each part

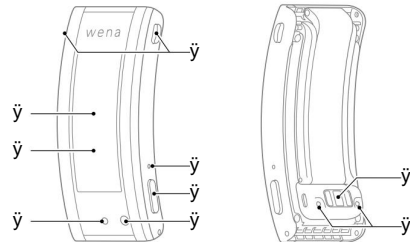

Touch display

Osai-fu-Keitai position

Notification LED

Buckle

Microphone*1

Power button

Light sensor (for
adjusting display brightness)

Heart rate sensor*2


Charging
terminal

*1 The mic hole is not a reset button. Be careful not to poke it with a sharp object. Be sure to also read the precautions in the reference guide regarding handling of the mic holes. In this device, the measured "pulse" and "pulse


*2 rate" are expressed as "heartbeat" and "heart rate".

STEP 1 : Charge

Charge using the included charging connector and USB Type-C® cable. Insert the charging connector into the charging terminal inside the band until it clicks, and attach it as shown in the illustration below.

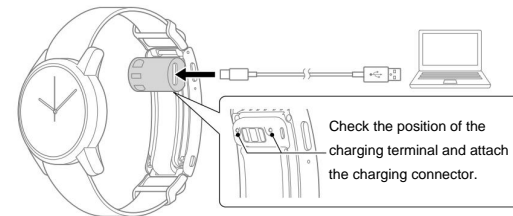

When removing the charging connector, push up the (triangle mark) on the opposite side of USB Type-C® terminal of the connector with the pad of your thumb.

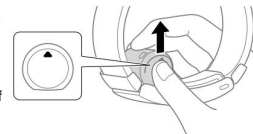

STEP 2 : Install the app

Install the "wena 3 app"* for this unit on your smartphone from the website below, and start the app. Follow the on-screen instructions to make the initial settings.

*There is no compatibility with the conventional "wena app". It is necessary to install the "wena 3 app" for this unit.



<http://wena.jp/downloads/apps.html>

3-TAD-032-01(1)

©2020 Sony Corporation

Printed in Japan




* 3 T A D 0 3 2 0 1 *

(1)

STEP 3 : Pair with smartphone

(1) Turn on the power of this unit (2) Start the wena 3 app (3) Follow the tutorial to connect with your smartphone Enter the 6-digit passkey displayed on this unit into your smartphone to connect.



Follow the app tutorial to complete the initial setup.


basic operation

Power on/off Power on: Press

and hold the power button for 3 seconds (6 seconds at first startup).

Power off*: Go to the tool screen from the home screen of the device, and tap "Settings" → "Power off" → "OK".

*If you turn off the power in this way, the electronic money function can be used until the battery runs out. For information on how to turn off the power when not in use for an extended period of time, refer to the Reference Guide.

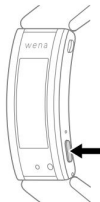

Using functions/changing settings

The display of this unit is a touch panel. By tapping or swiping the display with your finger, you can use each function, check notifications, schedules, activity logs, and change settings.

Make an electronic money payment*

Set up e-money payment and hold the machine over the payment terminal.

*How to set up e-money payment depends on the type of e-money you use. For details on how to set up, refer to the Help Guide.



If the operation of this unit is unstable, or if you want to delete setting information such as activity logs and pairing, initialize the unit. If you want to keep an activity log that has not been synced with the app, sync the device with the app before initializing. For the initialization method, refer to the reference guide. Note that the electronic money settings will not be deleted even if the initialization is performed.

Check how to use in the help guide

"Help Guide" is an instruction manual provided on the Internet. Explains how to operate the machine, how to use it in detail, and how to deal with problems. Please view on your smartphone or computer.



<http://wena.jp/supports/helpguide.html>

For frequently asked questions and repairs, please visit the wena support page.
<http://wena.jp/support.html>

