




ThermoStudio

Installation and License Guide

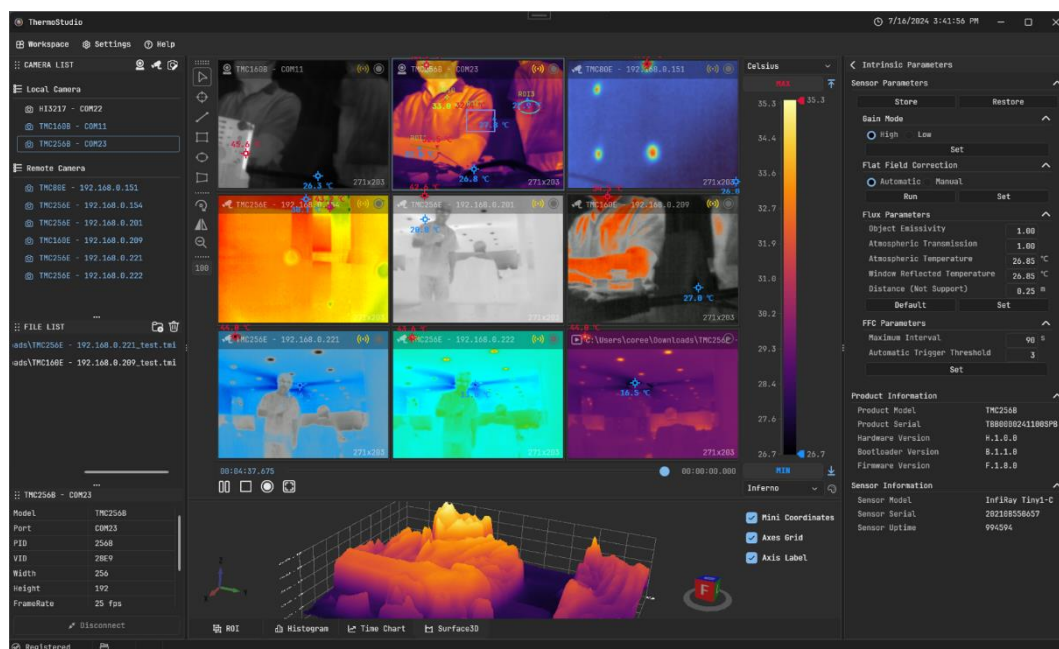




1. Installation

To use ThermoStudio, download and install the latest version of the msi installation package file from GitHub.





- ThermoStudio GitHub Link:
<https://github.com/ThermoEye/ThermoStudio3>
- Installation Package Download Link:
<https://github.com/ThermoEye/ThermoStudio3/releases>

v3.X.X Latest Compare

 jaembong released this 2 weeks ago  v3.2.4  cb7842c

- fixed an issue where the ROI logging was not working correctly


▼ Assets 4

 ThermoStudioSetup_v3.2.4_x64.msi	141 MB	2 weeks ago
 ThermoStudioSetup_v3.2.4_x86.msi	121 MB	2 weeks ago
 Source code (zip)		Dec 18, 2024
 Source code (tar.gz)		Dec 18, 2024


2. License Registration (When using for the first time)

When you first install ThermoStudio, only some of the features are available. Therefore, to use all features without restrictions, you should register the license issued upon purchase of the product by following the procedure below.


- ① Run the installed ThermoStudio and select **Help > License** from the top menu.

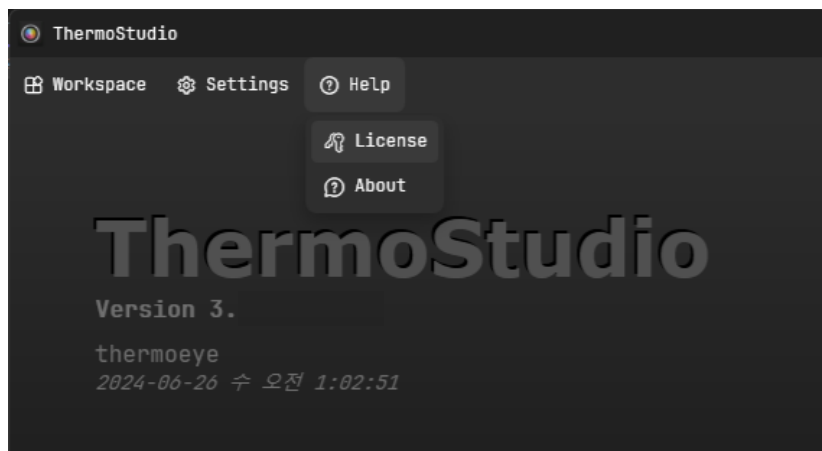


- ② In the License view, go to **Activate > Online Activation** menu.

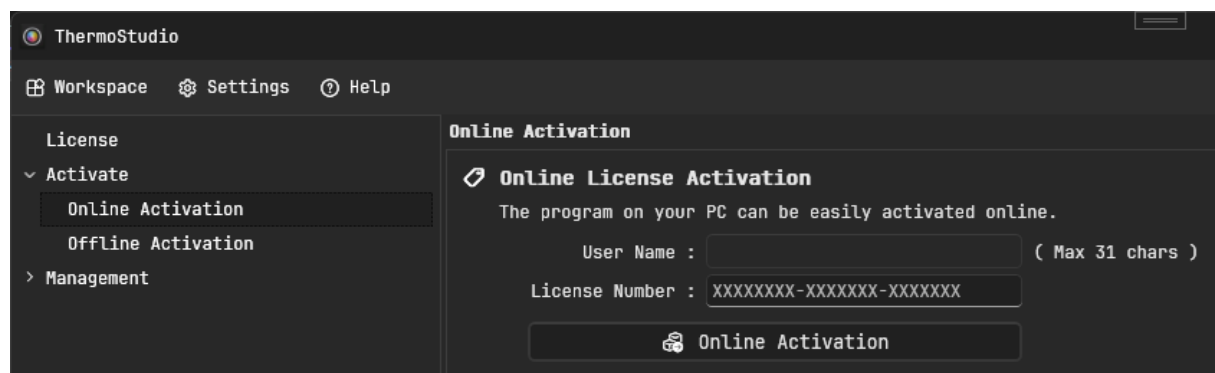

- ③ Enter your **User Name** and the issued **License Number** and click the **Online Activation** button.

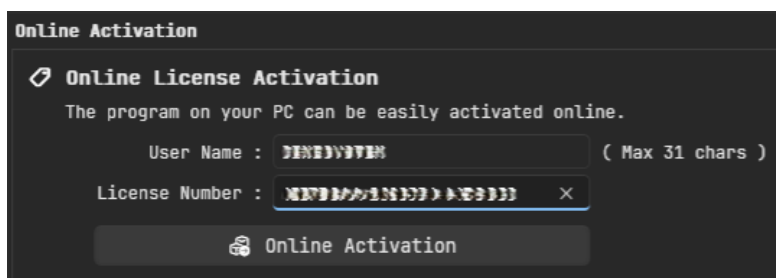


- ④ Once license registration is complete, you can check the registration information as shown below.

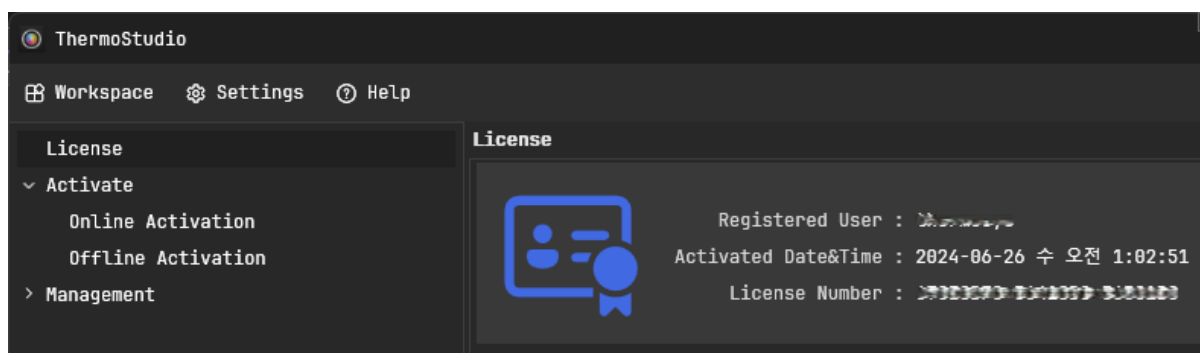

3. License Transfer


The license can only be registered and used on one PC. If you want to install and use ThermoStudio on another PC, you should transfer the license by following the steps below.

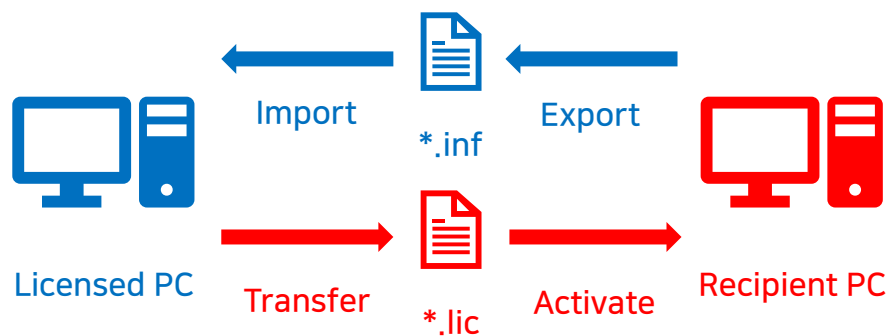


< License transfer procedure concept diagram >

- Licensed PC: An existing PC with ThermoStudio installed and licensed
- Recipient PC: A new PC to install ThermoStudio and transfer the license
- *.inf: Activation information file
- *.lic: License file

- ① Run ThermoStudio installed on the **Recipient PC** which you want to transfer the license, select **Help > License** from the top menu, and then go to **Management > Transfer License** menu in the License view.

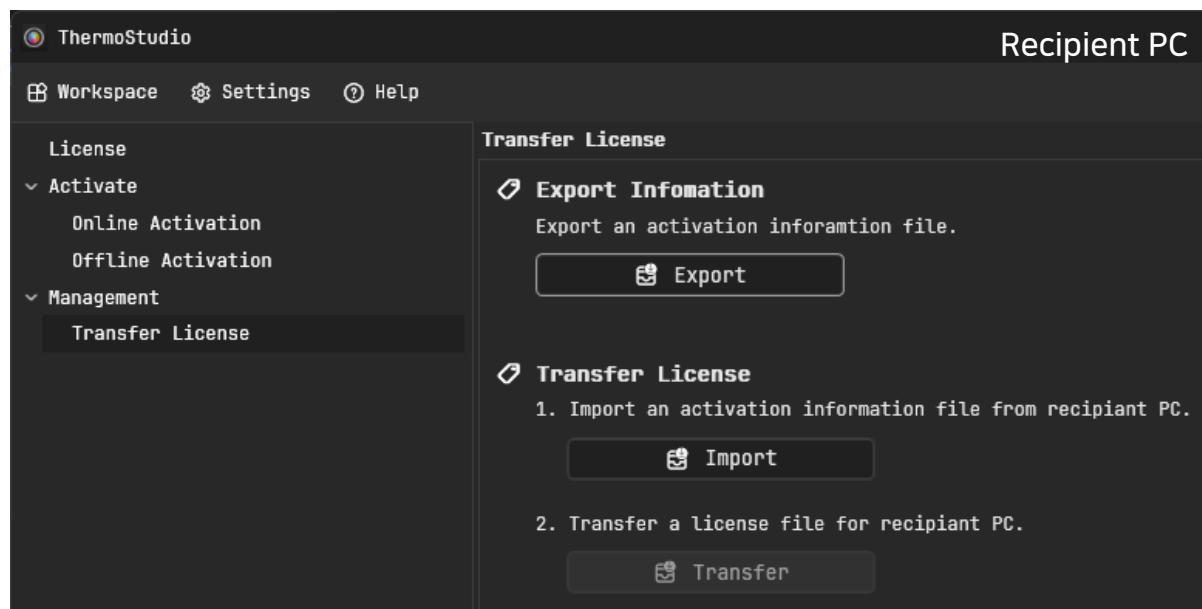

- ② Click the **Export** button and enter the path and name of the **inf** file to be created.

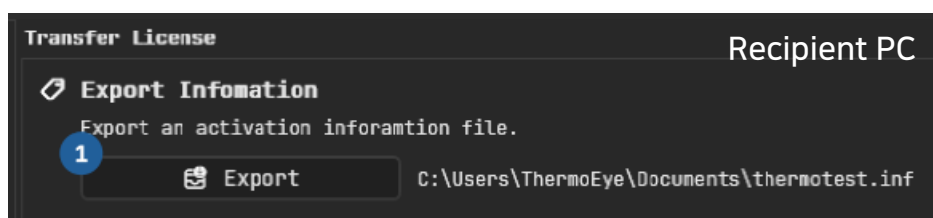

Licensed PC



*.inf




Export





Recipient PC


- ③ Copy the generated **inf** file to the **Licensed PC** you are currently using. Then run ThermoStudio and select **Help > License** from the top menu, then go to **Management > Transfer License** menu on the License view.

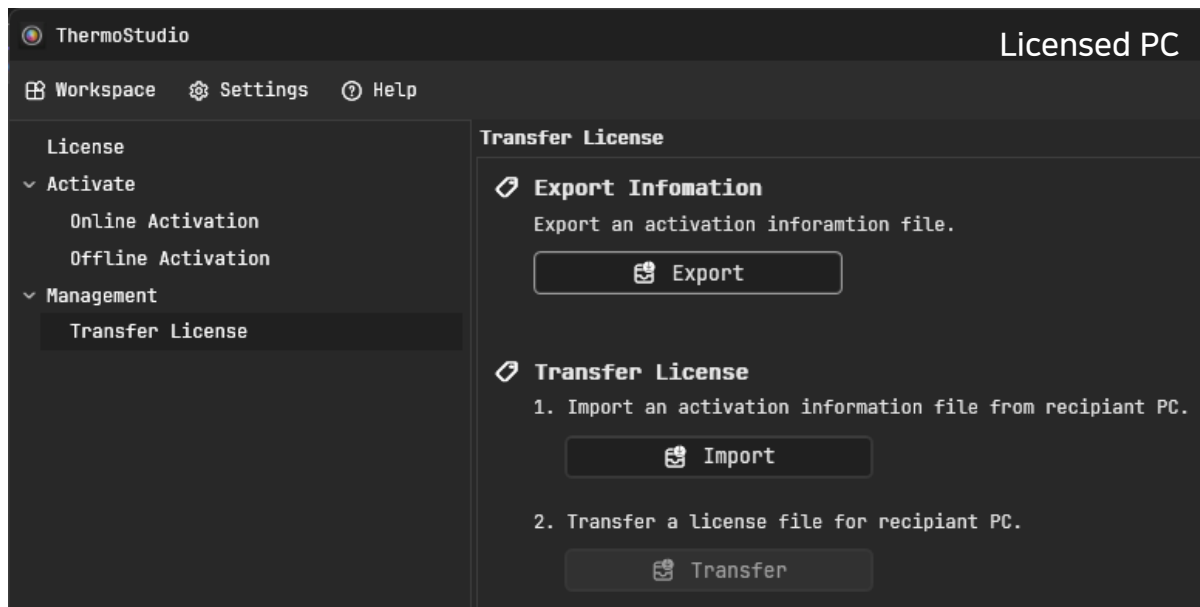


- ④ Click the **Import** button and select the **inf** file. Then click the activated **Transfer** button to generate the **lic** file.

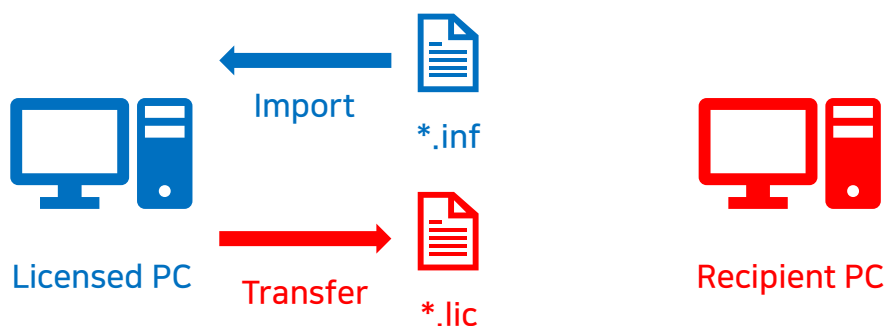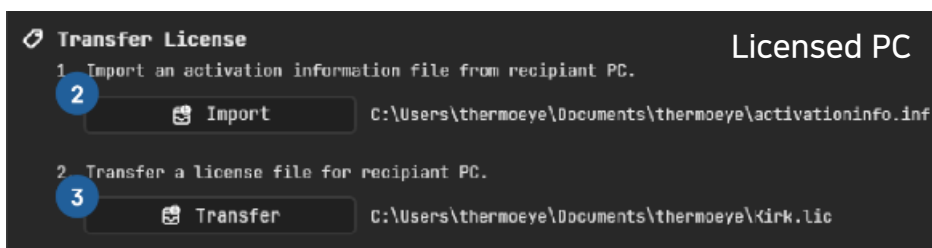

- ⑤ Copy the generated **lic** file back to the **Recipient PC**. Then run ThermoStudio and select **Help > License** from the top menu, then go to **Activate > Offline Activation** on the License view.

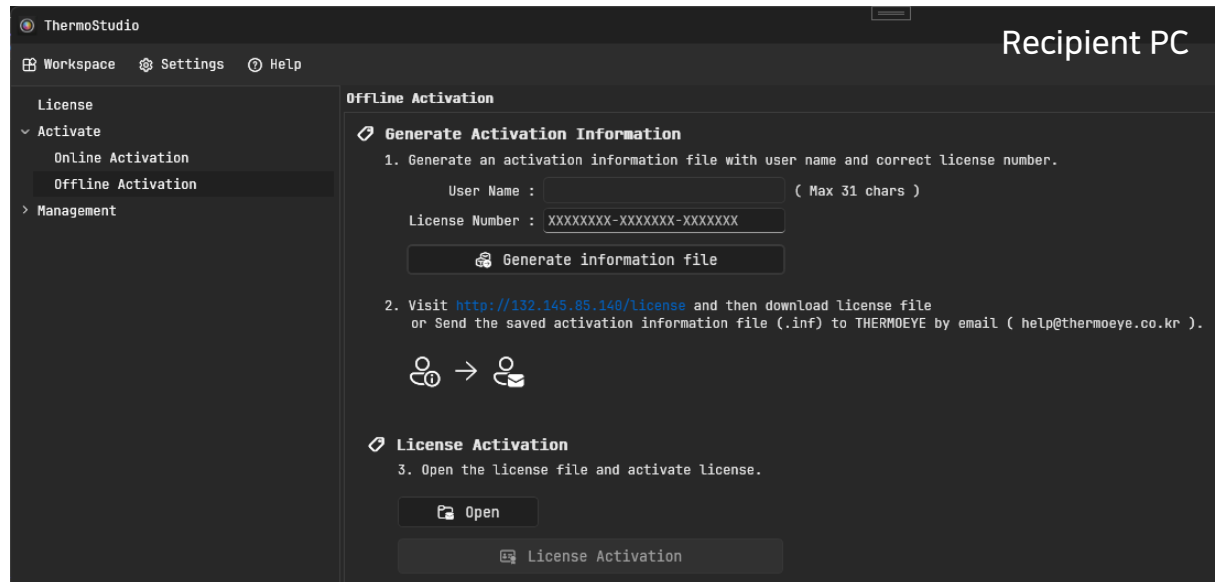

- ⑥ Click the **Open** button and select the **lic** file. Then click the **License Activation** button to complete the license transfer to the **Recipient PC**.

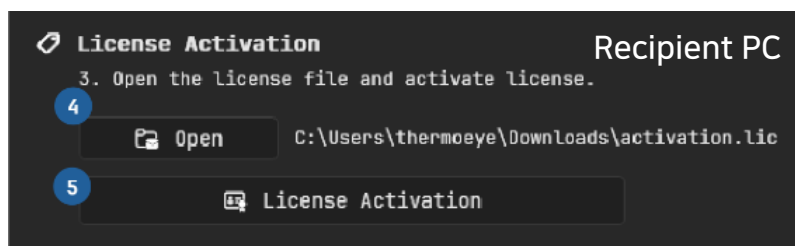

Licensed PC



*.lic



Activate



Recipient PC