


0	1	2	3	4	5	6	7	8	9
POS		INFO				POS			
DSDX 451									
	SYMB					bl.nr	klem	CH	
DX215.33							I33.I		
DX215.34							I34.I		
DX215.35	AF5_LSH2	hoogniv doorloop airsl AF5_9				002-26	I35.I		
DX215.36	AF5_LSH3	uitloop elev AF5_10A				002-26	I36.I		
DX215.37	AF5_LSH5	inloop elev AF5_10A				002-26	I37.I		
DX215.38	LLZ2_SN1_PB_RS	Druknop Reiniging stalennemer				002-26	I38.I		
DX215.39	LLZ2_SN1_PB_VS	Druknop voorstaal nemen stalennemr				002-26	I39.I		
DX215.40	LLZ2_SN1_PB_VV	Druknop volledige vracht stalennemer				002-26	I40.I		
DX215.41	LLZ2_SN1_PB_STP	stopknop stalennemer				002-26	I41.I		
DX215.42							I42.I		
DX215.43							I43.I		
DX215.44							I44.I		
DX215.45							I45.I		
DX215.46							I46.I		
DX215.47							I47.I		
DX215.48							I48.I		
DX215.49							I49.I		
DX215.50							I50.I		
DX215.51							I51.I		
DX215.52							I52.I		
DX215.53	LLZ2_SN1_H_RS	signaallamp Reiniging stalennemer				002-26	O53A-B		
DX215.54	LLZ2_SN1_H_VS	signaallamp voorstaal nemen stalennemr				002-26	O54A-B		
DX215.55	LLZ2_SN1_H_VV	signaallamp volledige vracht stalennemer				002-26	O55A-B		
DX215.56	LLZ2_SN1_SVA_SN	klep aansturing stalennemer				002-26	O56A-B		
DX215.57							O57A-B		
DX215.58							O58A-B		
DX215.59							O59A-B		
DX215.60							Q60A-B		
DX215.61							Q61A-B		
DX215.62							Q62A-B		
DX215.63							Q63A-B		
DX215.64							Q64A-B		

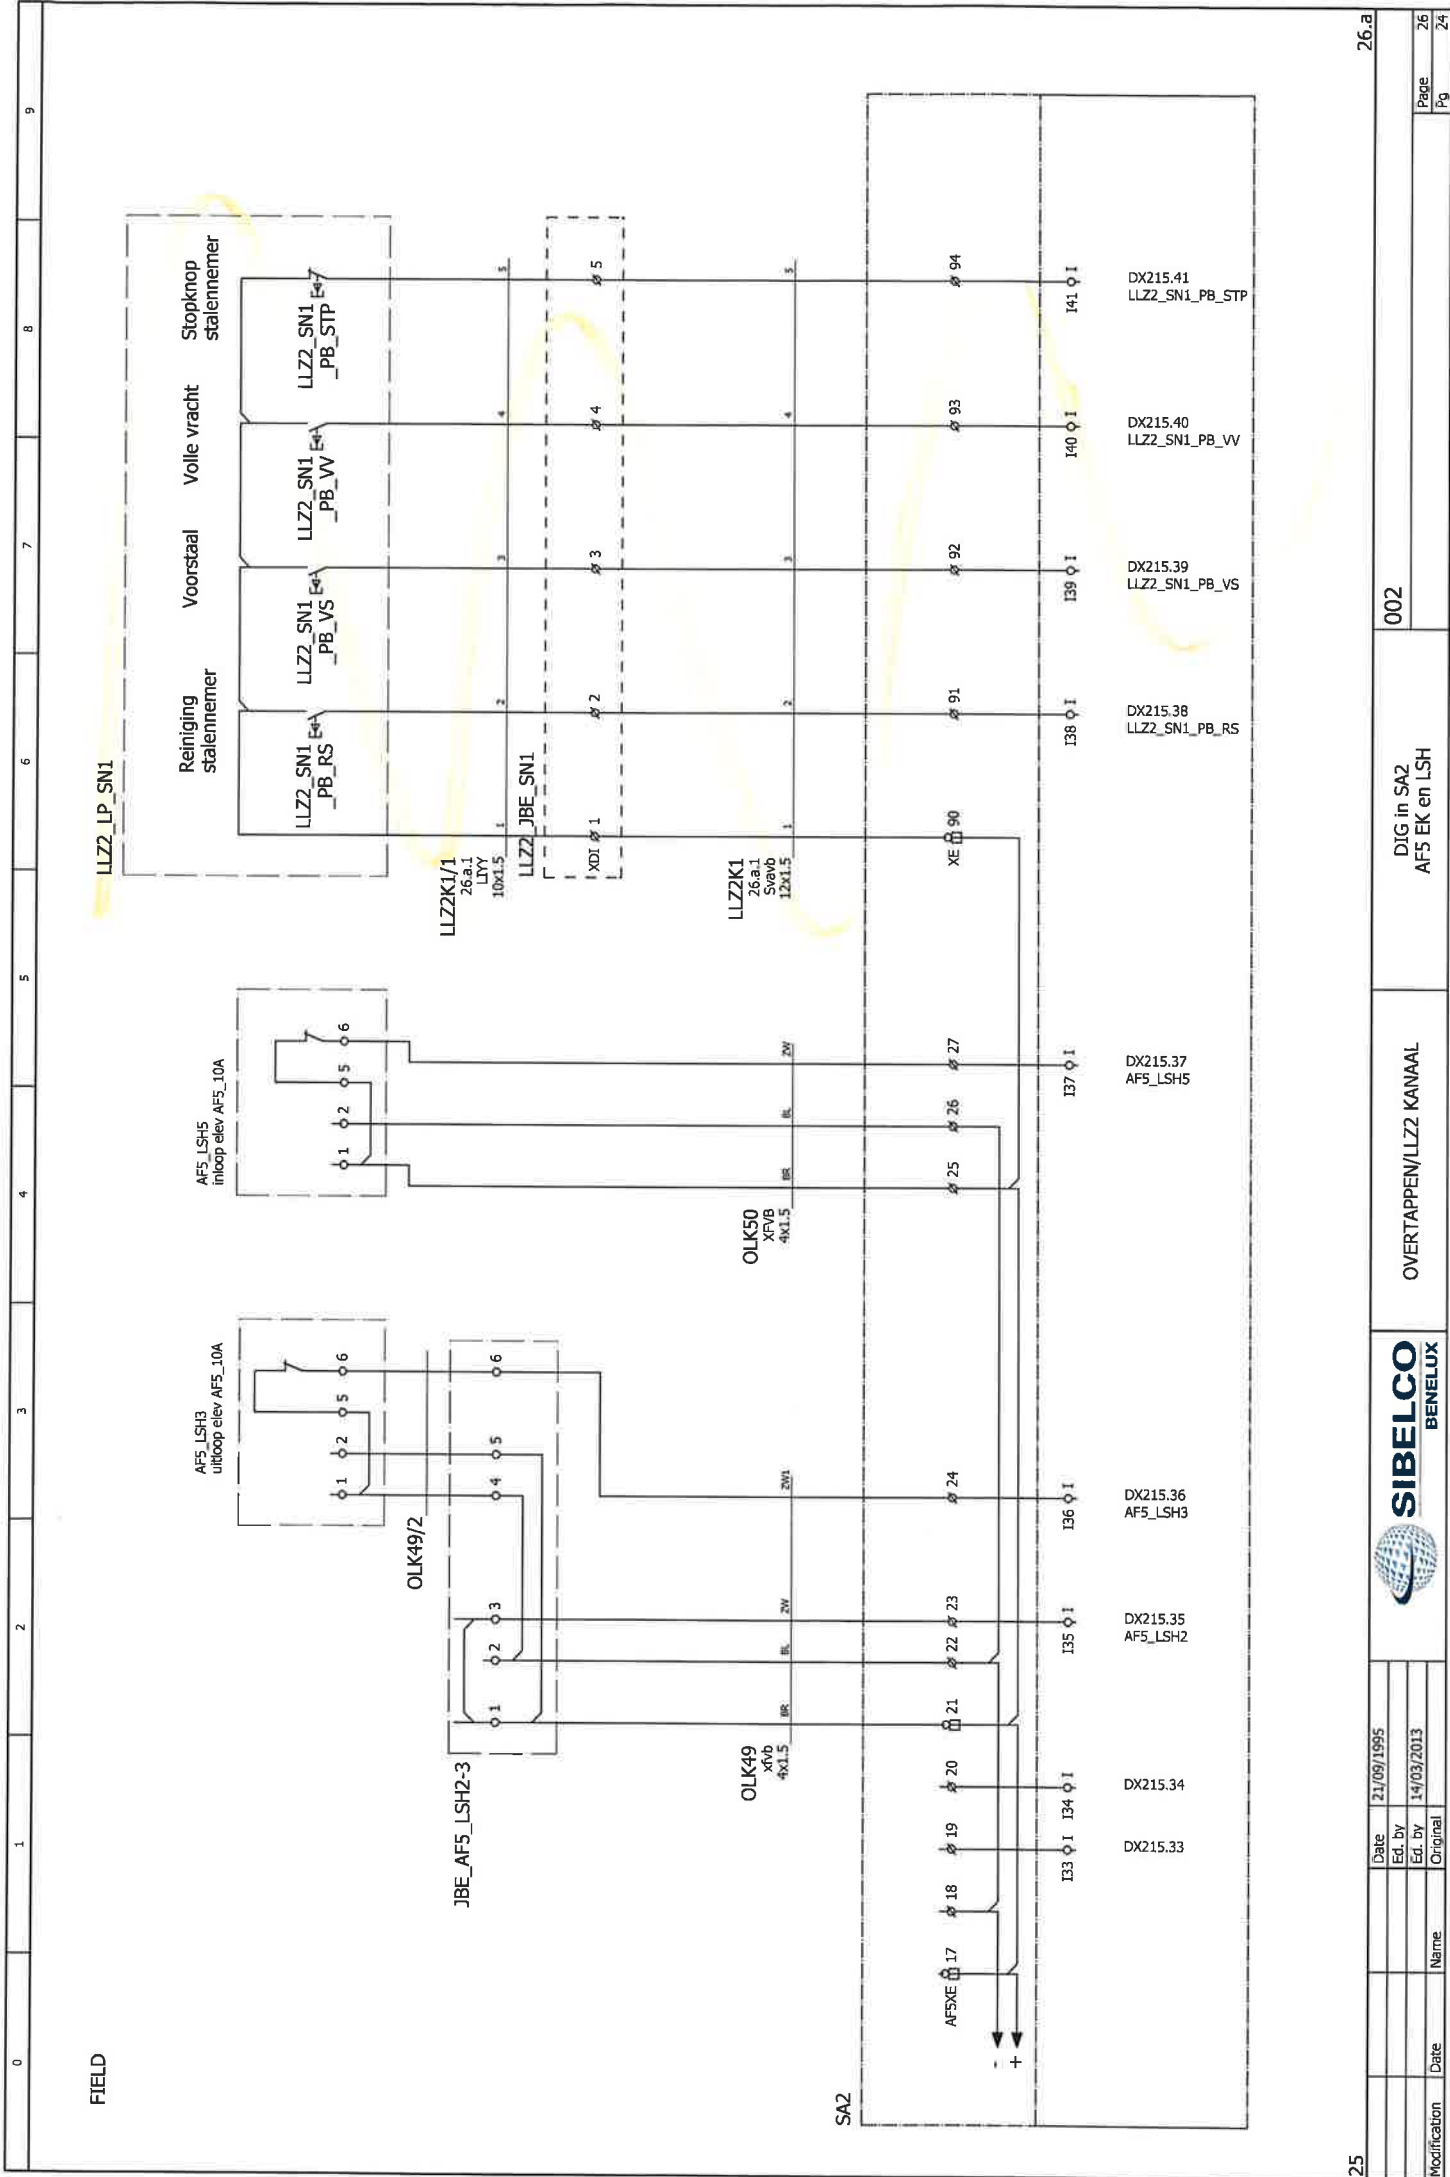

30

