



2 Routine Procedures and Maintenance

2.1 Replacing the HIP™ Ultra cleaning solution


To replace the cleaning solution, follow these steps:

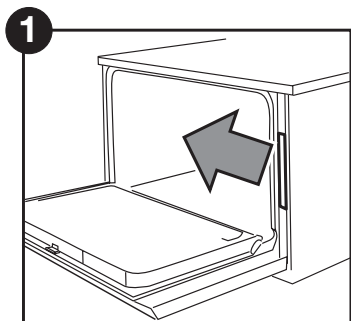


Turn the power OFF, open the door and pull out the chemical drawer.

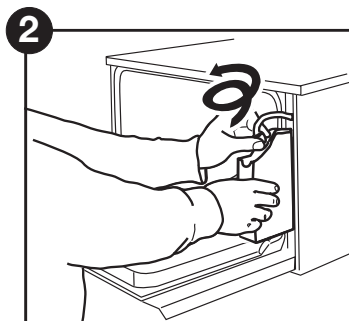


Disconnect the cleaning solution connector.

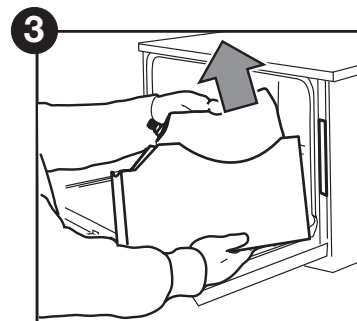


Remove the empty cleaning solution bag and discard or recycle it.

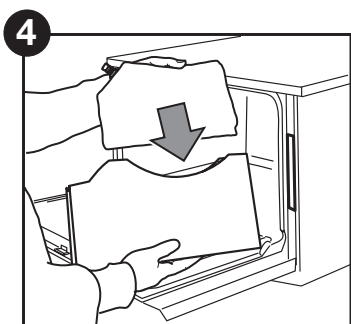

Place a new bag in the chemical drawer.

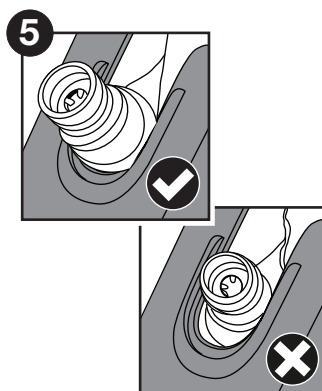


Ensure the nozzle is in the correct position.

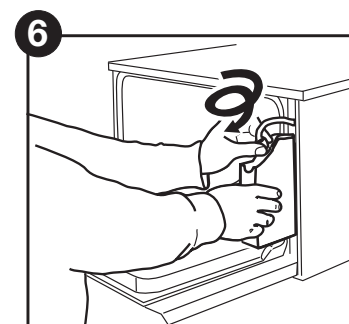

Connect the new bag, close the door and power ON the unit.

To prime the cleaning solution dosing pump, press the water softener/detergent icon on the main screen. In the water softener/detergent screen, press the red X next to “Detergent”. The unit will prime the dosing system and a green check mark will appear in place of the red X when it is ready for use.

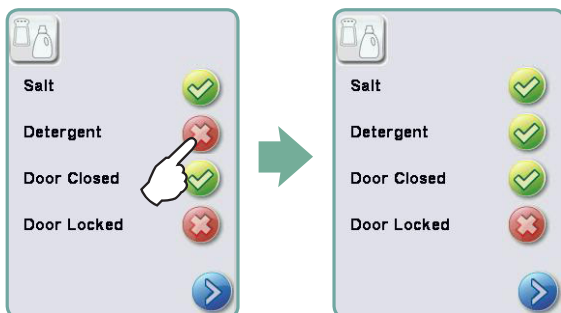

NOTE: The system can also be primed by simply starting a cycle and selecting “Detergent Replaced”, when prompted.

NOTE: A cycle will not start with the red X next to the “Detergent” indicator.