

# Tech West Ultra Clean Compressor LUBRICATED


(Lubricated Single and Dual)

## QUICK MAINTENANCE

 **1. Always disconnect power before performing any maintenance.**


### 2. Replace Dirty oil

- Drain oil from port ("A") of each motor.
- Replace drain plug and fill oil reservoir using the fill port ("B") (TW part # CO-100)
- Use the window ("C") to ensure oil is filled to the proper level.

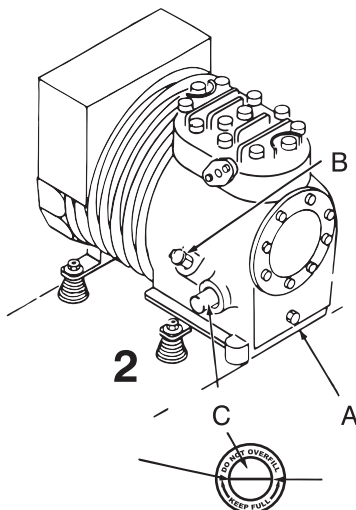


### 3. Change Coalescing Filter

- Push up on bowl ("D") to Remove Coalescing Filter from the attaching bracket
- Twist cannister to the left ("E") and pull down to expose the filter.
- Remove coned restraining nut ("F") below filter element and remove old filter.
- Slide New filter element (TW part# CFEO-375) into place and replace coned restraining nut.
- Reverse steps a and b to re-attach cannister to the bowl and then replace entire Coalescing Filter assembly back into it's bracket.

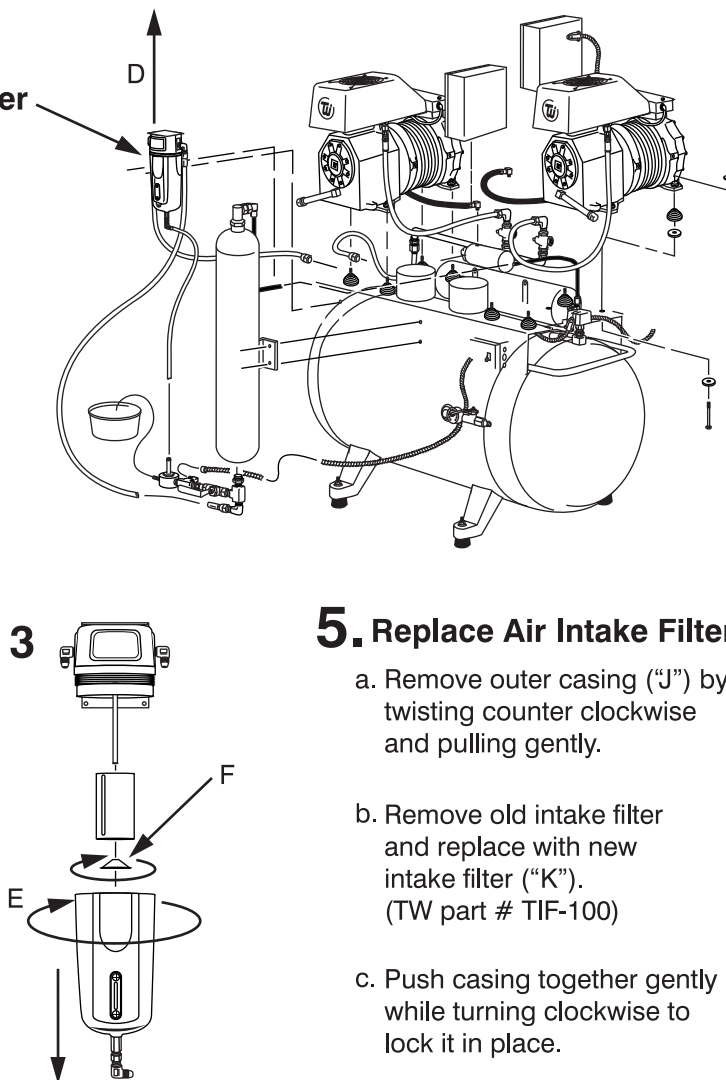

### 4. Desiccant Dryer Maintenance

- Remove Desiccant Air Dryer Assy. and bracket ("G") from the compressor.
- Remove top filter ("H"). Turn counter-clockwise and lift. Remove hose assy. from bottom ("I").
- Turn Dessicant tank upside down and remove all contents.
- Add new filtering crystals to tank. Reverse steps a-c to complete maintenance of Desiccant Dryer.

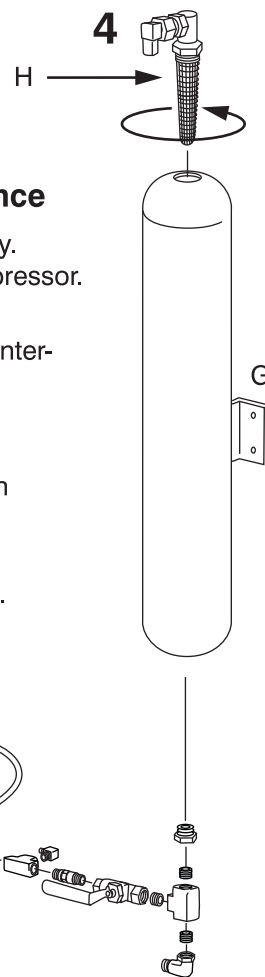

### 5. Replace Air Intake Filter

- Remove outer casing ("J") by twisting counter clockwise and pulling gently.
- Remove old intake filter and replace with new intake filter ("K"). (TW part # TIF-100)
- Push casing together gently while turning clockwise to lock it in place.

