

SECTION : 501-05 Interior Trim and Ornamentation

VEHICLE APPLICATION : 2008.0 Falcon

CONTENTS

SPECIFICATIONS

Torque Specifications.....	501-05-1
----------------------------	----------

DESCRIPTION AND OPERATION

Interior Trim and Ornamentation.....	501-05-2
Luggage Compartment Interior Trim System.....	501-05-2

REMOVAL AND INSTALLATION

A - Pillar Trim Panel	501-05-3
B - Pillar Upper and Lower Trim Panel	501-05-3
C - Pillar Trim Panel.....	501-05-3
Front Door Trim Panel	501-05-4
Rear Door Trim Panel	501-05-5
Quarter Trim Panel - Ute.....	501-05-6
Loadspace Trim Panel - Ute	501-05-6
Parcel Shelf	501-05-6
Headliner - Sedan.....	501-05-7
Headliner - Ute.....	501-05-7
Luggage Compartment Cover Lower Back.....	501-05-7
Luggage Compartment Quarter Trims.....	501-05-9
Luggage Compartment Load Floor Carpet.....	501-05-9
Spare Wheel Board	501-05-9
Package Tray Insulator	501-05-10
Decklid Trim	501-05-10
Hip Bolster	501-05-10
Front Door Water Shield	501-05-11
Front Inner Scuff Plate.....	501-05-11
Front Outer Scuff Plate	501-05-12
Cowl Scuff Plate	501-05-12
Rear Inner Scuff Plate	501-05-12
Sunvisor.....	501-05-12
Front Carpet.....	501-05-13



SPECIFICATIONS

Torque Specifications

Description	Nm
B-Pillar trim panel screws	1.5-1.9
Sunvisor screws	1.7
Sunvisor check block	1.7



DESCRIPTION AND OPERATION

Interior Trim and Ornamentation

Interior Trim

The interior trim consists of the following components:

- * A-pillar lower trim panels
- * B-pillar trim panels
- * C-pillar trim panels
- * Front door sail panels
- * Front door scuff plate trim panels
- * Front door trim panels
- * Headliner
- * Rear door sail panels
- * Rear door scuff plate trim panels
- * Rear door trim panels
- * Front quarter trim panels
- * Sun visors
- * Window control switch panel cover

Luggage compartment Interior Trim System

The luggage compartment consists of the following trim components:

- * Cover lower back
- * Quarter trims
- * Load floor carpet
- * Spare wheel board
- * Package tray insulator
- * Deckled trim (Hi series only)




REMOVAL AND INSTALLATION

A- Pillar Trim Panel

Removal

1. Follow removal instructions as shown in figure.
2. Ensure the tether clip is inspected after A-pillar trim panel removal and replace if damaged.

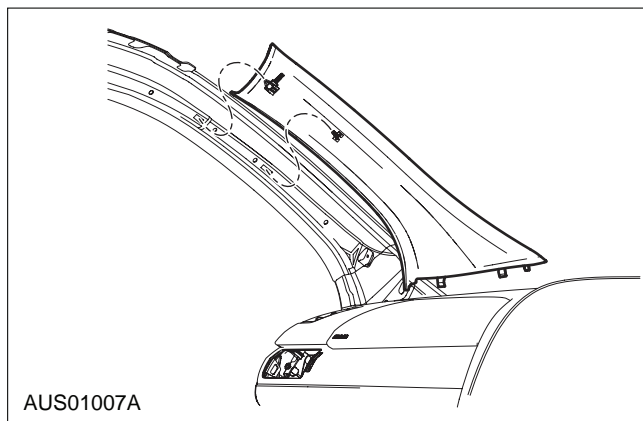

Item	Description
1	Moulding assy w/shield garn
2	Panel body side LH

Installation


1. Reverse the removal procedure.

B - Pillar Upper & Lower Trim Panel

Removal

1. Remove the front seat track covers. For additional information, refer to Section 501-10.
2. Remove the front inner scuff plate. For additional information, refer to the procedure in this section.
3. Remove the front seat belt lower anchor bolt.
4. Remove the quarter panel lower trim.
5. Remove the front seat belt upper anchor bolt.

6. Remove the B - pillar upper trim cap and retaining bolt.

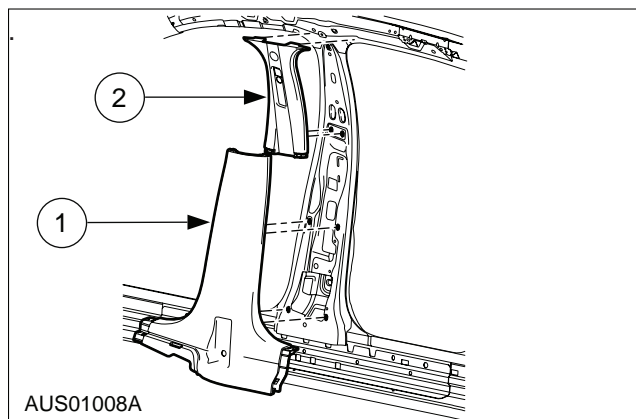

Item	Description
1	B - pillar lower trim panel
2	B - pillar upper trim panel

7. Remove the B - pillar upper trim panel.


Installation

1. Reverse the removal procedure.

C - Pillar Trim Panel

Removal

1. Follow removal instructions shown in figure.
2. Ensure the tether clip is inspected after C-pillar trim panel removal and replace if damaged.

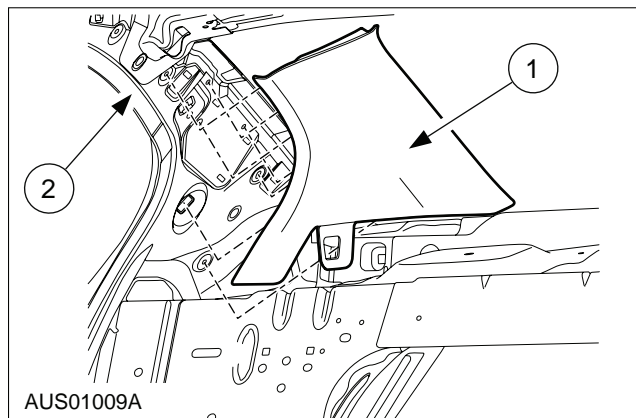

Item	Description
1	Quarter trim panel - upper
2	Quarter panel outer

Installation


1. Reverse the removal procedure.




Front Door Trim Panel

Removal

1. Taking care not damage the door trim upper, insert a screw driver into the serviceability hole at forward edge of decorative spear and carefully slide along parallel to the length of the spear. The thickness of the shaft of the screw driver should be enough to disengage the forward spear clip. **Caution: Using the screw driver as a lever may cause the clip the break.**

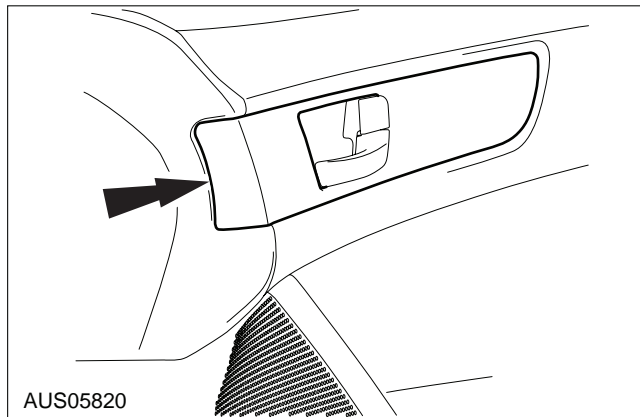


2. Once the first clip has been disengaged, work slowly by hand from front to back to remove the decorative spear from door trim upper. There are 3 clip fixings and 1 rearward locating peg. After the 3 clips have been disengaged – slide the spear forward to remove locating peg. **WARNING: Pulling the spear abruptly may cause the spear to break or become damaged.**

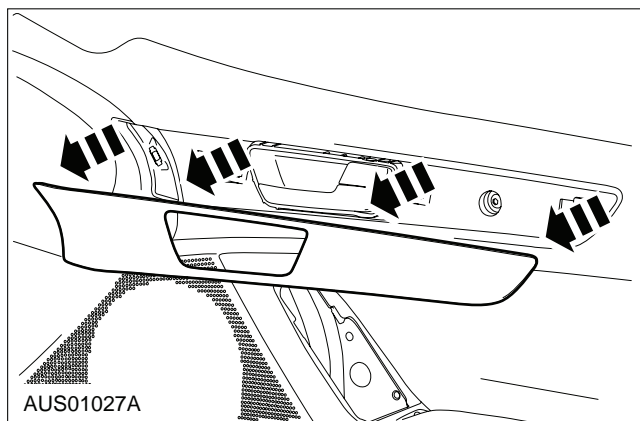


3. Remove soft feel insert from pull cup (where fitted).
4. Remove screw cap (where fitted) & screw (x1) from pull cup.


5. Remove pull cup from door trim.

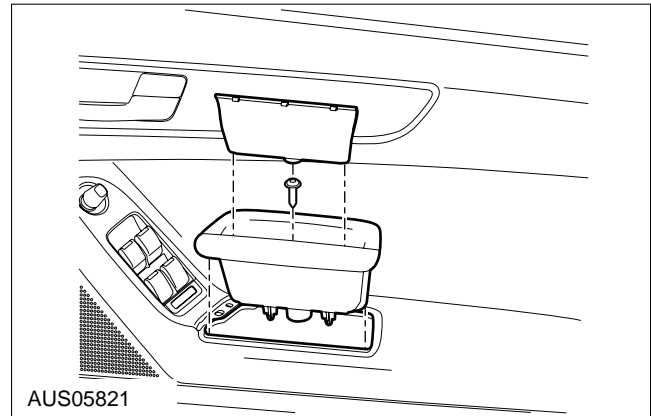

6. Remove the power window switch/es from the door trim and disconnect wiring.

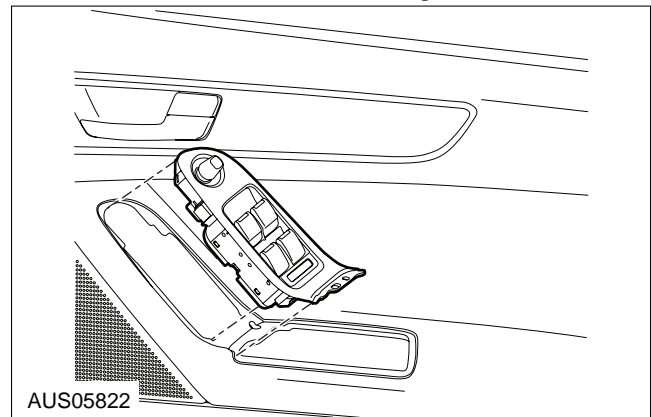


7. Remove 4 x door trim retaining screws.

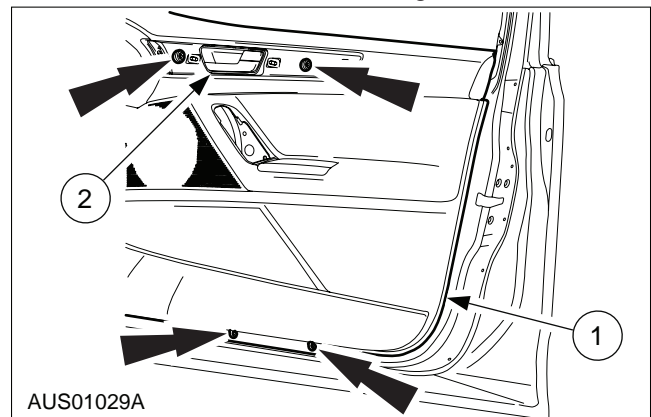

8. By starting at the lower edge and working up, disengage the door trim retention clips by pulling door trim away from sheet metal. **NOTE: Pull along the edge of the trim; do not pull the centre of the door.**
9. When trim is loose, disconnect the cable from the back of the interior release handle.



10. Disconnect any remaining electrical connectors (if required) and remove door trim panel assembly.

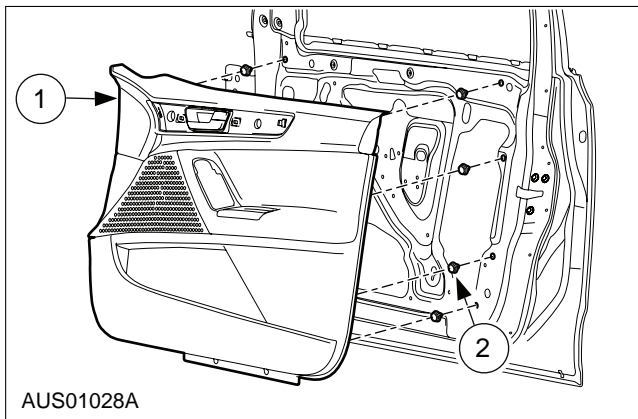

Installation


1. Reverse removal procedure.

Rear Door Trim Panel

Removal


NOTE: Rear door trim with pull cup / window winder. For rear door trim with power windows, refer to Front Door Trim notes for removal and installation.

1. Remove screw cap & screw (x1) from rear interior release handle.

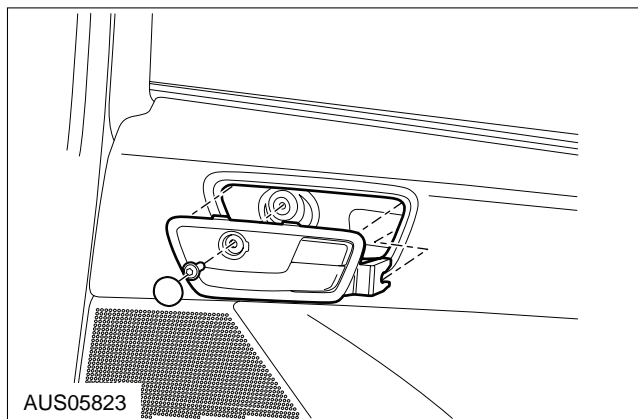


2. Remove soft feel insert from pull cup (where fitted).
3. Remove screw cap (where fitted) & screw (x1) from pull cup.


4. Remove pull cup from door trim.

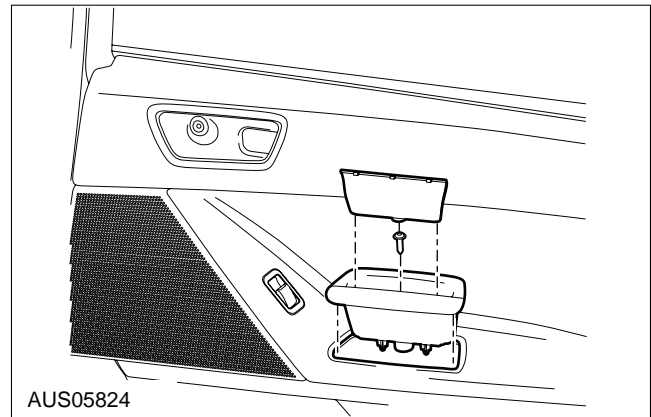

5. Remove power window switch and disconnect wiring.

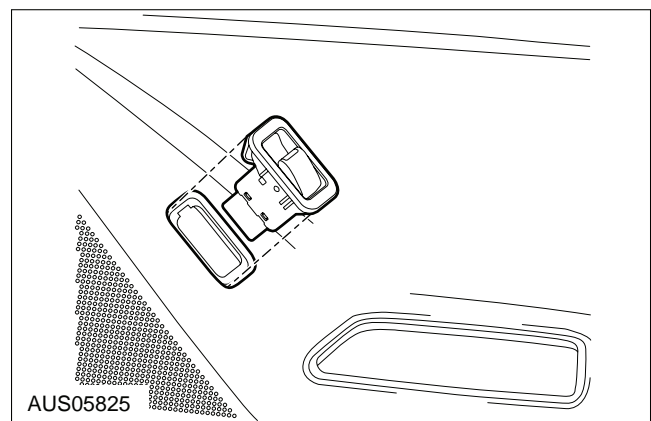

6. Remove 2 lower screw fixings.
7. Remove rear upper screw fixing.

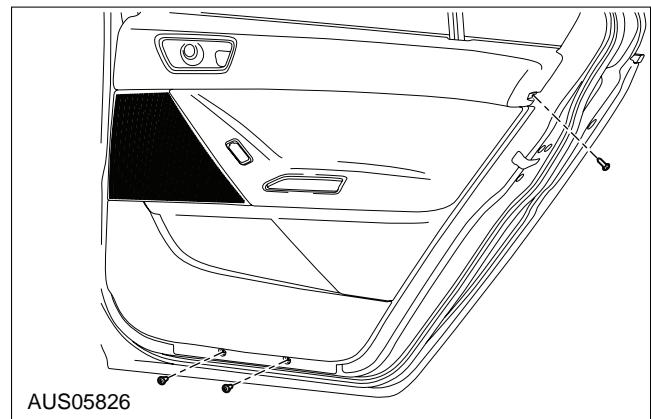


8. By starting at the lower edge and working up, disengage the door trim retention clips by pulling door trim away from sheet metal.

NOTE: Pull along edge of trim; do not pull the centre of the door.




9. Remove door trim panel assembly.

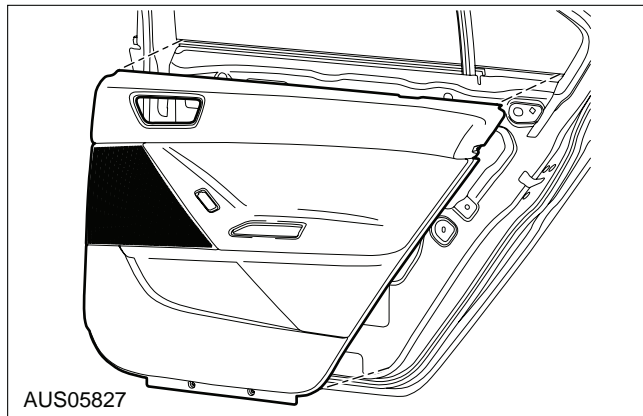**Installation**

1. Reverse removal procedure

Quarter Panel Trim - Ute**Removal**

1. Remove the front seat track covers. For additional information, refer to Section 501-10.
2. Remove the front inner scuff plate. For additional information, refer to the procedure in this section.
3. Remove the front seat belt lower anchor bolt.
4. Remove the quarter panel lower trim.
5. Remove the front seat belt upper anchor bolt.
6. Remove the quarter panel upper trim cap and retaining bolt.

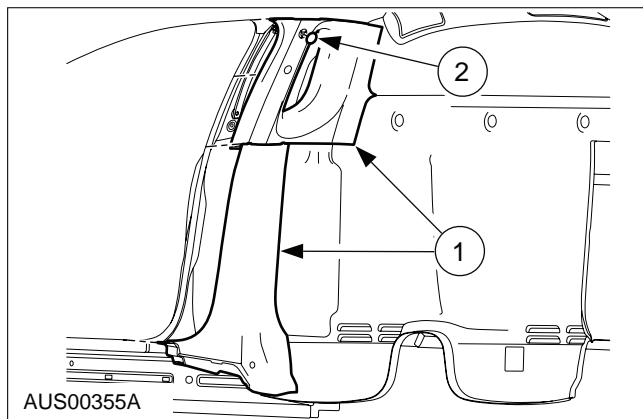

Item	Description
1	Quarter panel trims
2	Locator plug


7. Remove the quarter panel upper trim from the vehicle.

Installation

1. Reverse the removal procedure.

Loadspace Trim Panel - Ute**Removal**

1. Remove the quarter panel trim. For additional information, refer to the procedure in this section.
2. Carefully remove the 3 fir tree clips retaining the loadspace trim panel.

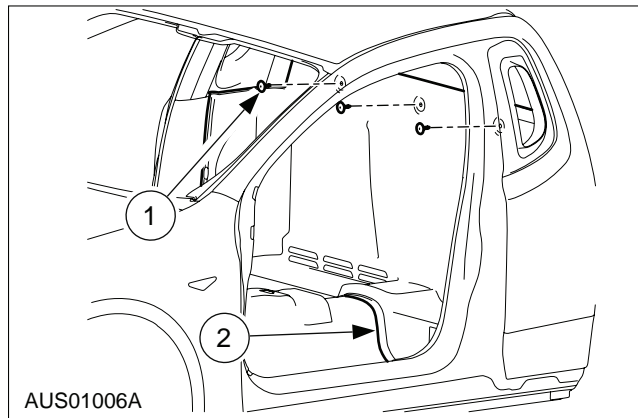

Item	Description
1	Fir tree clips
2	Loadspace trim panel


3. Move the front drivers seat fully forward.
4. Maneuver the loadspace trim panel from the vehicle through the drivers door.

Installation

1. Reverse the removal procedure.

Parcel Shelf Trim**Removal**

1. Carefully remove the 5 fir tree clips.

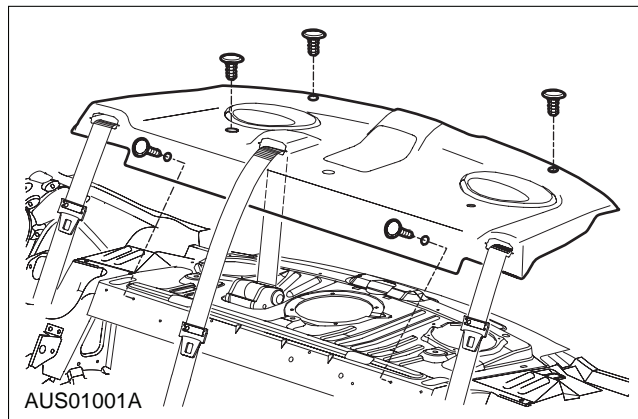

2. Remove the child seat anchor bolt.
3. Remove the left and right rear seat bolster. For additional information, refer to Section 501-10.
4. Remove the 3 seat belt lower anchor bolts.



5. Remove the 3 seat trims from the parcel shelf.
6. Remove the parcel shelf trim, and withdraw the seat belts from the parcel shelf trim.


Installation

1. Reverse the removal procedure.

Headliner - Sedan

Removal

1. Remove grab handles and hook.
2. Remove sunvisors and check blocks. Refer to removal of sunvisor in this section.
3. Remove A, B, C pillar interior trim panels. Refer to the procedures in this section.
4. Remove dome light lens and body and disconnect wiring.
5. Remove the headliner via a door opening.

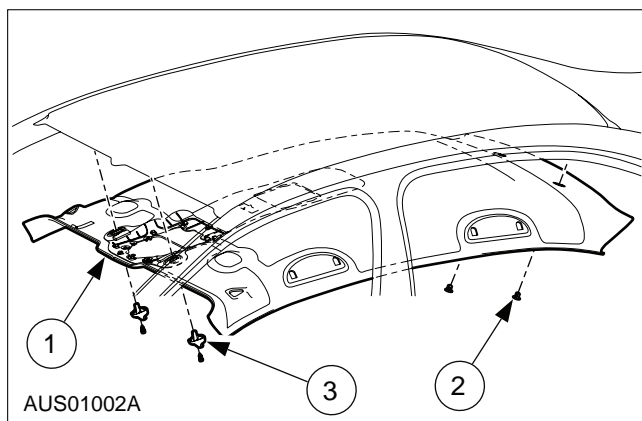

Item	Description
1	Headlining
2	Barbed clip
3	Sunvisor check block

NOTE: Avoid folding or creasing the headlining during removal.

Installation


1. Reverse removal procedure.

Headliner - Ute

Removal

1. Remove A, B, C pillar interior trim panels. Refer to the procedures in this section.
2. Remove sunvisors and check blocks. Refer to removal sunvisors in this section.
3. Remove grab handles and hook.
4. Locate interior light wiring connector at base of "A" pillar trim and disconnect.
5. Remove barbed clips.

6. Remove headlining via door opening.

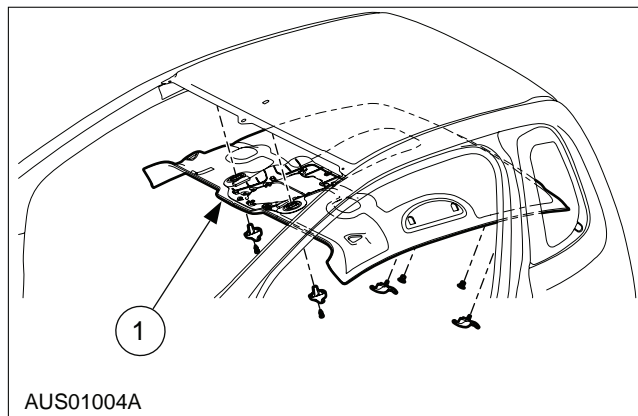

Item	Description
1	Panel assy. roof trim

Installation


1. Reverse removal procedure.
NOTE: Care should be taken when handling headlining not to bend unnecessarily.

Luggage Compartment Cover Lower Back


Petrol Variants

Removal

1. Lift carpet.
2. Undo spare wheel board tie down and remove spare wheel cover. Refer to removal of spare wheel cover in this section.

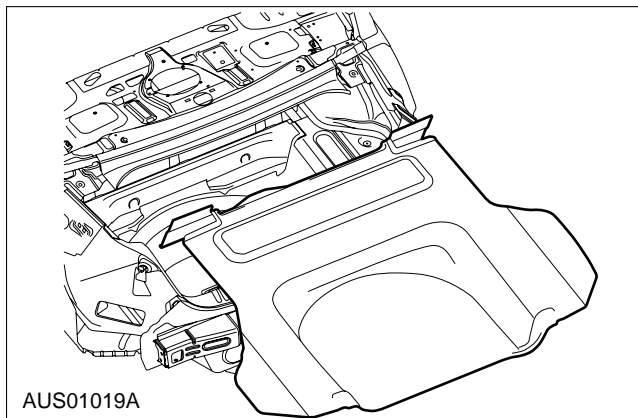


3. Remove 3 fir tree clips from front of cover lower back.

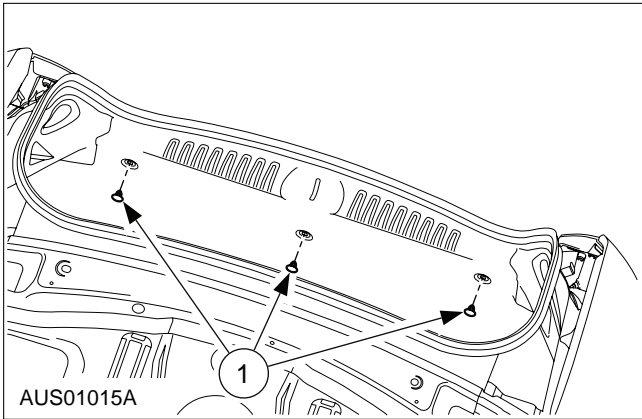


Item	Description
1	Fir tree clip

2. Remove 2 fir tree clips from front of cover lower back.

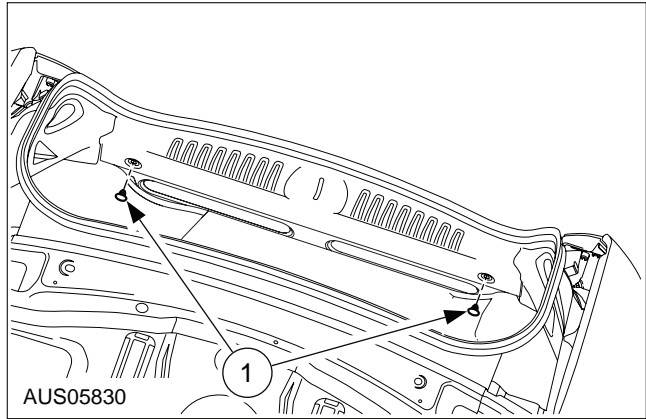


Item	Description
1	Fir tree clip

4. Remove cover lower back with an upwards motion disengaging the 4 spring steel clips.

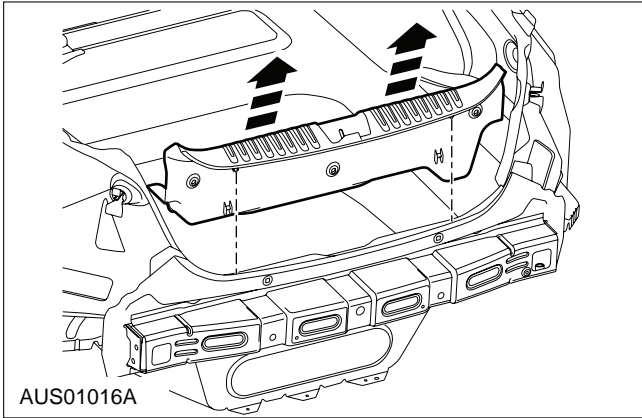

3. Remove cover lower back with an upwards motion.

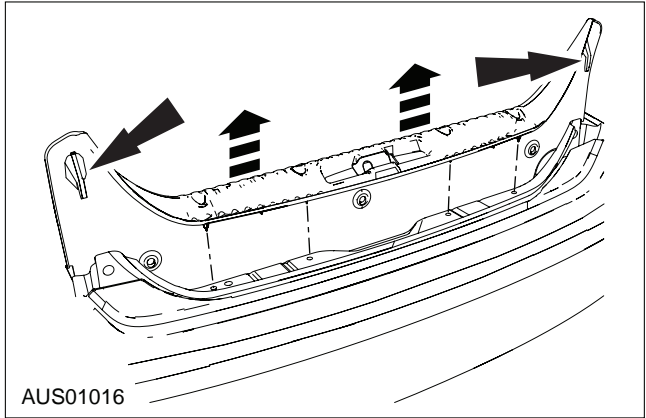

Installation

1. Reverse removal procedure.


Installation

1. Reverse removal procedure.

eGas Variants

Removal

1. Lift carpet and fold back towards spare wheel.

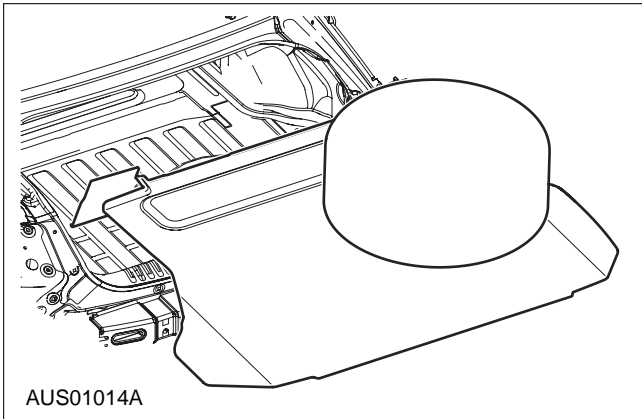


Luggage Compartment Quarter Trims

Removal

- 1. Remove 2 fir tree clips on luggage compartment side.

NOTE: On vehicles that have the accessory luggage net fitted, luggage net hook will be removed instead of a fir tree.

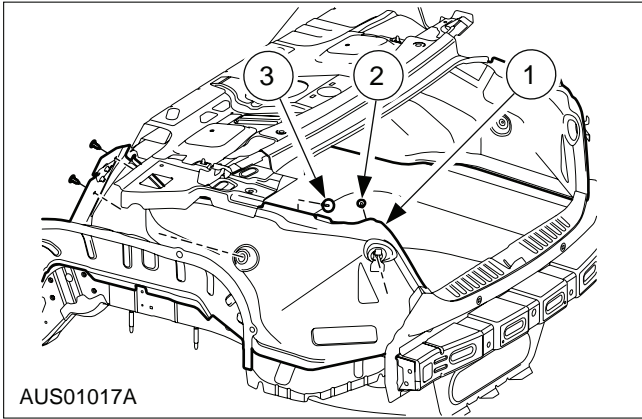

Item	Description
1	Quarter trim
2	Fir tree clip
3	Fir tree clip

- 2. Lower seat back in cabin. Refer to section 501-10.
- 3. Loosen package tray trim at front edge.
- 4. Remove 2 fir tree clips located behind seat back.

Installation


- 1. Reverse removal procedure.

Luggage Compartment Load Floor Carpet

Removal

- 1. Lower seat back in cabin. For additional information, refer to Section 501-10.
- 2. Fold carpet from underneath seat backs into the luggage compartment.

- 3. Remove carpet.

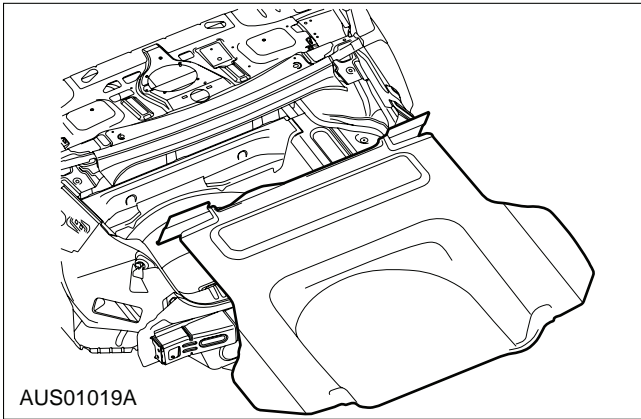


Installation

- 1. Reverse removal procedure.

Spare Wheel Board

Removal

- 1. Fold carpet back.
- 2. Undo spare wheel tie down.

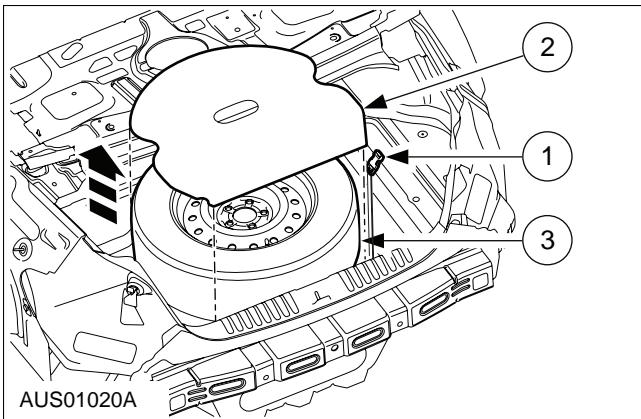

Item	Description
1	Strap
2	Cover
3	Spare wheel

- 3. Remove the spare wheel board.

Installation


- 1. Reverse removal procedure.



Package Tray Insulator

Removal

- 1. Remove both LH and RH quarter trims. Refer removal of quarter trim in this section.
- 2. Remove package tray trim. Refer to removal of Parcel Shelf in this section.
- 3. Remove 2 fir tree clips located on front edge of package tray insulator behind seat backs.
- 4. Remove clips on rear edge of package tray insulator.

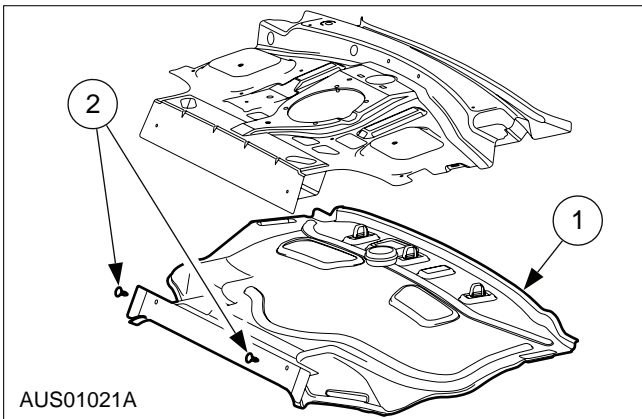

Item	Description
1	Package tray insulator
2	Fir tree clip

- 5. Bend part through the middle and slide through into luggage compartment.


Installation

- 1. Reverse removal procedure.

Decklid Trim

Removal

- 1. Remove 14 fir tree clips.
- 2. Slide trim off decklid latch taking care to slip emergency release tab through slit in trim.

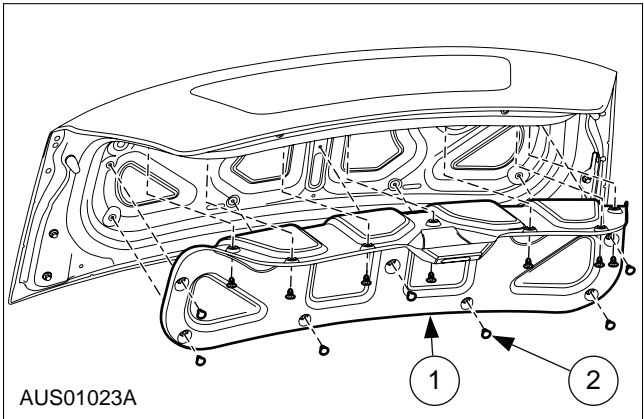

Item	Description
1	Decklid trim
2	Fir tree clips


Installation

- 1. Reverse removal procedure.

Hip Bolster

Removal

- 1. Remove door trim assembly. Refer door trim assembly section.

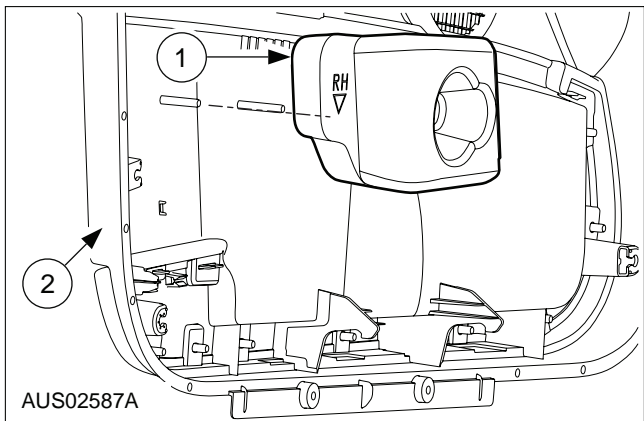

Item	Description
1	Hip Bolster
2	Water Shield

- 2. Remove hip bolster from watershield cavity.

Installation


- 1. Reverse removal procedure. Push hip bolster firmly into cavity.



Front Door Water Shield


Removal

1. Remove door trim assembly. Refer door trim assembly in this section.

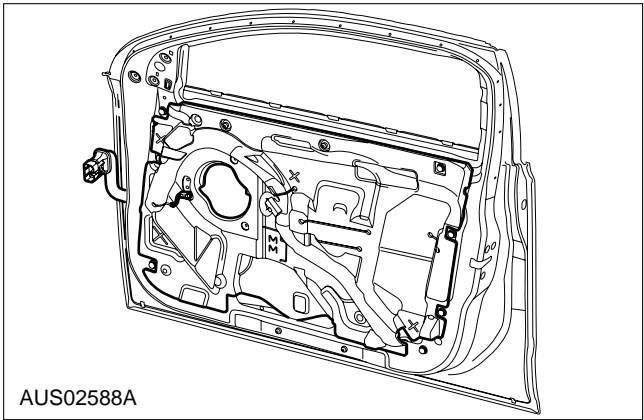


Item	Description
1	Speaker
2	Wiring Loom
3	Hip Bolster

2. Remove hip bolster (front door only).
3. Remove speaker wiring connection, and speaker.
4. Pass wiring loom through slit in water shield.
5. Pass interior latch cable through water shield slit.
6. Move lock rod behind water shield (front right hand only).
7. Remove water shield.

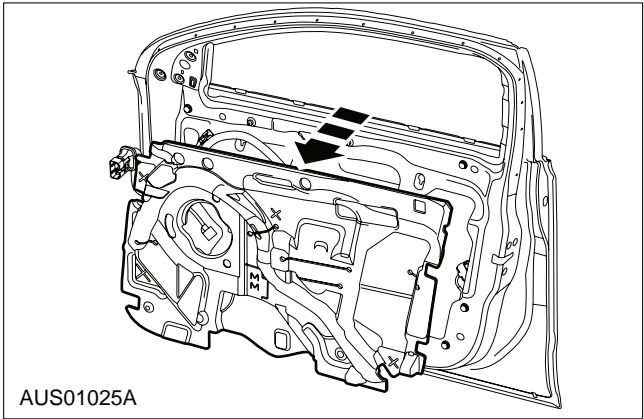

Installation

1. Place water shield on sheet metal inner panel. Insert form into sheet metal cavity to retain.

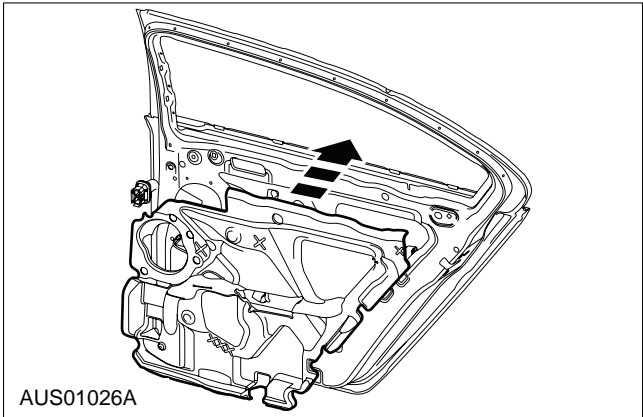


2. Reverse removal procedure.
NOTE: Rear door water shield removal and installation as per front water shield. There is no rear hip bolster.

Front Inner Scuff Plate

Removal

1. Uncap front scuff screw cover.
2. Unscrew 2 screws.
3. Unclip front scuff from lower B pillar trim and cowl trim.

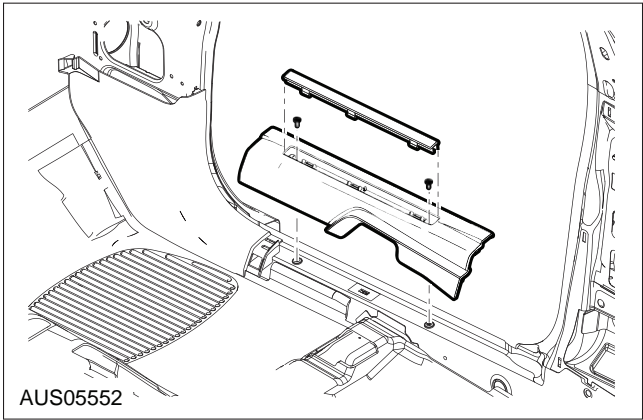

Installation


1. Reverse removal procedure.



Front Outer Scuff Plate

Removal

1. Using fishing wire, split the foam tape to separate scuff from sheet metal
2. Clean tape residue from sheet metal using adhesive cleaner.

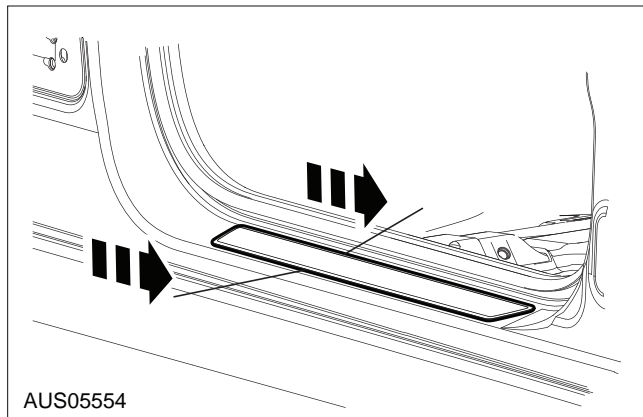


Installation

1. New part required (part not serviceable)

Cowl Scuff Plate

Removal

1. Remove IP end cap
2. Remove front inner scuff plate. Refer to removal of Front Inner Scuff Panel in this section.
3. Unclip forward lower clip on cowl scuff.
4. Unclip rearward upper clip on cowl scuff.
5. Unhook cowl scuff from dash panel stud.

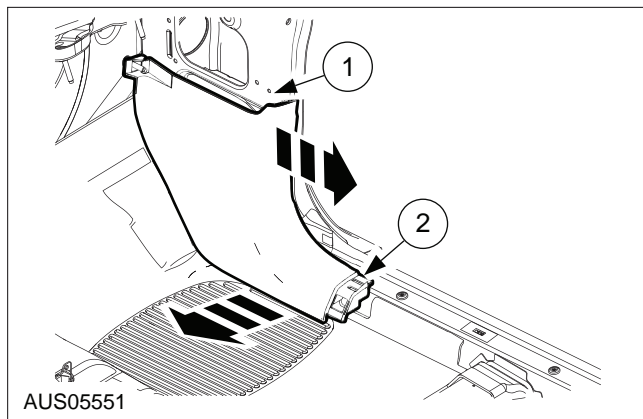


Installation

1. Reverse removal procedure.

Rear Inner Scuff Plate

Removal

1. Remove rear seat cushion
2. Uncap rear screw cover
3. Unscrew 2 screws
4. Unclip rear scuff from lower B pillar trim

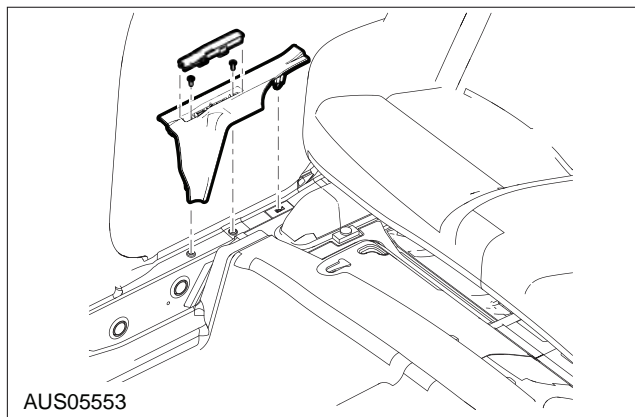


Installation

1. Reverse removal procedure.

Sunvisor

Removal

1. Remove sunvisor as shown in figure.

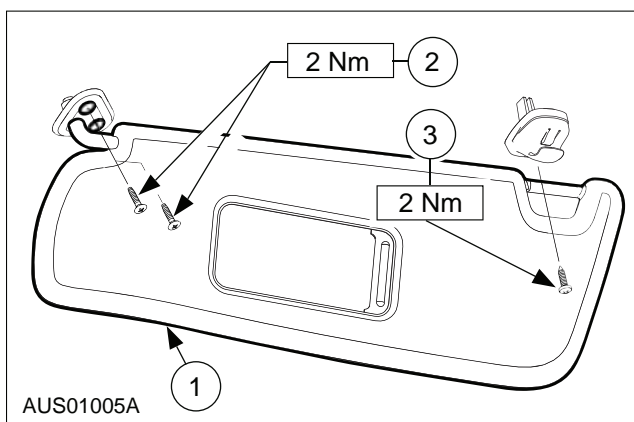

Item	Description
1	Sunvisor
2	Screw
3	Screw

Installation

1. Reverse the removal procedure.



Front Carpet

Removal

1. Remove front scuff plates. Refer to this section.
2. Remove both driver and passenger cowl side scuff. For further information refer to this section.
3. Remove the front seats and rear seat cushion. Refer to section 510-10.
4. Remove the rear scuff plates. Refer rear scuff plate in this section.
5. Remove the centre console assembly. Refer to section 501-12.
6. Remove the front carpet by lifting upwards.

Installation

1. Reverse the removal procedure.

