


SECTION : 700-06 Connector Location Views

VEHICLE APPLICATION : 2008.0 Falcon

CONTENTS

CONNECTOR LOCATION VIEWS


Instrument Panel Wiring - without TMC	700-06-1
Instrument Panel Wiring - with TMC	700-06-3
Roof Wiring - Ute - All except Satellite Navigation shown	700-06-5
Roof Wiring - Ute - Satellite Navigation	700-06-6
Main Wiring - Ute	700-06-7
Cab Chassis Rear Wiring - Ute - Petrol	700-06-9
Cab Chassis Rear Wiring - Ute - SFLPG	700-06-10
Sytle Side Box Rear Wiring - Ute	700-06-11
Main Wiring - Sedan - RHS	700-06-12
Main Wiring - Sedan - LHS SFLPG	700-06-14
Main Wiring - Sedan - LHS Petrol	700-06-16
Battery Cables Wiring - Sedan - I6 and SFLPG	700-06-18
Battery Cables Wiring - Sedan - V8	700-06-19
Pedal Wiring - Sedan - G6 Non Adjustable	700-06-20
Pedal Wiring - Sedan - G6 Memory Adjustable	700-06-21
Pedal Wiring - Sedan - Manual Gear Box	700-06-22
Pedal Wiring - Sedan - Adjustable (Non Memory)	700-06-23
Front End Engine Compartment Wiring	700-06-24
Engine Controls Wiring - Sedan - SFLPG	700-06-26
Engine Controls Wiring - Sedan - Petrol	700-06-28
Front Door Wiring - Sedan and Ute - All series	700-06-30
Rear Door Wiring - Sedan	700-06-32
Roof Wiring - Sedan - with Microphone	700-06-33
Roof Wiring - Sedan - with Electrochromic Mirror, Vanity Mirror Lamps and Microphone	700-06-34
Roof Wiring - Sedan - with Electrochromic Mirror, Vanity Mirror Lamps, Microphone, Satellite Navigation Remote Control Infrared Receiver	700-06-35
Interior Lamp Wiring - Sedan	700-06-36
Audio Interface - No Bluetooth	700-06-37
Audio Interface - with Bluetooth	700-06-38
Reverse Parking Aid Sensor Wiring - Sedan	700-06-39
Decklid Wiring - Sedan	700-06-40
Reverse Parking Aid Wiring - Sedan	700-06-41
Trailer Wiring - without Reverse Parking Aid - Sedan	700-06-42
Trailer Wiring - with Reverse Parking Aid - Sedan	700-06-43
Back Window Heater - Sedan	700-06-44
I6 Engine Wiring - 5 Speed Automatic Transmission	700-06-45
Turbo I6 Engine Wiring - 6 Speed Manual Transmission	700-06-47
Turbo I6 Engine Wiring - 6 Speed Manual Transmission	700-06-49
SFLPG I6 Engine Wiring - Automatic Transmission	700-06-51
V8 Engine - Rear RHS	700-06-53
V8 Engine - Front LHS	700-06-54
V8 Engine - Rear Right	700-06-55
V8 with 6 Speed Automatic Transmission	700-06-56
V8 with 6 Speed Manual Transmission	700-06-57
I6 Engine - 6 Speed Automatic Transmission	700-06-58
Turbo I6 - 6 Speed Automatic Transmission	700-06-60
Turbo I6 Engine Wiring - 6 Speed Manual Transmission	700-06-62

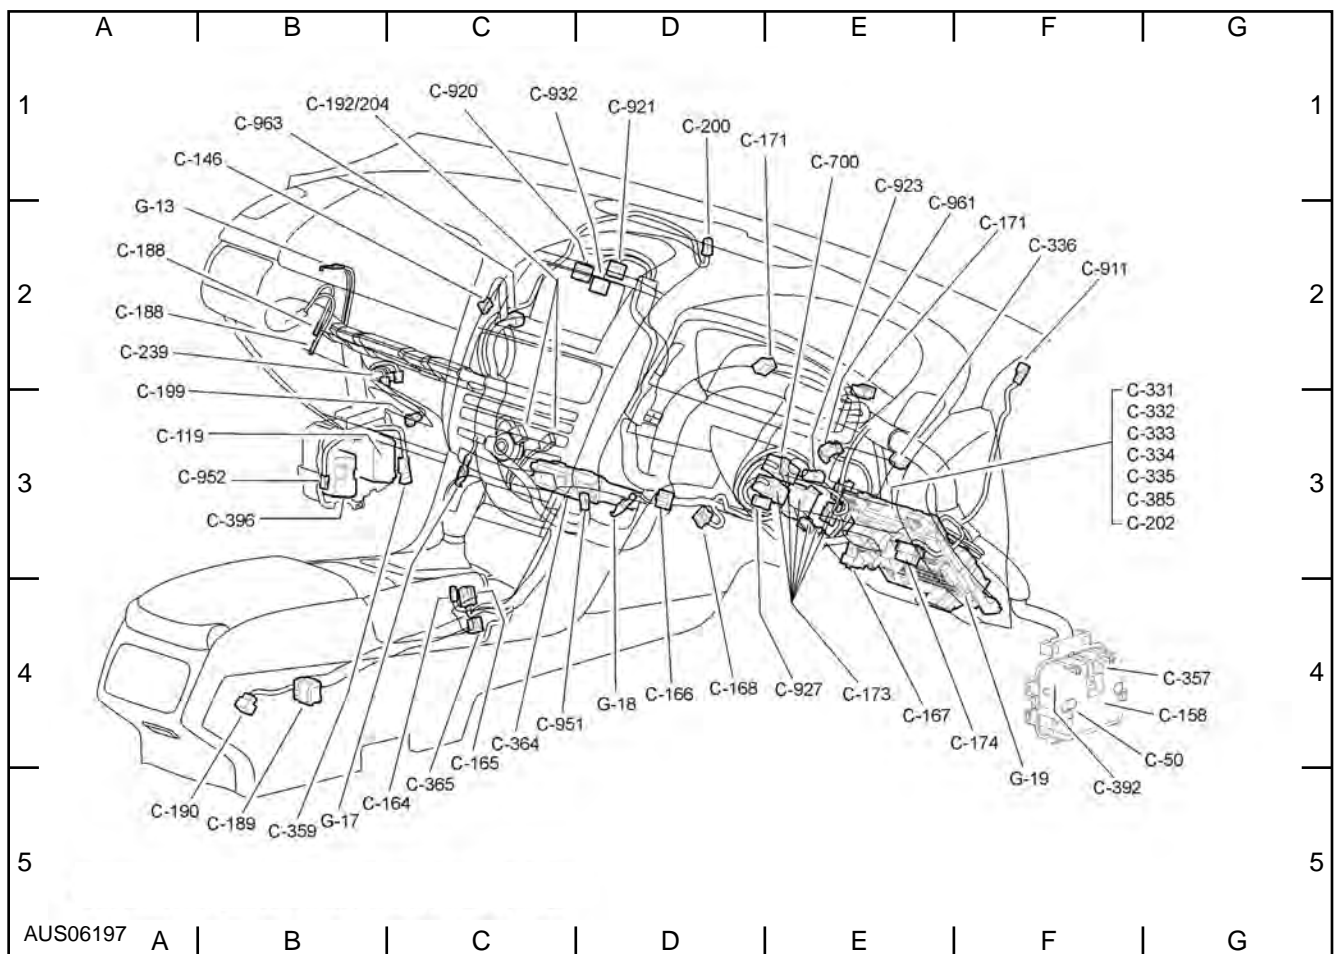COMPONENT LOCATION VIEWS**Instrument Panel Wiring - without TMC**

C-50	To 14K024 to 14405	G5
C-119	To 14K024 to 12A581	B2
C-146	Passenger Airbag Inflator	B1
C-158	To 14K024 to 14K011	G5
C-164	Cigar Lighter Illumination	C5
C-165	Cigar Lighter	C5
C-166	Clockspring	D5
C-167	Column Switch	F5
C-168	Ignition Switch	E5
C-171	Cluster	E1, F2
C-173	BEM	E5
C-174	Diagnostics	F5
C-188	Glove Box Lamp	A2
C-189	ARS Module	B5
C-190	14K024 to 14405 ARS CAN	B5
C-192	Mobile Phone #1	B1
C-199	Passenger Footwell Lamp	B3
C-200	Sun Load Sensor	D1
C-202	Driver Footwell Lamp	G3

COMPONENT LOCATION VIEWS (Continued)


Instrument Panel Wiring - without TMC		
C-204	Mobile Phone #2	C1
C-239	Navigation Module	A2
C-331	J/B	G3
C-332	J/B	G3
C-333	J/B	G3
C-334	J/B	G3
C-335	J/B	G3
C-336	Junction Connector	F2
C-357	14K024 to 14K011 Crash Sensor	G5
C-359	14K024 to 12A581 Crash Sensor	C5
C-364	ICC	D3
C-365	AUX	C5
C-385	Diode	G3
C-392	To 14K024-Camera to 14405-Camera	G5
C-396	To 14K024 to 14A005/to 14405	B4
C-911	Microphone and Nav Remote Control 14K024 to 13B711	F2
C-920	ICC Display #2	C1
C-921	Phone to ICC Module (Bluetooth)	D1
C-923	Pedal Adjust Switch	E1
C-927	PATS	E5
C-932	Navigation and Camera Display to 14K024	C1
C-951	Antenna to ICC	D5
C-952	To 14K024 to 14A005/to 14405	B3
C-961	Steering Angle Sensor	F1
C-963	Yaw Rate Sensor	B1
G-13	Left Cowl Side Inst Ground	A1
G-17	Centre Inst Ground LH	C5
G-18	Centre Inst Ground RH	D5
G-19	J/B Ground	F5

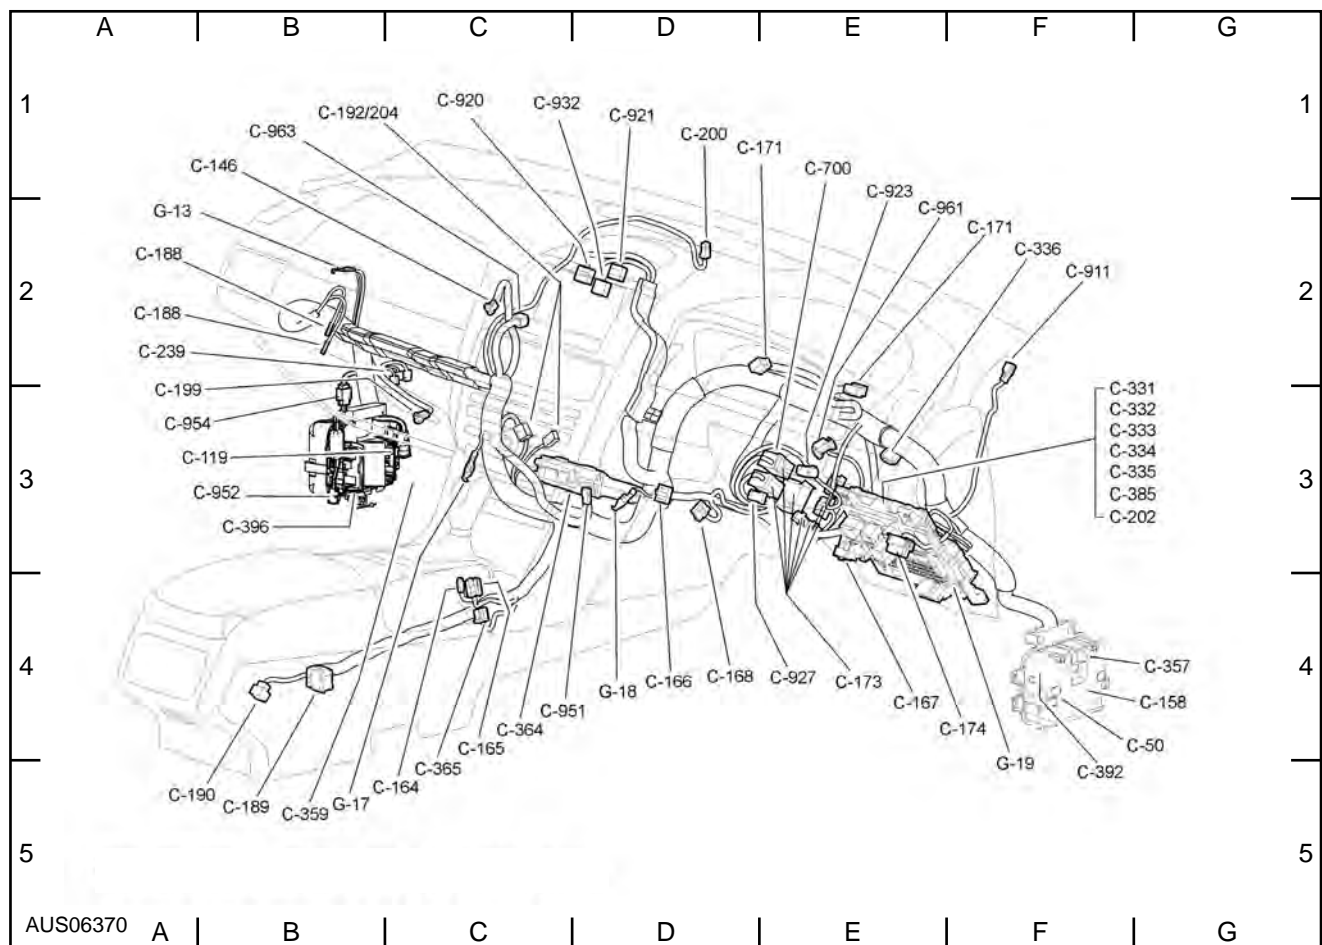COMPONENT LOCATION VIEWS (Continued)**Instrument Panel Wiring - with TMC**

C-50	To 14K024 to 14405	G5
C-119	To 14K024 to 12A581	B2
C-146	Passenger Airbag Inflator	B1
C-158	To 14K024 to 14K011	G5
C-164	Cigar Lighter Illumination	C5
C-165	Cigar Lighter	C5
C-166	Clockspring	D5
C-167	Column Switch	F5
C-168	Ignition Switch	E5
C-171	Cluster	E1, F2
C-173	BEM	E5
C-174	Diagnostics	F5
C-188	Glove Box Lamp	A2
C-189	ARS Module	B5
C-190	14K024 to 14405 ARS CAN	B5
C-192	Mobile Phone #1	B1
C-199	Passenger Footwell Lamp	B3
C-200	Sun Load Sensor	D1


COMPONENT LOCATION VIEWS (Continued)**Instrument Panel Wiring - with TMC**

C-202	Driver Footwell Lamp	G3
C-204	Mobile Phone #2	C1
C-239	Navigation Module	A2
C-331	J/B	G3
C-332	J/B	G3
C-333	J/B	G3
C-334	J/B	G3
C-335	J/B	G3
C-336	Junction Connector	F2
C-357	14K024 to 14K011 Crash Sensor	G5
C-359	14K024 to 12A581 Crash Sensor	C5
C-364	ICC	D3
C-365	AUX	C5
C-385	Diode	G3
C-392	To 14K024-Camera to 14405-Camera	G5
C-396	To 14K024 to 14A005/to 14405	B4
C-911	Microphone and Nav Remote Control 14K024 to 13B711	F2
C-920	ICC Display #2	C1
C-921	Phone to ICC Module (Bluetooth)	D1
C-923	Pedal Adjust Switch	E1
C-927	PATS	E5
C-932	Navigation and Camera Display to 14K024	C1
C-951	Antenna to ICC	D5
C-952	To 14K024 to 14A005/to 14405	B3
C-954	To 14K024 to TMC (Traffic Management Channel Signal Splitter)	A3
C-961	Steering Angle Sensor	F1
C-963	Yaw Rate Sensor	B1
G-13	Left Cowl Side Inst Ground	A1
G-17	Centre Inst Ground LH	C5
G-18	Centre Inst Ground RH	D5
G-19	J/B Ground	F5

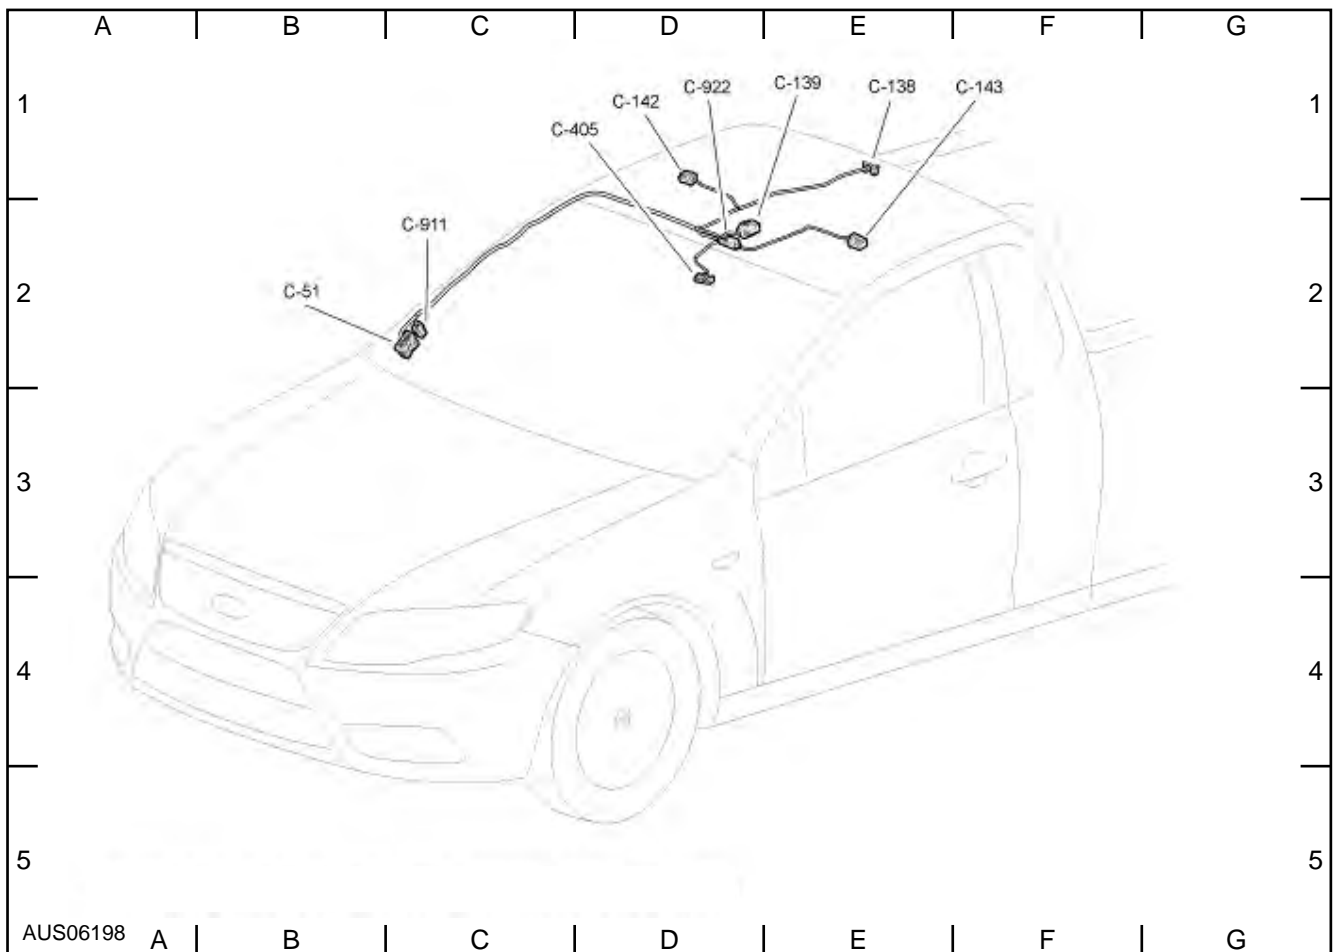COMPONENT LOCATION VIEWS (Continued)**Roof Wiring - Ute - All except Satellite Navigation shown**

C-51	To 13B711 & to 14405	B2
C-138	Dome Lamp	E1
C-139	Map Lamp / Front Reading Lamp	E1
C-142	Vanity Mirror Lamp	D1
C-143	Vanity Mirror Lamp	F1
C-405	Mirror	D1
C-911	To 13B711 & to 14K024 (Microphone)	C2
C-922	Microphone	D1


COMPONENT LOCATION VIEWS (Continued)

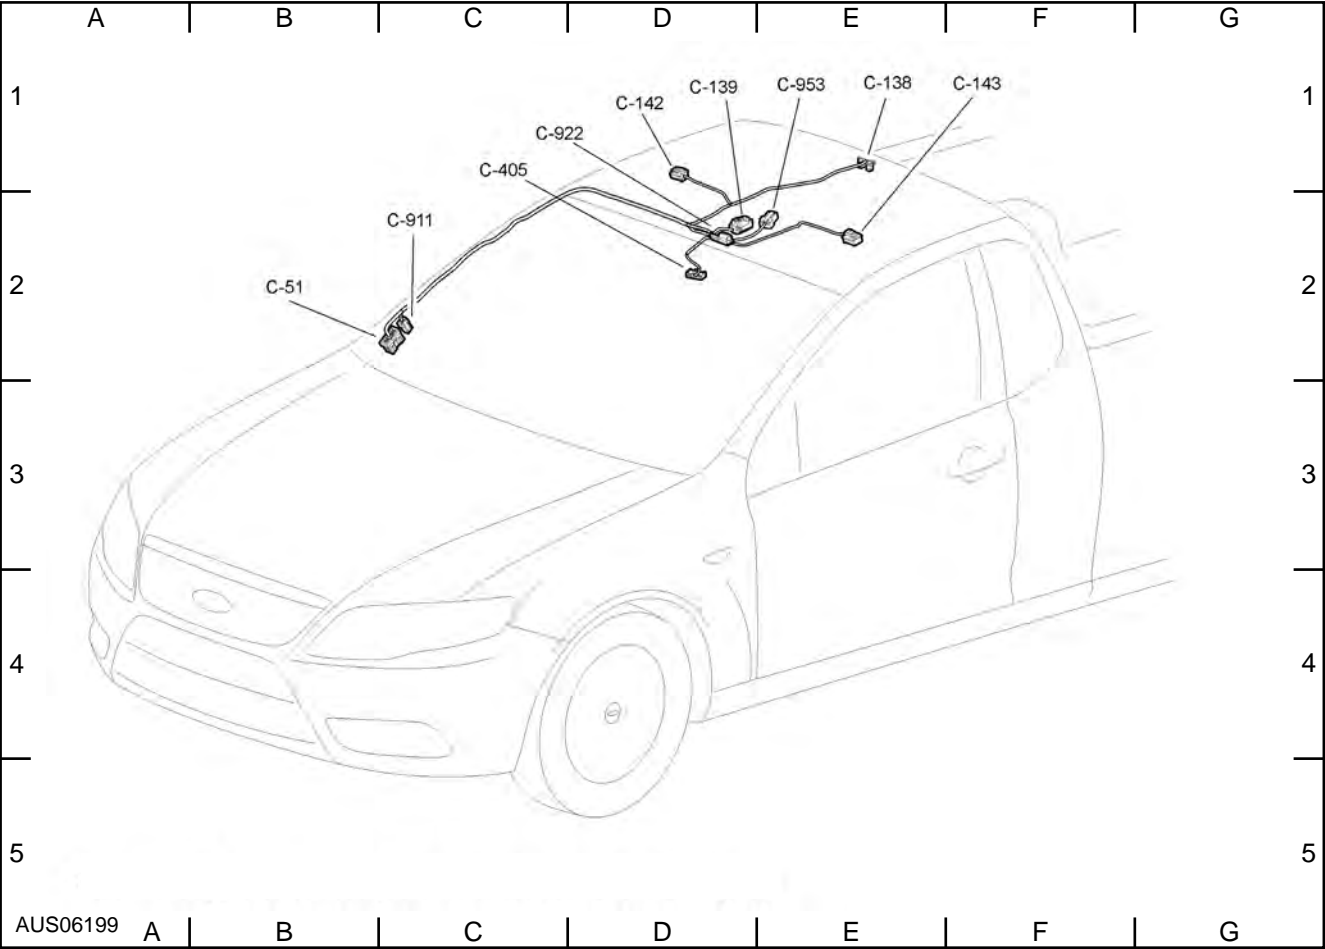

Roof Wiring - Ute - Satellite Navigation

C-51	To 13B711 & to 14405	B2
C-138	Dome Lamp	E1
C-139	Map Lamp / Front Reading Lamp	E1
C-142	Vanity Mirror Lamp	D1
C-143	Vanity Mirror Lamp	F1
C-405	Mirror	D1
C-911	To 13B711 & to 14K024 (Microphone)	C2
C-922	Microphone	D1
C-953	Navigation Remote Control Sensor	E1

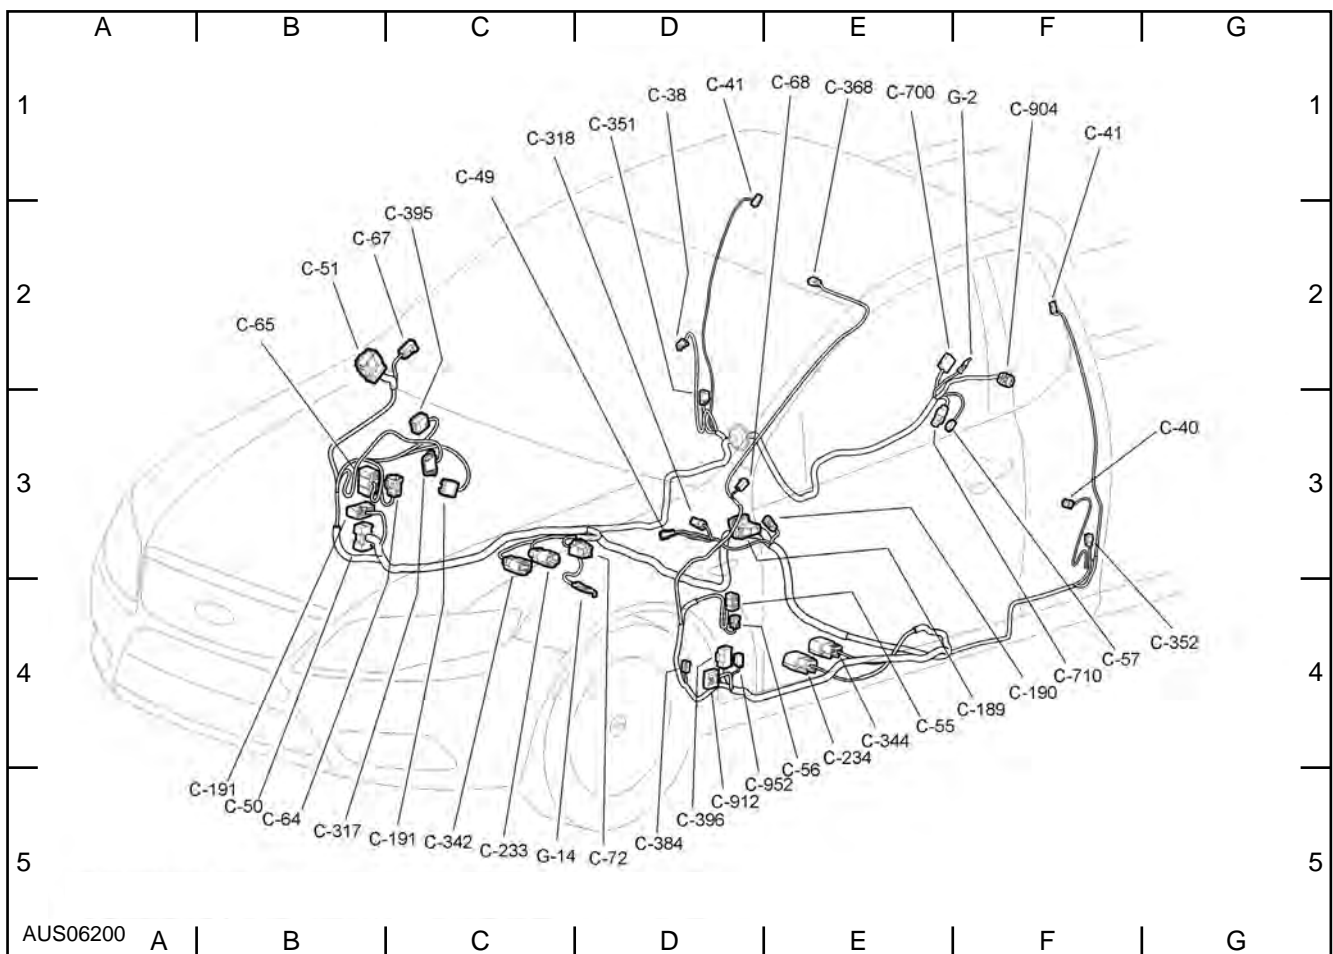


COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Ute**

C-38	Right Rear Speaker	D1
C-40	Left Rear Speaker	G3
C-41	Rear Window Heater Ground	D1
C-41	Rear Window Heater Power	F1
C-49	Park Brake Switch	C1
C-50	To 14K024 & to 14405	B5
C-51	To 13B711 & to 14405	B2
C-55	To 14631 & to 14405(Ute)/14A005(Sedan)	E5
C-56	To 14631 & to 14A005(Sedan)/14405(Ute)	E5
C-57	ABS Speed Sensor	F5
C-64	To 14630 & to 14405	B6
C-65	To 14630 & to 14405	B2
C-67	Tweeter Speaker (Right)	C2
C-68	Tweeter Speaker (Left)	E1
C-72	Driver Power Seat	D6
C-189	ARS Module	F5
C-190	To 14K024 to 14405 ARS CAN	F5
C-191	Brake Switch	C6

COMPONENT LOCATION VIEWS (Continued)

Main Wiring - Ute		
C-233	Driver Pretensioner	C6
C-234	Passenger Pretensioner	E5
C-317	Accelerator	C6
C-318	Sequential Sports Shift	D1
C-342	Driver Side Impact Airbag	C6
C-344	Passenger Side Impact Airbag	E5
C-351	RH Rear Crash Sensor	D1
C-352	LH Rear Crash Sensor	G4
C-368	Antenna Module	E1
C-384	Inertia Switch	D6
C-395	To 12K351 & to 14405	C2
C-396	To 14K024 & to 14A005(Sedan)/14405(Ute)	D6
C-700	To 13N419 & to 14405	E1
C-710	Aftermarket High Mount Stop Lamp (Stop Lamp) & (Reverse Lamp Power)	F5
C-904	To Fuel Tank Harness & to 14405	F1
C-912	To 12A581 & to 14A005(Sedan)/14405(Ute)	E5
C-952	To 14K024 & to 14A005/to 14405 (Antenna Cable)	E5
G-2	Right Rear Earth	F1
G-14	Right Centre Ground	D6

COMPONENT LOCATION VIEWS (Continued)

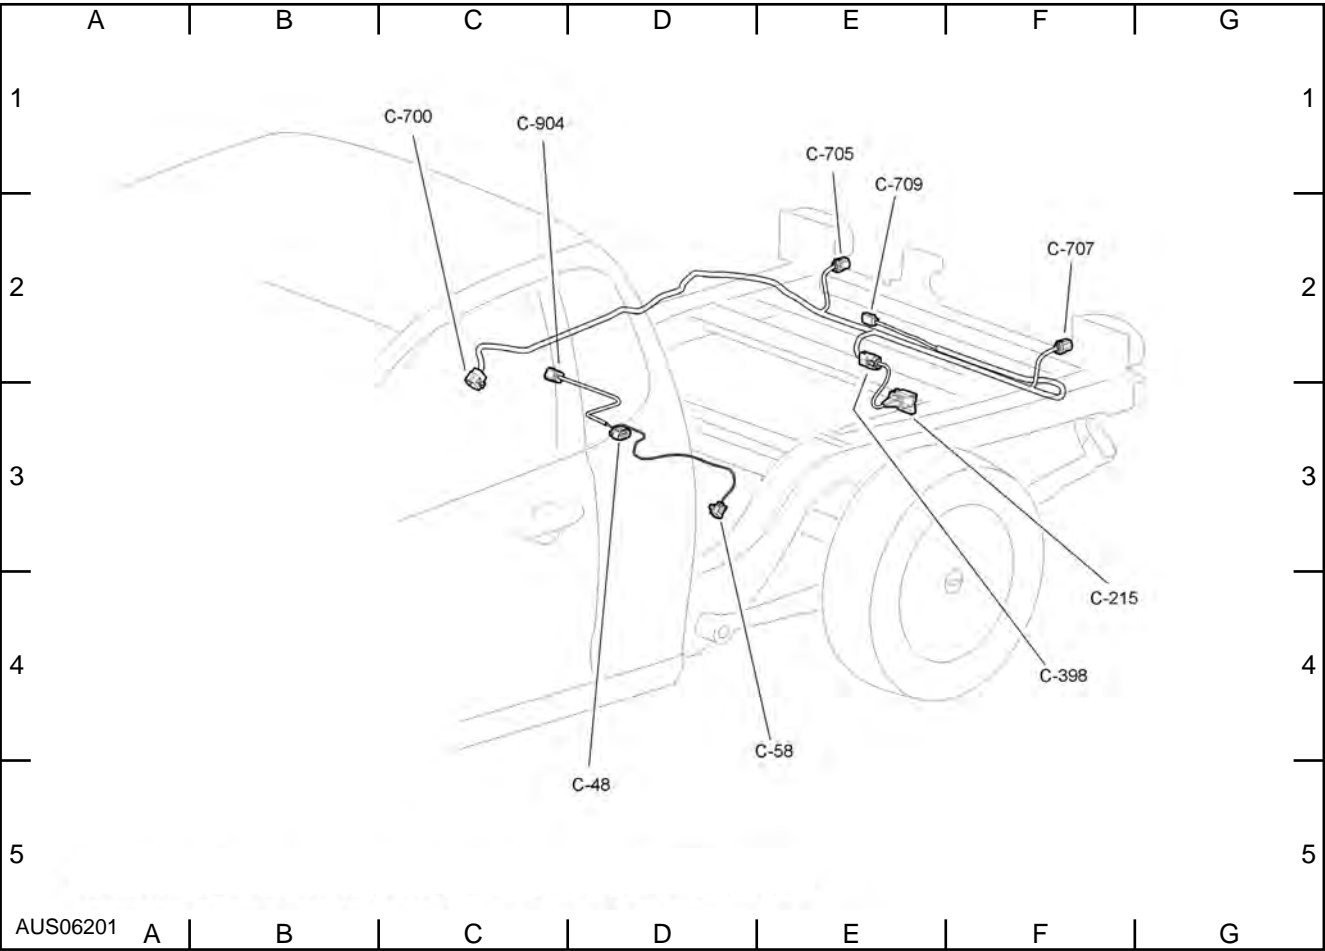


Cab Chassis Rear Wiring - Ute - Petrol

C-48	Fuel Tank Unit	D6
C-58	ABS Speed Sensor	E5
C-215	Trailer	G4
C-398	To 13N419 & to 15A417	F5
C-700	To 13N419 & to 14405	C1
C-705	Right Rear Lamp	E2
C-707	Left Rear Lamp	F2
C-709	Registration Plate Lamp	E2
C-904	To Fuel Tank Harness & to 14405	D1




COMPONENT LOCATION VIEWS (Continued)

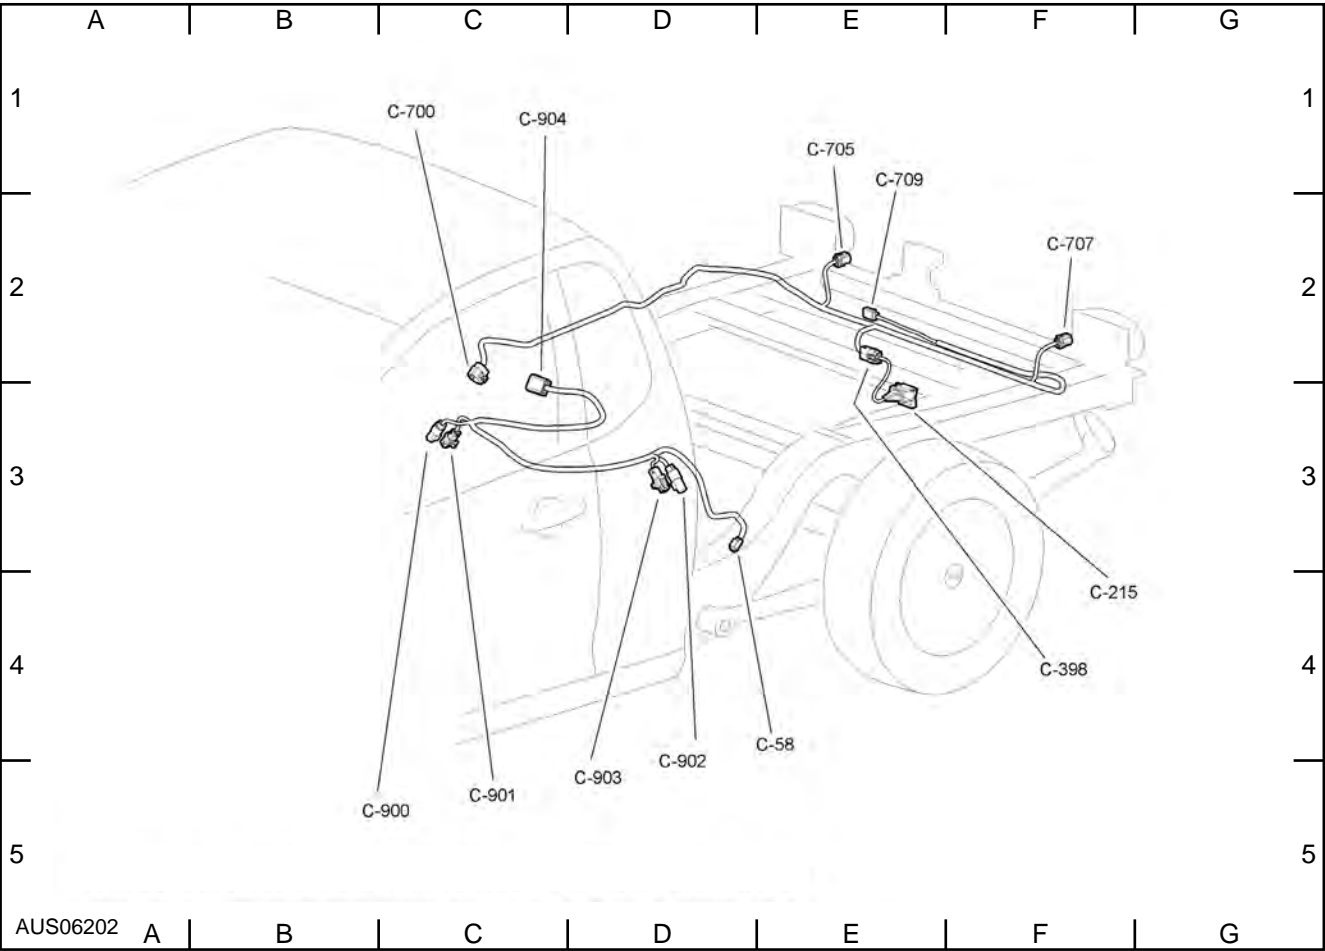

Cab Chassis Rear Wiring - Ute - SFLPG		
C-58	ABS Speed Sensor	E5
C-215	Trailer	G4
C-398	To 13N419 & to 15A417	F5
C-700	To 13N419 & to 14405	C1
C-705	Right Rear Lamp	E2
C-707	Left Rear Lamp	F2
C-709	Registration Plate Lamp	E2
C-900	LPG Tank Lock Off Solenoid 1	C5
C-901	LPG Fuel Sensor 1	C5
C-902	LPG Tank Lock Off Solenoid 2	D5
C-903	LPG Fuel Sensor 2	D5
C-904	To Fuel Tank Harness & to 14405	C1




COMPONENT LOCATION VIEWS (Continued)

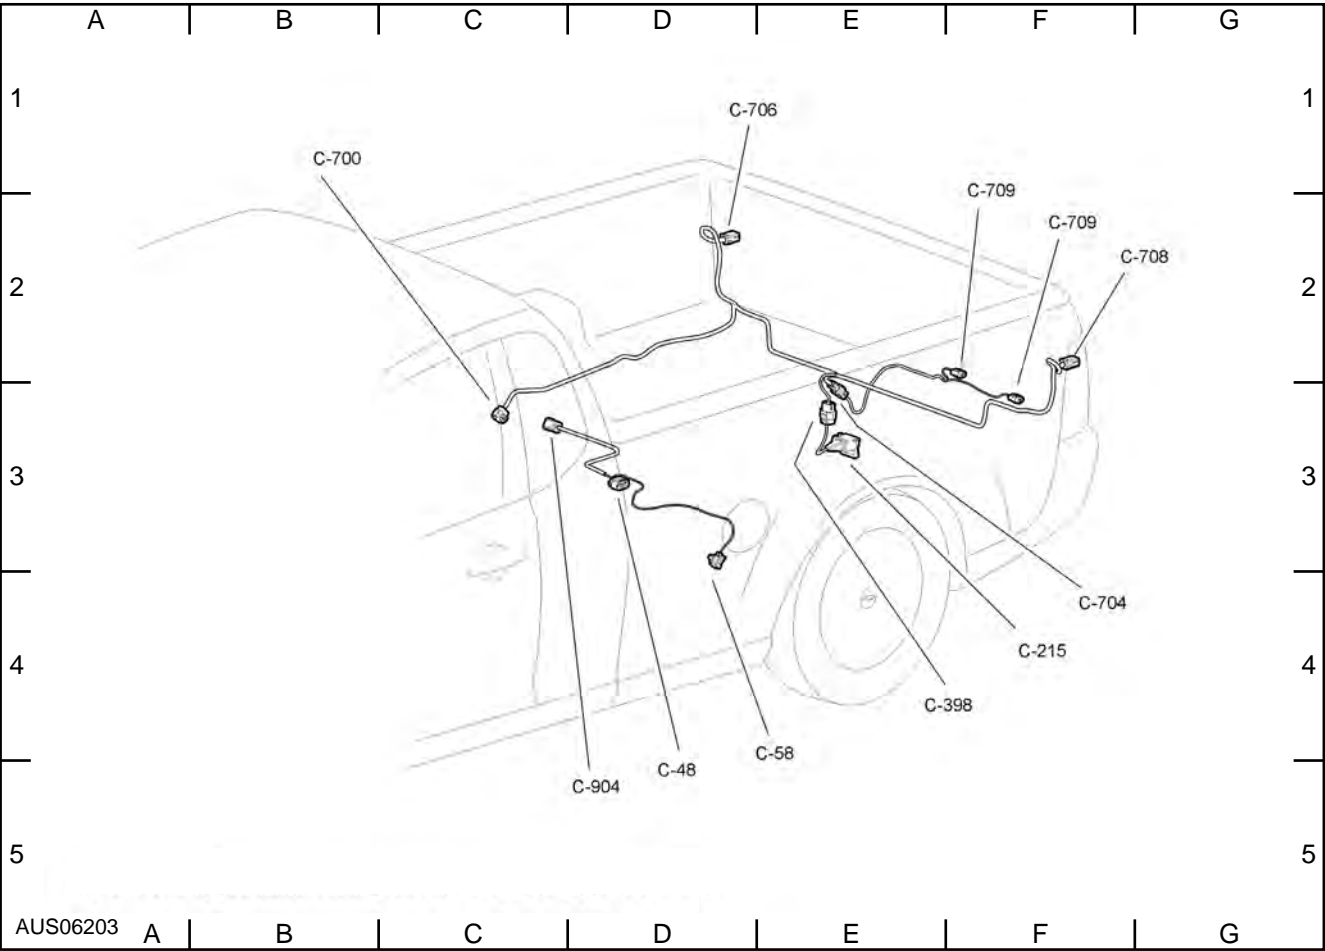

Style Side Box Rear Wiring - Ute

C-48	Fuel Tank Unit	D5
C-58	ABS Speed Sensor	D5
C-215	Trailer	F5
C-398	To 13N419 & to 15A417	F5
C-700	To 13N419 & to 14405	B1
C-704	To 13A444 & to 13N419	G4
C-706	Right Rear Lamp	E1
C-708	Left Rear Lamp	G2
C-709	Left License Lamp/Right License Lamp	F2
C-904	To Fuel Tank Harness & to 14405	D5

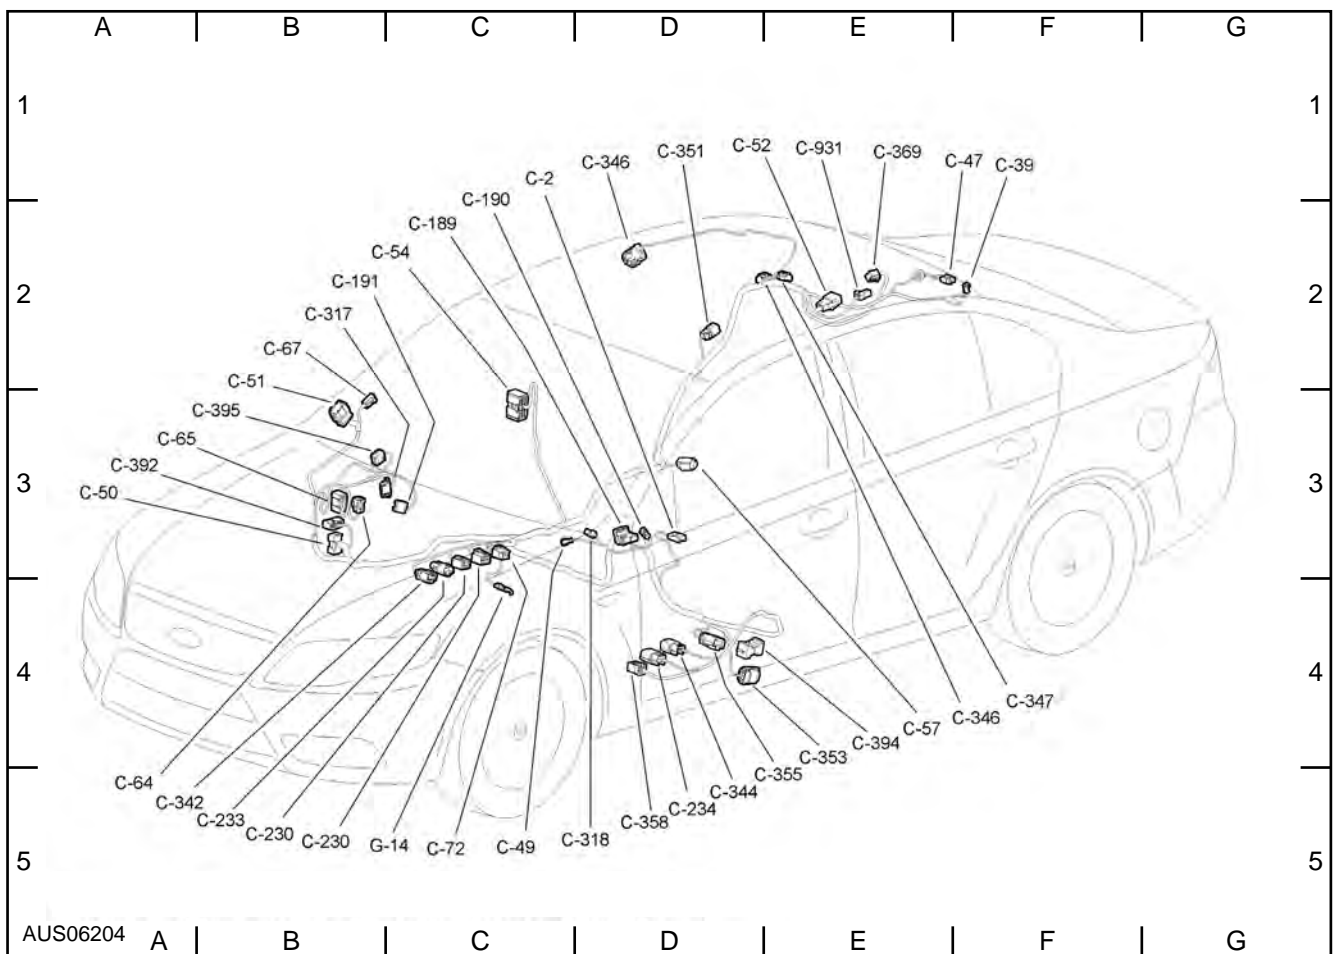


COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Sedan - RHS**

C-2	To 14405 & to 13769	C1
C-39	High Mount Stop Lamp	F1
C-47	Luggage Compartment	F1
C-49	Parke Brake Switch	D6
C-50	To 14K024 & to 14405	A3
C-51	To 13B711 & to 14405	B2
C-52	To 13A444 & to 14405	E1
C-54	To 14632 & to 14405	C2
C-57	ABS Speed Sensor	F5
C-64	To 14630 & to 14405	A5
C-65	To 14630 & to 14405	B3
C-67	Tweeter Speaker (Right)	B2
C-72	Driver Power Seat	C6
C-189	ARS Module	C2
C-190	To 14K024 to 14405 ARS CAN	C1
C-191	Brake Switch	B2
C-230	Memory Module	B5
C-233	Driver Pretensioner	B5

COMPONENT LOCATION VIEWS (Continued)


Main Wiring - Sedan - RHS		
C-234	Passenger Pretensioner	D5
C-317	Accelerator	B2
C-318	Sequential Sports Shift	D6
C-342	Driver Side Impact Airbag	B5
C-344	Passenger Side Impact Airbag	D5
C-346	Curtain Airbag	D1
C-346	Resistor - Non Curtain Airbag - RHS	F5
C-347	Resistor - Non Curtain Airbag - LHS	F5
C-351	Driver Side Crash Sensor	D1
C-353	To 14A005 & 14405 (Crash Sensors)	E5
C-355	To 14A005 & 14405 (Curtain Airbag)	E5
C-358	Passenger Seat Mat Sensor	D5
C-369	Parking Aid Module	E1
C-392	To 14K024-Camera & to 14405-Camera	A3
C-393	To 14A005 & 14405	E5
C-395	To 12K531 & 14405	B3
C-931	To 13A444 & to 14405 (Camera)	E1
G-14	Right Ground Centre	C6

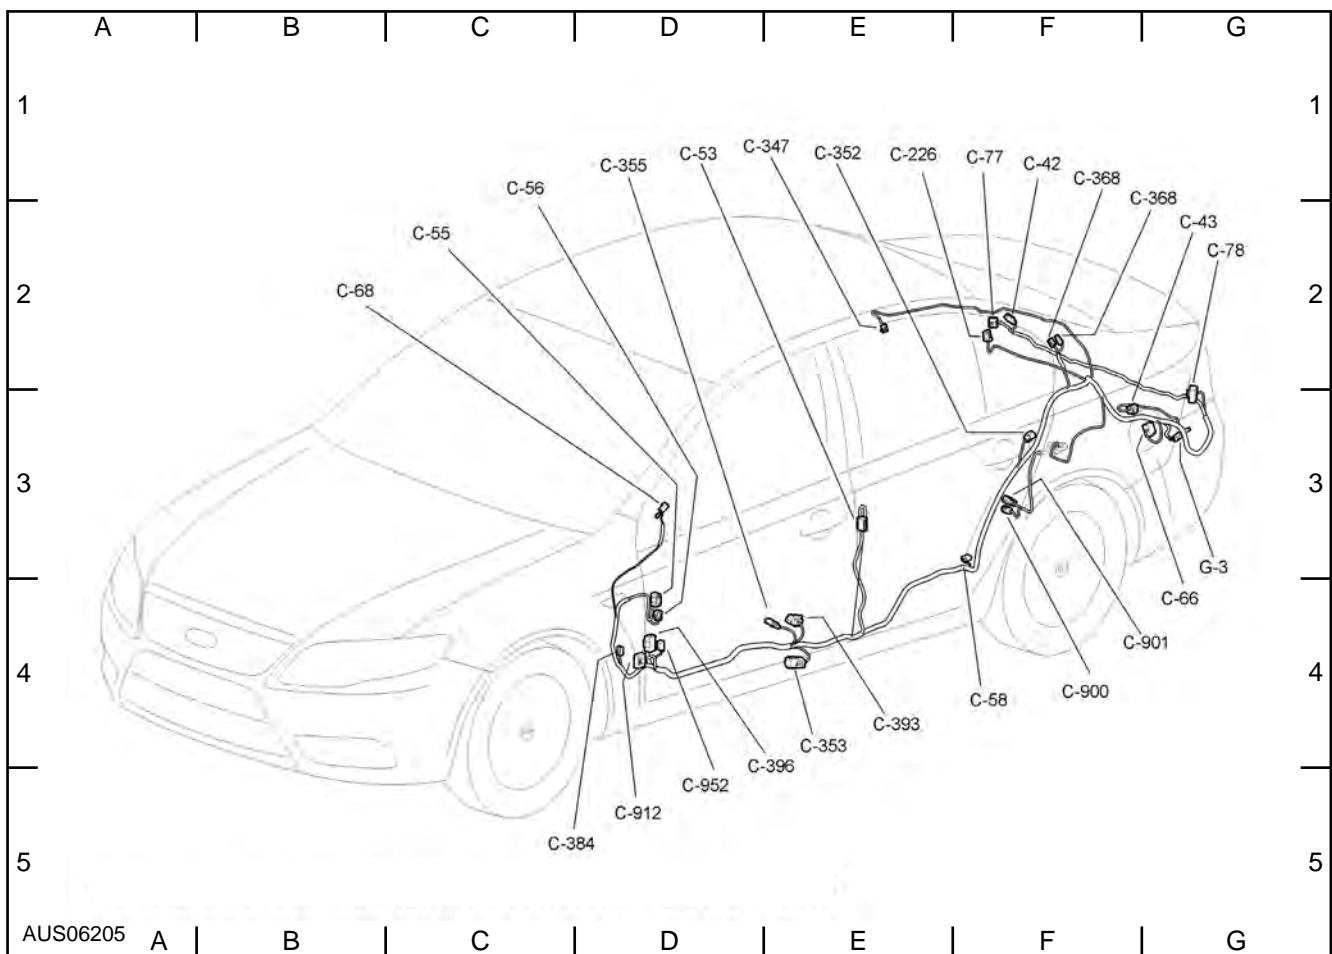COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Sedan - LHS SFLPG**

C-42	To 15A417 & to 14A005 / to 14405 & to 15A417-Sonar / 15527 & to 14A005	F2
C-43	Fuel Filter	G2
C-53	To 14633 & to 14A005	D1
C-55	To 14631 & to 14005 / 14A005	C1
C-56	To 14631 & to 14A005 (Crash Sensor)	C1
C-58	ABS Speed Sensor	F5
C-66	Amplifier	G4
C-68	Tweeter Speaker (Left)	B2
C-77	Right Tail Lamp	F1
C-78	Left Tail Lamp	G2
C-226	Subwoofer Speaker	E1
C-347	Curtain Airbag (LHS)	E1
C-352	Passenger Side Crash Sensor	E1
C-353	To 14A005 & 14005 (Crash Sensors)	E5
C-355	To 14A005 & 14405 (Curtain Airbag)	C2
C-368	Antenna Module	F1
C-384	Inertia Switch	D6
C-393	To 14A005 & 14405	E5

COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Sedan - LHS SFLPG**

C-396	To 14K024 & to 14A005/to 14405	E5
C-900	LPG Tank Lock Off Solenoid	F5
C-901	LPG Fuel Sensor	G5
C-912	To 12A581 & to 14A005	D6
C-952	To 14K024 and 14A005 (Antenna Cable)	D5
G-3	Left Rear Earth	G4

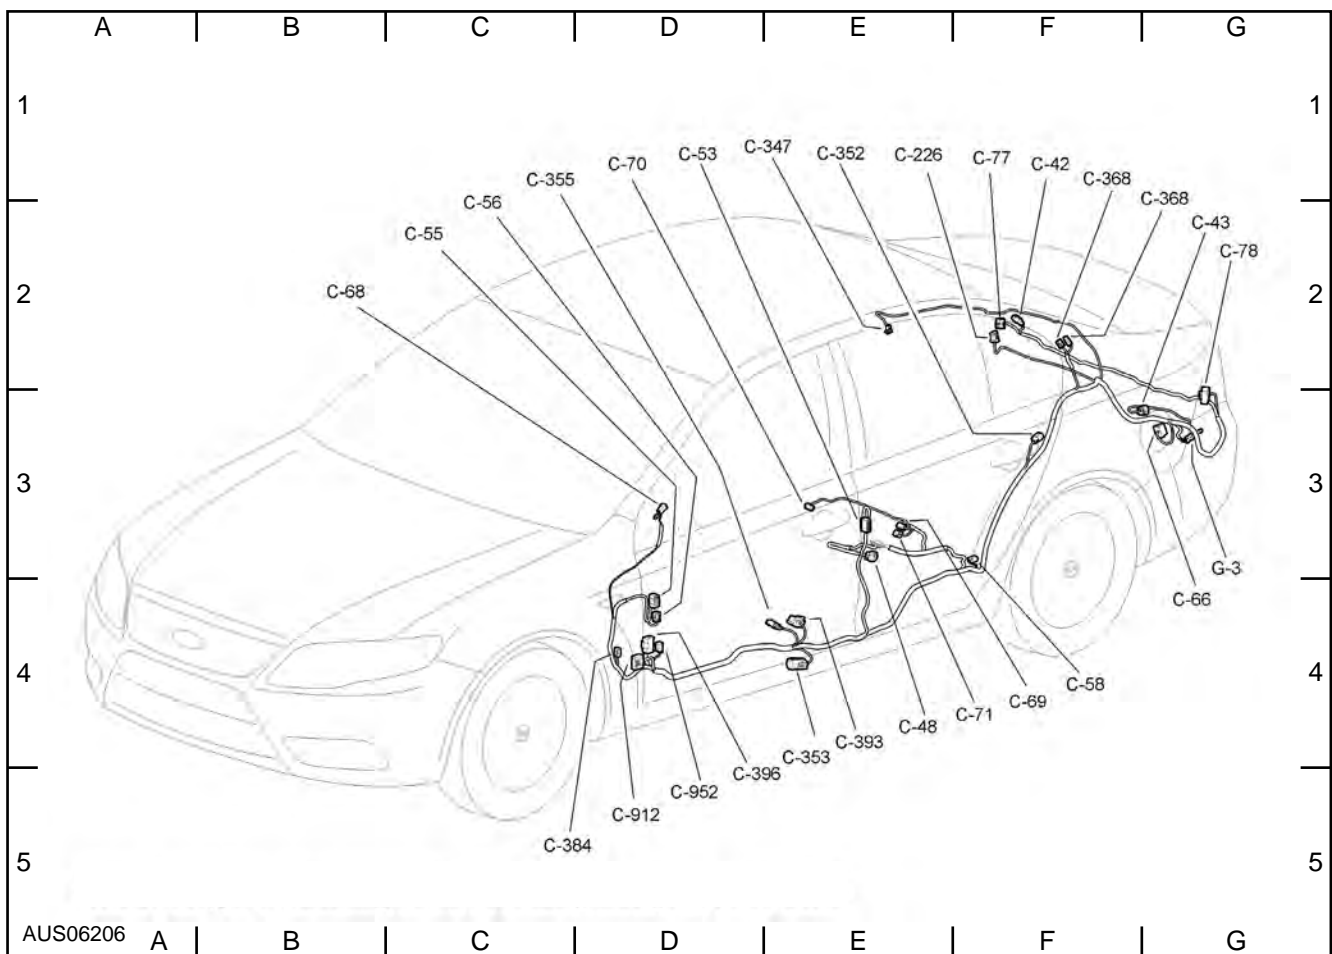
COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Sedan - LHS Petrol**

C-42	To 15A417 & to 14A005 / to 14405 & to 15A417-Sonar / 15527 & to 14A005	F2
C-43	Fuel Filter	G2
C-48	Fuel Tank Unit	E5
C-53	To 14633 & to 14A005	D1
C-55	To 14631 & to 14005 / 14A005	C1
C-56	To 14631 & to 14A005 (Crash Sensor)	C1
C-58	ABS Speed Sensor	F5
C-66	Amplifier	G4
C-68	Tweeter Speaker (Left)	B2
C-69	Beltminder Left Rear	F5
C-70	Beltminder Right Rear	D1
C-71	Beltminder Centre Rear	F5
C-77	Right Tail Lamp	F1
C-78	Left Tail Lamp	G2
C-226	Subwoofer Speaker	E1
C-347	Curtain Airbag (LHS)	E1
C-352	Passenger Side Crash Sensor	E1
C-353	To 14A005 & 14005 (Crash Sensors)	E5

COMPONENT LOCATION VIEWS (Continued)**Main Wiring - Sedan - LHS SFLPG**

C-355	To 14A005 & 14405 (Curtain Airbag)	C1
C-368	Antenna Module	F1
C-384	Inertia Switch	D6
C-393	To 14A005 & 14405	E5
C-396	To 14K024 & to 14A005(Sedan)/to 14405(Ute)	E5
C-912	To 12A581 & to 14A005	D5
G-3	Left Rear Earth	G4

COMPONENT LOCATION VIEWS (Continued)

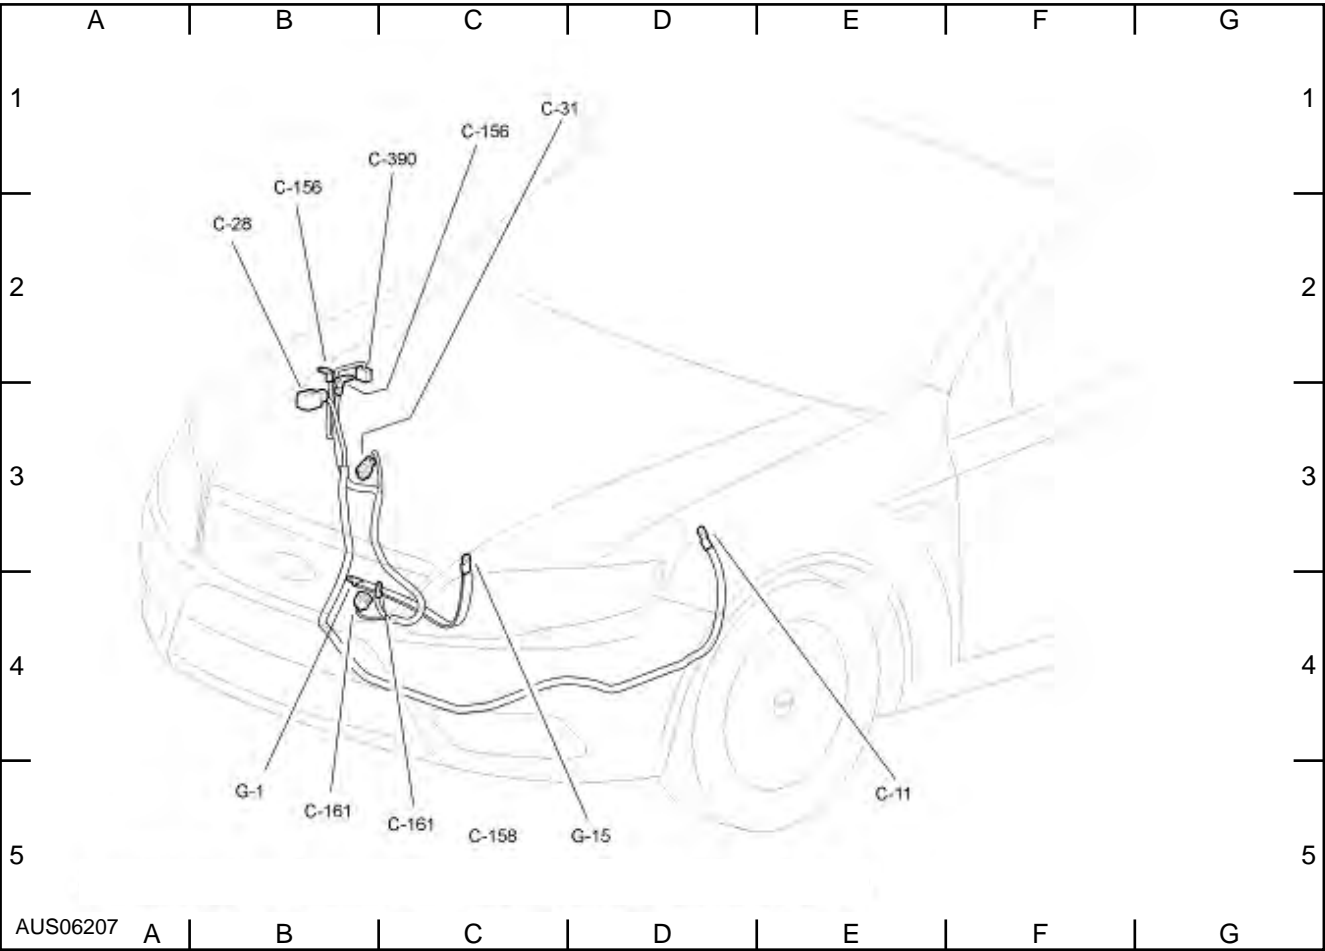


Battery Cables Wiring - Sedan - I6 & SFLPG

C-11	Starter Solenoid	D4
C-28	Battery (+)	B3
C-31	Switch (Power Steering)	C3
C-156	PDB (ALT) / PDB (ST)	C5
C-161	Alternator / Smart Alternator	A2
C-390	To 14K011 & to 14305	B5
G-1	Body Ground	A2
G-15	Engine Ground	A1



COMPONENT LOCATION VIEWS (Continued)

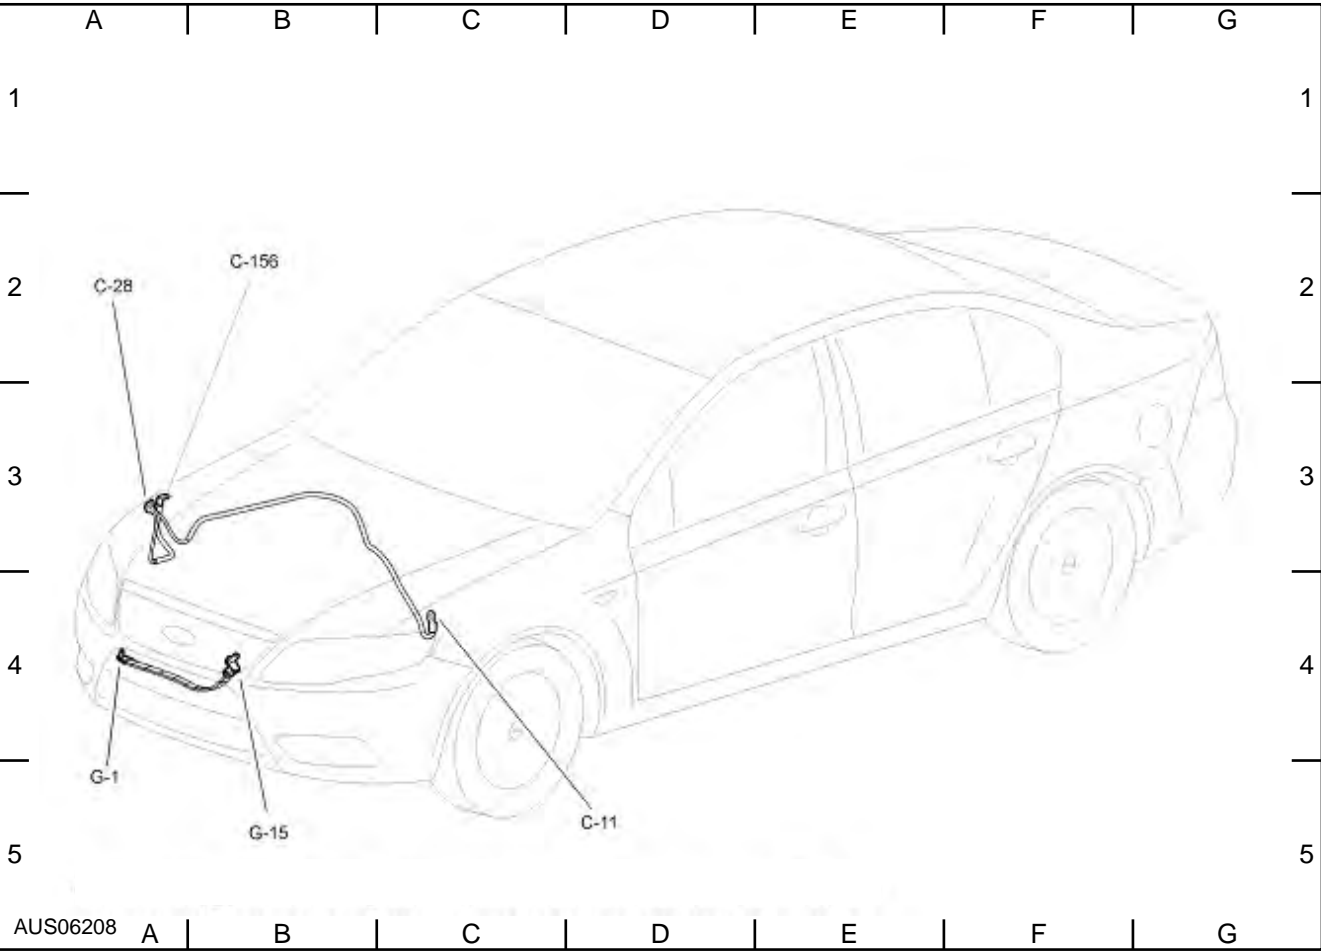


Battery Cables Wiring - Sedan - V8

C-11	Starter Solenoid	F2
C-28	Battery (+)	B4
C-156	PDB (ALT) / PDB (ST)	B5
C-161	Alternator / Smart Alternator	E1
C-390	To 14K011 & to 14305	B5
G-1	Body Ground	B1
G-15	Engine Ground	D1




COMPONENT LOCATION VIEWS (Continued)

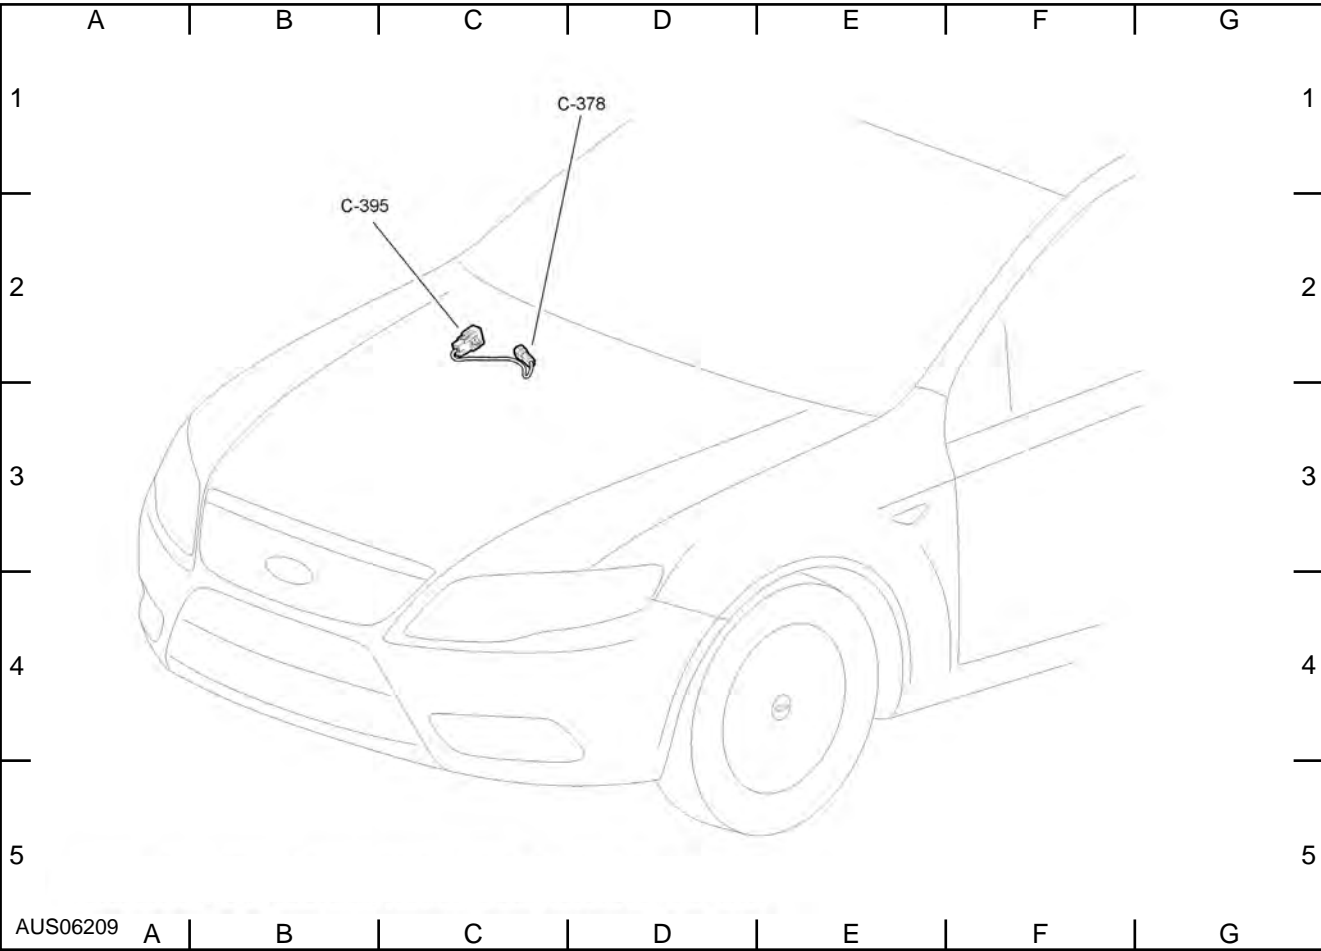

Pedal Wiring - Sedan - G6 Non Adjustable		
C-378	Memory Delete Resistor	C1
C-395	To 14405	C1




COMPONENT LOCATION VIEWS (Continued)

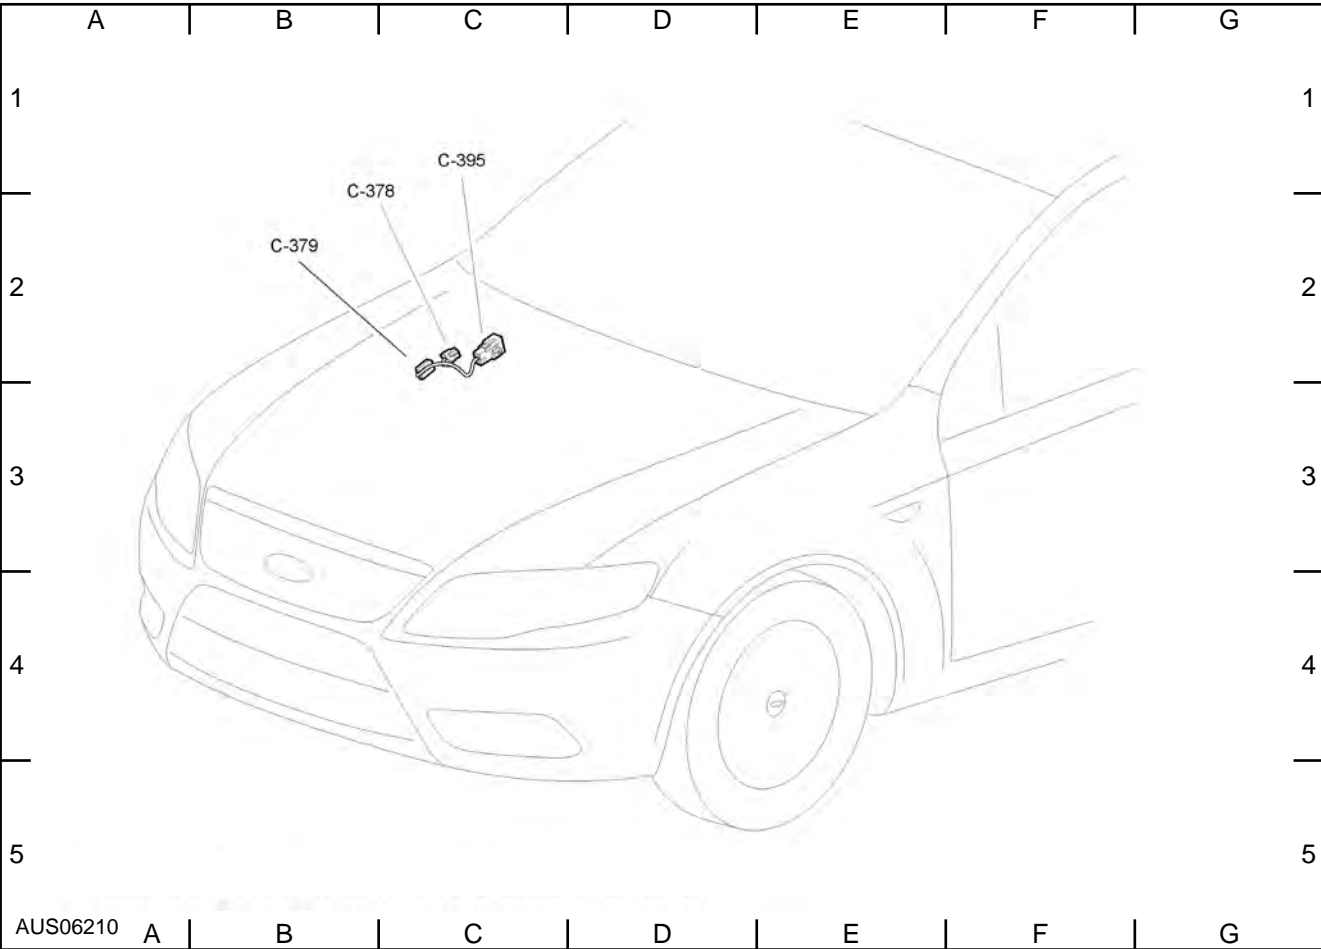

Pedal Wiring - Sedan - G6 Memory Adjustable		
C-378	Pedal Position Sensor	C1
C-379	Power Pedal Motor	B2
C-395	To 14405	C1




COMPONENT LOCATION VIEWS (Continued)

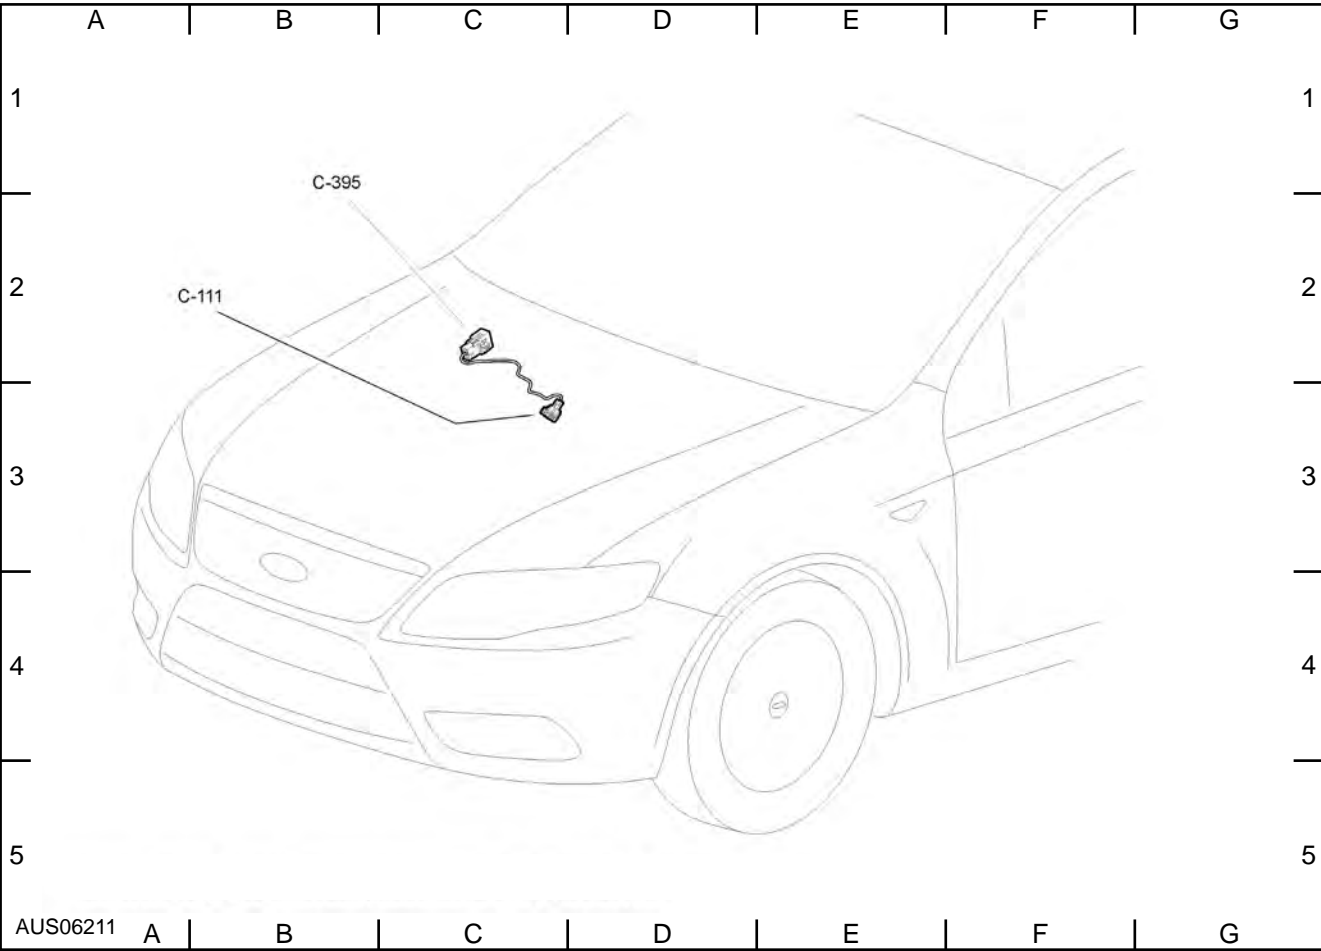

Pedal Wiring - Sedan - Manual Gear Box		
C-111	Clutch Switch	B2
C-395	To 14405	B1




COMPONENT LOCATION VIEWS (Continued)

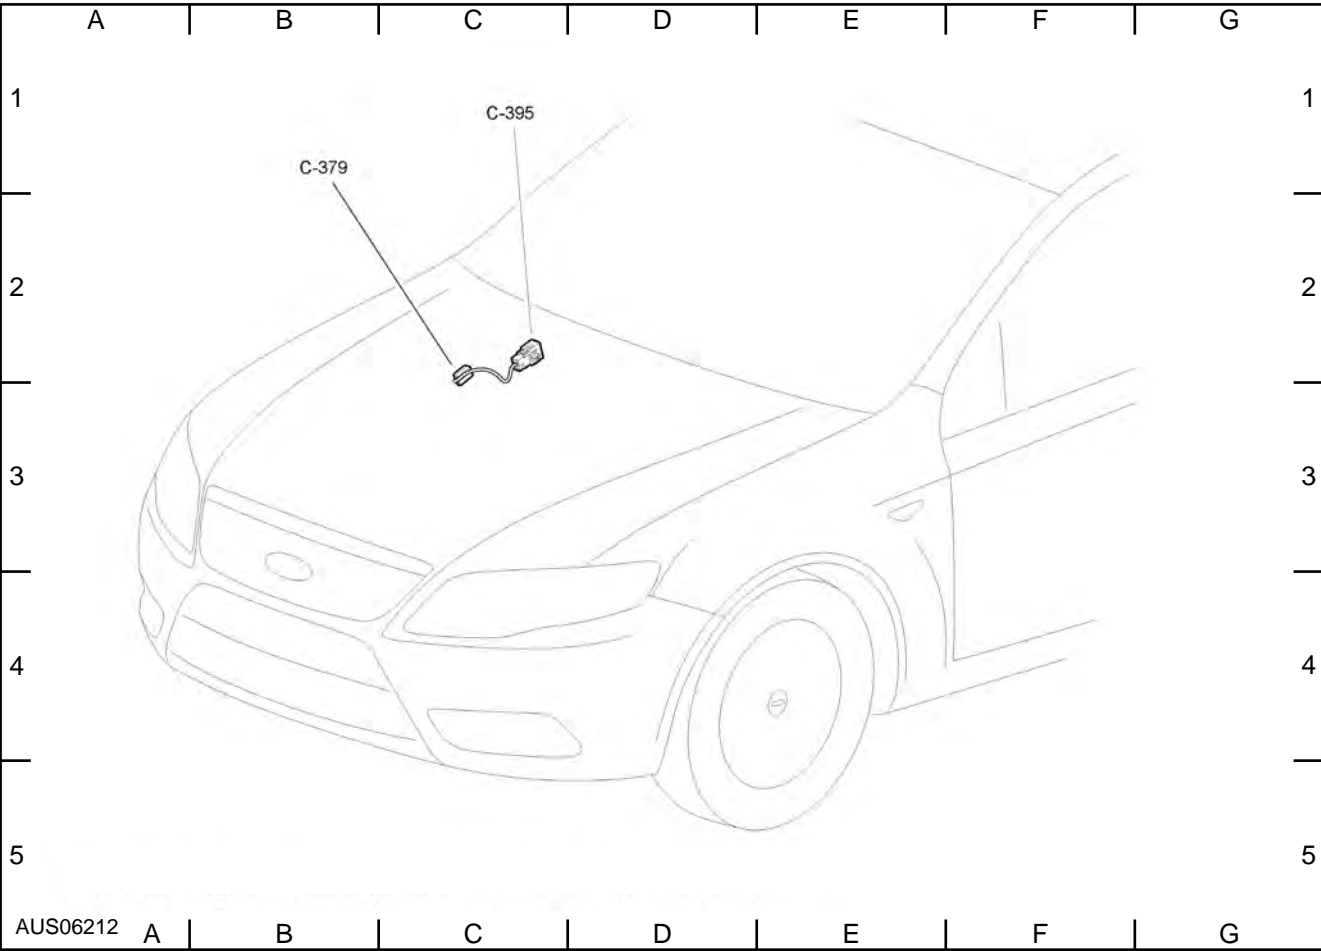

Pedal Wiring - Sedan - Adjustable (Non Memory)

C-379	Power Pedal Motor	B1
C-395	To 14405	C1

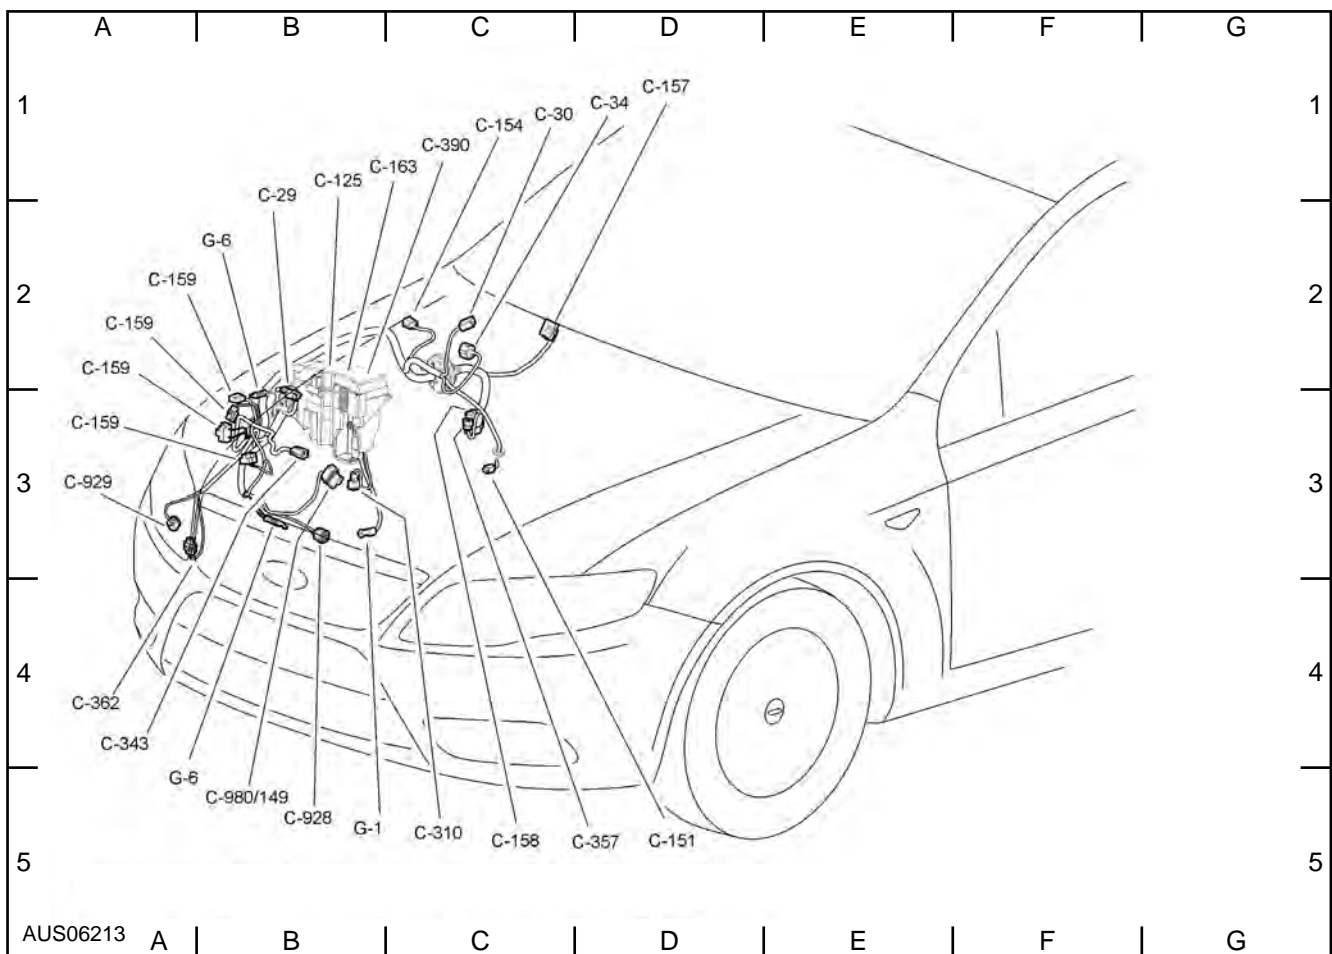


COMPONENT LOCATION VIEWS (Continued)**Front End Engine Compartment Wiring**

C-29	Battery (-)	B1
C-30	Front Wiper Motor	D1
C-34	Brake Fluid Level Switch	D1
C-125	To 12A581	B1
C-149	Cooling Fan (Dual where fitted)	B5
C-151	ABS RH Speed Sensor	D6
C-154	Right Side Marker Indicator	C1
C-157	To 14K024 - Instrument Panel Fuse Box (J/B)	D1
C-158	To 14K024 - Instrument Panel	C6
C-159	Right HI-Beam / Right LO-Beam / Right Parkers / Right Turn Signal	B2
C-163	Power Distribution Box (PDB)	C1
C-310	Wastegate Solenoid (Turbo where fitted)	C6
C-343	Front Crash Sensor (RHS)	B5
C-357	To 14K024 (RH Front Crash Sensor)	D6
C-362	Right Fog Lamp	A5
C-390	To 14305 (Alt and Power Steering Sensor)	C1
C-928	Alarm Switch (where fitted)	B6
C-929	Anti Theft Alarm (where fitted)	A3

COMPONENT LOCATION VIEWS (Continued)**Front End Engine Compartment Wiring**


C-980	Cooling Fan (Single where fitted)	B5
G-1	Body Ground	C5
G-6	Right Front Ground	B5

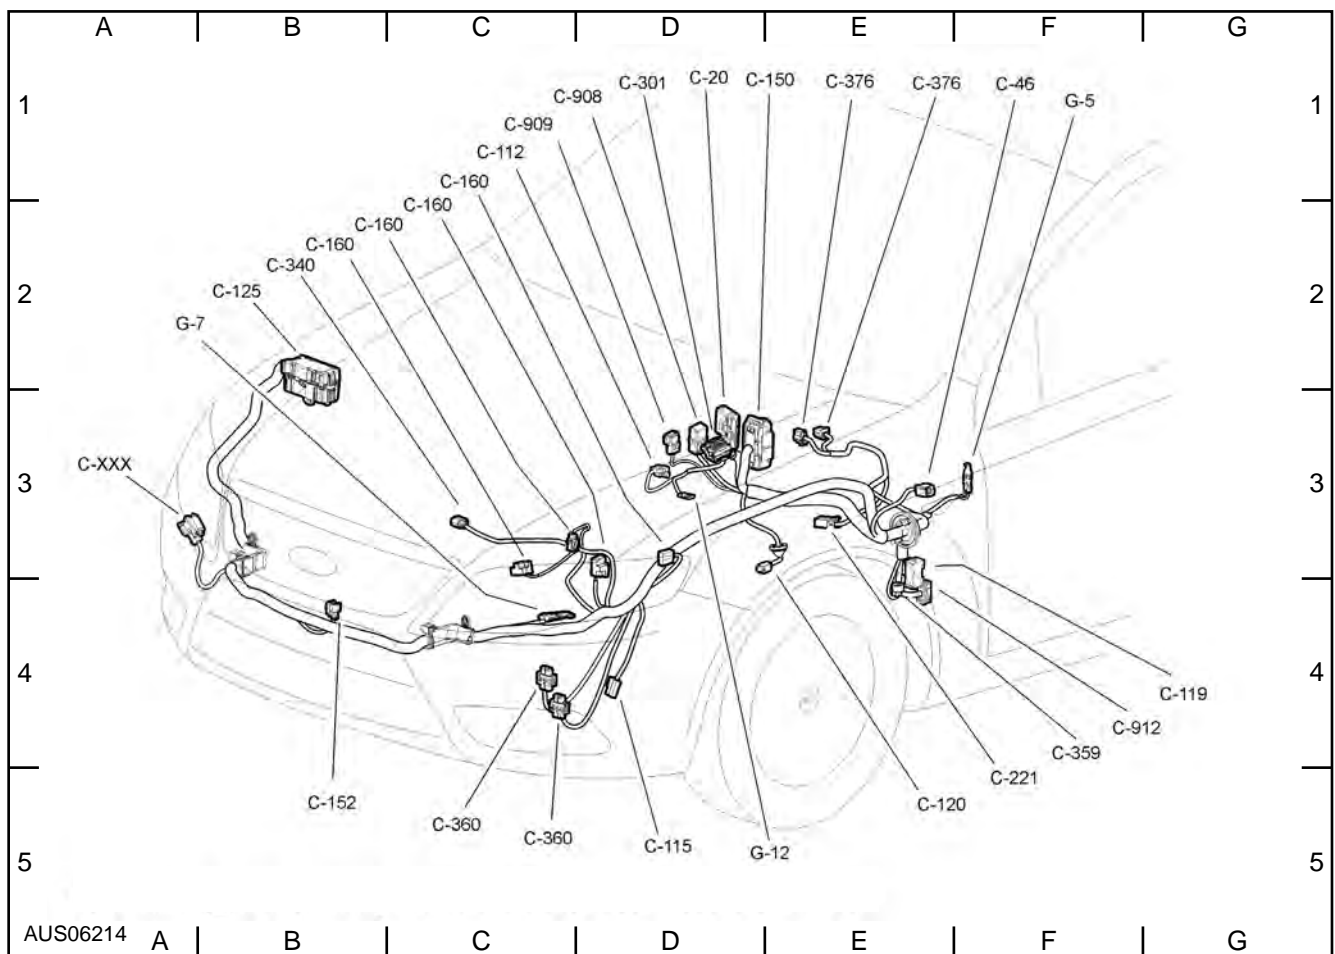COMPONENT LOCATION VIEWS (Continued)**Engine Controls Wiring - Sedan - SFLPG**

C-20	To 14289	D1
C-46	Left Side Marker Direction Indicator	F1
C-112	IMCC (SFLPG)	C1
C-116	Front Washer Motor	D6
C-119	To 14K024 Instrument Panel	G5
C-120	ABS Speed Sensor	F6
C-125	To 14K011	B2
C-150	DSC Module	D1
C-152	Horn (Centre Mount)	B5
C-152	Horn (RHS Mount)	A3
C-160	Left HI-Beam / Left LO-Beam / Left Parkers / Left Turn Signal	C2
C-221	Blower Fan Motor A/C	F5
C-301	PCM - B pocket	D1
C-340	Crash Sensor (Front Left)	B2
C-360	Left Fog Lamp	C5
C-359	To 14K024 (LH Front Crash Sensor)	G5
C-376	HIM Module	F1
C-908	LPG Relay	D1

COMPONENT LOCATION VIEWS (Continued)


Engine Controls Wiring - Sedan - SFLPG		
C-909	LPG Fuse	C1
C-912	To 14A005 Sedan / to 14405 Ute	G5
G-5	Left Cowl Side Earth	F1
G-7	Left Front Ground	D4
G-12	PCM Case Earth	D3

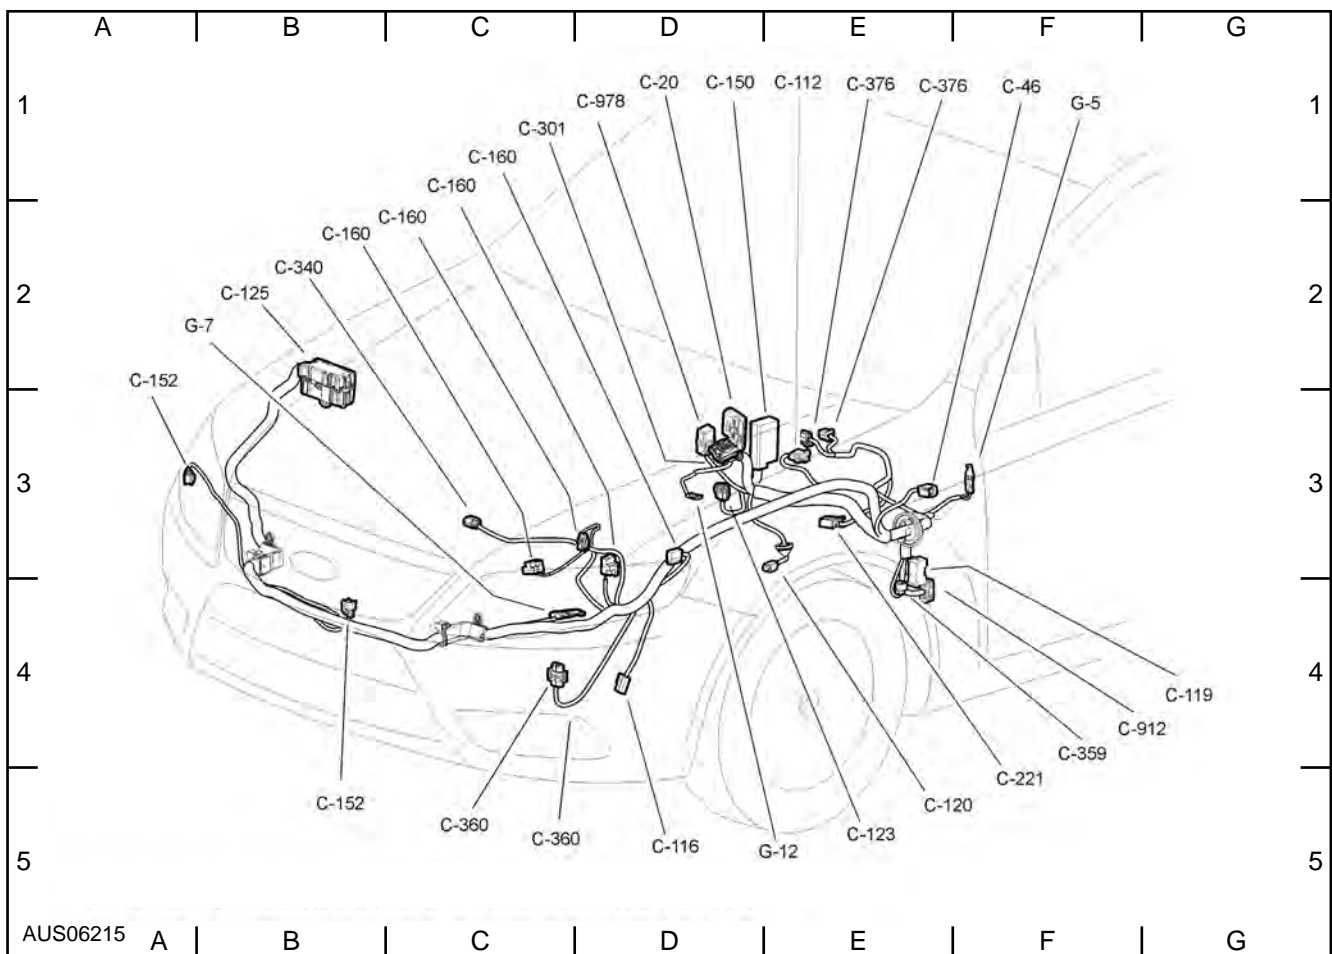COMPONENT LOCATION VIEWS (Continued)**Engine Controls Wiring - Petrol**

C-20	To 14289 (I6) / 12B637 (V8)	D1
C-46	Left Side Marker Direction Indicator	F1
C-112	IMCC (Petrol)	E1
C-116	Front Washer Motor	D6
C-119	To 14K024 Instrument Panel	G5
C-120	ABS Speed Sensor	F5
C-123	Canister Purge Solenoid	E6
C-125	To 14K011	B3
C-150	DSC Module	E1
C-152	Horn (Centre Mount)	B5
C-152	Horn (RHS Mount)	A3
C-160	Left HI-Beam / Left LO-Beam / Left Parkers / Left Turn Signal	C2
C-221	Blower Fan Motor A/C	E3
C-301	PCM - B pocket	F5
C-340	Crash Sensor (Front Left)	B2
C-360	Left Fog Lamp	C6
C-359	To 14K024 (LH Front Crash Sensor)	G5
C-376	HIM Module	F1

COMPONENT LOCATION VIEWS (Continued)**Engine Controls Wiring - Petrol**

C-912	To 14A005 Sedan / to 14405 Ute	G5
C-978	Reverse Light Relay (6 Speed Automatic)	D1
G-5	Left Cowl Side Earth	F1
G-7	Left Front Ground	B2
G-12	PCM Case Earth	E6

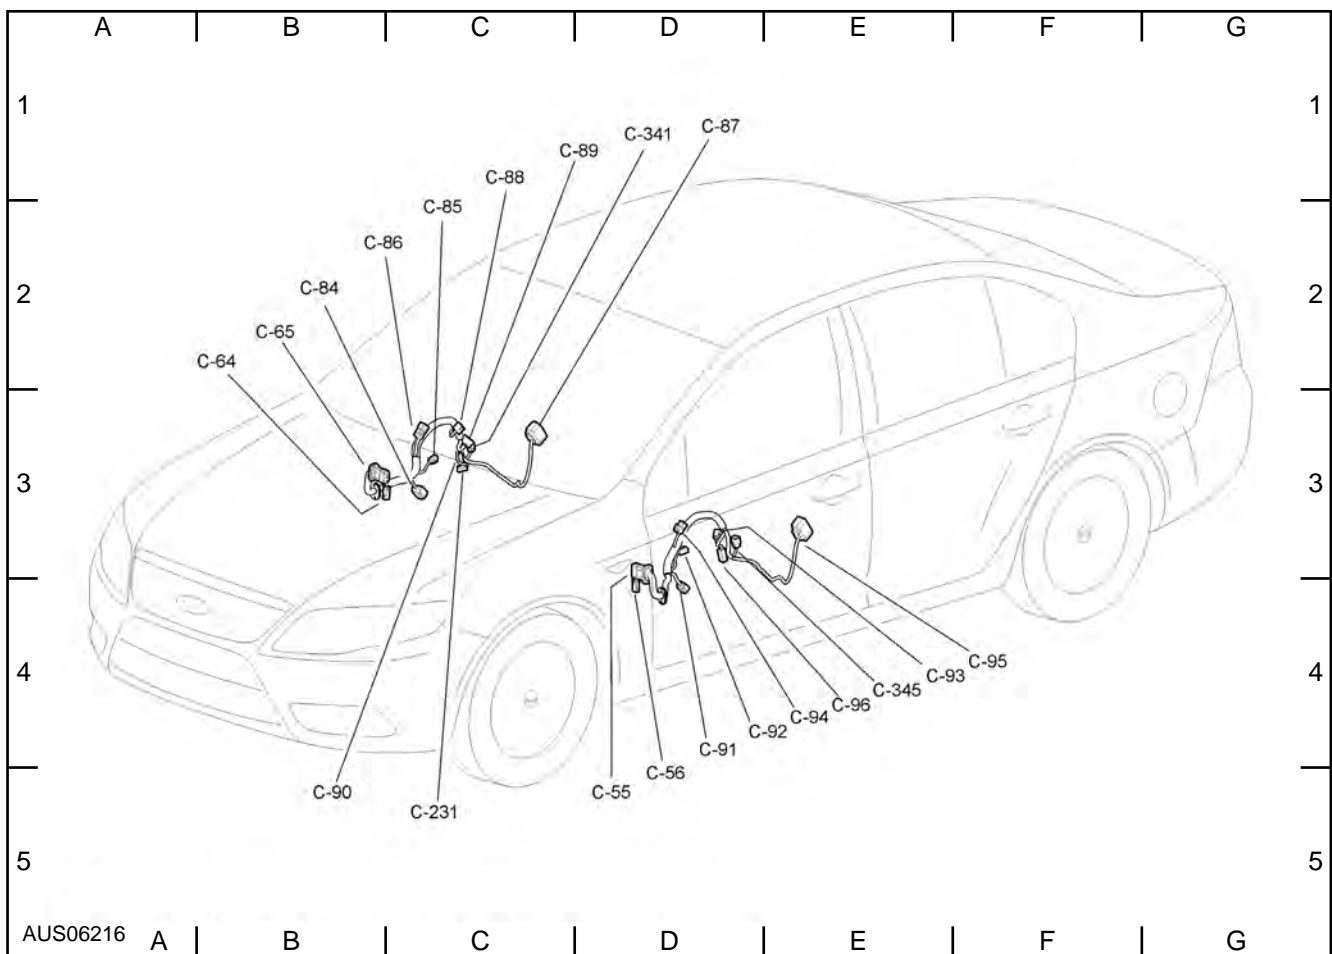
COMPONENT LOCATION VIEWS (Continued)**Front Door Wiring - Sedan and Ute (All series)**

C-56	To 14631 & to 14A005	D5
C-55	To 14631 & to 14A005	D5
C-64	To 14630 & to 14405	B2
C-65	To 14630 & to 14405	B2
C-84	Right Front Power Window Motor	B2
C-85	Right Front Speaker	C1
C-86	Right Front Mirror Motor	C2
C-87	Right Front Door Lock Motor	D1
C-88	Power Mirror Switch	C1
C-89	Power Window Switch	D1
C-90	Right Front Door Courtesy Lamp	C5
C-91	Left Front Power Window Motor	D5
C-92	Left Front Speaker	E5
C-93	Left Front Power Window Switch	F5
C-94	Left Front Mirror Motor	E5
C-95	Left Front Door Lock Motor	F5
C-96	Left Front Door Courtesy Lamp	E5
C-231	Motor Control Module Assembly (Memory)	C5

COMPONENT LOCATION VIEWS (Continued)**Front Door Wiring - Sedan and Ute (All series)**

C-341	Crash Sensor (Right)	D1
C-345	Crash Sensor (Left)	E5

COMPONENT LOCATION VIEWS (Continued)

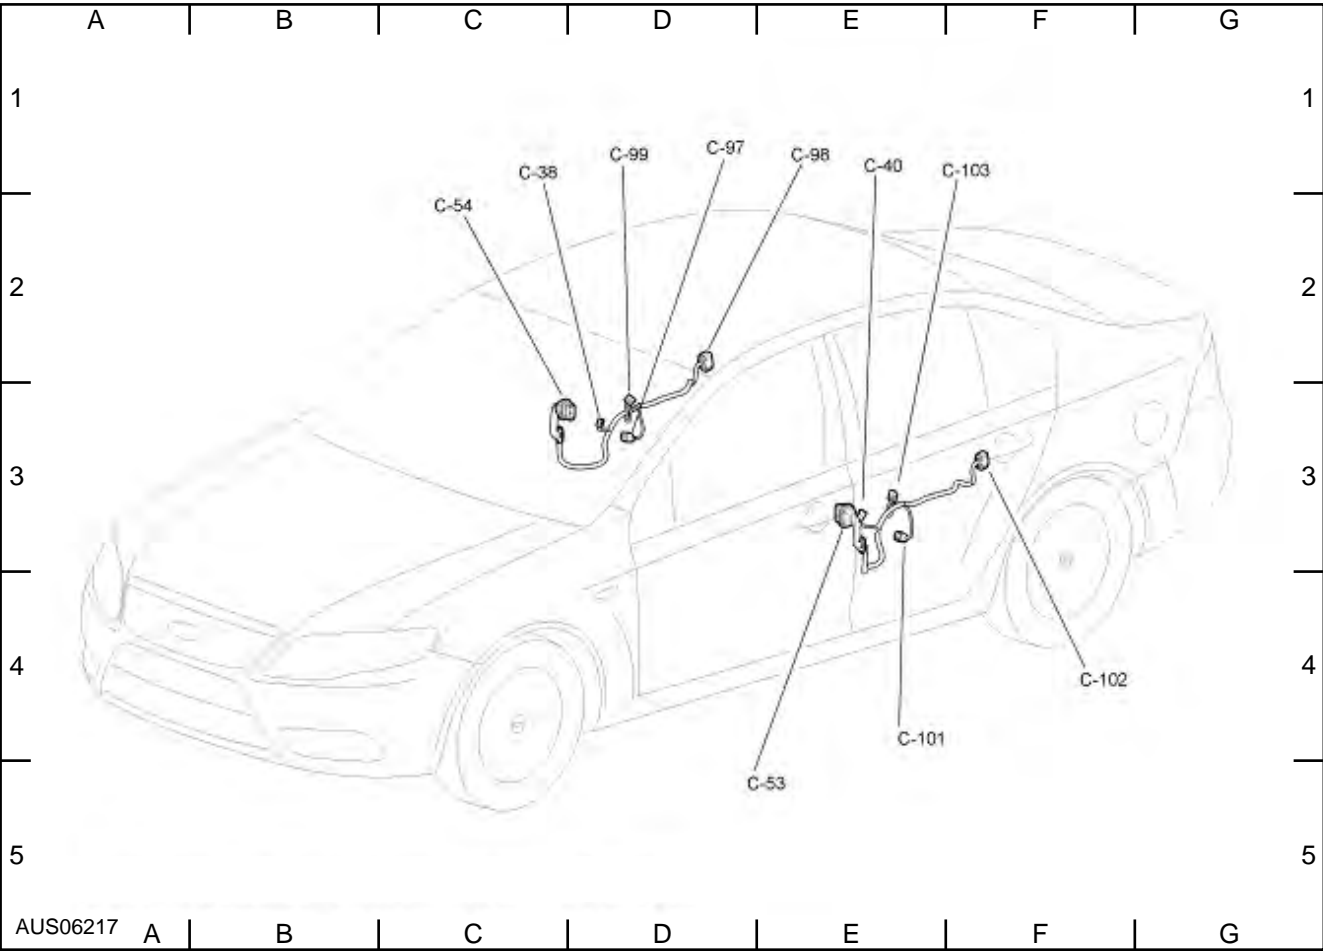


Rear Door Wiring - Sedan (Harness 14632 and 14633)

C-38	Right Rear Speaker	C1
C-40	Left Rear Speaker	E1
C-53	To 14633 & to 14A005	E5
C-54	To 14632 & to 14405	C2
C-97	Right Rear Window Motor	E1
C-98	Right Door Lock Motor	E1
C-99	Right Rear Window Switch	D1
C-101	Left Rear Window Motor	E5
C-102	Left Rear Door Lock Motor	F5
C-103	Left Rear Window Switch	F2



COMPONENT LOCATION VIEWS (Continued)

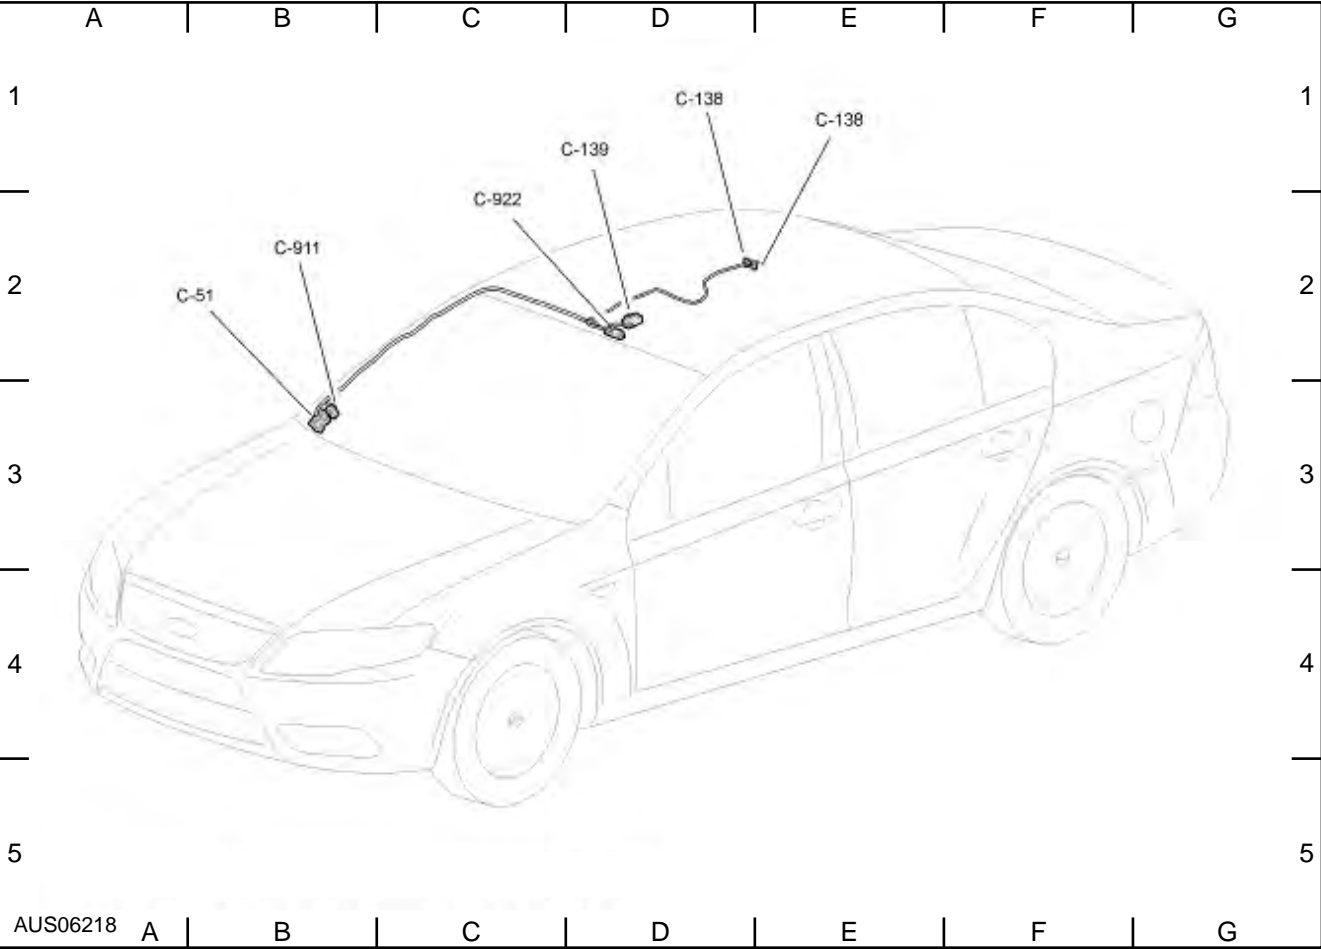


Roof Wiring - Sedan - with Microphone

C-51	To 13B711 & to 14405	B2
C-138	Dome Lamp	D1/E1
C-139	Map Lamp / Front Reading Lamp	D1
C-911	To 13B711 & to 14K024 (Microphone)	B2
C-922	Microphone	C1



COMPONENT LOCATION VIEWS (Continued)

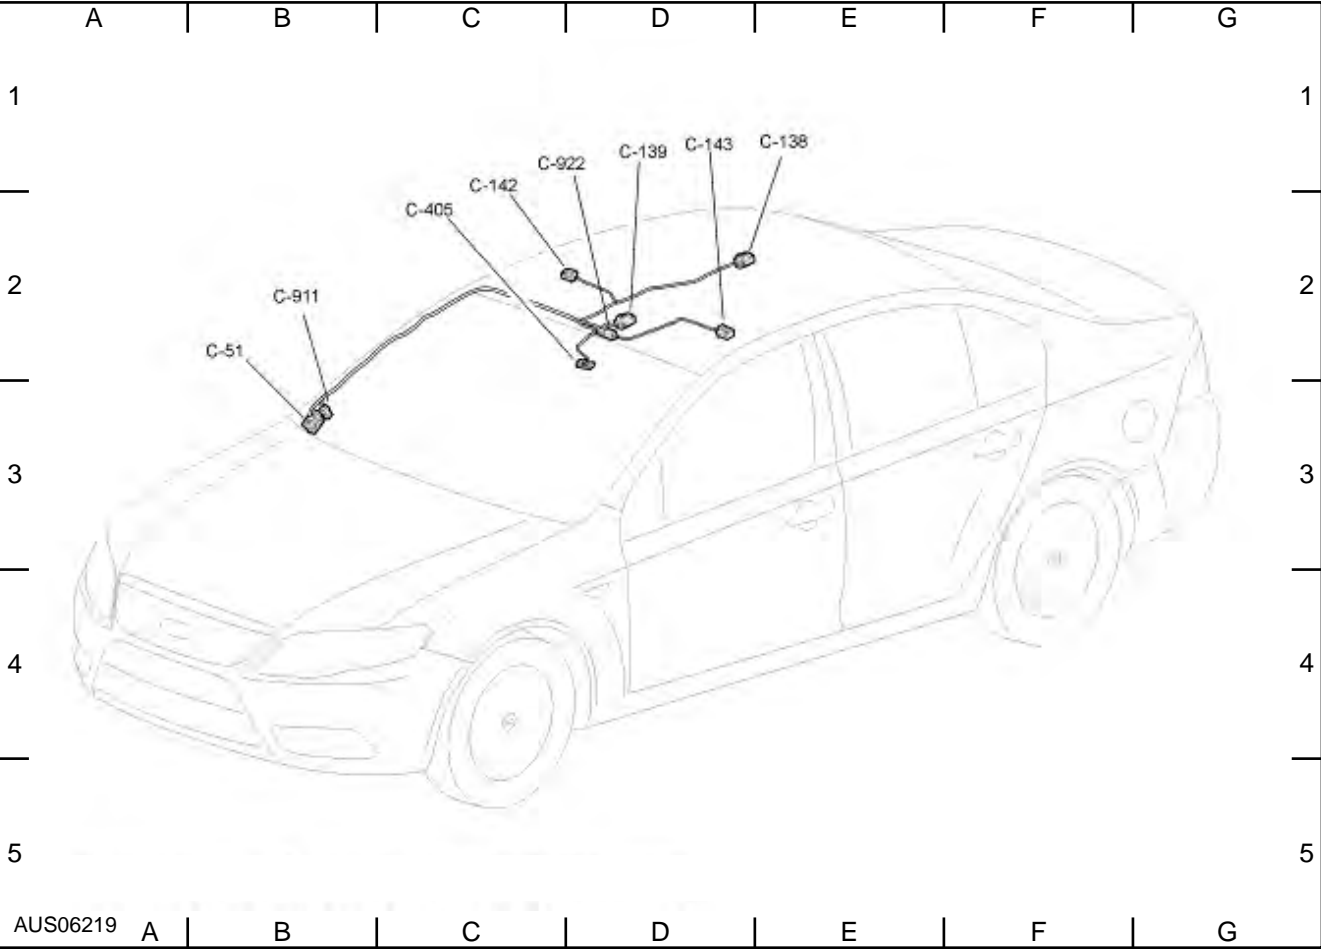


Roof Wiring - Sedan - with Electrochromic Mirror, Vanity Mirror Lamps and Microphone

C-51	To 13B711 & to 14405	B3
C-138	Dome Lamp	E2
C-139	Map Lamp / Front Reading Lamp	D1
C-142	Right Vanity Mirror Lamp	C1
C-143	Left Vanity Mirror Lamp	D1
C-405	Mirror Rear View Electrochromic	C2
C-911	To 13B711 & to 14K024 (Microphone)	B2
C-922	Microphone	C1



COMPONENT LOCATION VIEWS (Continued)

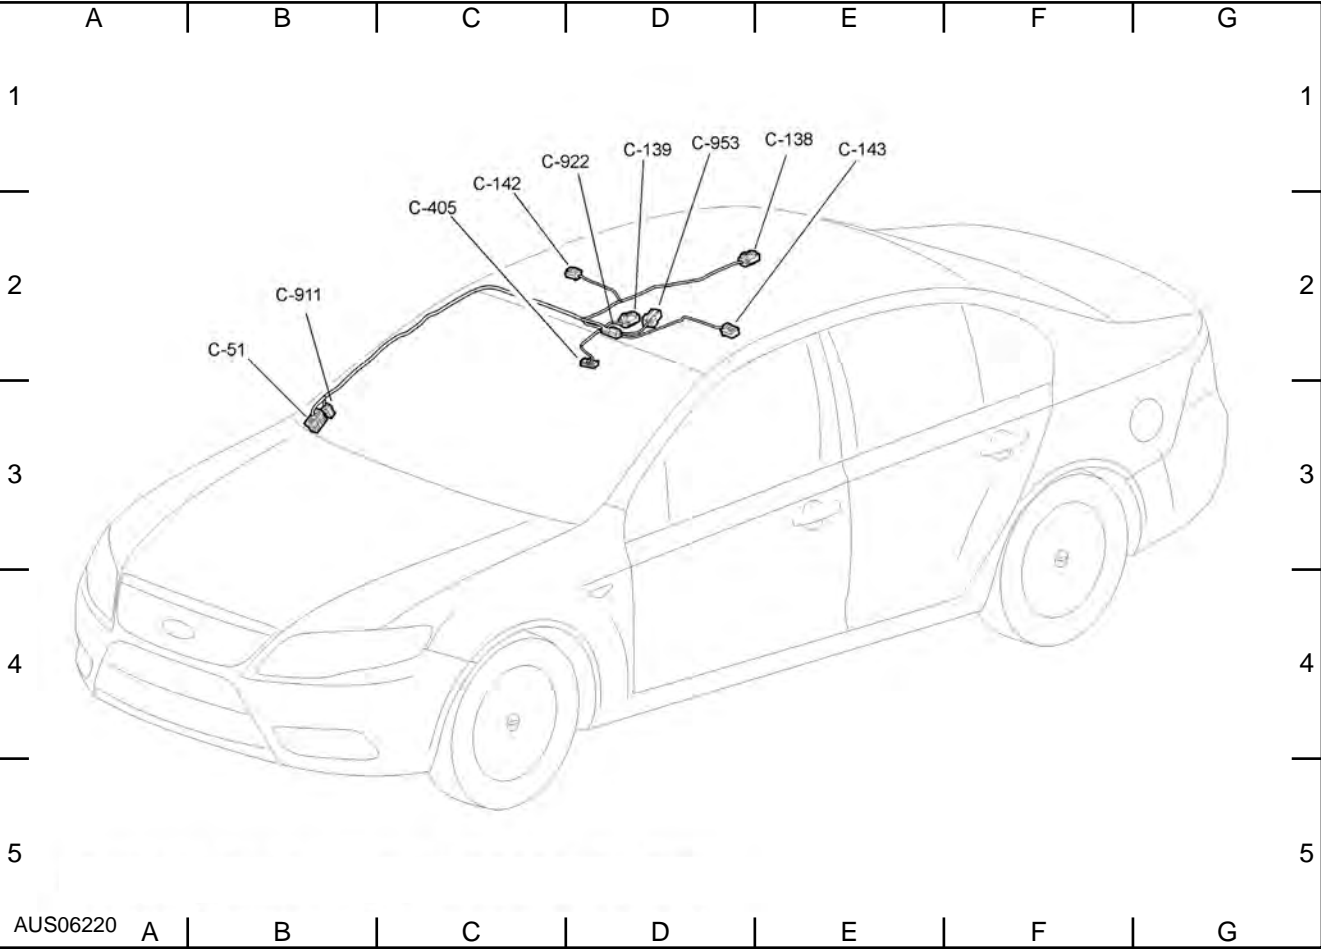


Roof Wiring - Sedan - with Electrochromic Mirror, Vanity Mirror Lamps, Microphone and Satellite Navigation Remote Control Infrared Receiver

C-51	To 13B711 & to 14405	B3
C-138	Dome Lamp	E2
C-139	Map Lamp / Front Reading Lamp	D1
C-142	Right Vanity Mirror Lamp	C1
C-143	Left Vanity Mirror Lamp	E1
C-405	Mirror Rear View Electrochromic	C2
C-911	To 13B711 & to 14K024 (Microphone)	B2
C-922	Microphone	D1
C-953	Navigation Remote Control Sensor	D1




COMPONENT LOCATION VIEWS (Continued)

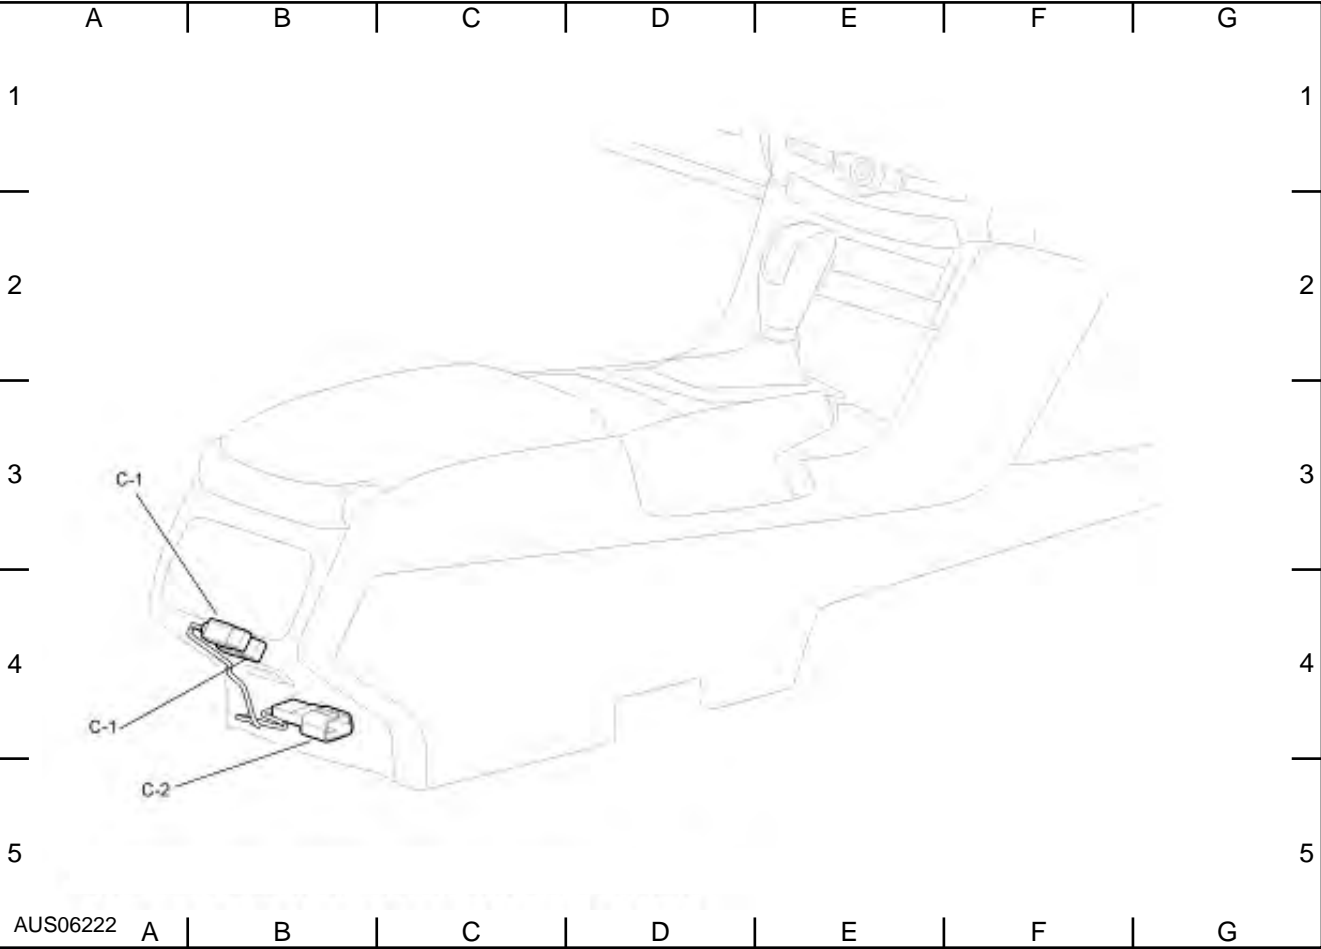

Interior Lamp Wiring - Sedan		
C-1	Console Footwell Lamp	A3/A4
C-2	To 14405 & to 13769	A5




COMPONENT LOCATION VIEWS (Continued)

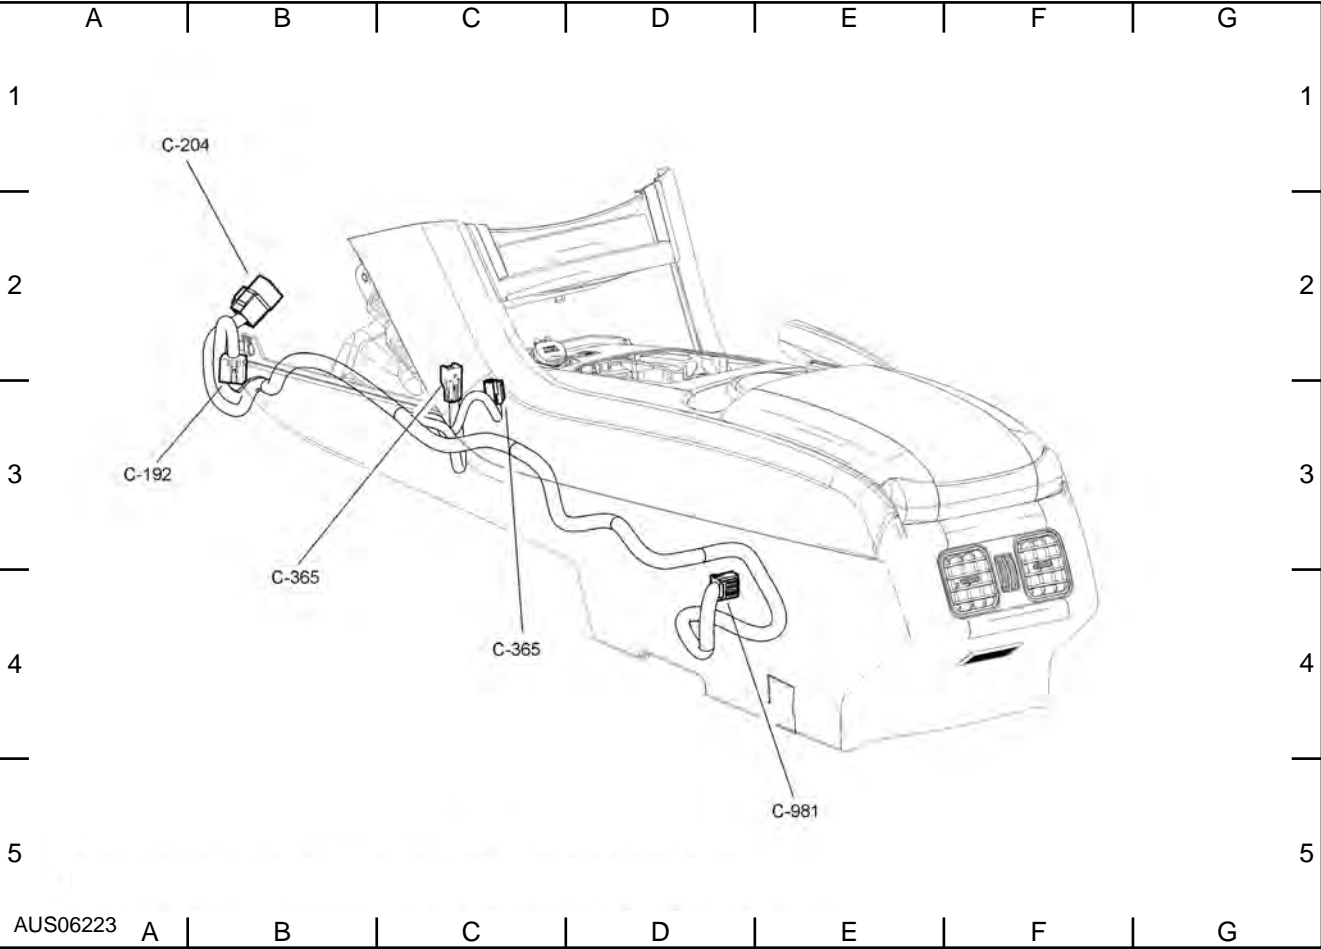

Audio Interface - No Bluetooth		
C-192	To 14K024/Bluetooth & to 14C575	A3
C-204	To 14K024 & to 14C575, (to instrument panel wiring 14K024)	B1
C-365	To 14K024 & to 14C575, (to instrument panel wiring 14K024)	B4
C-365	To 14K024 & to 14C575, (to audio jack)	C5
C-981	Audio Interface Module	E6



COMPONENT LOCATION VIEWS (Continued)

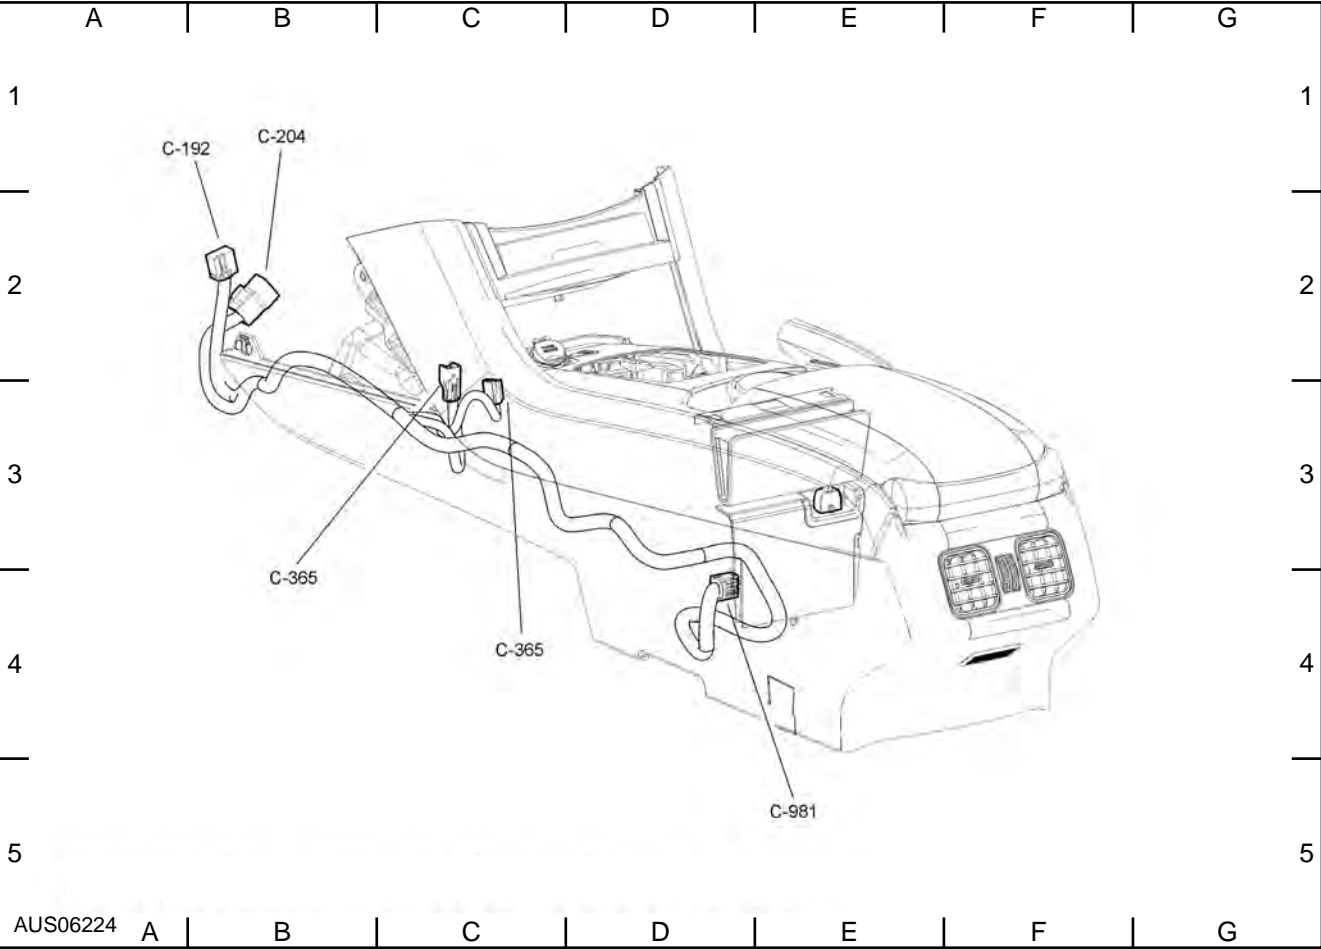


Audio Interface - with Bluetooth

C-192	To 14K024/Bluetooth & to 14C575 (to instrument panel wiring 14K024)	B1
C-204	To 14K024 & to 14C575, (to instrument panel wiring 14K024)	B1
C-365	To 14K024 & to 14C575, (to instrument panel wiring 14K024)	B4
C-365	To 14K024 & to 14C575, (to audio jack)	C5
C-981	Audio Interface Module	E6




COMPONENT LOCATION VIEWS (Continued)

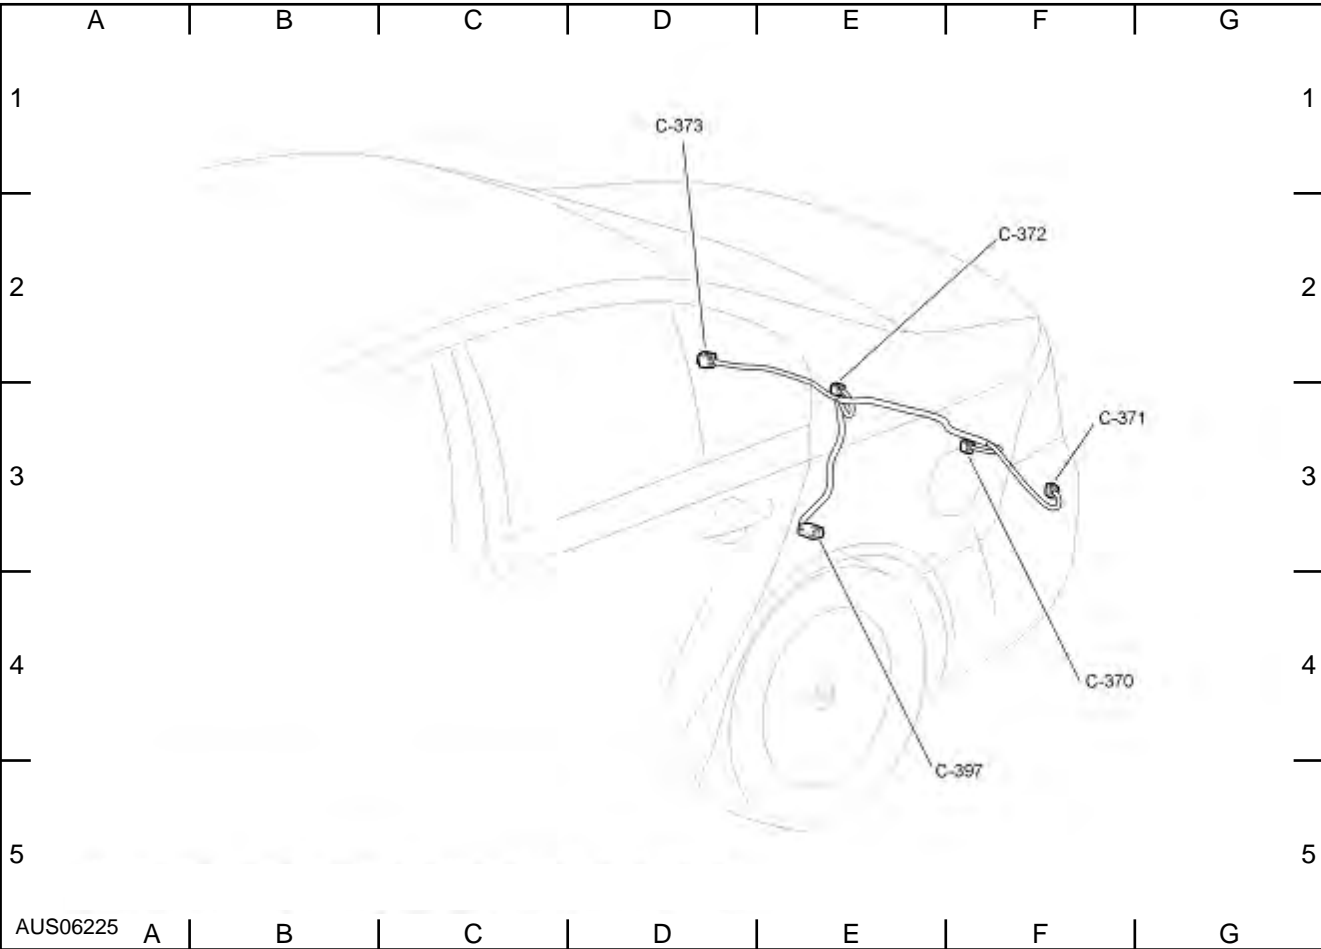

Reverse Parking Aid Sensor Wiring - Sedan		
C-370	Sonar Sensor Left Inboard	G5
C-371	Sonar Sensor Left Outboard	G3
C-372	Sonar Sensor Right Inboard	F2
C-373	Sonar Sensor Right Outboard	D1
C-397	To 15A536 & to 15A417 or to 15527/13A444 & to 13N419 & to 15A417	F5



COMPONENT LOCATION VIEWS (Continued)

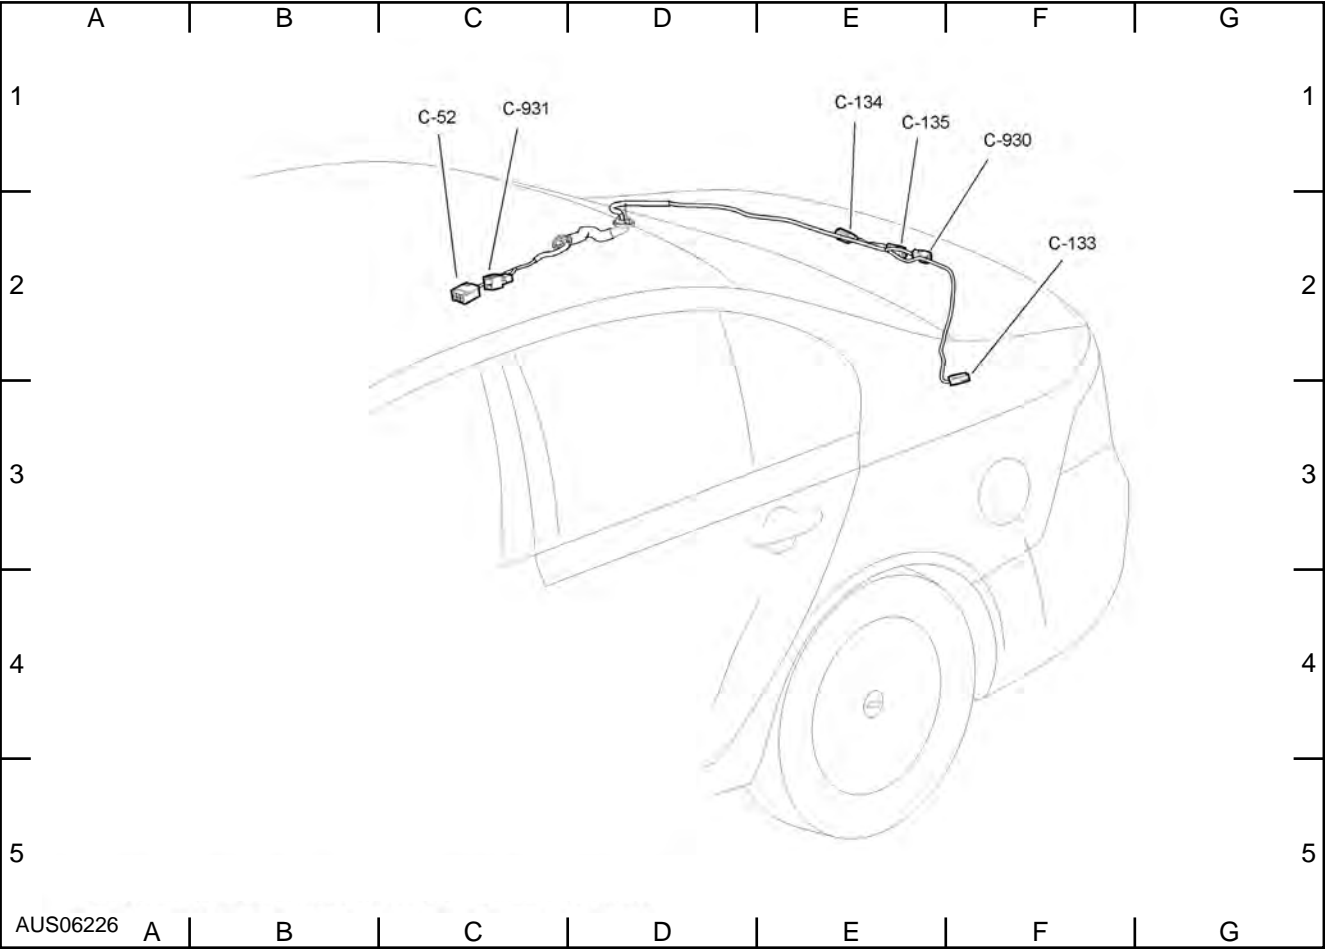


Decklid Wiring - Sedan

C-52	To 13A444 & to 14405	C1
C-133	Decklid Solenoid	F2
C-134	Stop Lamp (Spoiler)	E1
C-135	Registration Plate Lamp / Decklid Open Switch	F1
C-931	To 14405 & to 13A444 (Camera)	C1
C-930	Camera	F1




COMPONENT LOCATION VIEWS (Continued)

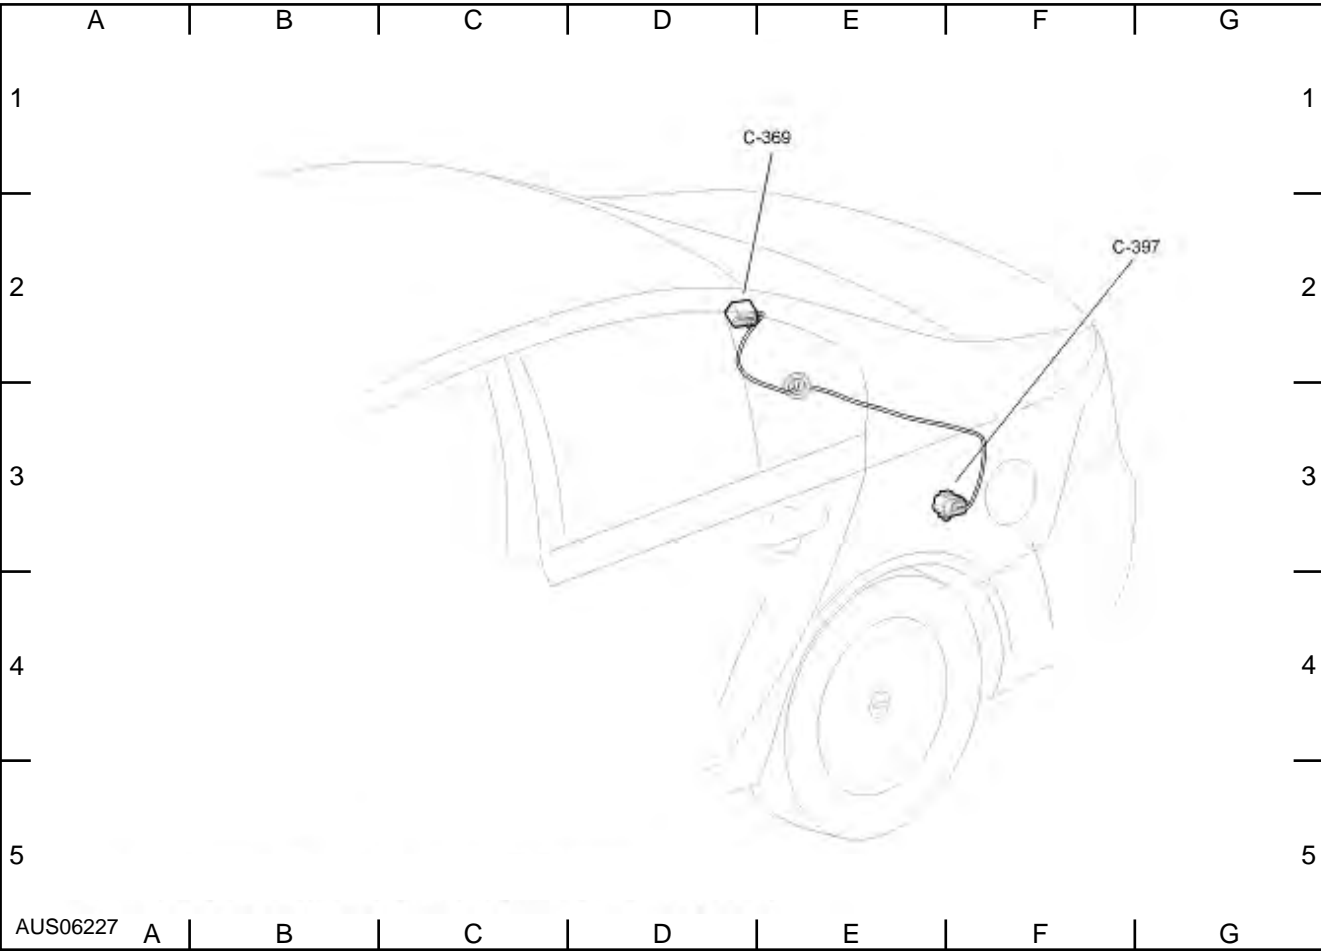

Reverse Parking Aid Wiring - Sedan		
C-369	Reverse Parking Aid Module	E1
C-397	To 15A536 & to 15A417 or to 15527/13A44 & to 13N419 & to 15A417	G2



COMPONENT LOCATION VIEWS (Continued)

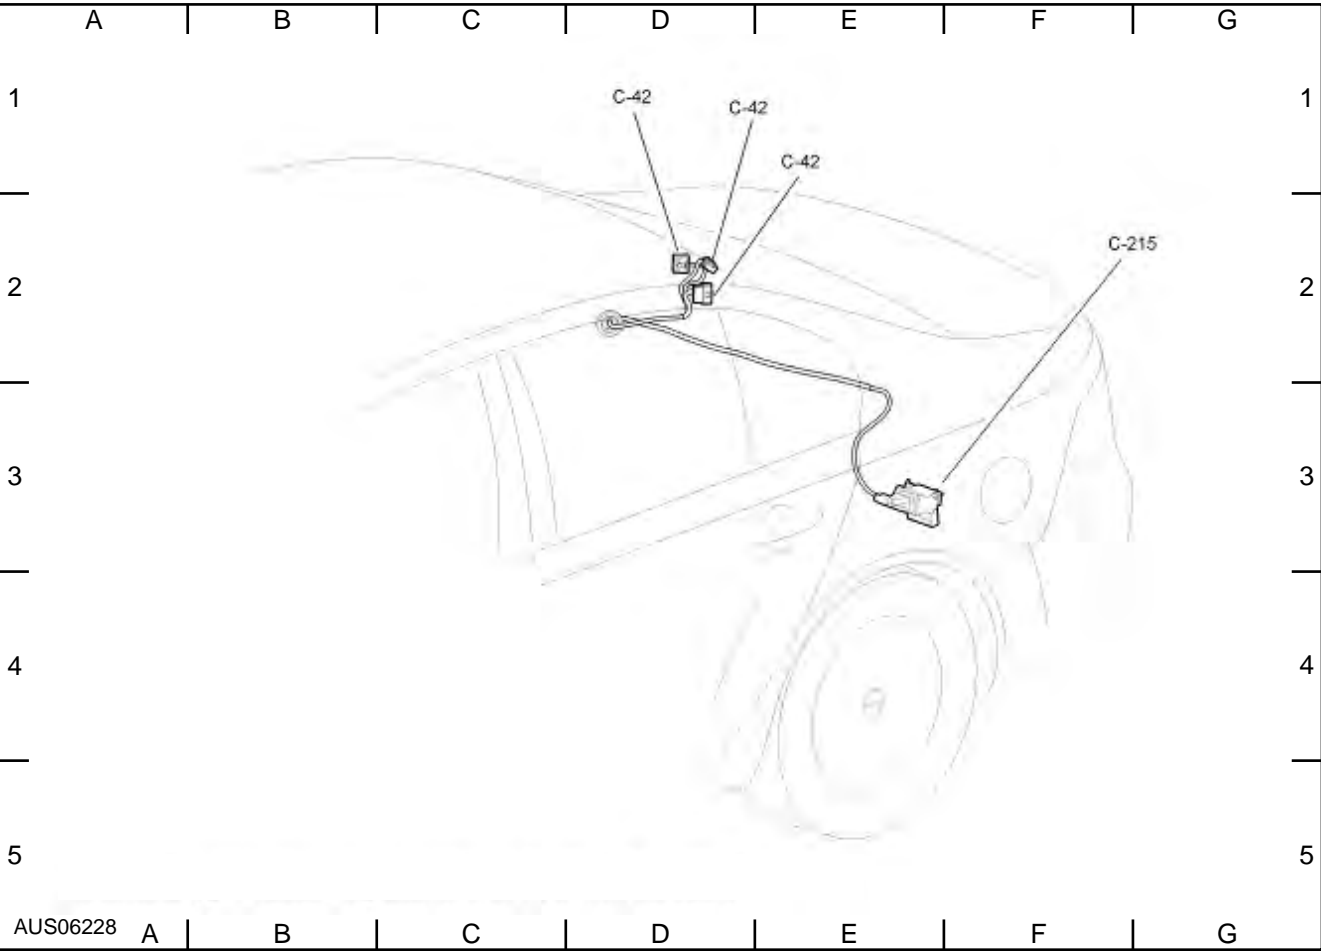


Trailer Wiring - without Reverse Parking Aid - Sedan

C-42	To Tail Lamp	D1
C-42	To 14A005 & to 15A417 (Lighting)	E2
C-42	To 14A005 & to 15A417 (3 Pin)	E1
C-215	Trailer	G2




COMPONENT LOCATION VIEWS (Continued)

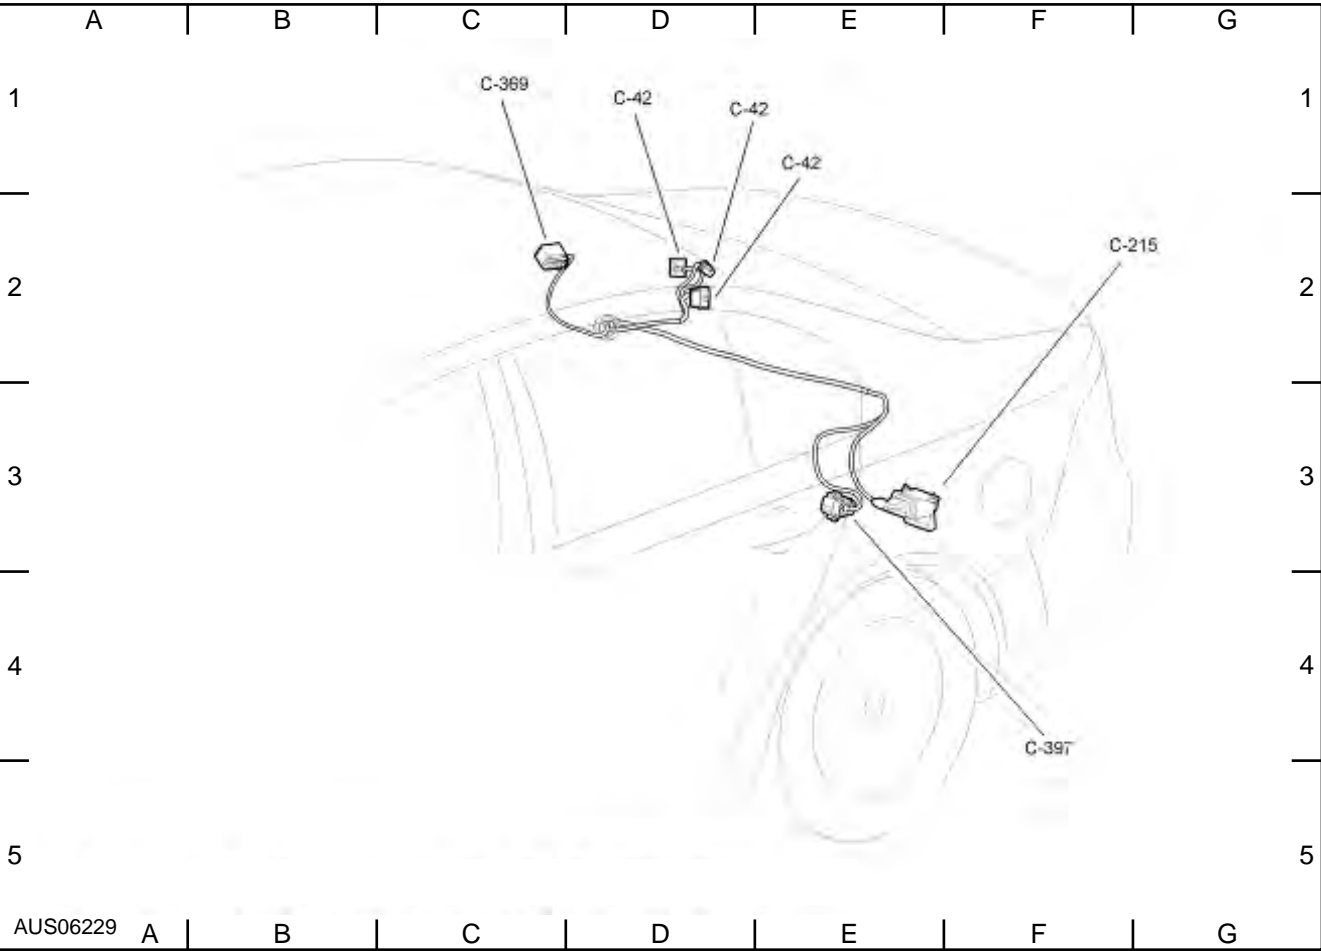

Trailer Wiring - with Reverse Parking Aid - Sedan		
C-42	To Tail Lamp	D1
C-42	To 14A005 & to 15A417 (Lighting)	E2
C-42	To 14A005 & to 15A417 (3 Pin)	E1
C-215	Trailer	G2
C-369	Reverse Parking Aid Module	C1
C-397	To 15A536 & to 15A417	F6




COMPONENT LOCATION VIEWS (Continued)

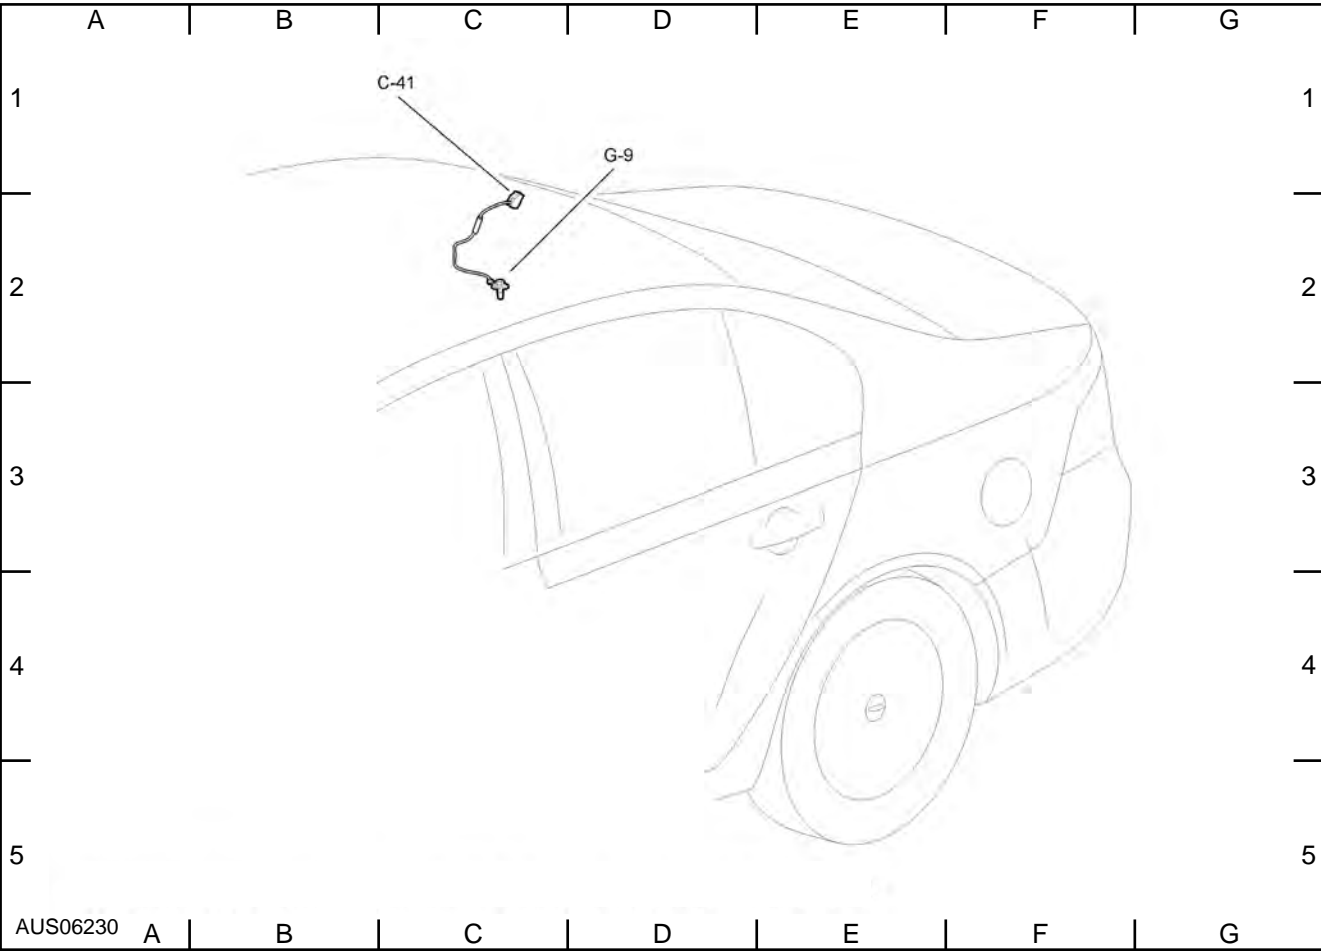

Back Window Heater - Sedan		
C-41	Backlight Ground / Rear Window Heater	C1
G-9	Backlight Ground	D1

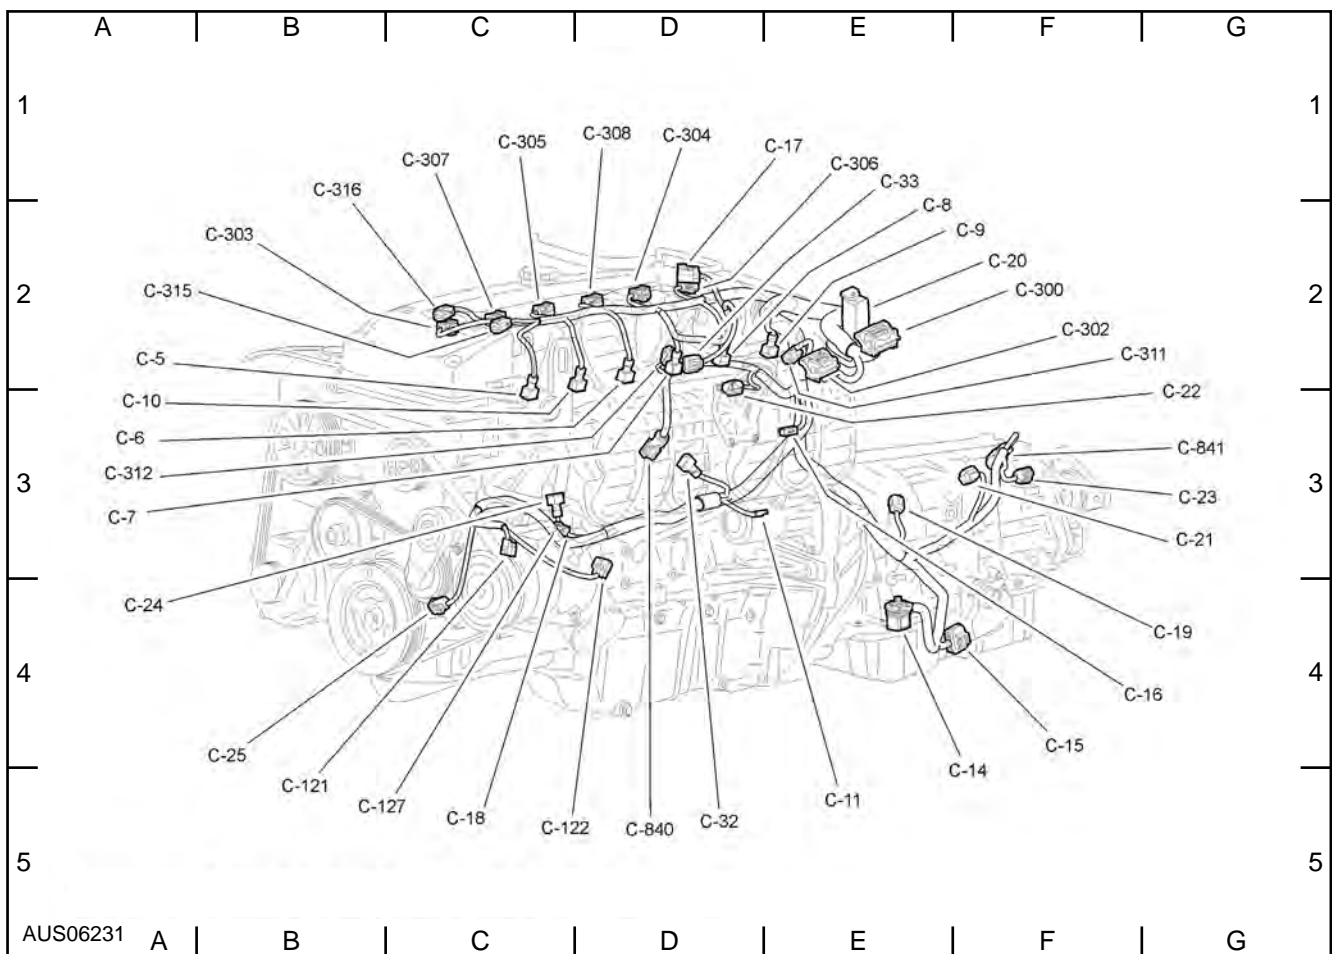


COMPONENT LOCATION VIEWS (Continued)**I6 Engine Wiring - 5 Speed Automatic Transmission**

C-5	Injector 1	A2
C-6	Injector 3	A3
C-7	Injector 4	A3
C-8	Injector 5	E2
C-9	Injector 6	F2
C-10	Injector 2	A3
C-11	Starter Solenoid	E5
C-14	Transmission Hardware Unit	F5
C-15	Transmission Range Sensor	F5
C-16	Radio Suppressor	G5
C-17	MAP/IAT Sensor	E1
C-18	Oil Pressure Sensor	C5
C-19	Transmission Sensor (TSS) Turbine Shaft Speed Sensor	G4
C-20	To 14289/12B637 & to 12A581	F2
C-21	Transmission Sensor (ISS) Intermediate Shaft Speed Sensor	G3
C-22	Cylinder Head Temperature Sensor	D3
C-23	Transmission Sensor (OSS) Output Shaft Speed Sensor	G3
C-24	Knock Sensor #1 (ENG SPRK INTY)	A4

COMPONENT LOCATION VIEWS (Continued)**I6 Engine Wiring - 5 Speed Automatic Transmission**


C-25	Crankshaft Sensor	C4
C-32	Knock Sensor #2 (ENG SPRK INTY)	D5
C-33	ETB (Electronic Throttle Body Actuator)	E1
C-121	A/C Compressor	B5
C-122	A/C Pressure Transducer	D5
C-127	A/C Clutch Diode	C5
C-300	EEC-A (PCM)	F2
C-302	EEC-C (PCM)	F2
C-303	Coil Driver - A	B2
C-304	Coil Driver - B	D1
C-305	Coil Driver - C	C1
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	C1
C-308	Coil Driver - F	E1
C-311	Cylinder ID - 1	G2
C-312	Cylinder ID - 2	A3
C-315	VCT - 1	A2
C-316	VCT - 2	B1
C-840	HEGO Sensor #1	D5
C-841	HEGO Sensor #2	F3

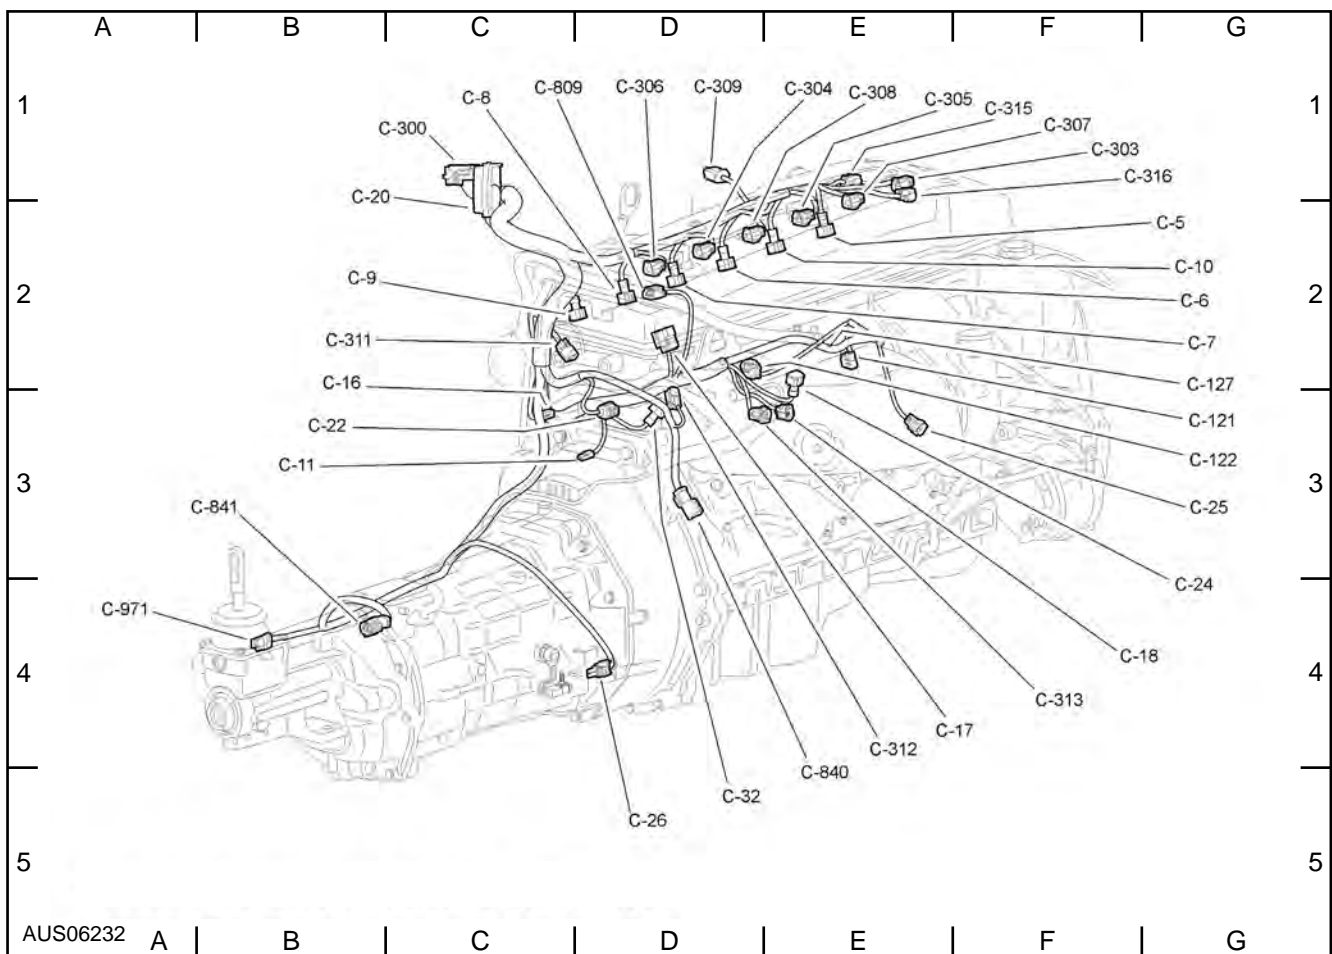COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine Wiring - 6 Speed Manual Transmission**

C-5	Injector 1	G1
C-6	Injector 3	G2
C-7	Injector 4	G2
C-8	Injector 5	C1
C-9	Injector 6	C2
C-10	Injector 2	G2
C-11	Starter Solenoid	B3
C-16	Radio Suppressor	B3
C-17	MAP/IAT Sensor	E5
C-18	Oil Pressure Sensor	F4
C-20	To 14289/12B637 & to 12A581	B1
C-22	Cylinder Head Temperature Sensor	B3
C-24	Knock Sensor #1 (ENG SPRK INTY)	G4
C-25	Crankshaft Sensor	G3
C-26	Reverse Lamp Switch	D5
C-32	Knock Sensor #2 (ENG SPRK INTY)	E5
C-121	A/C Compressor	G3
C-122	A/C Pressure Transducer	G3

COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine Wiring - 6 Speed Manual Transmission**

C-127	A/C Clutch Diode	G2
C-300	EEC-A (PCM)	C1
C-303	Coil Driver - A	F1
C-304	Coil Driver - B	E1
C-305	Coil Driver - C	E1
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	F1
C-308	Coil Driver - F	E1
C-309	Turbo Boost Sensor	D1
C-311	Cylinder ID - 1	B2
C-312	Cylinder ID - 2	E5
C-313	Oil Temperature Sensor	F5
C-315	VCT - 1	F1
C-316	VCT - 2	F1
C-809	ETB (Electronic Throttle Body Actuator)	C1
C-840	HEGO Sensor #1	E5
C-841	HEGO Sensor #2	B4
C-971	Reverse Solenoid Control	B4

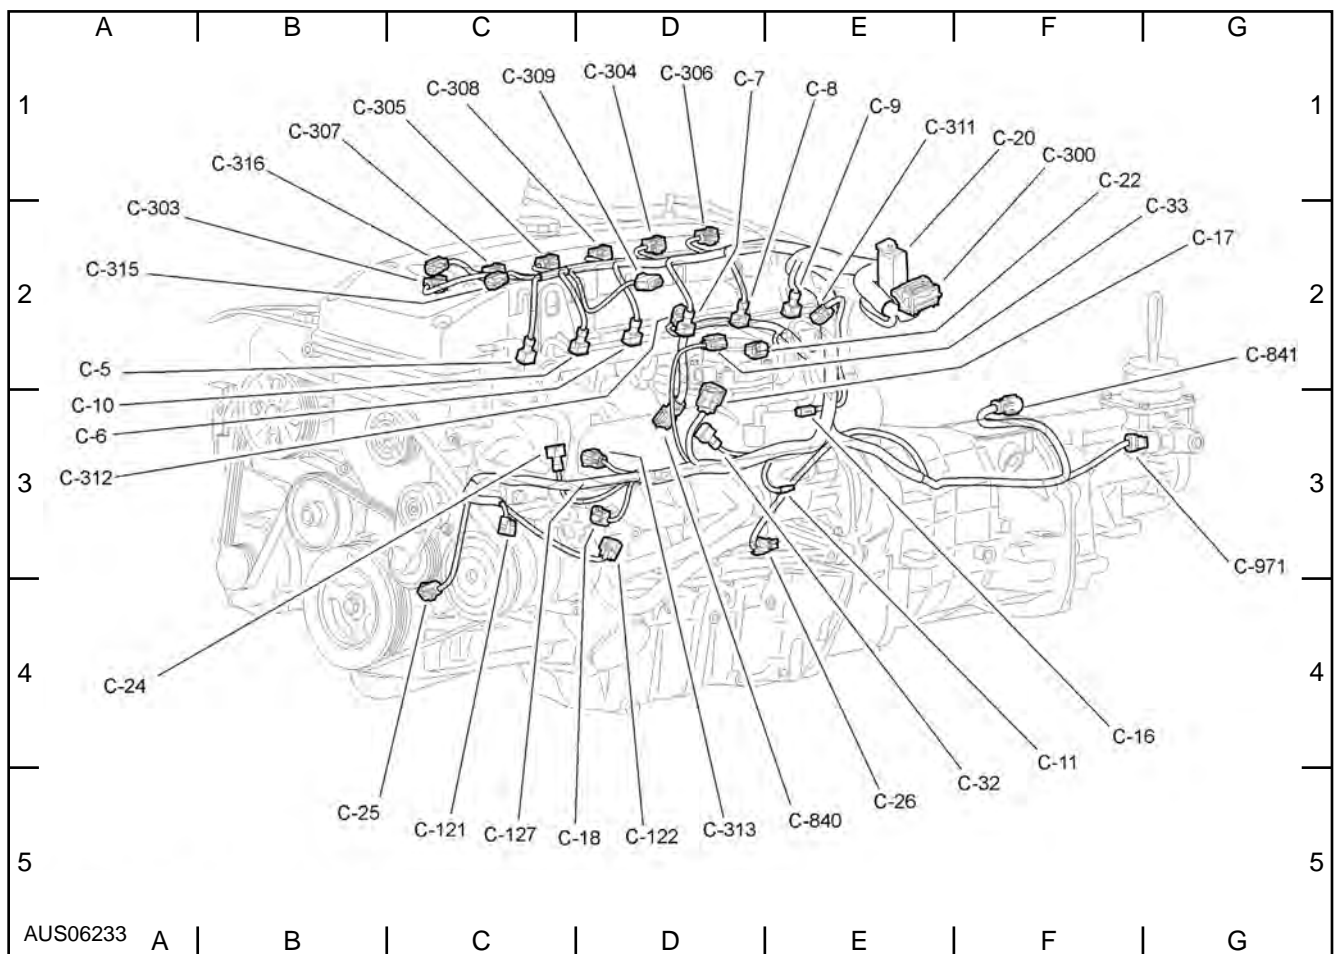COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine Wiring - 6 Speed Manual Transmission**


C-5	Injector 1	A3
C-6	Injector 3	A3
C-7	Injector 4	D1
C-8	Injector 5	E1
C-9	Injector 6	E1
C-10	Injector 2	A3
C-11	Starter Solenoid	F5
C-16	Radio Suppressor	F5
C-17	MAP/IAT Sensor	G2
C-18	Oil Pressure Sensor	D6
C-20	To 14289/12B637 & to 12A581	F1
C-22	Cylinder Head Temperature Sensor	F1
C-24	Knock Sensor #1 (ENG SPRK INTY)	A5
C-25	Crankshaft Sensor	C5
C-26	Reverse Lamp Switch	E5
C-32	Knock Sensor #2 (ENG SPRK INTY)	E5
C-33	ETB (Electronic Throttle Body Actuatpr)	F1
C-121	A/C Compressor	C6

COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine Wiring - 6 Speed Manual Transmission**


C-122	A/C Pressure Transducer	D6
C-127	A/C Clutch Diode	C6
C-300	EEC-A (PCM)	F1
C-303	Coil Driver - A	A1
C-304	Coil Driver - B	D1
C-305	Coil Driver - C	C1
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	B1
C-308	Coil Driver - F	C1
C-309	Turbo Boost Sensor	C1
C-311	Cylinder ID - 1	E1
C-312	Cylinder ID - 2	A3
C-313	Oil Temperature Sensor	D5
C-315	VCT - 1	A2
C-316	VCT - 2	B1
C-840	HEGO Sensor #1	E5
C-841	HEGO Sensor #2	G2
C-971	Reverse Solenoid Control	G4

COMPONENT LOCATION VIEWS (Continued)**SFLPG I6 Engine Wiring - Automatic Transmission**


C-305	Coil Driver - C	G2
C-306	Coil Driver - D	G2
C-307	Coil Driver - E	F1
C-308	Coil Driver - F	G2
C-311	Cylinder ID - 1	B2
C-312	Cylinder ID - 2	E5
C-313	Oil Temperature Sensor	F5
C-314	Throttle Position Motor	E1
C-315	VCT - 1	E1
C-316	VCT - 2	G2
C-840	HEGO Sensor #1	E5
C-913	To 9E310 & to 14289	G3

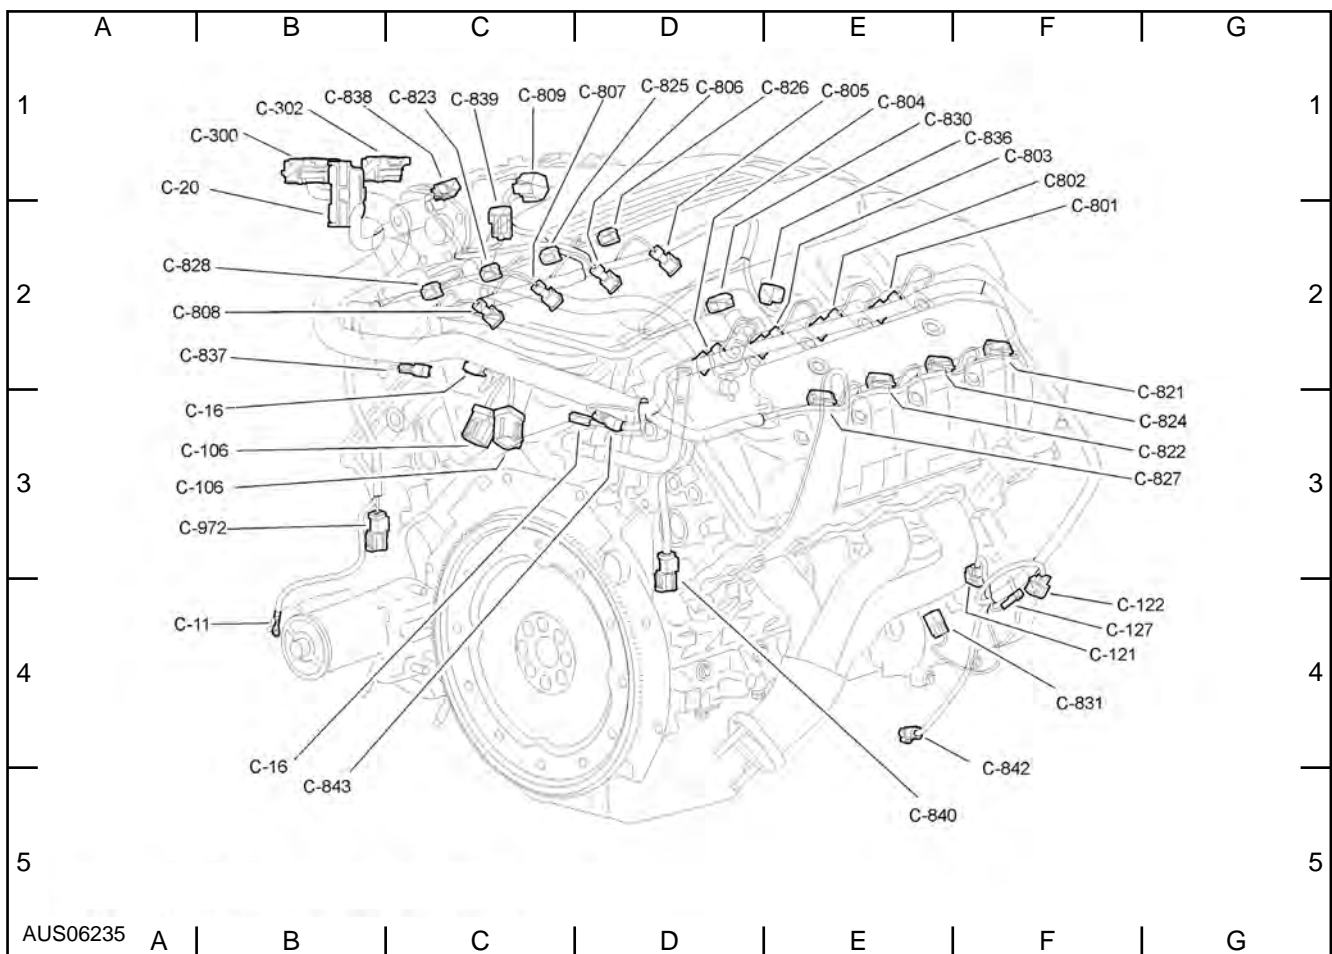COMPONENT LOCATION VIEWS (Continued)**V8 Engine - Rear RHS**

C-16	Radio Suppressor	B5
C-121	A/C Compressor	F5
C-122	A/C Pressure Transducer	G4
C-127	A/C Clutch Diode	G4
C-801	Fuel Injector 1	F2
C-802	Fuel Injector 2	F2
C-803	Fuel Injector 3	F1
C-804	Fuel Injector 4	E1
C-809	Throttle Position Sensor	C1
C-821	Coil Driver - A (Coil #1)	G3
C-822	Coil Driver - B (Coil #3)	G3
C-824	Coil Driver - D (Coil #2)	G3
C-827	Coil Driver - G (Coil #4)	G3
C-831	Crank Position	F5
C-840	HEGO SSR #1	F6
C-842	Power Steering Pressure Switch	F5

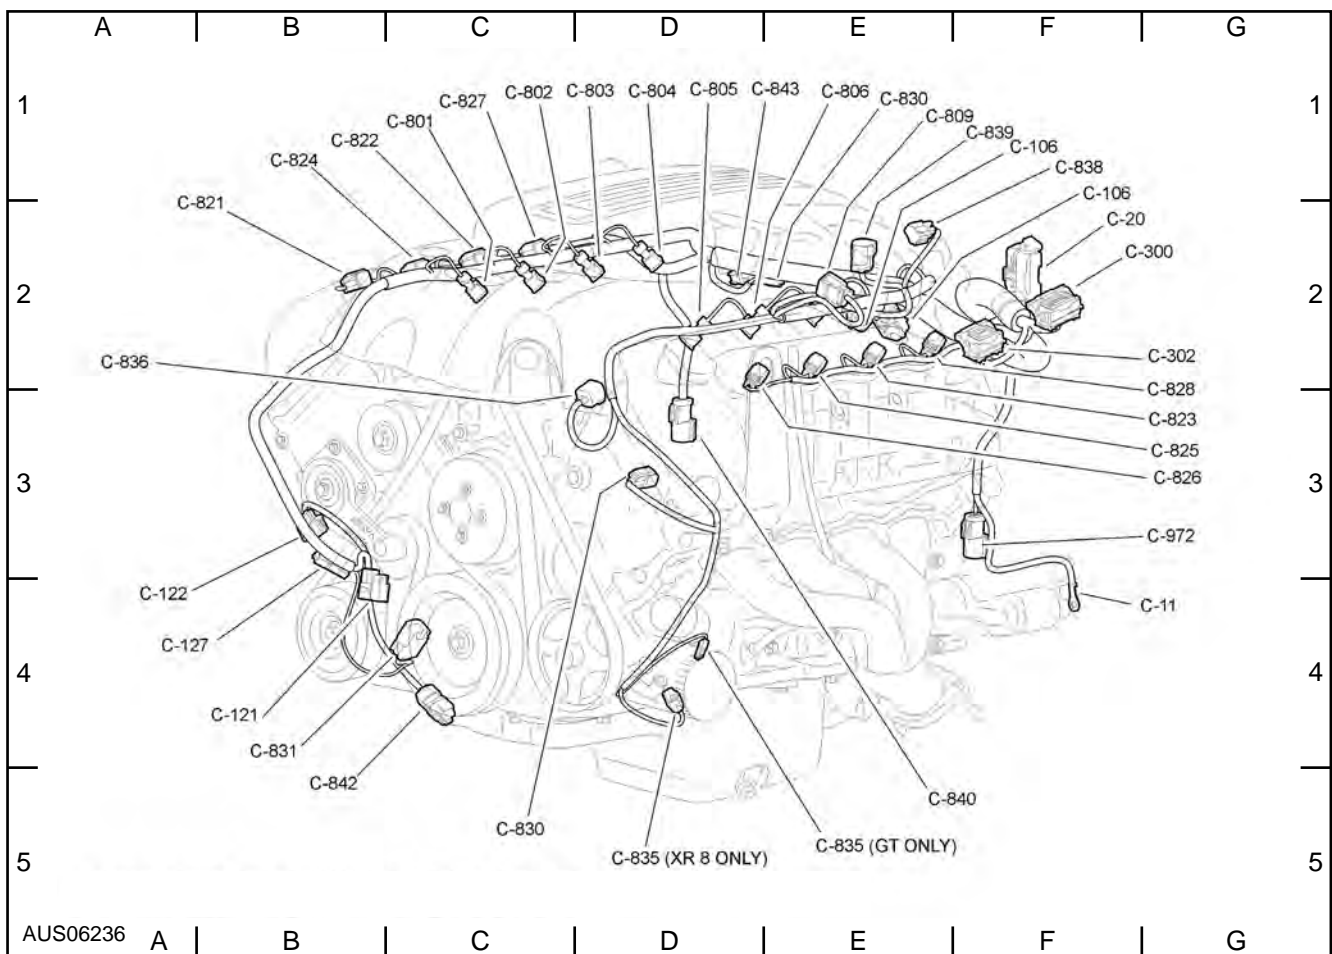
COMPONENT LOCATION VIEWS (Continued)**V8 Engine - Front LHS**

C-805	Fuel Injector 5	D1
C-806	Fuel Injector 6	E1
C-808	Fuel Injector 8	E1
C-825	Coil Driver - E (Coil #6)	F3
C-826	Coil Driver - F (Coil #5)	F4
C-828	Coil Driver - H (Coil #8)	F3
C-823	Coil Driver - C (Coil #7)	F3
C-830	Cylinder ID	C6
C-835	Oil Pressure Switch (XR8)	D6
C-835	Oil Pressure Switch (GT)	E6
C-836	Engine Coolant Temperature	A3
C-842	Power Steering Pressure Switch	C5

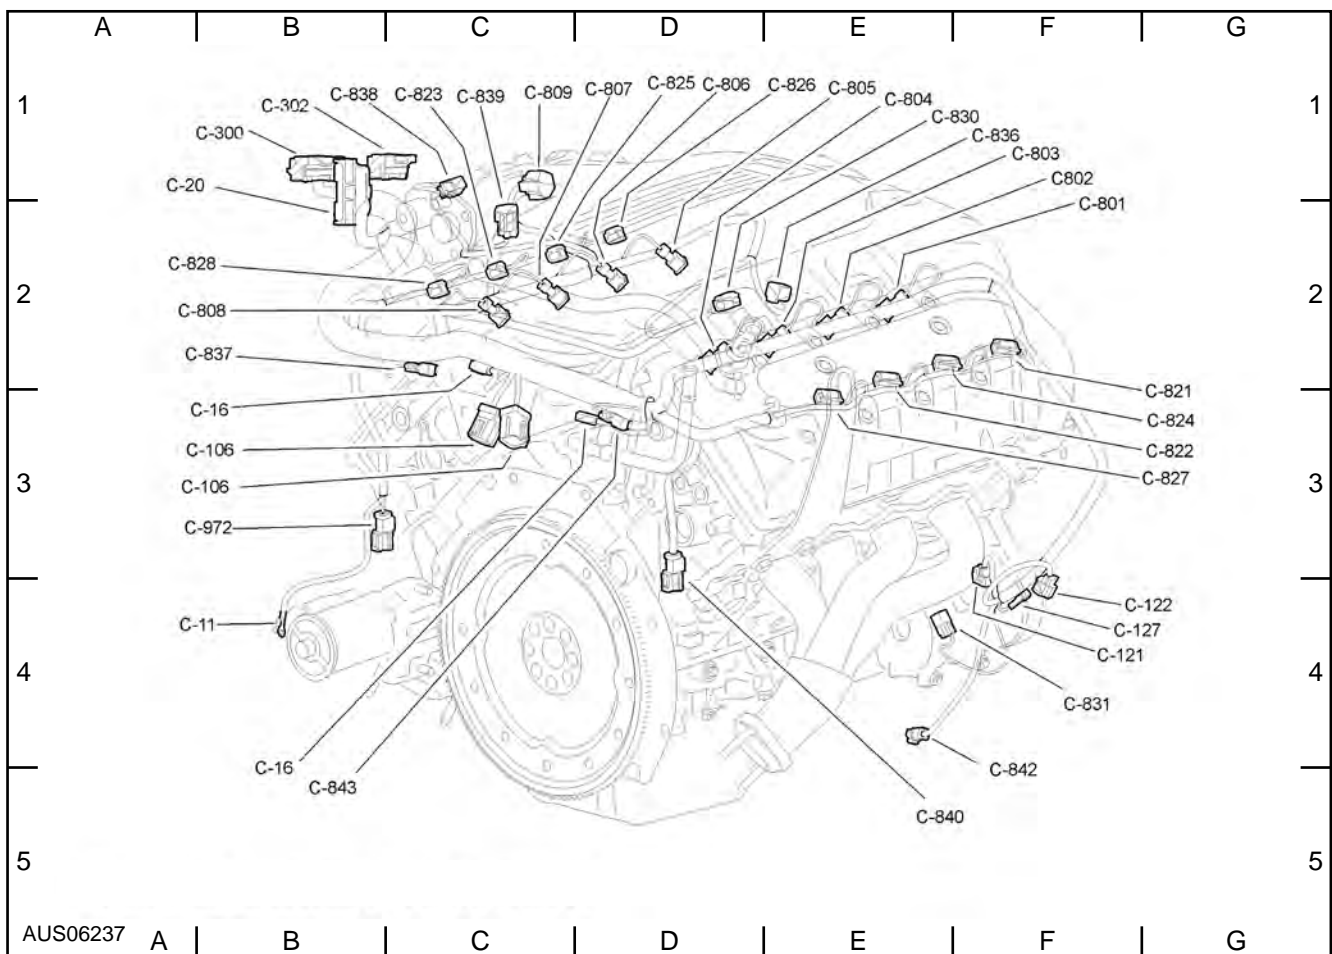COMPONENT LOCATION VIEWS (Continued)**V8 Engine - Rear Right**

C-11	Starter Solenoid	B5
C-16	Radio Noise Suppressor	B3
C-20	To 12A581 & to 14289/12B637	A2
C-106	To 12B637 & to 7E203 (Auto) / to 15A519 (Manual)	B4
C-300	EEC-A	B1
C-302	EEC-C	B1
C-837	Knock Sensor #2 (ENG SPRK INTY)	B3
C-838	Throttle Position Sensor	B1
C-839	TMAP	C1
C-840	HEGO 11	F6
C-843	Knock Sensor #1 (ENG SPRK INTY)	B6
C-972	HEGO 21	B4

COMPONENT LOCATION VIEWS (Continued)

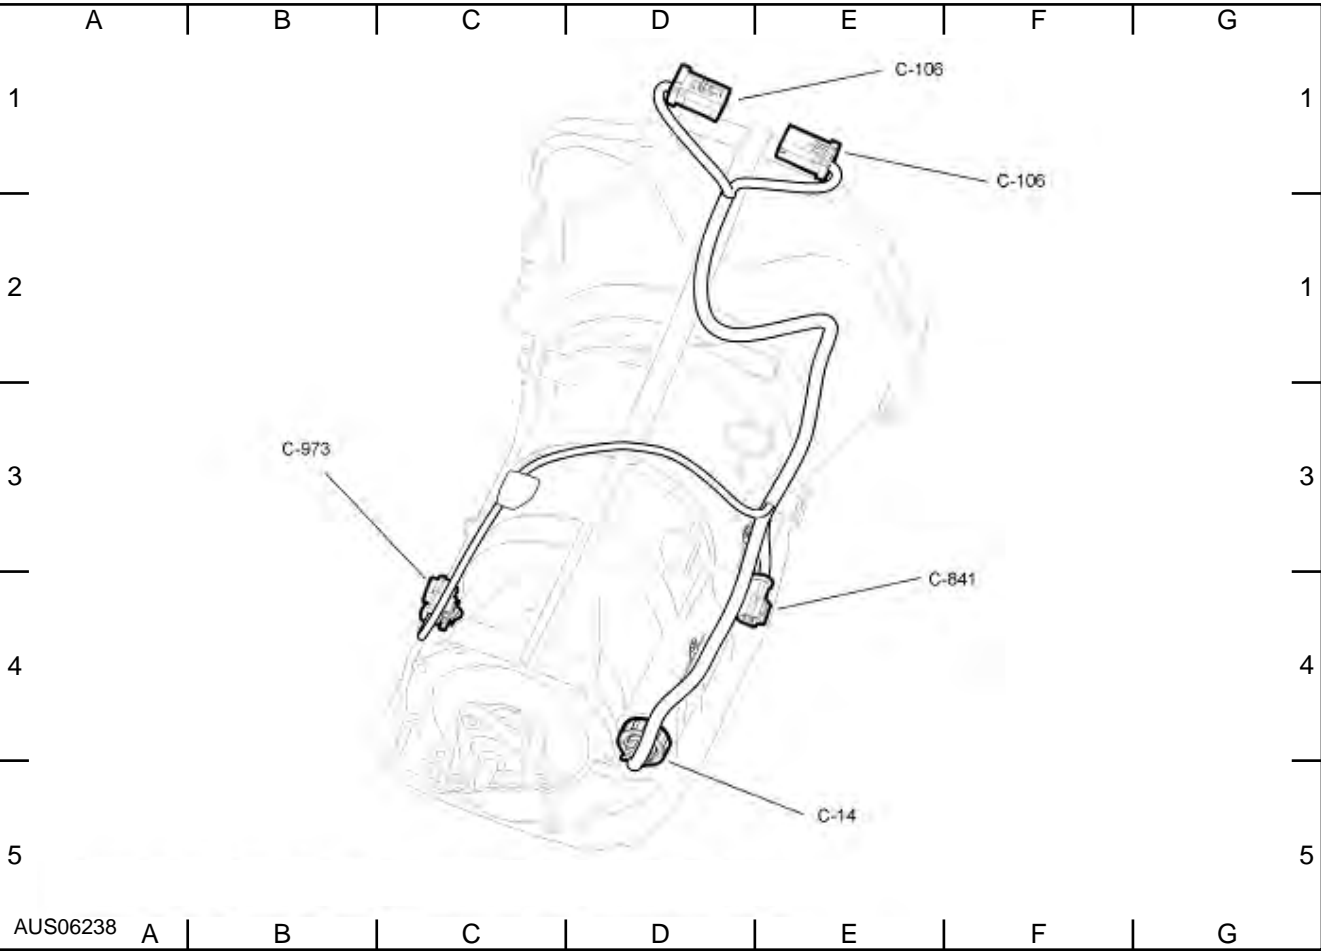


V8 with 6 Speed Automatic Transmission

C-14	Transmission	E6
C-106	To 12B637 & 7E203	F1
C-973	HEGO 22	B3
C-841	HEGO 12	F4




COMPONENT LOCATION VIEWS (Continued)

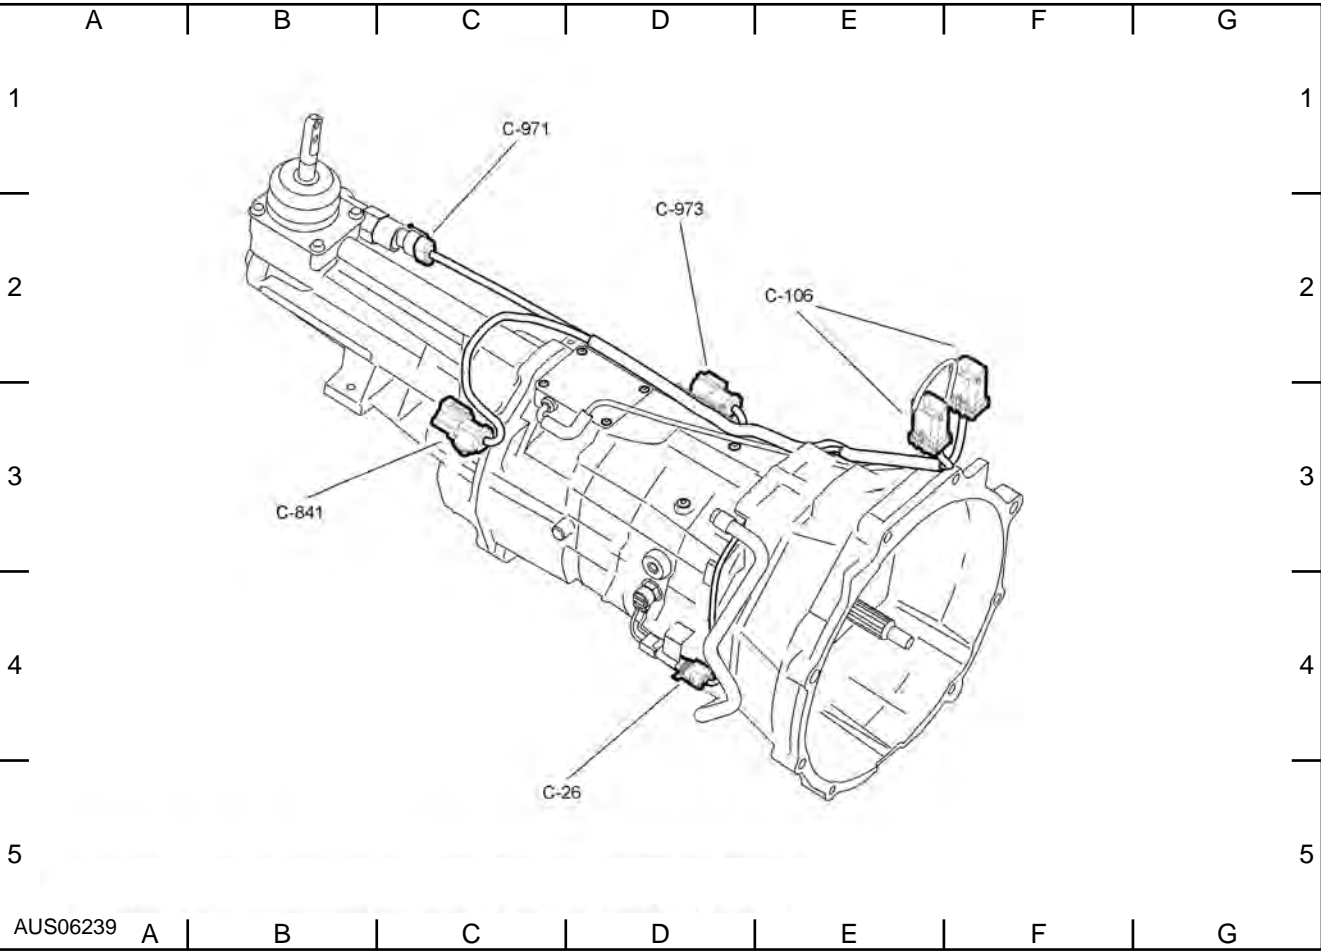

V8 with 6 Speed Manual Transmission

C-26	Reverse Lamp Switch	D5
C-106	To 12B637 & 15A519	E2
C-841	HEGO 12	B4
C-973	HEGO 22	D2
C-971	Reverse Solenoid Control	C1

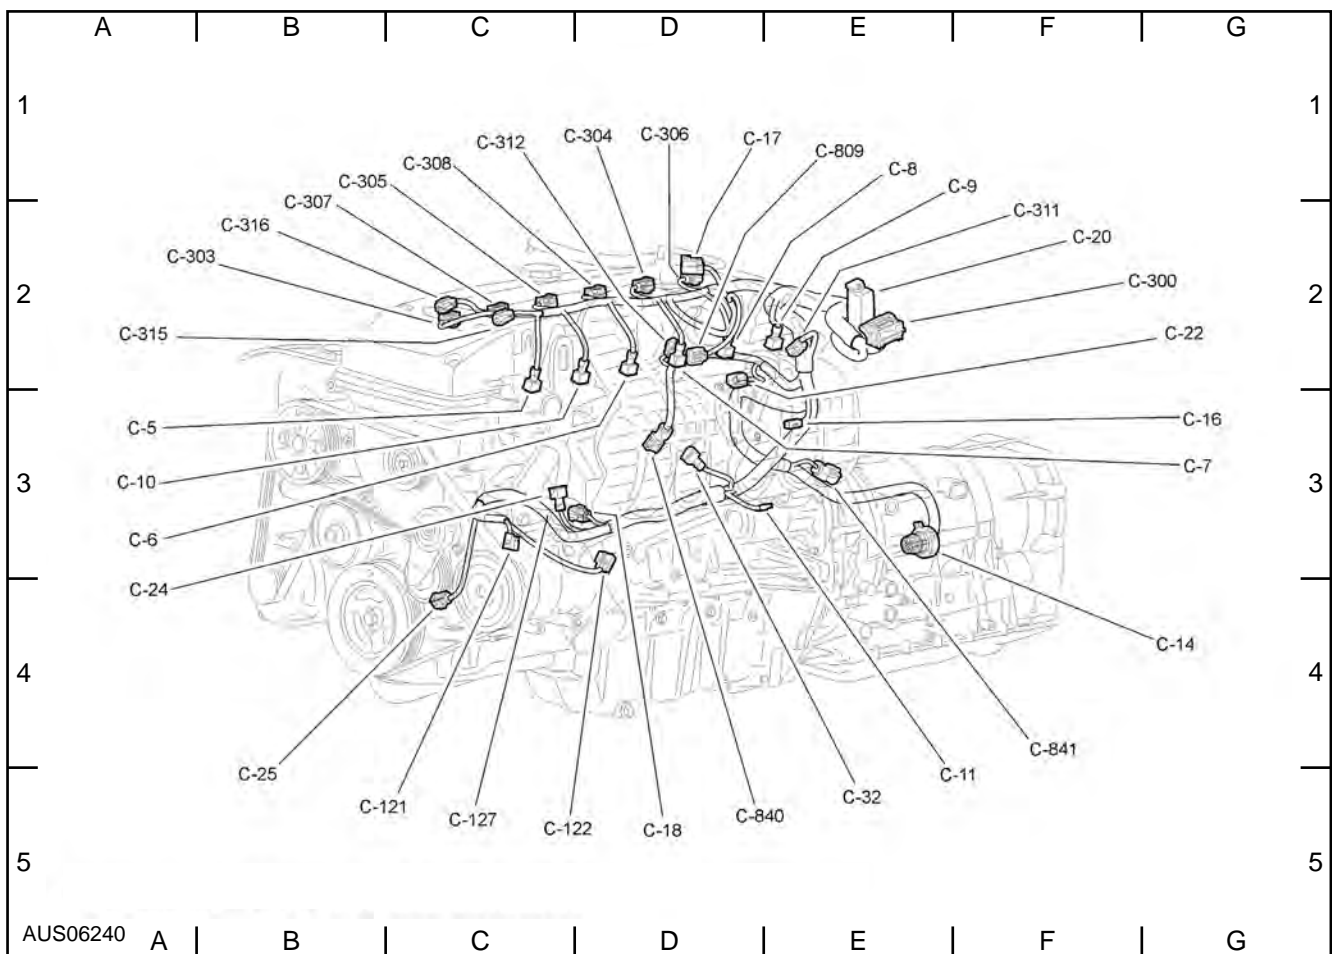


COMPONENT LOCATION VIEWS (Continued)**I6 Engine - 6 Speed Automatic Transmission**

C-5	Injector 1	A3
C-6	Injector 3	A4
C-7	Injector 4	G3
C-8	Injector 5	E1
C-9	Injector 6	F1
C-10	Injector 2	A4
C-11	Starter Solenoid	F5
C-16	Radio Suppressor	G3
C-17	MAP/IAT Sensor	E1
C-18	Oil Pressure Sensor	C6
C-20	To 14289/12B637 & to 12A581	F2
C-22	Cylinder Head Temperature Sensor	G3
C-24	Knock Sensor #1 (ENG SPRK INTY)	A4
C-25	Crankshaft Sensor	B5
C-32	Knock Sensor #2 (ENG SPRK INTY)	E5
C-121	A/C Compressor	C6
C-127	A/C Clutch Diode	C6
C-122	A/C Pressure Transducer	D6

COMPONENT LOCATION VIEWS (Continued)**I6 Engine - 6 Speed Automatic Transmission**

C-300	EEC-A (PCM)	G2
C-303	Coil Driver - A	B2
C-304	Coil Driver - B	D1
C-305	Coil Driver - C	C2
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	B2
C-308	Coil Driver - F	C2
C-311	Cylinder ID - 1	F2
C-312	Cylinder ID - 2	C1
C-315	VCT 1	A2
C-316	VCT 2	B2
C-809	ETB (Electronic Throttle Body Actuator)	E5
C-840	HEGO Sensor #1	D6
C-841	HEGO Sensor #2	F5

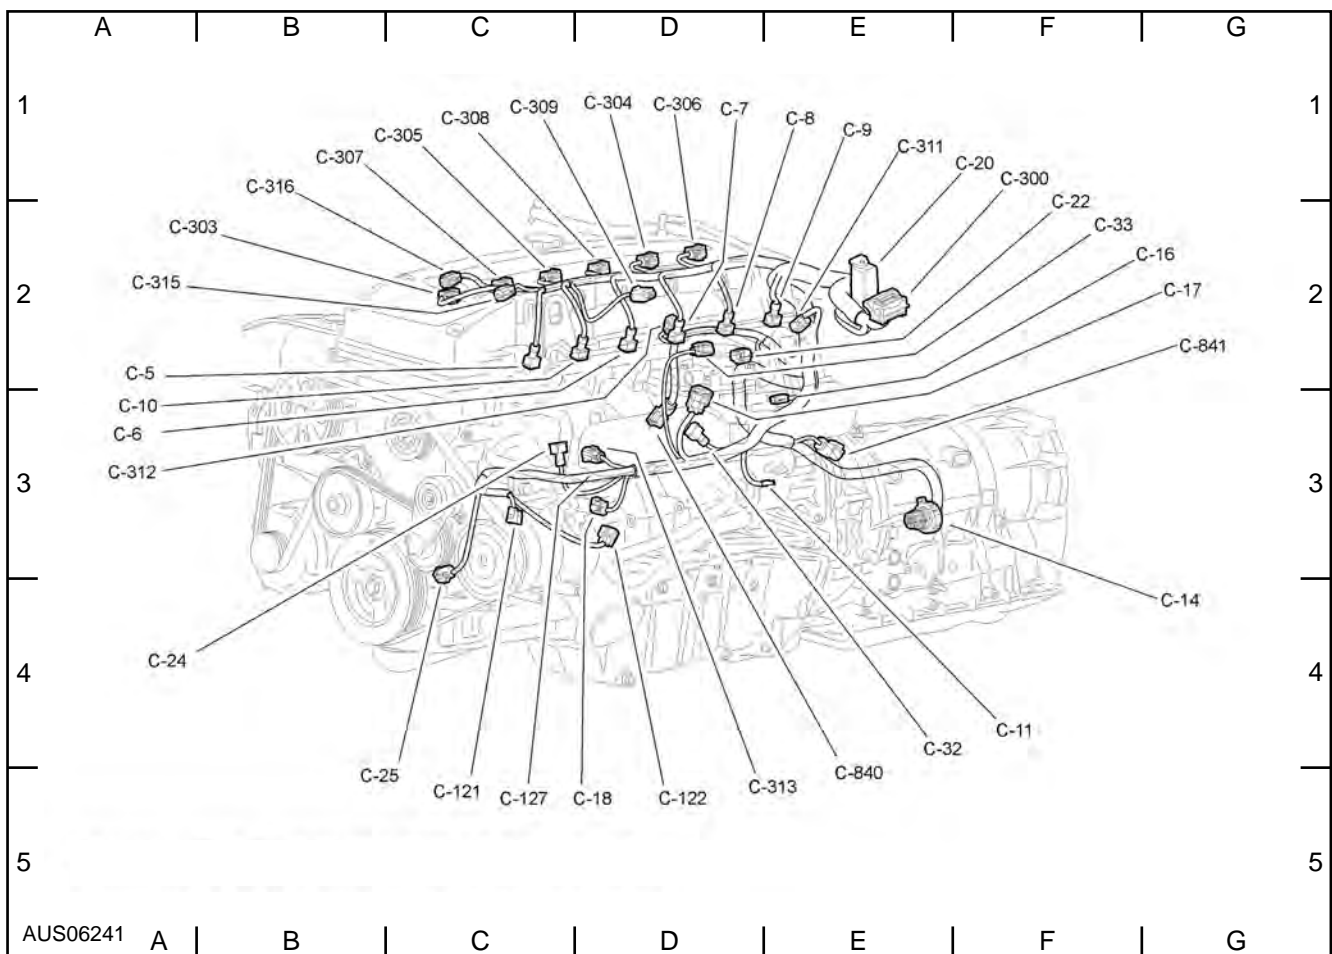COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine - 6 Speed Automatic Transmission**

C-5	Injector 1	A3
C-6	Injector 3	A3
C-7	Injector 4	D1
C-8	Injector 5	E1
C-9	Injector 6	E1
C-10	Injector 2	A3
C-11	Starter Solenoid	F5
C-14	Transmission Hardware Unit	G4
C-16	Radio Suppressor	G2
C-17	MAP/IAT Sensor	G2
C-18	Oil Pressure Sensor	D6
C-20	To 14289/12B637 & to 12A581	F2
C-22	Cylinder Head Temperature Sensor	F2
C-24	Knock Sensor #1 (ENG SPRK INTY)	B5
C-25	Crankshaft Sensor	C6
C-32	Knock Sensor #2 (ENG SPRK INTY)	F6
C-33	ETB (Electronic Throttle Body Actuator)	G2
C-121	A/C Compressor	C6

COMPONENT LOCATION VIEWS (Continued)**Turbo I6 Engine - 6 Speed Automatic Transmission**

C-122	A/C Pressure Transducer	D6
C-127	A/C Clutch Diode	C6
C-300	EEC-A (PCM)	F2
C-303	Coil Driver - A	B1
C-304	Coil Driver - B	D1
C-305	Coil Driver - C	C1
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	B2
C-308	Coil Driver - F	C1
C-309	Boost Sensor	C1
C-311	Cylinder ID - 1	E1
C-312	Cylinder ID - 2	A4
C-313	Oil Temperature Sensor	E6
C-315	VCT 1	B2
C-316	VCT 2	B2
C-840	HEGO Sensor #1	E5
C-841	HEGO Sensor #2	G3



COMPONENT LOCATION VIEWS (Continued)

Turbo I6 Engine - 6 Speed Manual Transmission		
C-122	A/C Pressure Transducer	D6
C-127	A/C Clutch Diode	C6
C-300	EEC-A (PCM)	F2
C-303	Coil Driver - A	B2
C-304	Coil Driver - B	D1
C-305	Coil Driver - C	C1
C-306	Coil Driver - D	D1
C-307	Coil Driver - E	B2
C-308	Coil Driver - F	C1
C-309	Boost Sensor	C1
C-311	Cylinder ID - 1	E2
C-312	Cylinder ID - 2	A4
C-313	Oil Temperature Sensor	D6
C-315	VCT 1	A2
C-316	VCT 2	B2
C-840	HEGO Sensor #1	E5
C-841	HEGO Sensor #2	G3
C-971	Reverse Solenoid Control	G4