

# Base Station Rotor Controller Guide

Kevin Mead

February 12, 2015

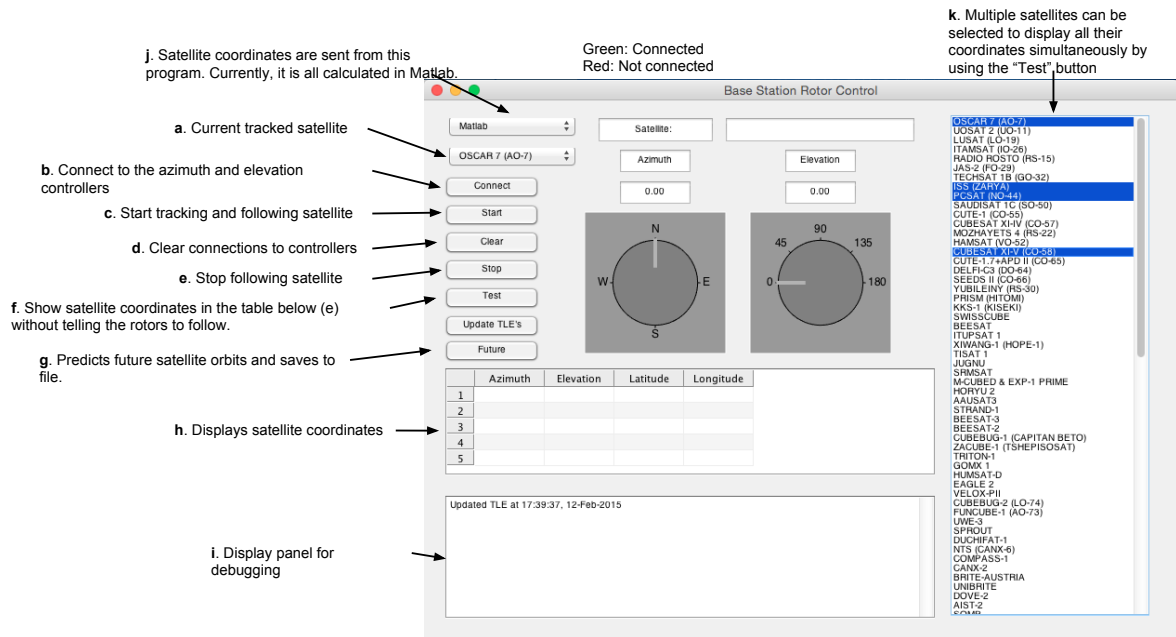


Figure 1: caption

## How to track and follow a satellite

1. Run "BaseStationController.m"
2. Select the satellites you want to track and follow from the list marked (k) on the right.
3. Press the "Connect" button and wait for green lights on the Azimuth and Elevation indicators.
4. Select one satellite in the drop down menu (a).
5. Press "Start" button to start following the satellite.
6. Before switching satellites, you should press the "Stop" button.