
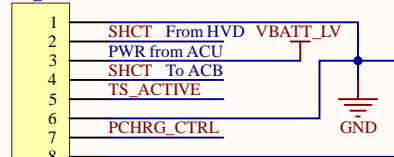


LV_CON1

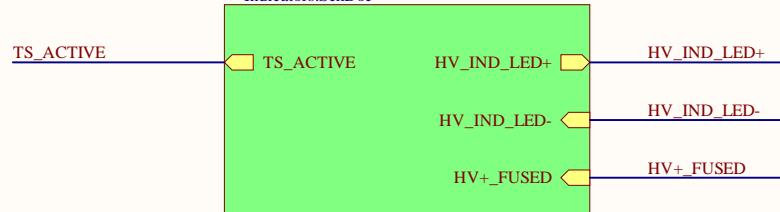





WM1354-ND

TSAL & HV Indicators
Indicators.SchDoc

LV_CON2




WM1352-ND

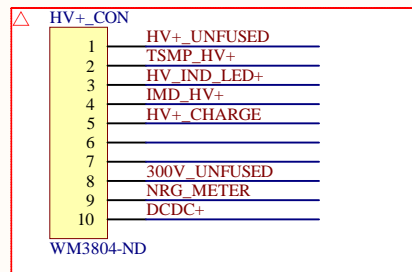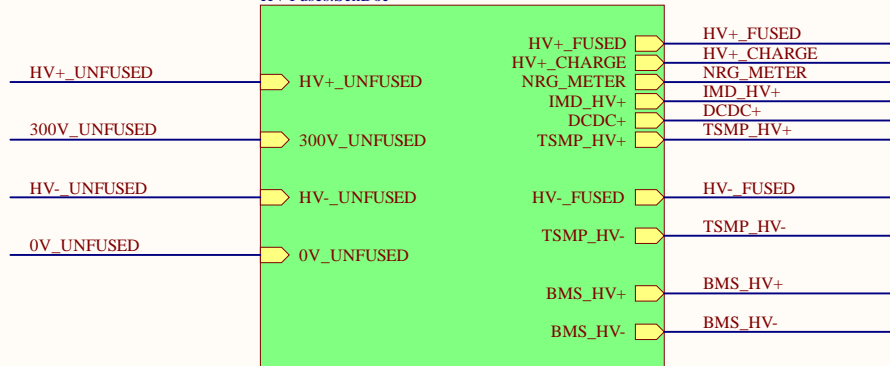Fuses
HV Fuses.SchDoc


WM3804-ND

(i) HV+

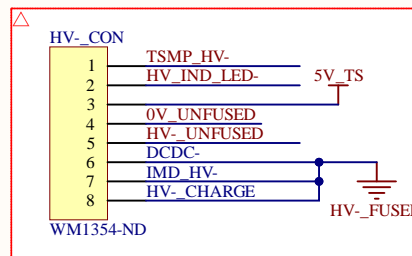

WM1354-ND




(i) HV-

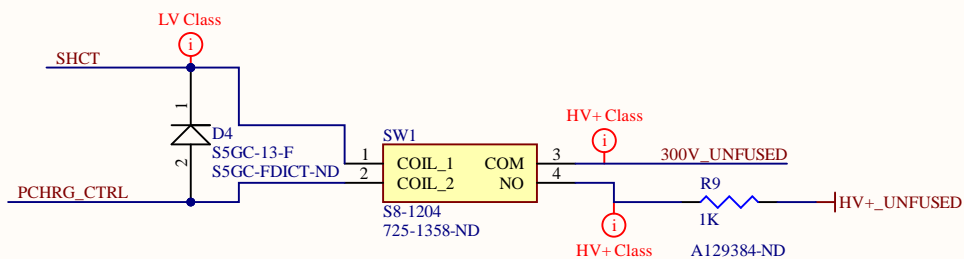

HV+ is the +ve terminal of the motor controller

300V: the tap comes from the tractive side of the HCP fuse
HV+: the tap comes from the tractive side terminal of the +ve AIR
HV-: the tap comes from the tractive side terminal of the -ve AIR
0V: this net is connected to the negative terminal of the battery pack

Title		
Size	Number	Revision
A4		
Date:	2-05-2021	Sheet of
File:	C:\Users\...\Connectors.SchDoc	Drawn By:

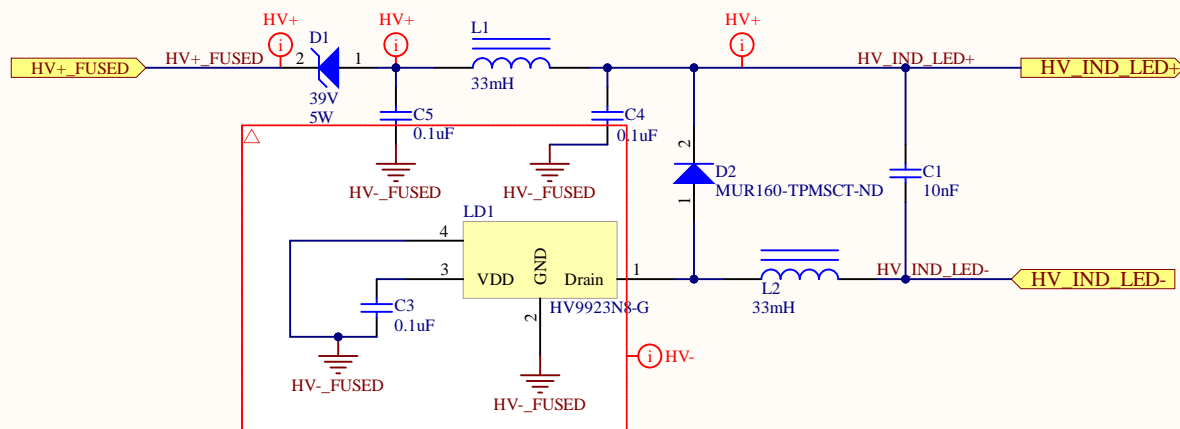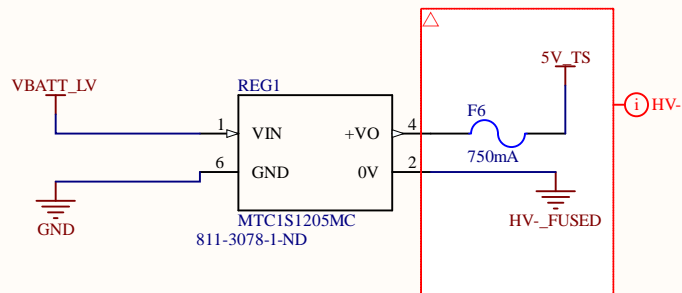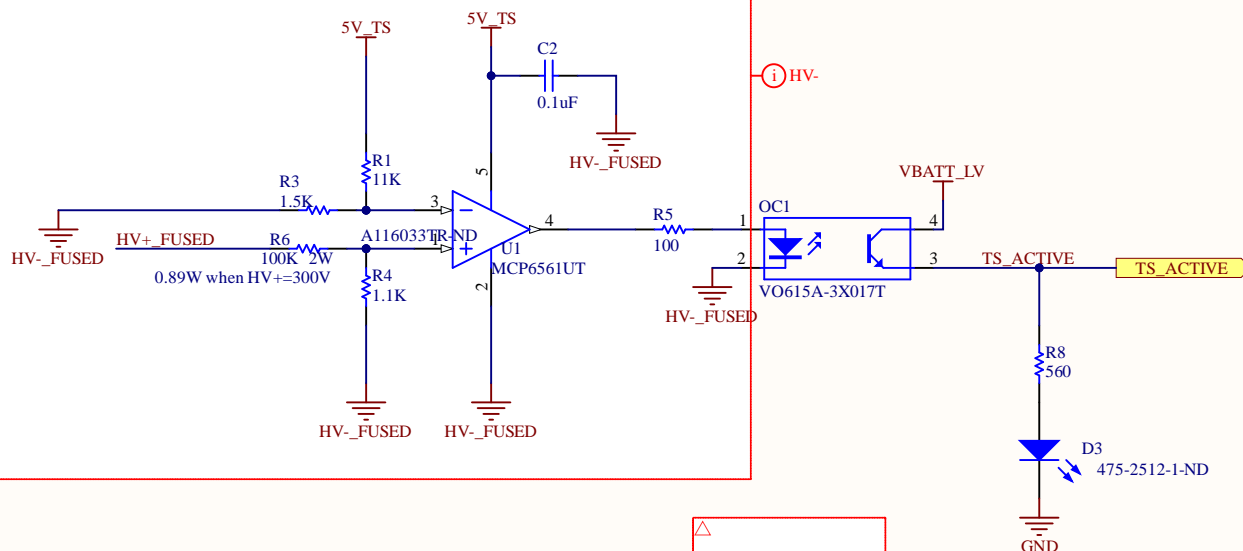

Title		
Size A4	Number	Revision
Date: 2-05-2021	Sheet of	
File: C:\Users\...\Indicators.SchDoc	Drawn By:	

