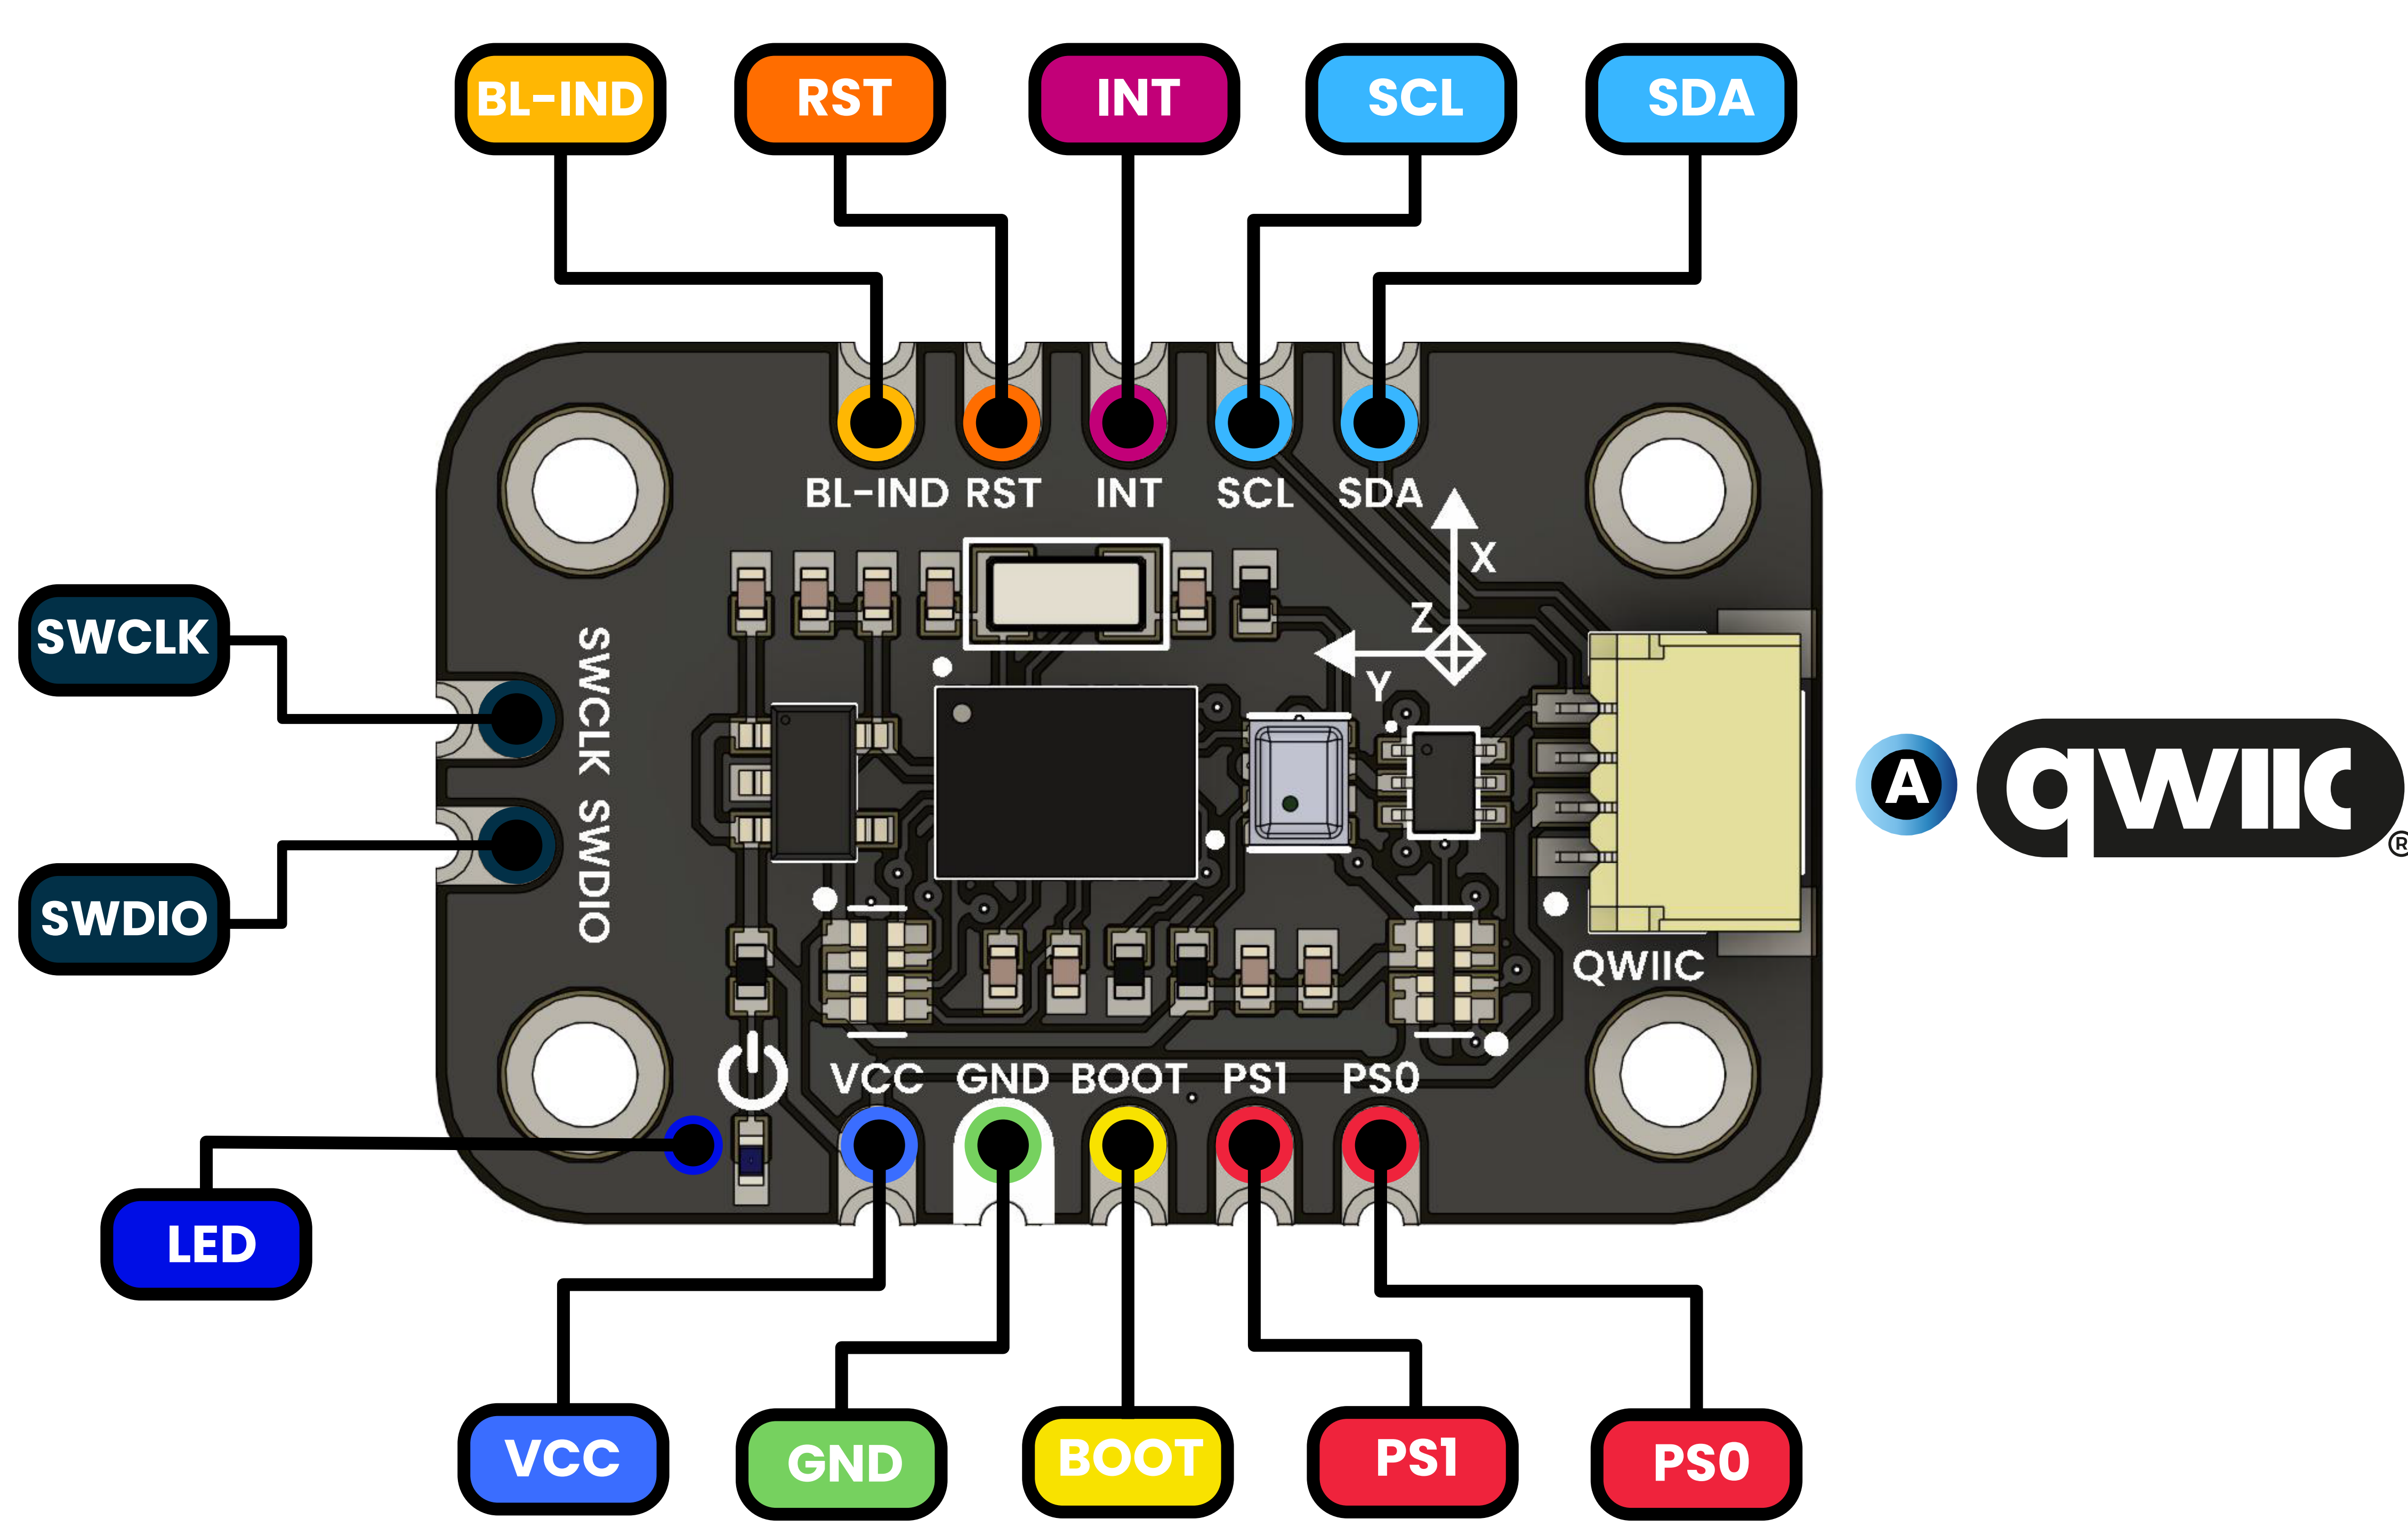
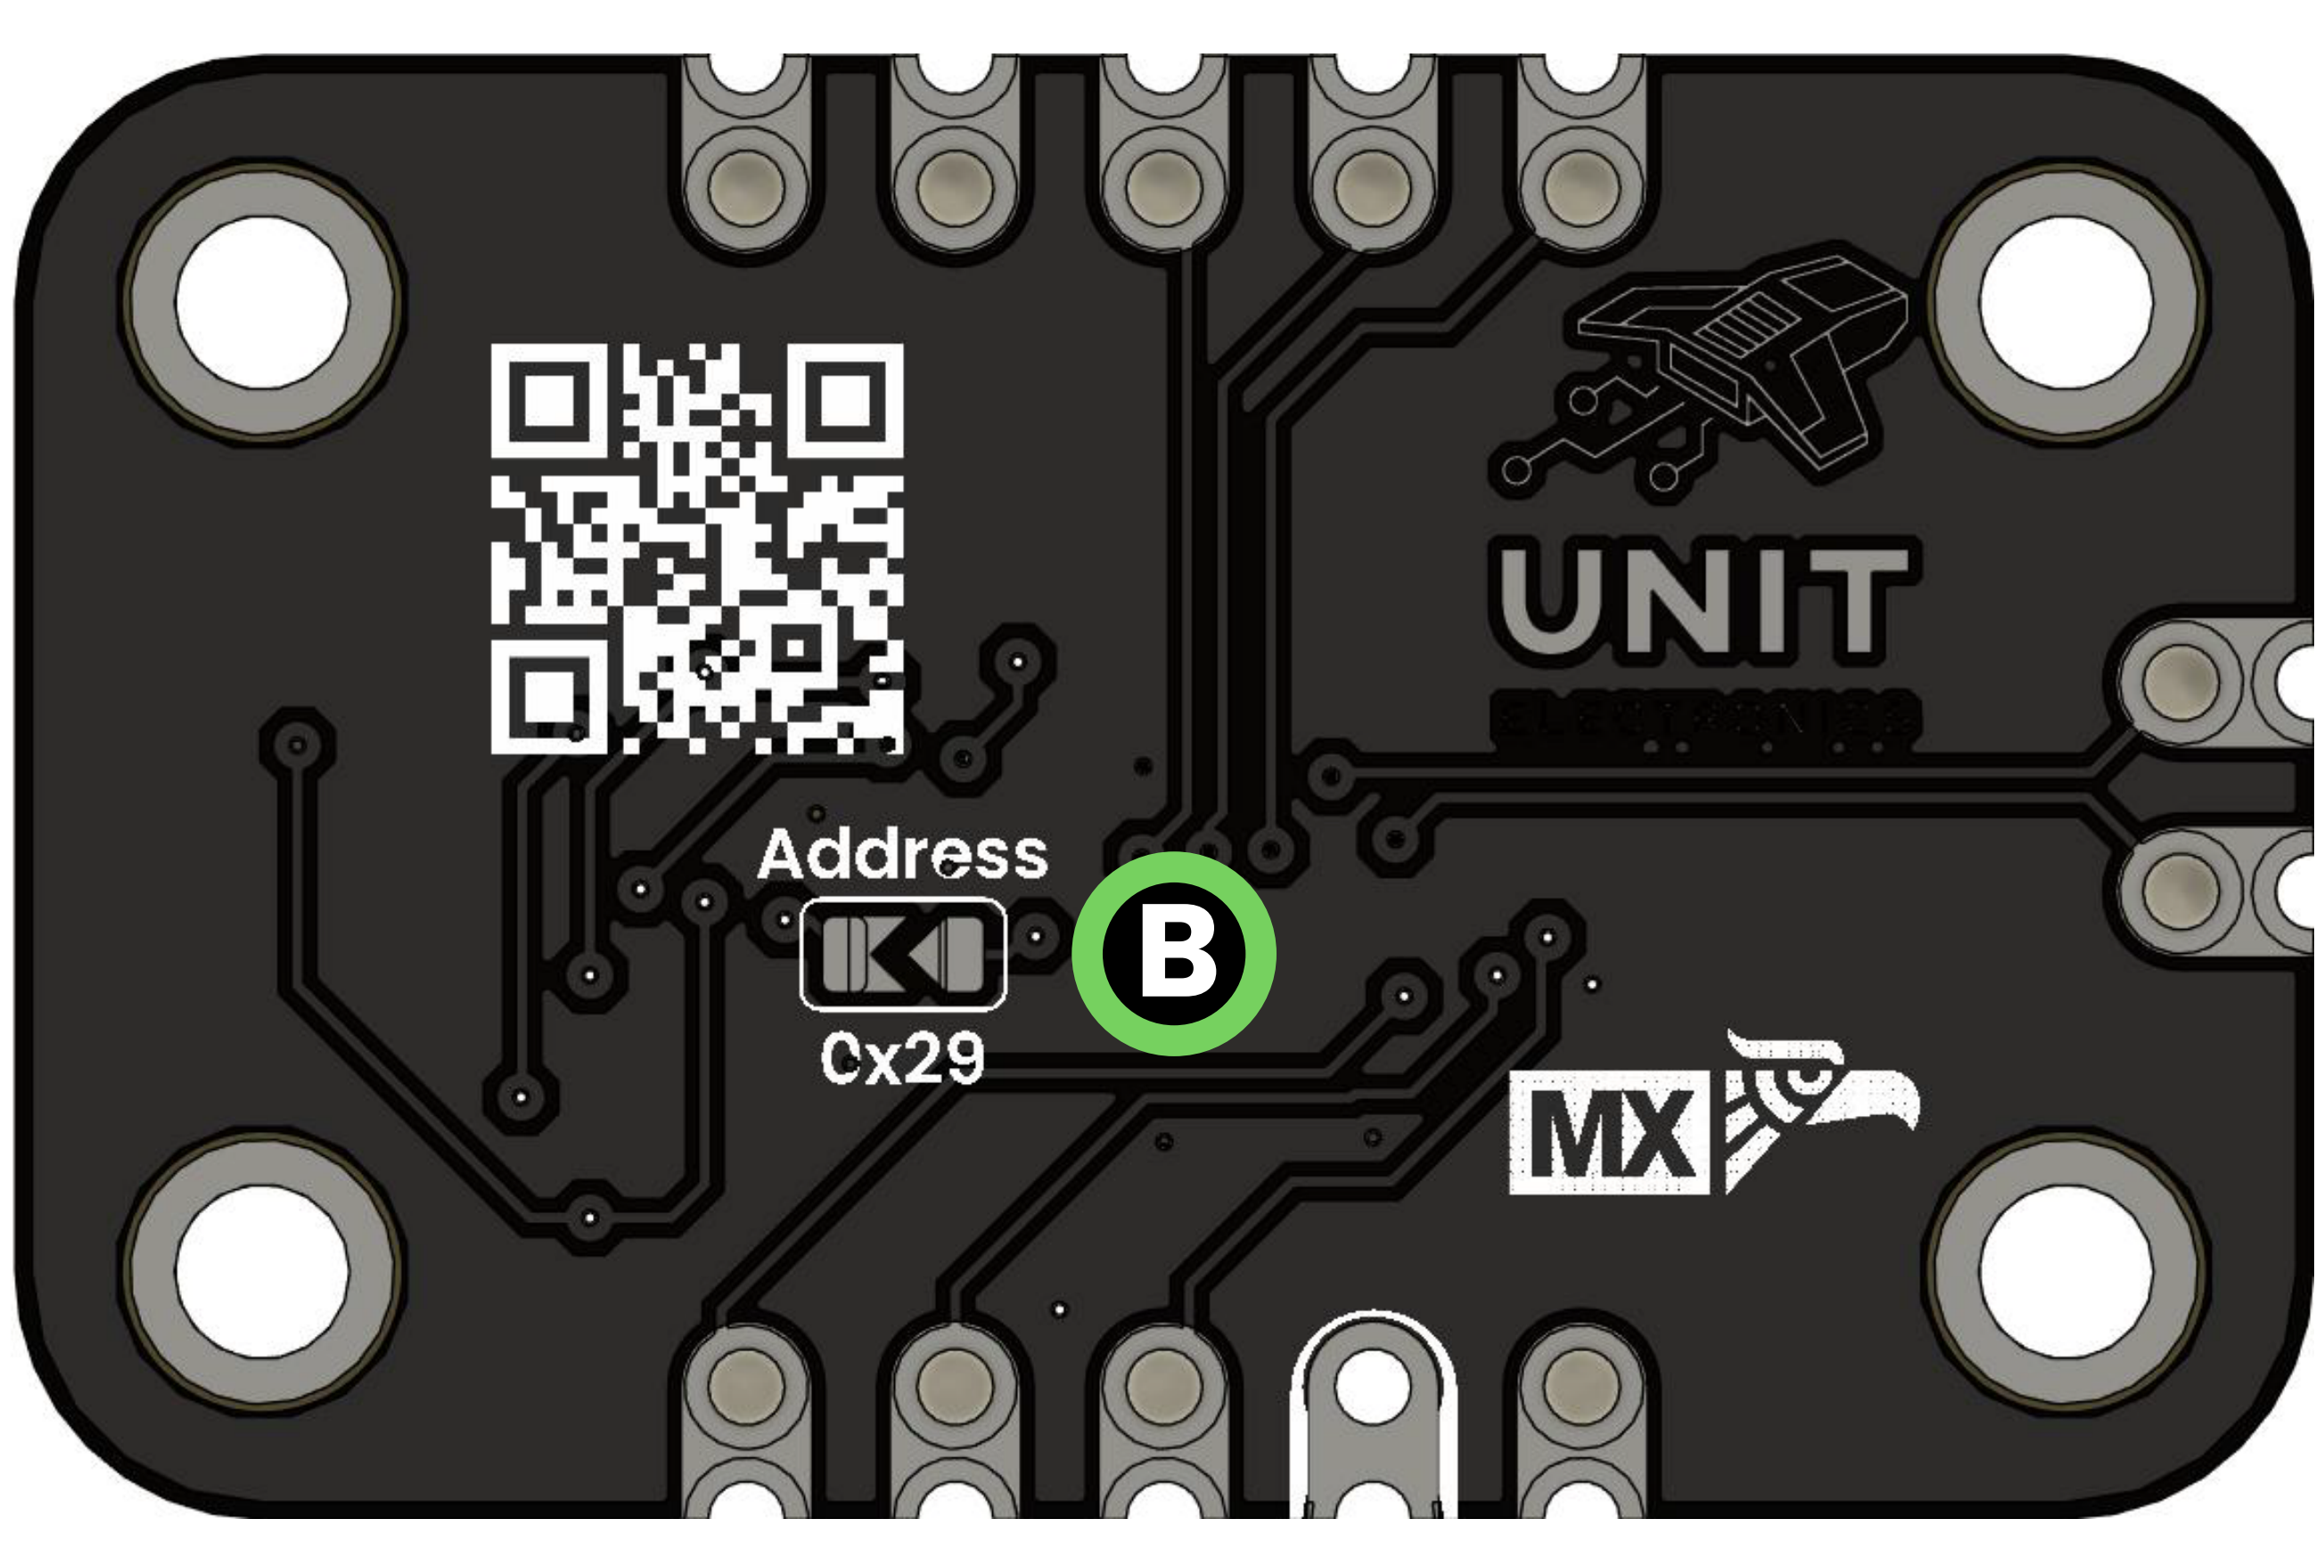


BNO055 BMP280 Module

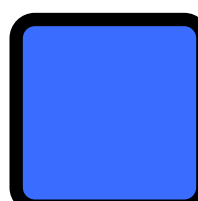
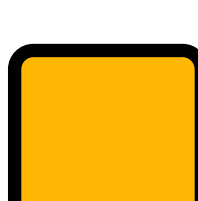
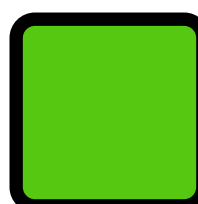
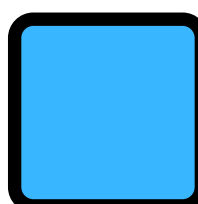
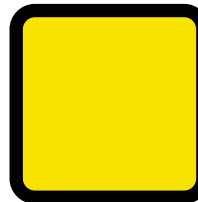
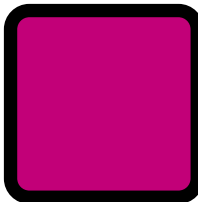
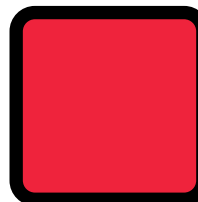
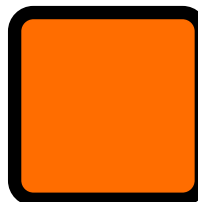
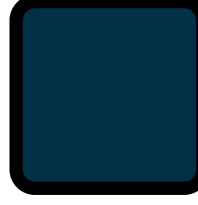

Top view



Bottom view



Description:

- | | |
|--|--|
|  Supply voltage |  Bootloader indicator |
|  GND |  I2C |
|  Boot Mode |  Interrupt |
|  Protocol select |  Reset |
|  SWD |  Configurable address |

