



Grizzl-E Smart Charger – Update Procedure

Step 1: Connect Charging Station to Network

1. Plug in the Charger.
2. Open the Wi-Fi settings on your desktop.
3. Select the network UC_Smart_[ChargerSerial#]. The charger Serial Number can be found on the label.
4. Open your browser.
5. Enter the IP address 192.168.4.1 into the browser search bar.
6. A webpage will load. Select the Enter Router Credentials button.

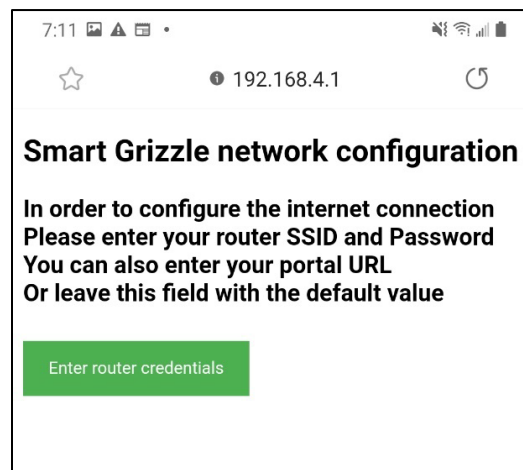

7. Enter the SSID Password for your Wi-Fi network. Keep acharger.ca in Portal URL field.

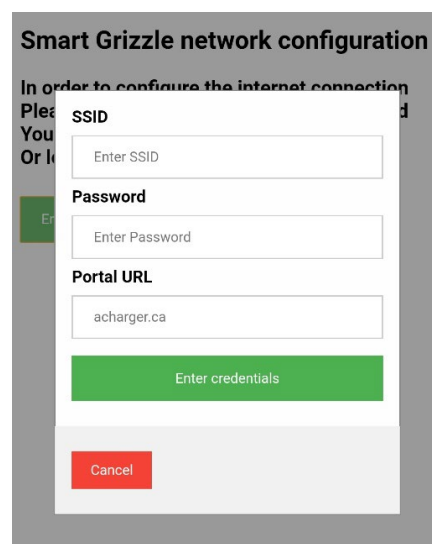

8. Close the browser page.
9. Verify that you are connected. If connection is successful the buzzer will sound continuously for 4 seconds and LED indicator will alternate between Light Blue and Blue.
10. Disconnect your device from the UC_Smart network and re-connect to your local network.

Step 2: Create an Account on acharger.ca

1. Go to <http://acharger.ca/> on your desktop web browser.
2. Select the **Login** button.
3. Select the **Sign Up** button.
4. Enter your **Full name, Email address, Username, Password** into the registration form.
5. Select the **Register** button. You will be directed back to the Login Page.


Step 3: Sign Into Autochargers Account

1. Enter your **Username** and **Password** into the Account Login.
2. Select the **Sign In** button.

Step 4: Add a Charging Station

1. Select the **Add** button from the top menu. The Add Smart Charger window will pop up.
2. Enter the Charger Serial Number (found on the label) in the **Serial Number** field.

3. Select the **Create** button. The created charging stations will show in the Charging Station tab.

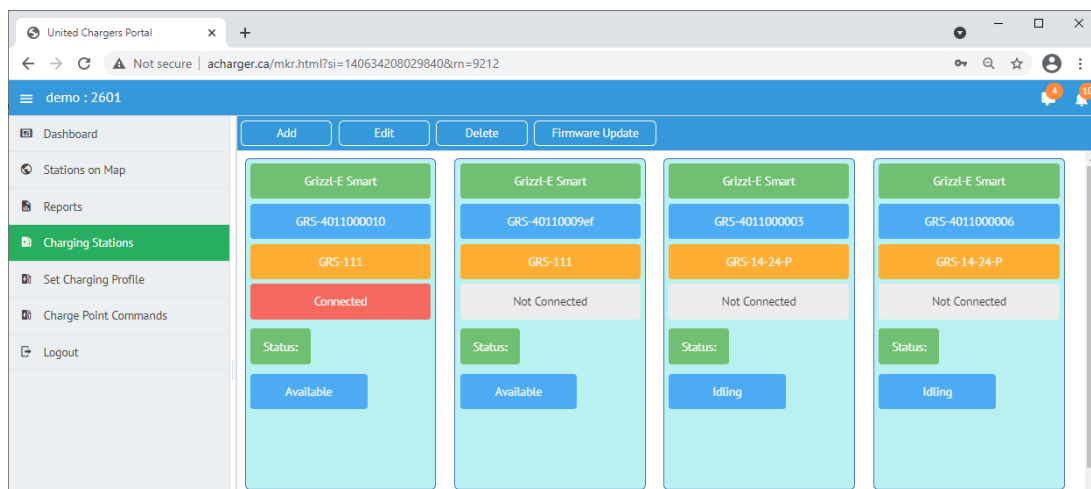


4. Ensure that the Smart Grizzl-E is connected.


Step 5: Update Smart Charging Station

Note: To Update the Grizzl-E Smart firmware you will need an esp32_uploader executable to run to upload ESP32 firmware.

1. On acharger.ca select the Smart Charging Station. The outline box will appear red when the station is selected.

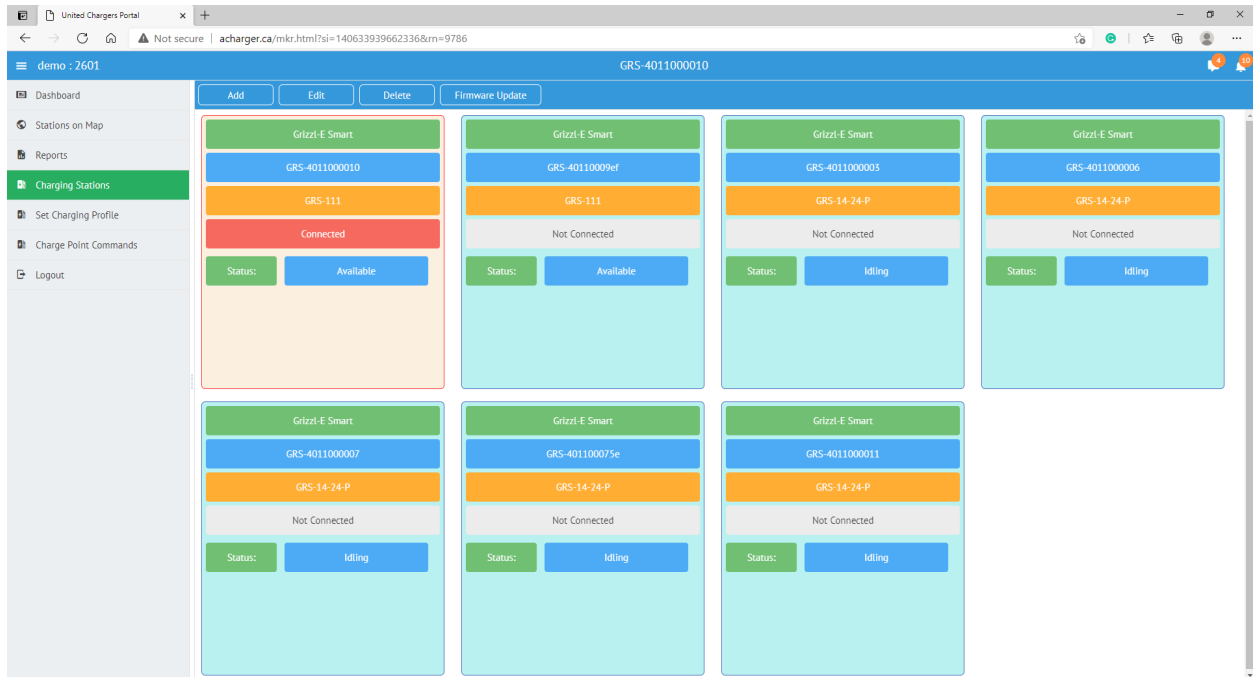

2. Select the **Firmware Update** button from the top menu. Verify that you wish to update the charger.
3. Open the esp32_uploader. Wait for it to verify the Grizzl-E Smart.

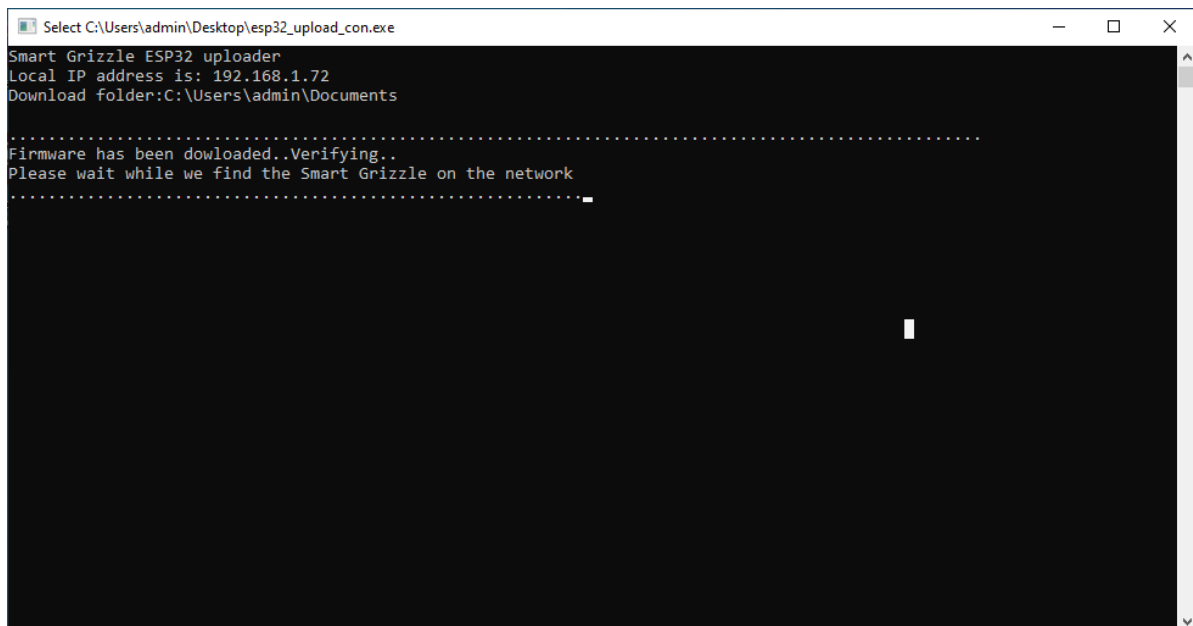

- Once the esp32_uploader recognizes the charger a browser page will open to update the Grizzle-E firmware.



- Select the **Choose File** button. Select the most recent version of the Firmware Version to download.
- Select **Update**. Wait for the progress reach 100%. After the update reaches 100% close the browser page.



- Verify the firmware has been downloaded on the ESP32 Uploader. Press 'q' to quit the ESP32 Uploader.

