



TrueFace6000FP-PW Back to Back (Connection Diagram)

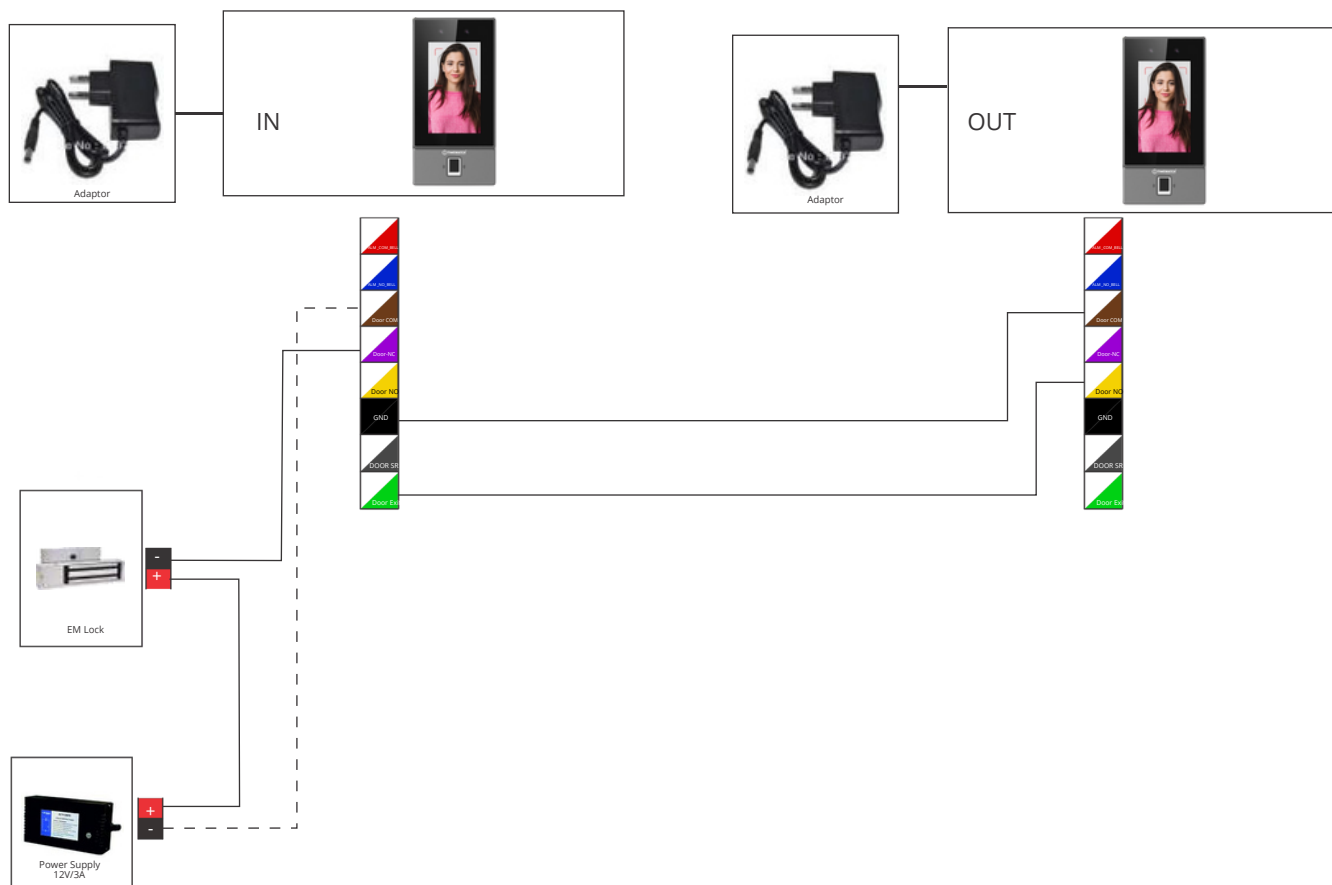

TrueFace6000FP-PW with Push Button (Connection Diagram)

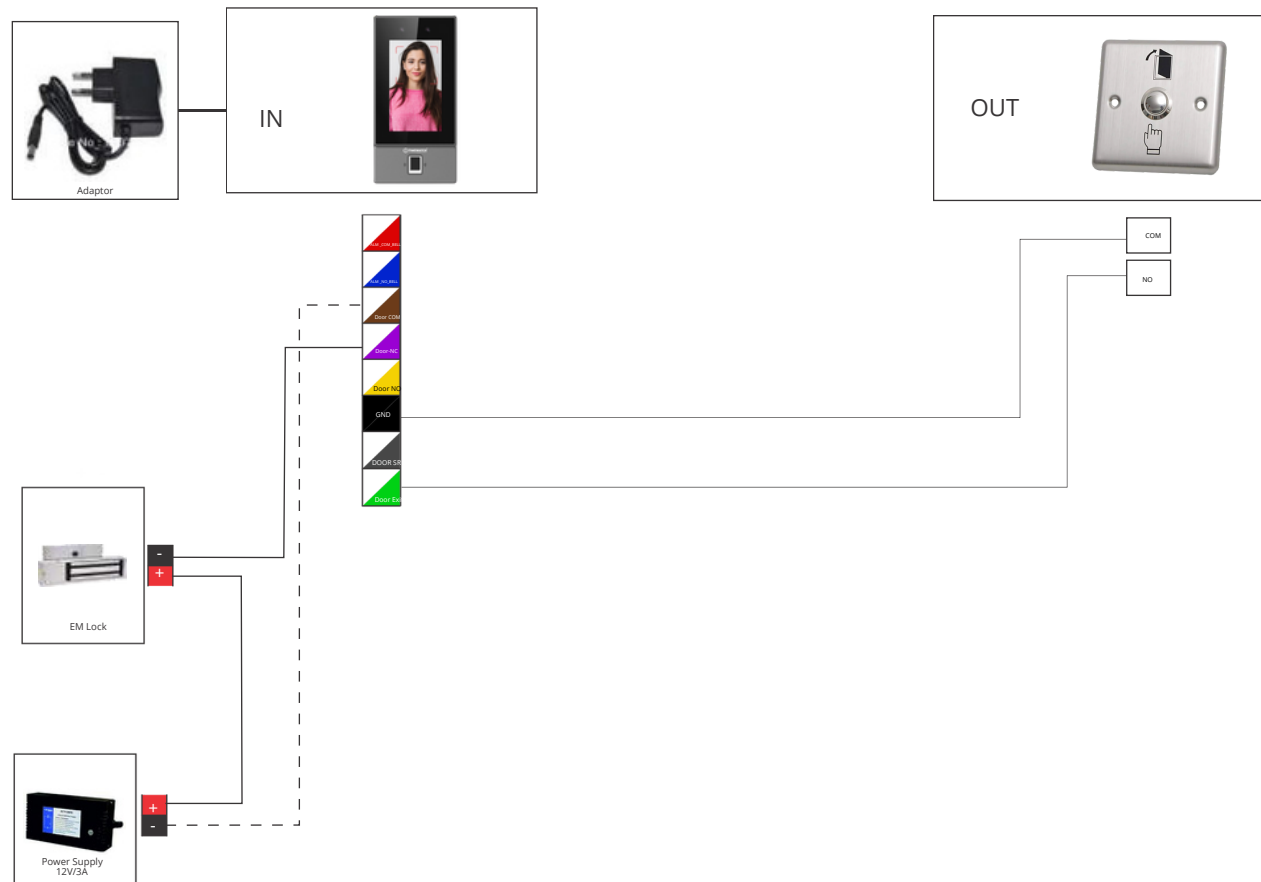

TrueFace6000FP-PW with any Wiegand Reader (Connection Diagram)

