

INSTALLATION INSTRUCTIONS

FOR

DATA INTERFACE BOARD

DIB-92


IN DIAMONDTel 92

CELLULAR TELEPHONE

NOTE: THIS DEVICE SHOULD BE INSTALLED BY A QUALIFIED PERSON WHO POSSESSES THE REQUIRED MECHANICAL SKILLS AND USES DEVICES THAT PREVENT ELECTROSTATIC DISCHARGE TO SEMICONDUCTOR DEVICES IN THE PRODUCT. DAMAGE TO EITHER THE DIB-92 OR DIAMONDTel 92 UNIT ITSELF, DURING THIS OPERATION, IS NOT COVERED BY THE LIMITED WARRANTY.


INSTALLATION OF DIB-92 INTO DIAMONDTel 92 TRANSCEIVER

1. Place Transceiver on a solid work surface.
2. Using a #1 point phillips screwdriver remove 4 screws which hold the Transceiver Top Cover in place. Be careful not to lose the 4 screws which hold the Top Cover in place.
3. Lift cover from Transceiver.

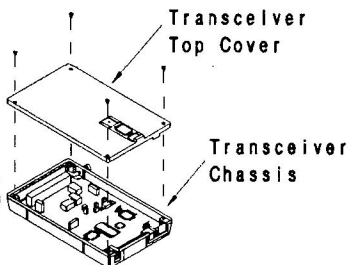


Caution: All components within this unit are prone to damage by electro-static discharge. Proper steps should be taken when handling the Data Interface Board to prevent damage by static discharge. Damage due to static discharge is not covered by limited warranty.

4. Remove the loose Cover Plate from the only covered connector slot.

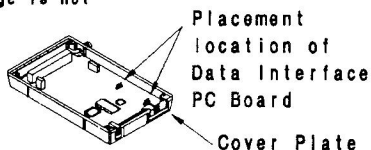


5. Looking into the DiamondTel 92 Transceiver, locate the DIB-92 interface plug connector on the Transceiver PC Board.

6. Place DIB-92 over these connector pins and gently insert (mate) DIB-92 to the connector on the Transceiver PC Board.

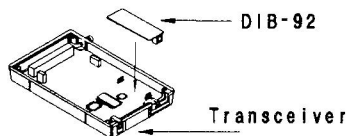

7. After DIB-92 is properly installed, replace Top Cover of DiamondTel 92 on the Transceiver.

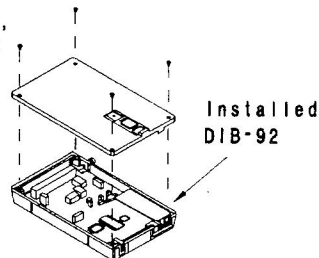

Caution: Do not overtighten screws. Damage can be caused to the screw heads and transceiver case which is not covered under warranty.

Disclaimer:

This operation should be done by a qualified person who possesses required skills and uses devices that prevent electro-static discharge damage to semiconductor devices in this product. Damage to either the DIB-92 or DiamondTel 92 unit itself, during this operation, is not covered by the limited warranty.