



OWNER'S MANUAL

Model No.
CR600N

Save This Manual For Future Reference

HEAVY DUTY 18" CREEPER

DESCRIPTION

Heavy Duty 18" Creeper has 1" diameter welded steel tube frame. Frame is 18" wide and 44" long. 2" thick upholstered vinyl fabric over foam bed and headrest. Six 3" high-impact, non-marking, oil-resistant casters withstand harsh environments. Creeper has comfortable pillow style headrest. 500 pound load capacity with 1½" ground clearance.

ASSEMBLY INSTRUCTIONS

Read these instructions before starting; follow assembly procedures carefully.

1. To install casters (Key No. 4) onto frame (Key No. 1), place creeper on a workbench.
2. Slide lock washer (Key No. 6) over threaded insert (Key No. 5).
3. Insert threaded portion of caster into one of the six holes in bottom of frame. Make sure square portion of caster fits into frame. Position threaded insert into hole above caster and finger tighten insert. Securely tighten insert onto caster using 6mm hex wrench.
4. Repeat process for five (5) remaining casters and threaded inserts. Make sure all six (6) threaded inserts and casters are securely tightened.
5. To install headrest (Key No. 3) onto frame (Key No. 1), turn creeper upside down on workbench.
6. Place headrest under frame with thickest part of headrest towards top of frame. Align T-nuts in headrest with four holes in frame.
7. Slide flat washer (Key No. 8) over pan head screw (Key No. 7) and secure headrest to frame. Secure three remaining screws with washers to headrest and tighten securely.

GENERAL SAFETY INSTRUCTIONS

1. Do not stand on creeper.
2. Creeper must be on level surface to ensure proper stability.
3. Only use creeper when fully assembled.
4. Periodically check fasteners and tighten securely if needed.
5. Never use creeper if it does not perform according to this manual.

INDUSTRIAL SEATING LIMITED WARRANTY

Product is warranted against mechanical or structural failure due to defective material or workmanship for 1 year. Provided however, this warranty lasts only so long as you own your product. If you sell or otherwise transfer the product this warranty terminates automatically. Products that are damaged or made unserviceable by accidents, abuse, misuse or are altered in anyway are not covered by this warranty.

MAC Tools reserves the right to replace or recondition at its option, any units covered by this warranty. All return shipments require Material Return Authorization and must be freight prepaid unless otherwise approved in writing.

If any product covered under this warranty fails to meet the terms of this warranty or it is in any respect broken, defective or missing parts, please call us immediately at toll free 1-800-621-6145. Any attempts to make unauthorized repairs will void this warranty in every respect.

This warranty gives you specific legal rights. You may have other rights which vary from state to state, however such implied rights are limited to a period of one year from the date of your initial purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.


MAC Tools will in no event be liable for incidental or consequential damages for any amount in excess of the original purchase price. Some states do not allow exclusion or limitation of such damages, so the above limitation or exclusion may not apply to you.

HOW TO ORDER REPAIR PARTS

When ordering repair parts or reporting problems, always give the following information:

NAME OF ITEM	MODEL NUMBER
Heavy Duty 18" Creeper	CR600N
PART DESCRIPTION	PART NUMBER

All parts listed may be ordered from Mac Tools® Customer Service at 1-800-MACTool.

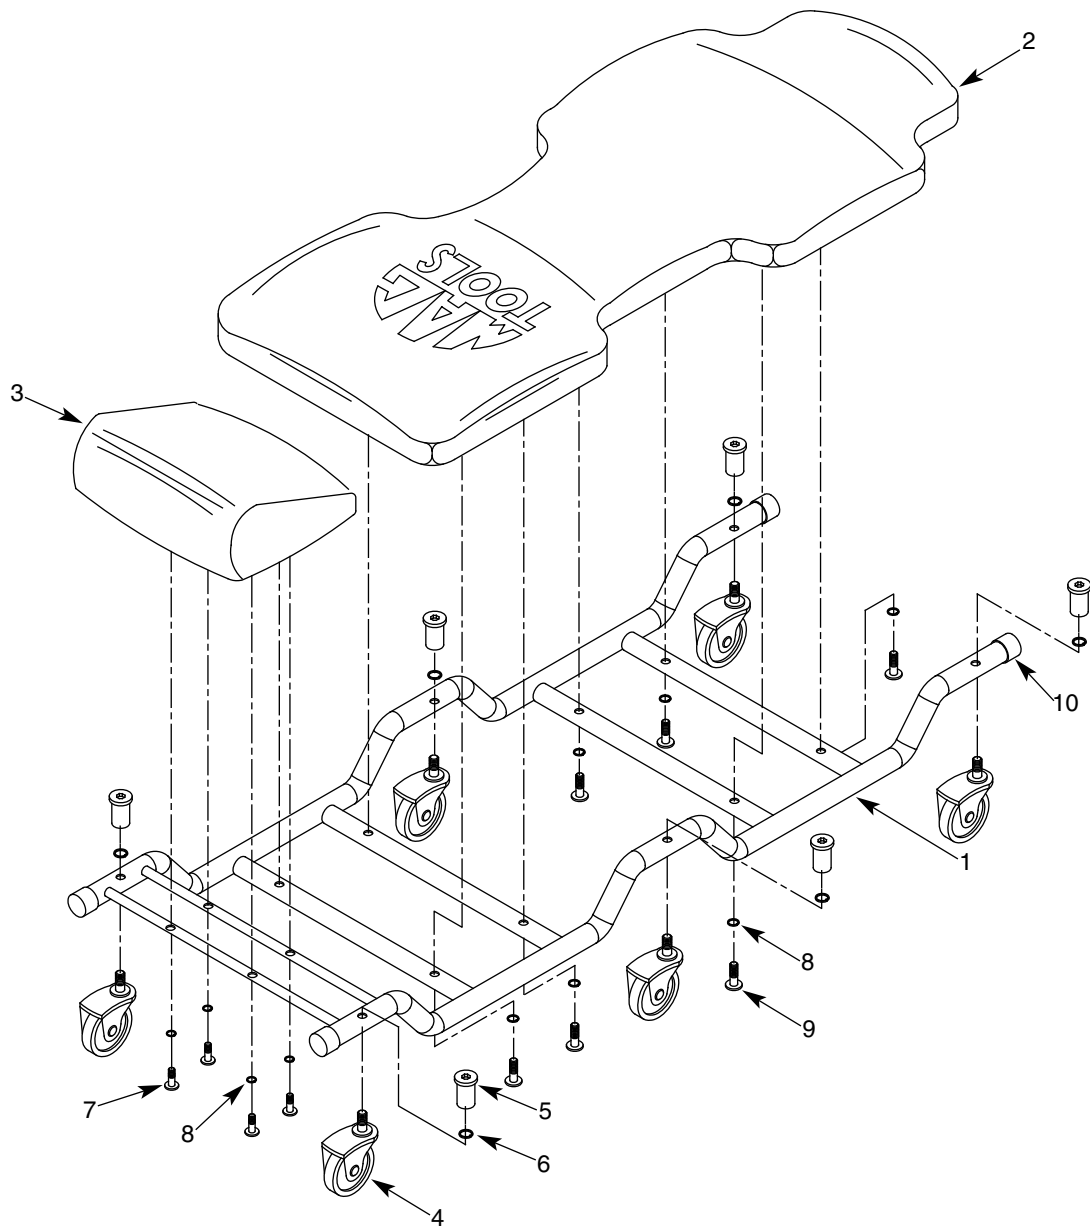

PARTS LIST

KEY NO.	DESCRIPTION	QTY	PART NO.
1	Frame	1	CR600N-10
2	Bed	1	CR600N-12
3	Headrest	1	CR600N-13
4	Caster	6	CR600N-3
5	Threaded Insert	6	CR600N-5
6	10mm Lock Washer	6	CR600N-6
7	1/4-20 x 1 1/4" Phillips Pan Head Screw	4	CR600N-14
8	1/4" Flat Washer	12	CR600N-15
9	1/4 -20 x 1 1/2" Phillips Pan Head Screw	8	CR600N-16
10	Cap	4	CR600N-11