




# ***Auxiliary Tripod Stand***

## **Operating Instructions & Parts Manual**

**Model Number  
UTS2000**

**Capacity  
2 Ton**

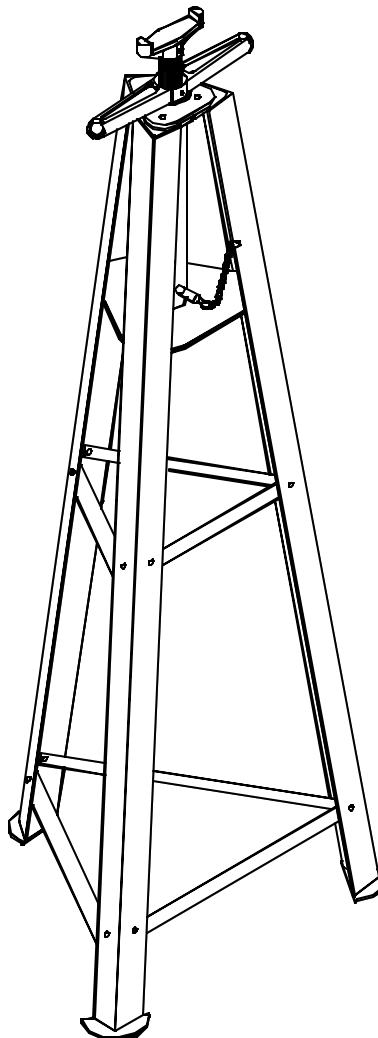

**MAC TOOLS INC.**  
505 N. Cleveland Ave. Suite 200  
Westerville, OH 43082

**Save these instructions.** For your safety, *read, understand, and follow* the information provided with and on this product. The owner and operator of this equipment shall have an understanding of this product and safe operating procedures before attempting to use. The owner and operator shall be aware that use and repair of this product may require special skills and knowledge. Instructions and safety information shall be conveyed in the operator's native language before use of this product is authorized. If any doubt exists as to the safe and proper use of this product, remove from service immediately.

**Inspect before each use.** Do not use if there are broken, bent, cracked or damaged parts (including labels). Any product that appears damaged in any way, or operates abnormally shall be removed from service immediately. If the product has been or is suspected to have been subjected to a shock load (a load dropped suddenly, unexpectedly upon it), immediately discontinue use until product has been inspected by an authorized factory service center. It is recommended that an annual inspection be done by qualified personnel. Labels and Operator's Manuals are available from manufacturer.

**PRODUCT DESCRIPTION**

The Mac Tool Auxiliary Stand is designed to help prevent the tipping/rocking of a vehicle while the vehicle is engaged on an automotive lift. Heavy gauge steel construction and compliance with the latest **ASME/ANSI** standards ensure safety, strength and stability.

**DO NOT USE FOR ANY OTHER PURPOSE THAN THOSE OUTLINED ABOVE**

**SPECIFICATIONS**

Model	Capacity	Base Size	Min. Height	Max. Height
UTS2000	2 Ton (4000 Lbs)	24" X 24" X 24"	66 1/2"	75 3/4"

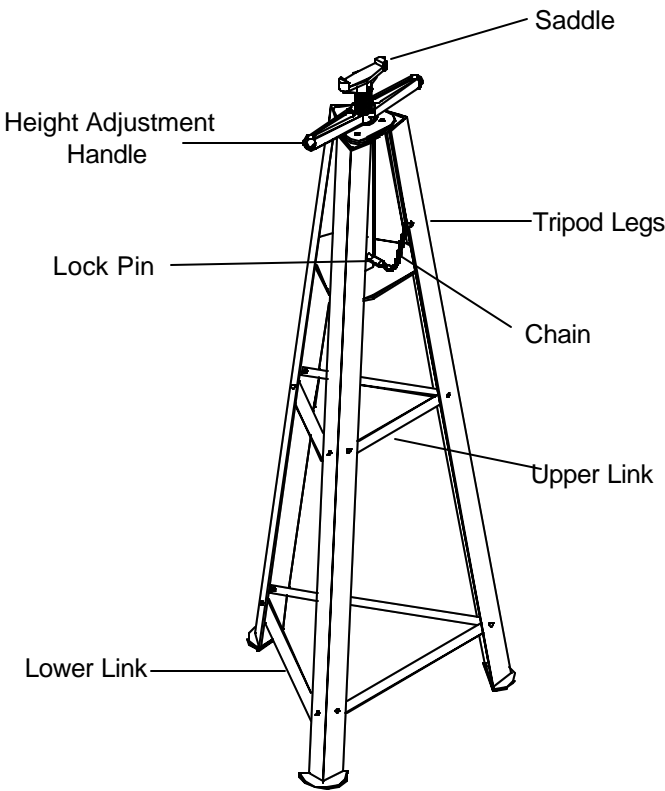


Figure 1 - Model UTS2000 Components

**WARNING**



- Study, understand, and follow all instructions before operating this device.
- Do not exceed rated capacity.
- Use only on hard, level surfaces.
- Adequately support the vehicle before starting repairs.
- Do not use to support or stabilize vehicle.
- Center load on saddle.
- Failure to heed these markings may result in Personal injury and/or property damage.

## BEFORE USE

1. Inspect stand before each use. Do not use if bent, broken or cracked components are noted. Ensure that all parts move freely.
2. Verify that the product and the application are compatible.
3. Before using this product, read the owner's manual completely and familiarize yourself thoroughly with the product and the hazards associated with its improper use.

## ASSEMBLY

(See Figure 2 on Page 4)

1. Attach lower tube support plate (#8) and upper tube support plate (#4) to tripod legs (#3) using bolts, washers and nuts provided. Finger tighten only. Make sure both plates are placed above the screw hole.
2. Attach lower and upper link (#1 & #2) using bolts and nuts provided. Finger tighten only.
3. Insert threaded rod (#9) into rod tube (#16).
4. Insert bearing (#15) and height adjustment handle (#14) into threaded rod (#9).
5. Attach saddle (#13) on top of the threaded rod (#9) and use a hammer to punch the pin (#10) into the threaded rod.
6. Insert the Assembly of step 4 and 5 through the upper support plates.
7. Insert the lock pin (#17) into the bottom of rod tube (#16).
8. Tighten securely all the bolts and nuts.

### ! SAFETY MESSAGE !

This stand is intended to provide partial support of vehicle components during removal and installation. Be sure all tools and personnel are clear before lowering load. No alterations shall be made to this device. Only attachments and/or adapters supplied by the manufacturer shall be used.

## OPERATION

**Note:** This product should never be used to lift or lower a vehicle.

### To Raise

Turn height adjustment handle clockwise until saddle contacts load. Adjust to desired position.

### To Lower

Turn height adjustment handle counterclockwise.

## MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Apply grease to fitting as needed. If rust appears, sand affected area and cover with suitable utility paint.

## ONE YEAR LIMITED WARRANTY

For a period of one (1) year from date of purchase, **Mac Tools Inc.** will repair or replace, at its option, without charge, any of its products which fails due to a defect in material or workmanship under normal usage. This limited warranty is a consumer's exclusive remedy.

Performance of any obligation under this warranty may be obtained by returning the warranted product, freight prepaid, to **Mac Tools Inc.** Warranty Service Department, 505 N. Cleveland Ave. Suite 200 Westerville, OH 43082.

Except where such limitations and exclusions are specifically prohibited by applicable law, (1) THE CONSUMER'S SOLE AND EXCLUSIVE REMEDY SHALL BE THE REPAIR OR REPLACEMENT OF DEFECTIVE PRODUCTS AS DESCRIBED ABOVE. (2) **Mac Tools Inc.** SHALL NOT BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGE OR LOSS WHATSOEVER. (3) ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO ONE YEAR, OTHERWISE THE REPAIR, REPLACEMENT OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. (4) ANY MODIFICATION, ALTERATION, ABUSE, UNAUTHORIZED SERVICE OR ORNAMENTAL DESIGN VOIDS THIS WARRANTY AND IS NOT COVERED BY THIS WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## REPLACEMENT PARTS

Available Parts: Please refer to the Parts drawing when ordering parts. Not all components of the stand are replacement items, but are illustrated as a convenient reference of location and position in the assembly sequence. When ordering parts, give Model number, serial number and description below. Call or write for current pricing: Mac Tools Inc. 505 N. Cleveland Ave. Suite 200 Westerville, OH 43082. Tel: 1800-MAC-TOOL (622-8665)

### Model UTS2000

<u>Ref No.</u>	<u>Part#</u>	<u>Description</u>	<u>Qty</u>
1	T457-00001-000	Lower Link	3
2	T457-00002-000	Upper Link	3
3	T457-01000-000	Tripod Leg	3
4	T457-00003-000	Upper Tube Support Plate	1
5	5102-08015-000	Bolt	18
6	5303-00008-000	Washer	18
7	5202-00008-000	Hex Nut M8	18
8	T457-05000-000	Lower Tube Support Plate	1
9	T457-03000-000	Threaded Rod	1
10	5402-06040-000	Elastic Pin Ø6x40	1
11	5701-00006-000	Grease Fitting Nipple	1
12	T455-00002-000	Saddle Pad	1
13	T455-00003-000	Saddle	1
14	T455-00001-000	Height Adjustment Handle	1
15	5602-00052-000	Bearing	1
16	T457-02000-000	Rod Tube	1
17	T457-04000-000	Lock Pin	1
18	T455-04000-000	Chain	1

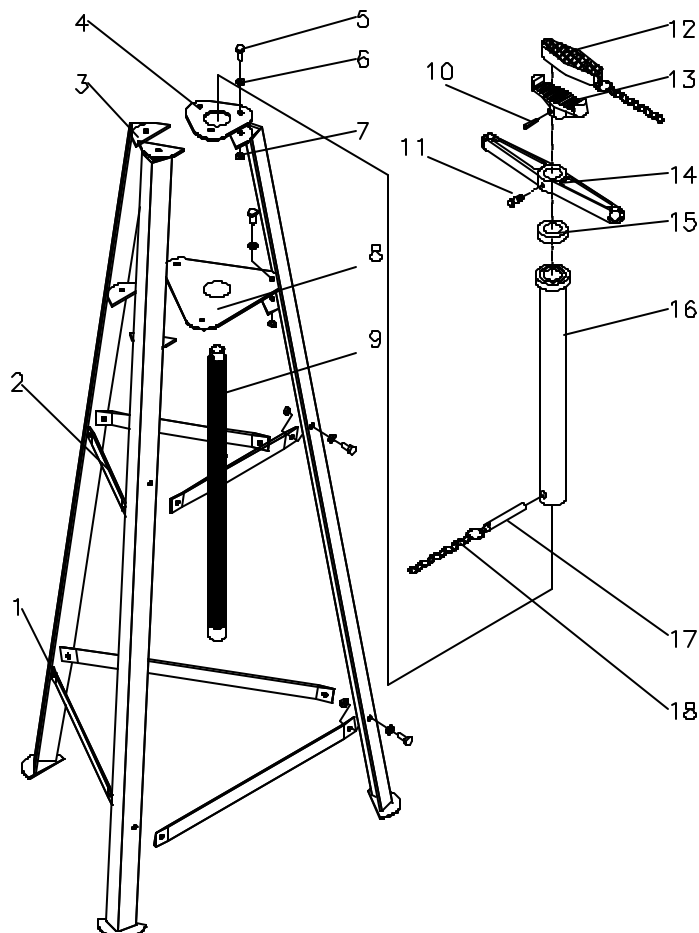


Figure 2 - Parts Illustration for Model UTS2000