




Model No. ST350 Mini Torch



SPECIFICATIONS:

ST350 Butane Powered Turbo-Lite	
Outer Body Measurements	2-3/4" x 3/4" x 1-3/8"
Weight (w / o fuel)	1.6 oz.
Fuel	Butane (5 ml capacity)
Hours of Nonstop Burning	30 Minutes
Flame Temperature	2400° F (blue flame)

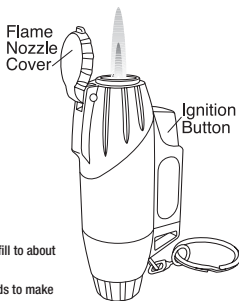

INSTRUCTIONS

FILLING

1. To fill turn ST350 with filling valve facing upward.
2. Press nozzle of Butane Fuel can into filling valve until you can see the fuel fill to about 3/4 or more full.
3. Allow the fuel inside ST350 to equalize for about 5 minutes, or warm in hands to make this occur more rapidly.

TO USE




1. Push up on Flame Nozzle cover (A) using thumb.
2. Push down slowly on Ignition Button (B).
3. To adjust the flame, use the Flame Adjuster Wheel (C) and turn in COUNTERCLOCKWISE (left) direction to increase flame size or CLOCKWISE (right) to decrease flame size.
4. Note that if Flame Adjuster is set too high or too low, the ST350 may not light. Even high fuel flow will prevent ignition.
5. To turn off, simply release thumb from Ignition Button (B).
6. Close Flame Nozzle Cover to protect nozzle. PLEASE NOTE that the Flame Nozzle Cover is not designed to turn off flame. DO NOT CLOSE FLAME NOZZLE COVER WHILE ST350 IS LIT.

WARNINGS

- Read instructions before use.
- ST350 contains butane gas under pressure. **EXTREMELY FLAMMABLE.**
- Do not ignite or use near an open flame, heater, furnace, or combustible material.
- Do not touch the flame cover during use, or before sufficient time has passed for cooling.
- Always be sure the unit is cool before storing.
- Store properly when not in use. Keep in a dry place and OUT OF DIRECT SUNLIGHT.
- Keep out of the reach of children.
- Do not attempt to readjust or repair the ST350. Unit is not user serviceable except for flame adjustment.
- Do not use continuously for more than five (5) minutes.

Caution:

The torch flame is almost invisible in daylight, or in strong light.

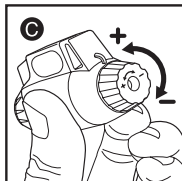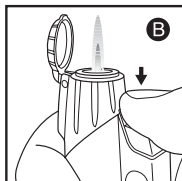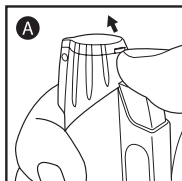

Patent Pending
Made in Taiwan