


## The Garmin eTrex

### Features and Button Function

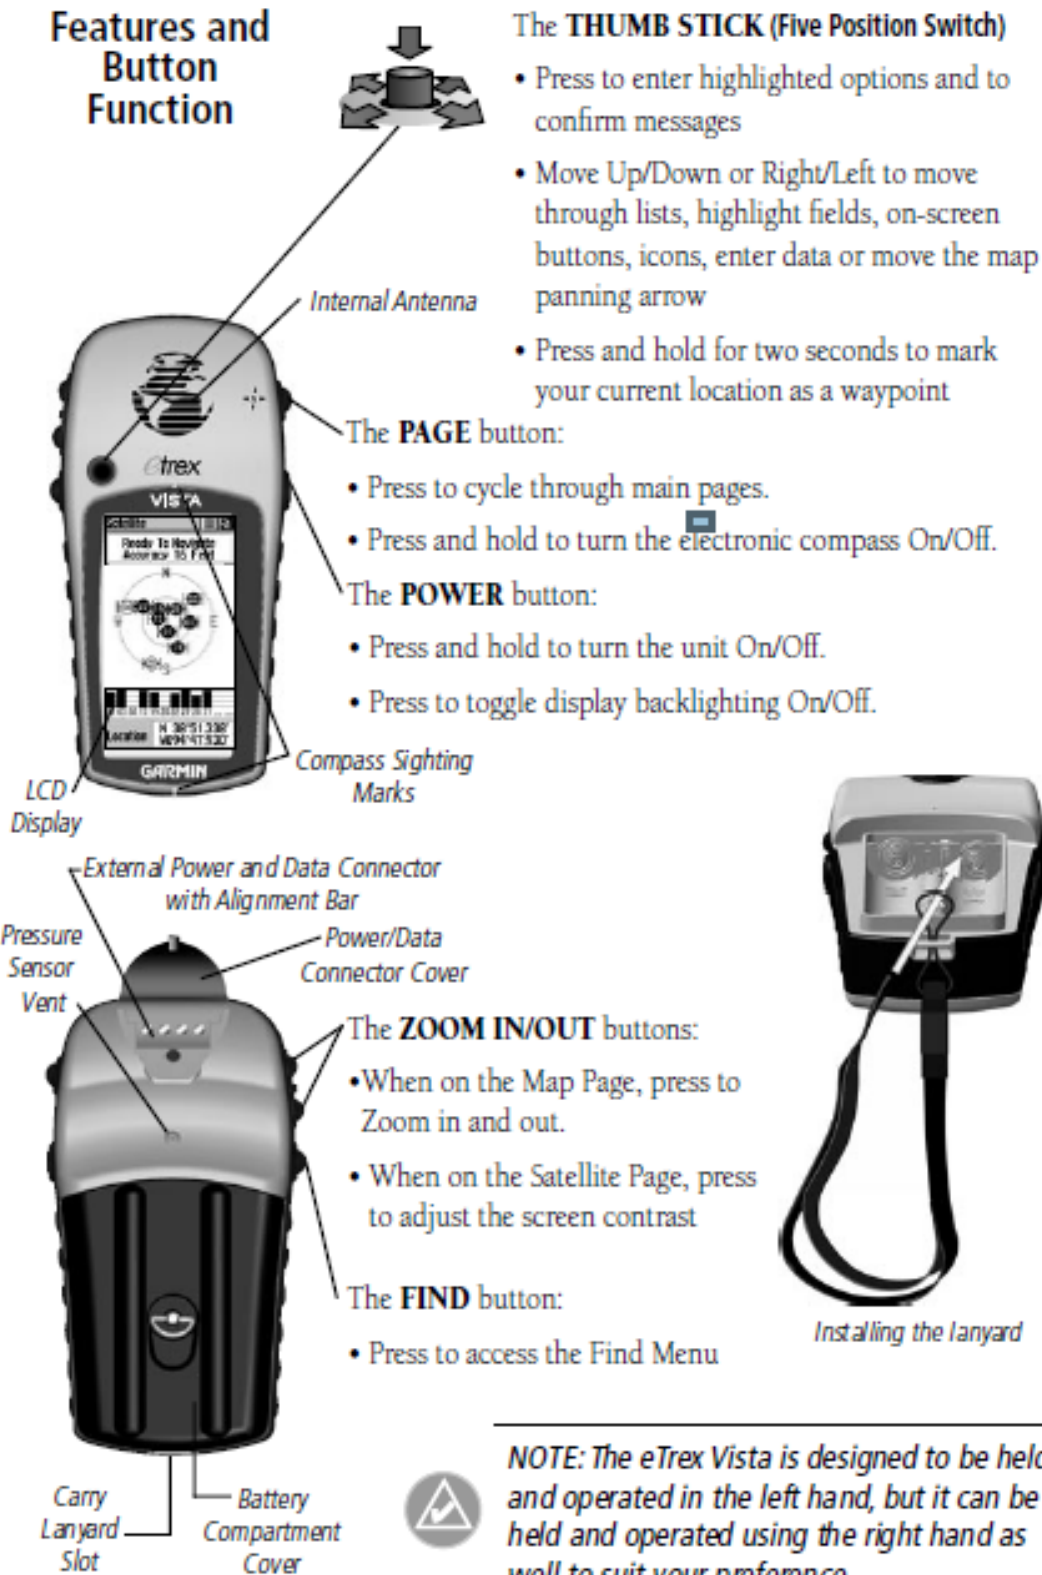

**NOTE:** The eTrex Vista is designed to be held and operated in the left hand, but it can be held and operated using the right hand as well to suit your preference.

## Marking Waypoints in the Garmin eTrex

---

1. Turn on the unit using the lower right side button.

Calibrating the Compass may be necessary. To do this:

- a. Go to the Main Menu (bottom left side button).
- b. Select Set Up (use the front left button to select and press to enter).
- c. Select Calibration.
- d. Select Compass.
- e. Follow the instructions to turn the unit around until calibrated.

2. Satellite Page shows. When ready, unit may skip to the Map page.
3. Map Page shows. Note your location details.
4. To adjust your Field of View use the zoom buttons on top left side.
5. Press and HOLD the thumb stick until the unit beeps and the “Mark Waypoint” screen appears.
6. Use the thumb stick to navigate through the page to highlight the different fields.
  - a. Name the waypoint (top line of page).
  - b. Leave date as-is.
  - c. Change Latitude and Longitude if you want to enter a location to find.

## Finding Way Points Using the Garmin eTrex

---

1. Turn on the unit using the lower right side button.

Calibrating the Compass may be necessary. To do this:

- f. Go to the Main Menu (bottom left side button).
- g. Select Set Up (use the front left button to select and press to enter).
- h. Select Calibration.
- i. Select Compass.
- i. Follow the instructions to turn the unit around until calibrated.

2. Satellite Page shows. When ready, unit may skip to the Map page.
3. Map Page shows. Note your location details.
4. To adjust your Field of View use the zoom buttons - top left side.
5. Go to Find Page. Use upper right side button to toggle.
6. On Find Page, select Way Points.
7. Press enter. Use the front left button to select and press to enter.
8. Go to the desired Way Point, select and enter.
9. On the Way Points details page, select Go To.
10. On the Map Page, note location details. Pay attention to land forms and obstacles.
11. Use top right side button to toggle to the Compass Page.
12. Follow the compass arrow. Pay attention to land forms and obstacles.
13. Unit will announce that you are arriving at the Way Point. It may beep. You will be within 3 to 4 meters of the exact location.
14. Find the pin punch to mark your card at the correct letter.
15. Push Menu button on bottom left side.
16. Select and enter Stop Navigation.
17. Find the next Way Point.