




R-CV-A-MAN (Linear) is a substitute CV for when nothing is plugged in to the CV-A jack
R-CV-B-ATTN (Log) is used to attenuate CV-B

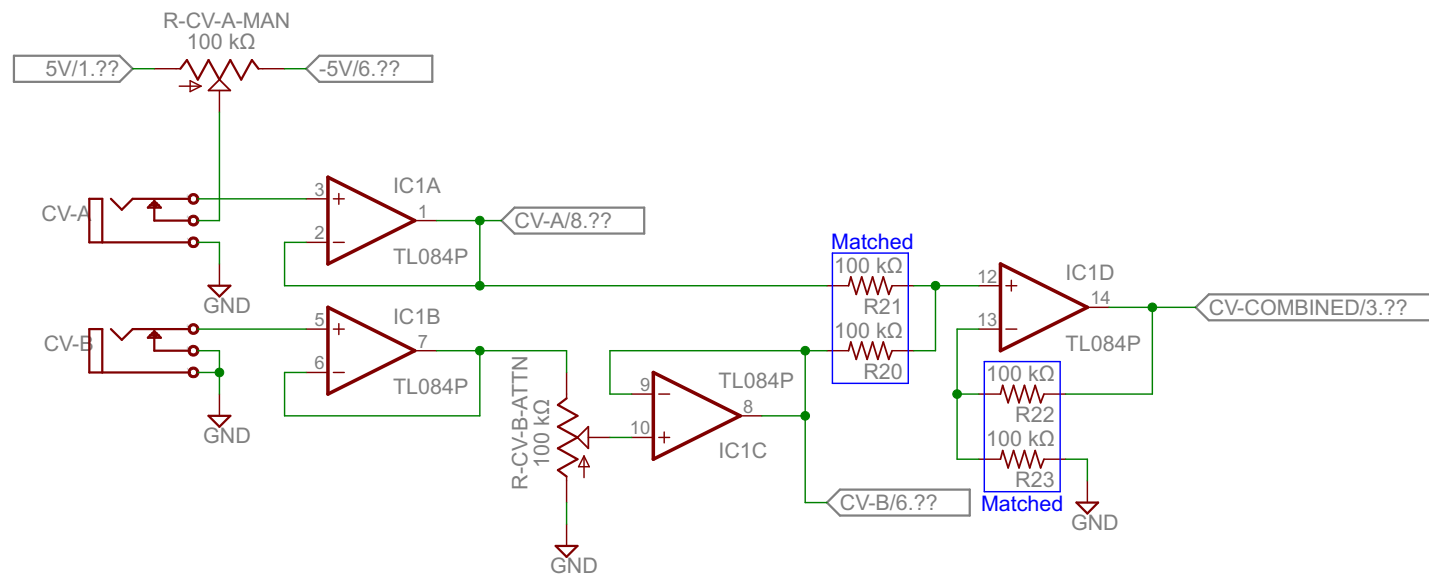

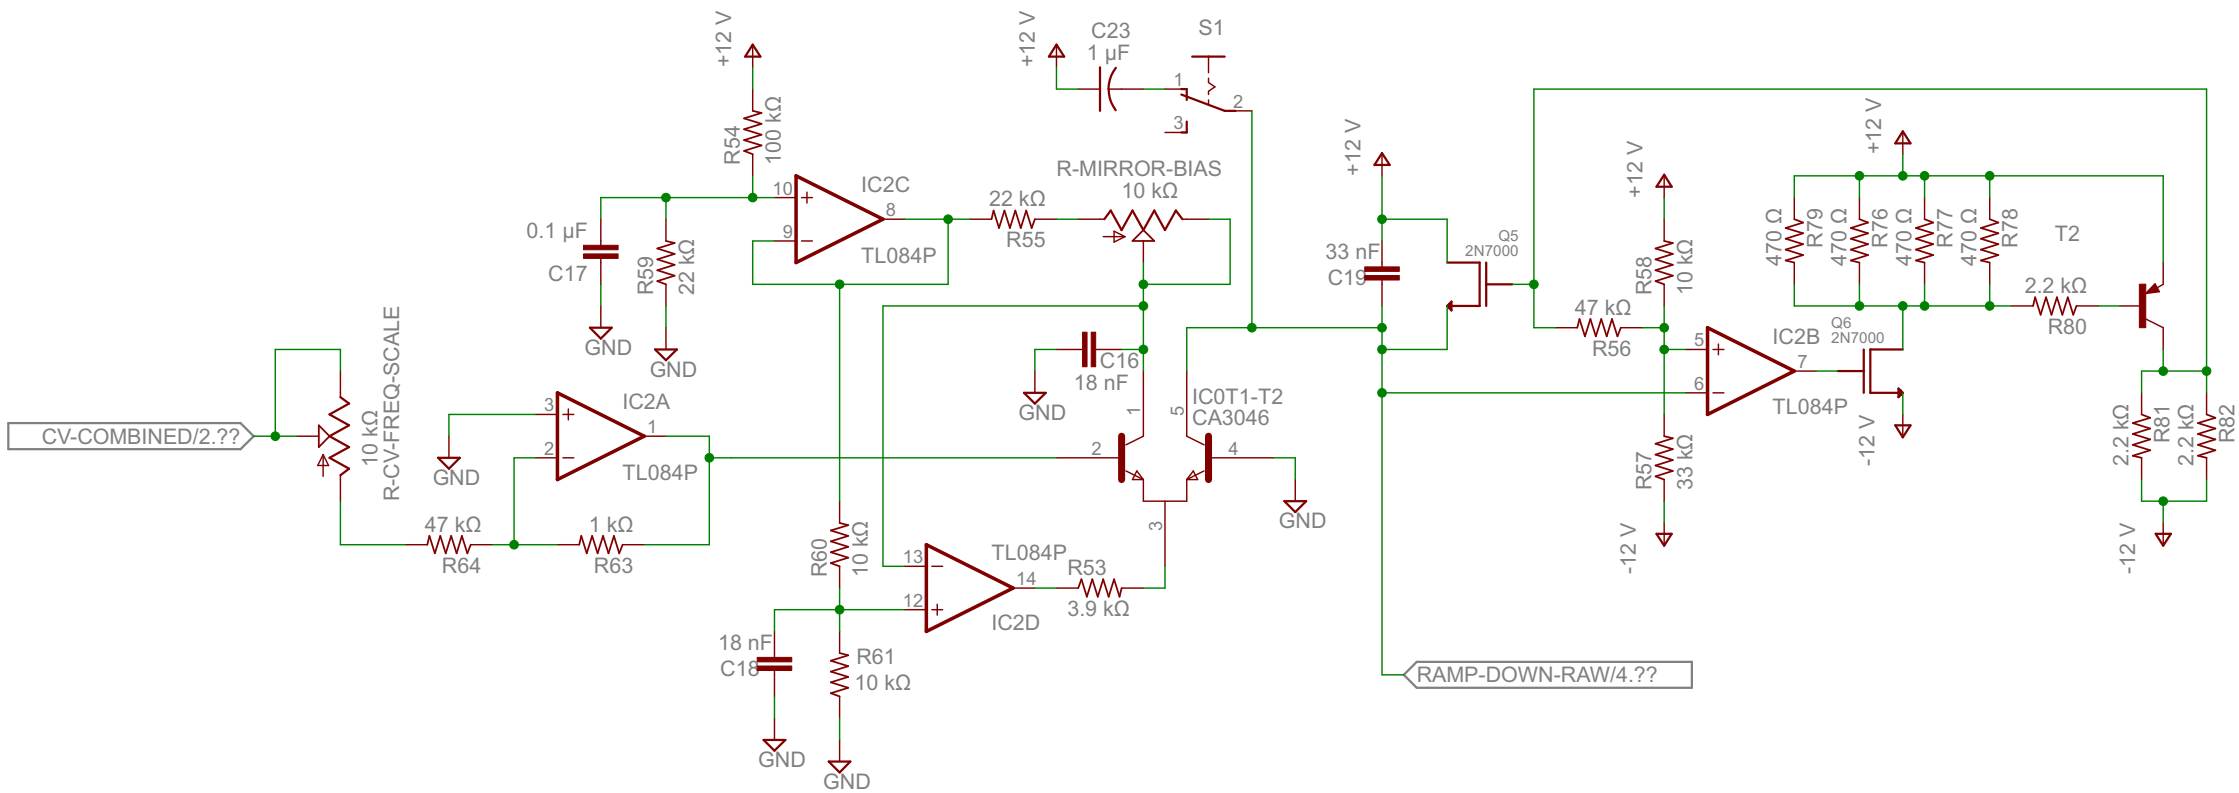

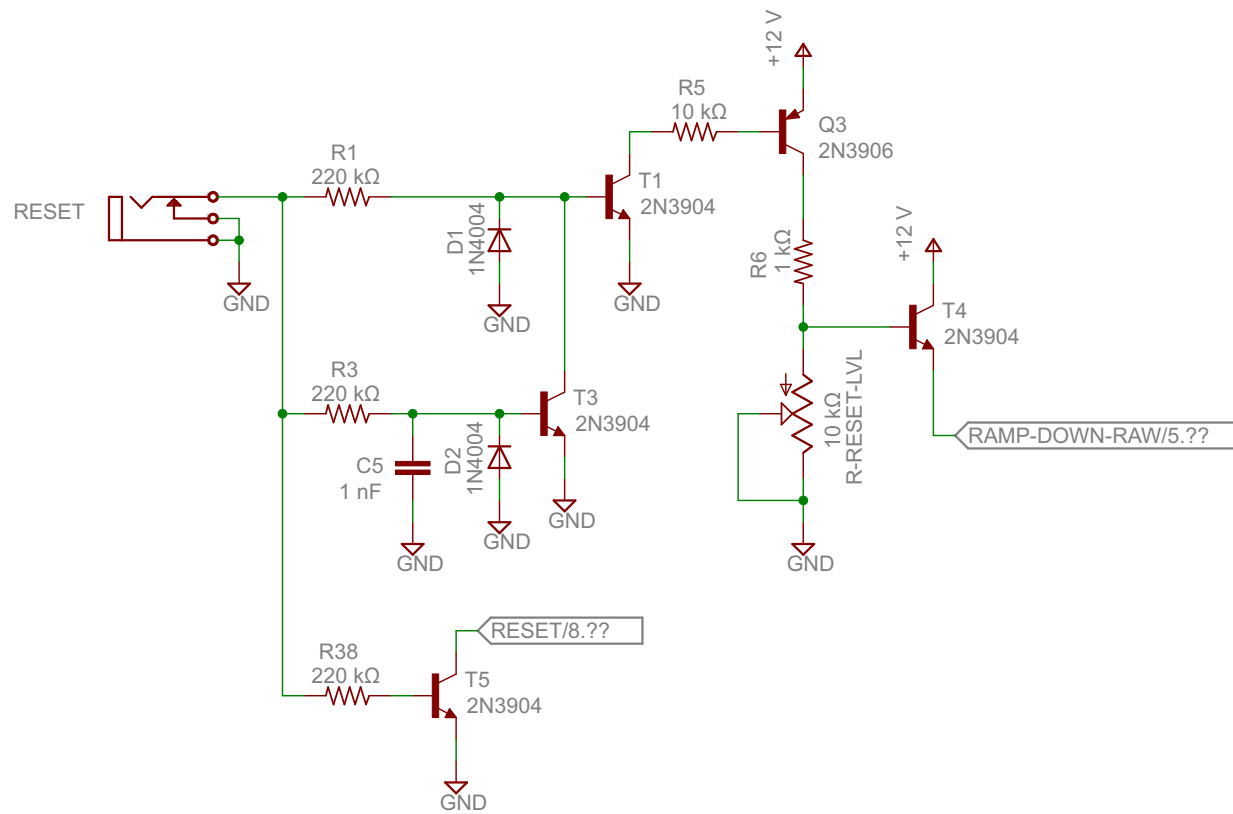



R-CV-PWM-MAN (Linear) is a potentiometer to control the duty cycle of the PWM. It is only active when the CV-PWM jack is empty

