



1. Config ESP

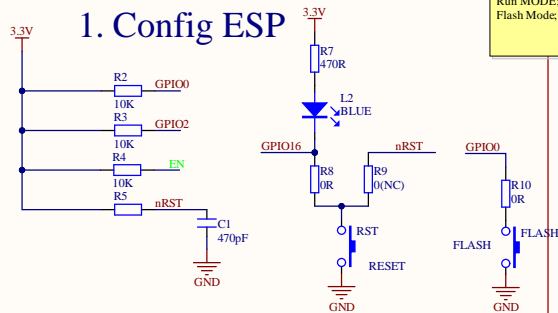


GPIO15 must keep LOW
GPIO2 must keep HIGH
GPIO0 HIGH -> Run Mode; LOW -> Flash Mode;


5. ESP07 WIFI

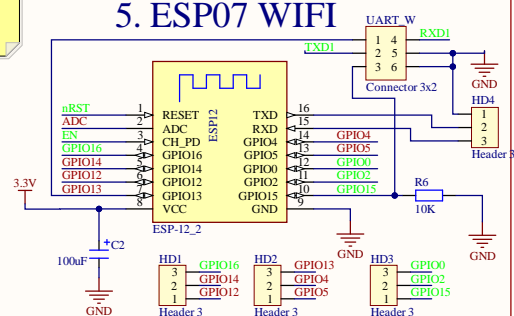


10. PIR HC SR501

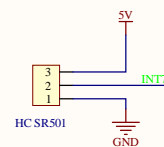


11. LCD

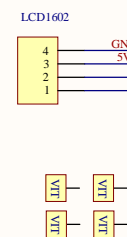


12. BUTTON

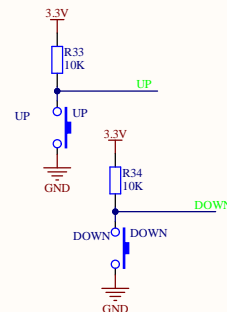


2. RTC DS3231

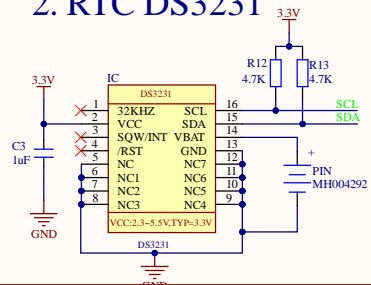

6. PORT A

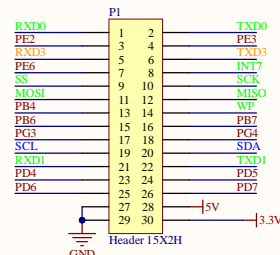


13. ATMEGA 128L

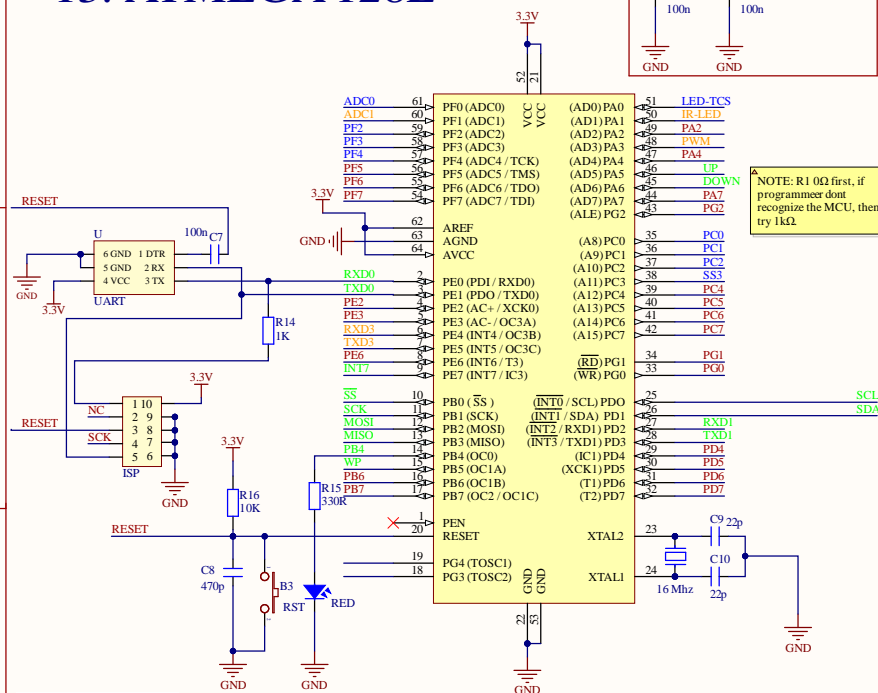


NOTE: R1 0Ω first, if programmer don't recognize the MCU, then try 1kΩ.


3. MICRO SD CARD

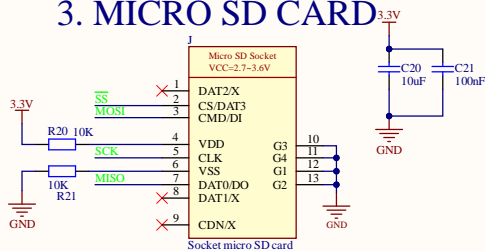

7. PORT B

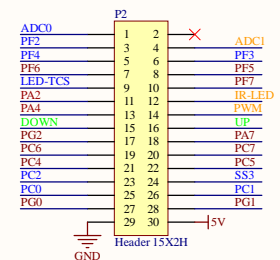


4. POWER SUPPLY

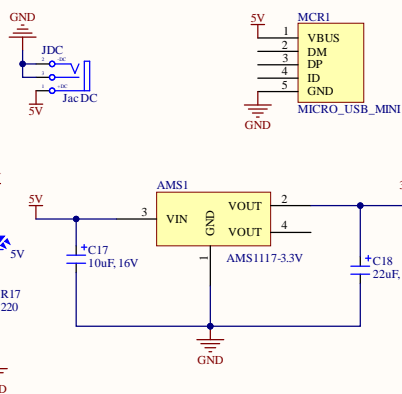

8. JUMPER



9. EEPROM

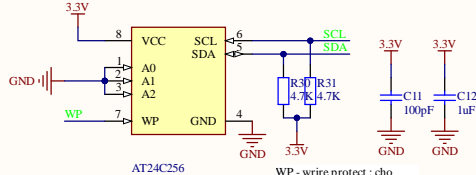

Comment	Description	Designator	Footprint	LibRef	Quantity
---------	-------------	------------	-----------	--------	----------