


Retrieve Mapper Data From Flash Card

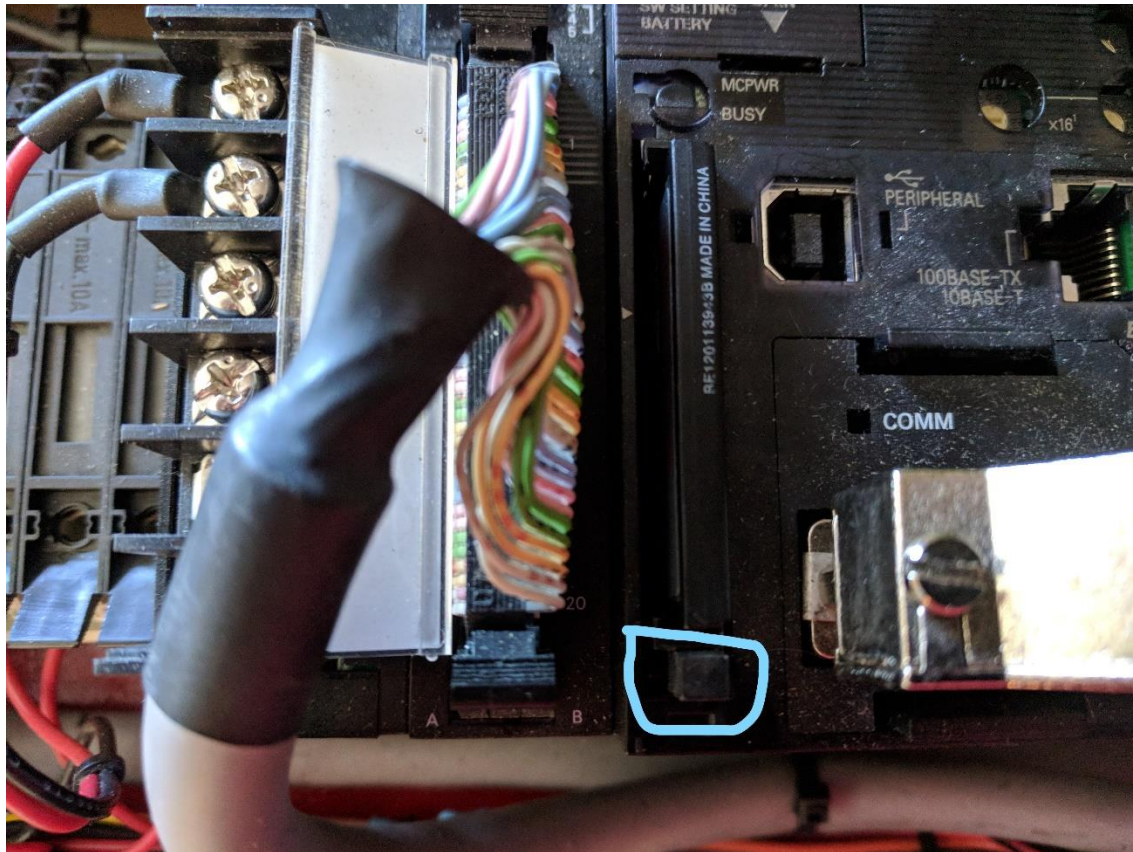

Press circled button to remove flashcard. The card will only go in one way in the PLC when you re-insert the card after data retrieval.

Use a flash card reader connected to your computer to retrieve data.
Make sure it is inserted correctly or it will not read. If it does not read flip it over and insert again.





Once the card is inserted correctly and you have clicked on one of the

- USB Drive (I:)
- USB Drive (J:)
- USB Drive (K:)
- USB Drive (L:)

drives displayed in Windows Explorer you will see.

Name	Date modified	Type
 ARCHIVE	8/16/2018 11:33 AM	File folder
 LANEDATA	8/16/2018 12:11 PM	File folder
 SLABCALB	6/3/2013 4:09 PM	File folder

Double click on LANEDATA to see the raw lane mapper files. Example below.

Name	Date modified	Type	Size
 LANE0037.CSV	8/16/2018 11:40 AM	Microsoft Excel C...	32 KB
 LANE0038.CSV	8/16/2018 11:49 AM	Microsoft Excel C...	32 KB

Copy the files to a location on your computer. These files will be needed when converting the raw CSV files (“Convert Lane Mapper Files” screen) into an xml file that can be read for reporting.