


QR

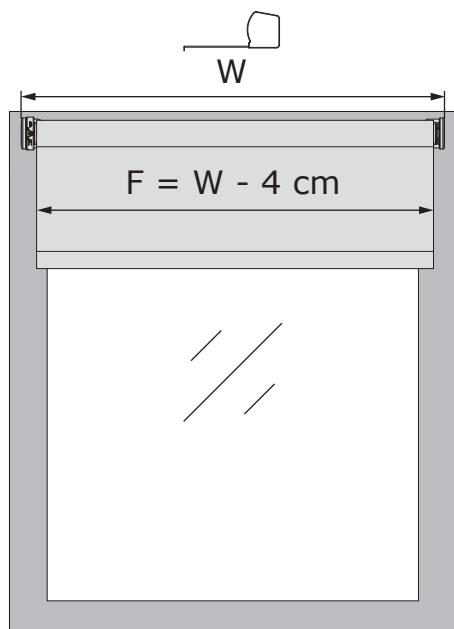


EN : Scan the QR code for other languages and more information.  
DE : Scannen Sie den QR-Code für andere Sprachen und weitere Informationen.  
ES : Escanee el código QR para otros idiomas y más información.  
NL : Scan de QR code voor andere talen en meer informatie.  
FR : Scannez le code QR pour d'autres langues et plus d'informations.






[rtube.nl/red805](http://rtube.nl/red805)





**A**

Min. W = 50 cm

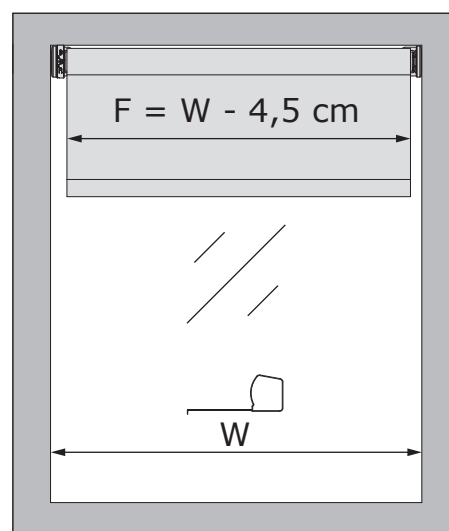
**B**

Min. W = 50 cm

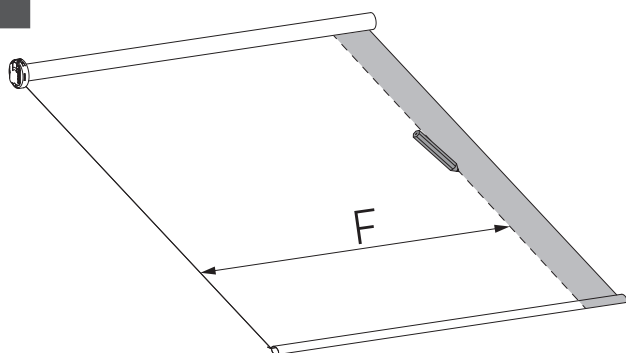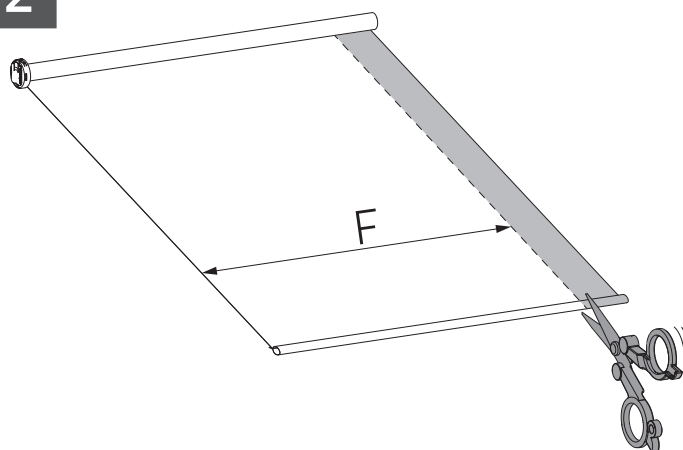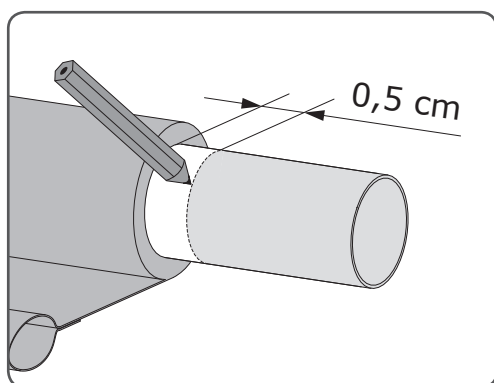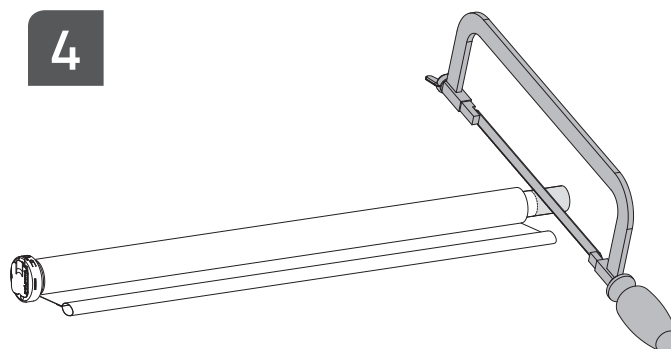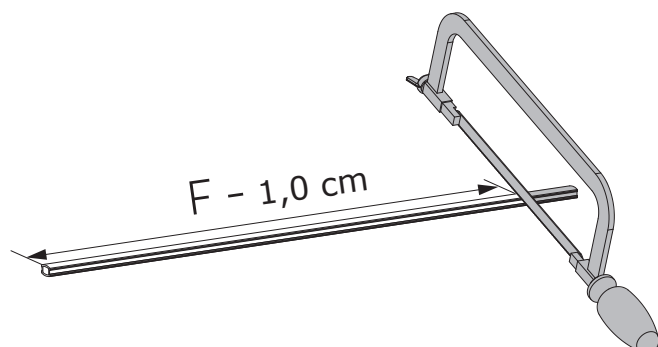
**1****2****3****4****5**

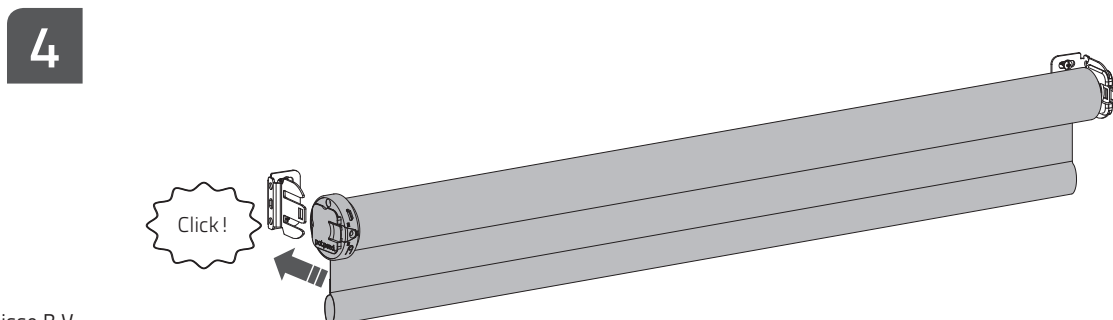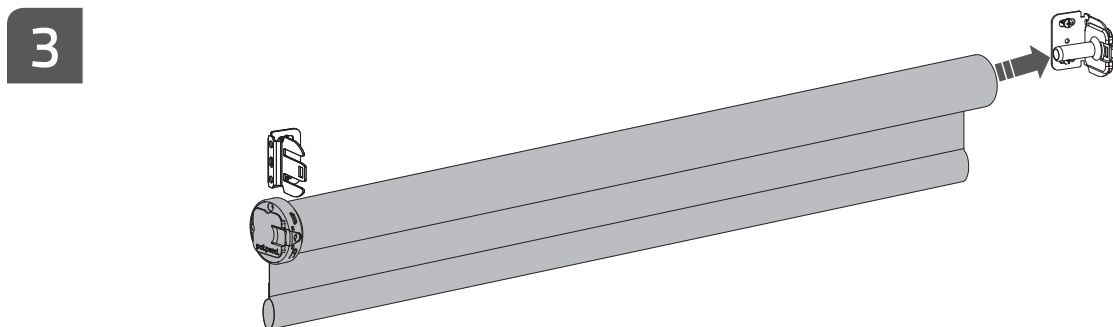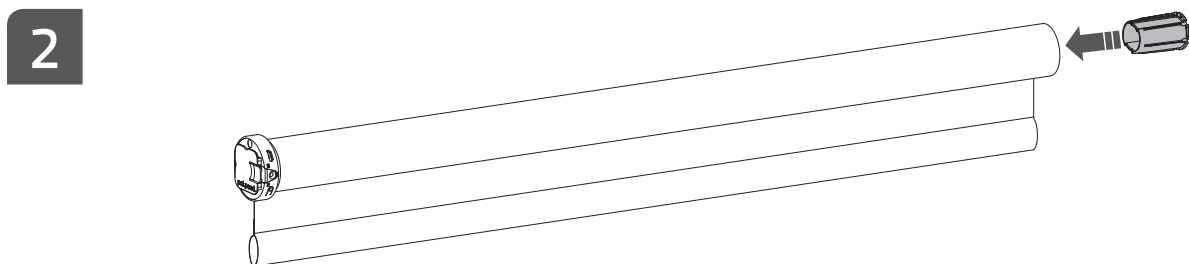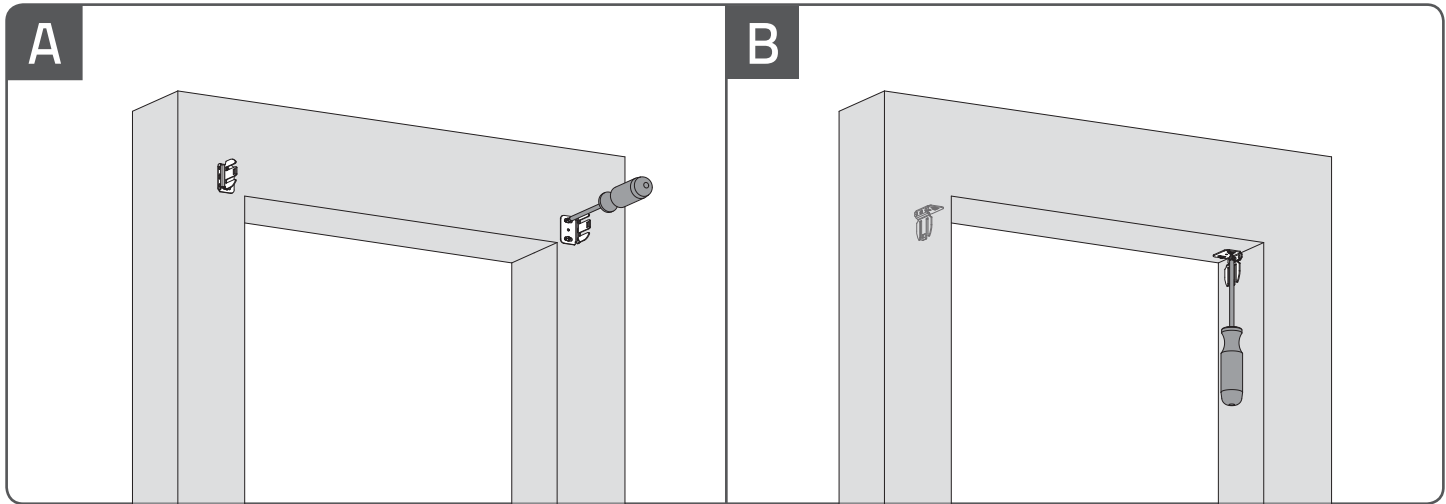

5

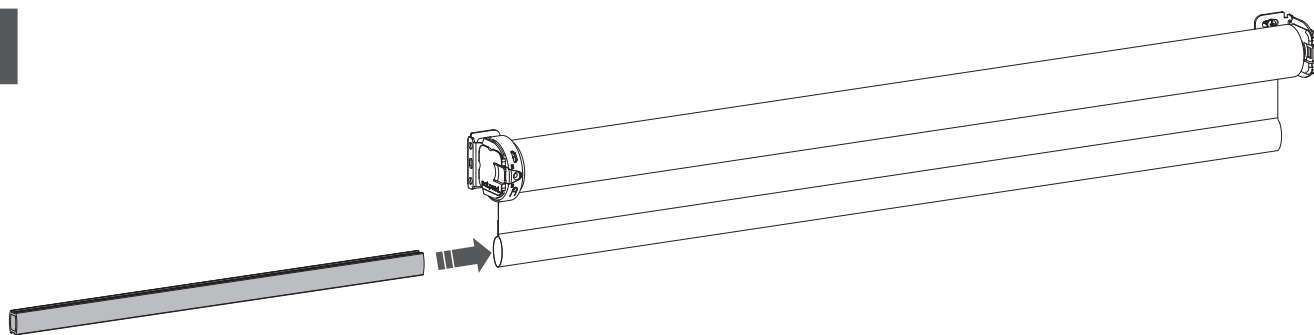

6


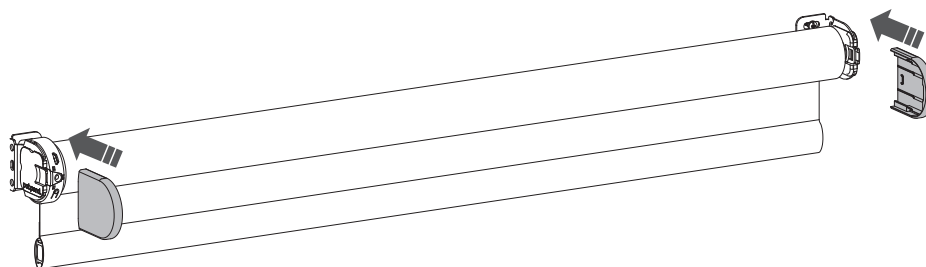


7


Charge to activate the motor





Charge before first use.  
(motor can be used during charging)  
See step 20

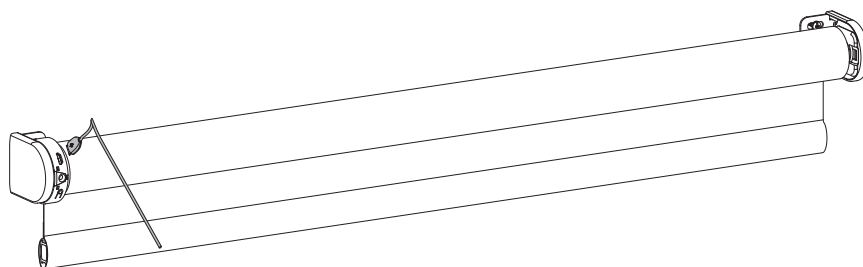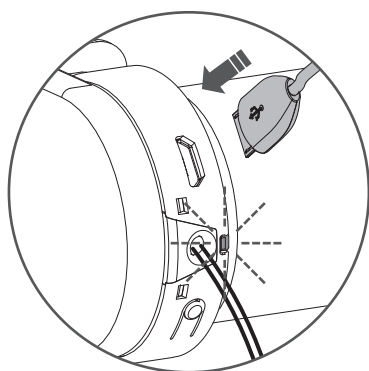

8

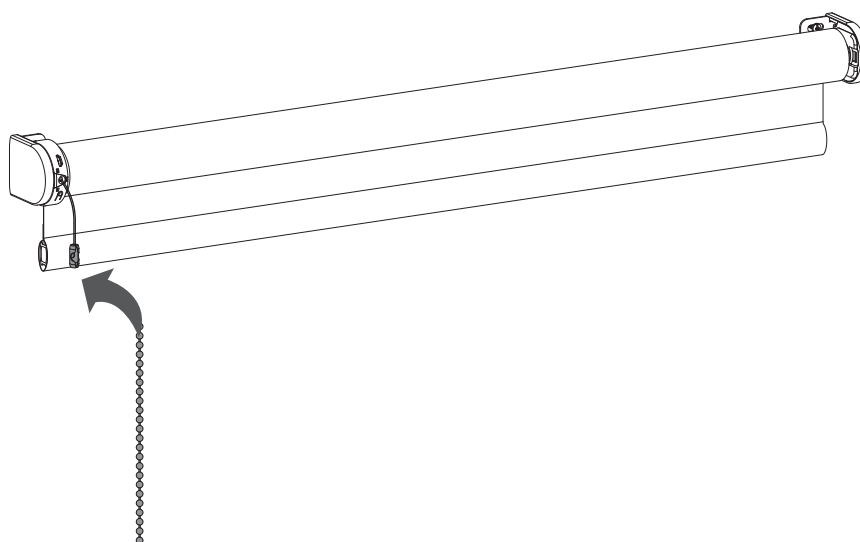



## 9 Save bottom limit

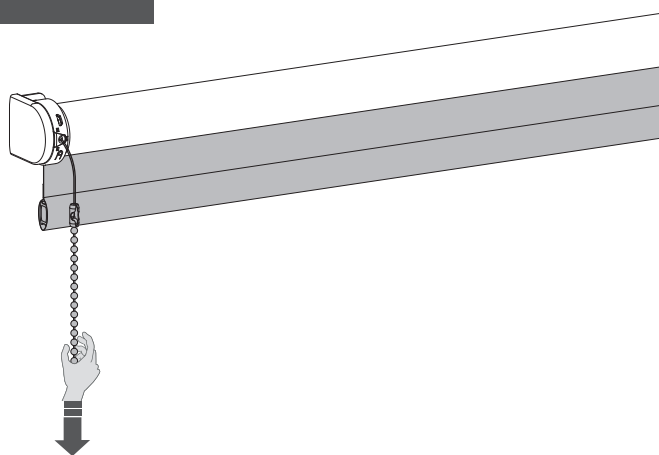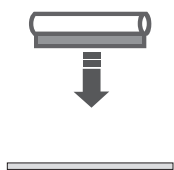

Pull and hold the chain until the blind has reached the bottom limit. If the blind moves in the opposite direction release the chain and pull and hold again.



Adjust until the desired bottom limit has been reached

## 10

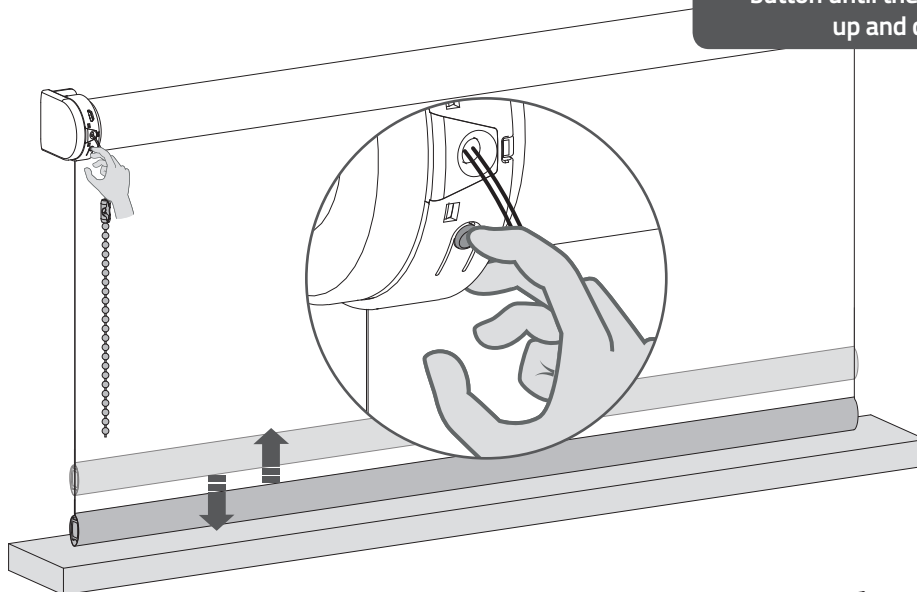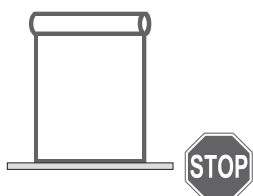

Save the position by holding the button until the blind moves up and down


## 11 Save upper limit

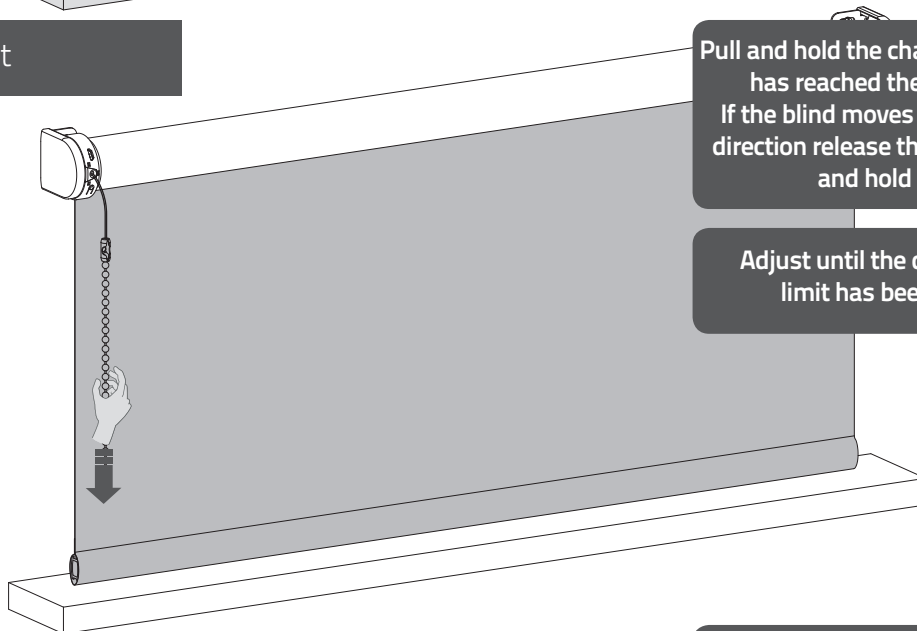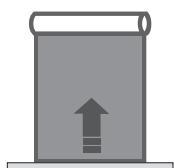

Pull and hold the chain until the blind has reached the upper limit. If the blind moves in the opposite direction release the chain and pull and hold again.

Adjust until the desired upper limit has been reached



## 12

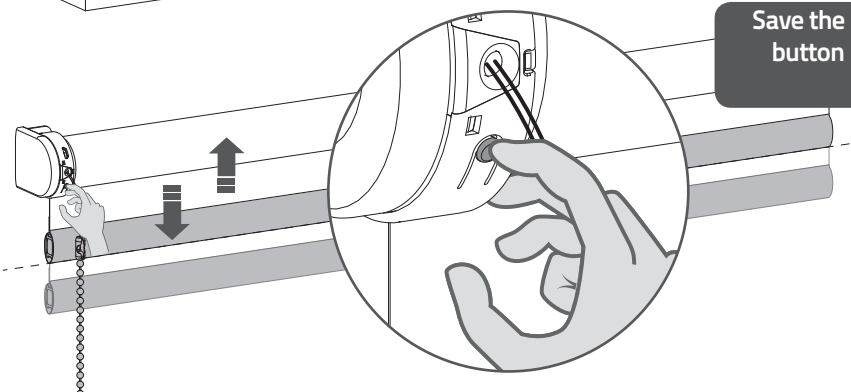



Save the position by holding the button until the blind moves up and down

## 13 Operating the blind


Pull the chain shortly to start or stop the blind.

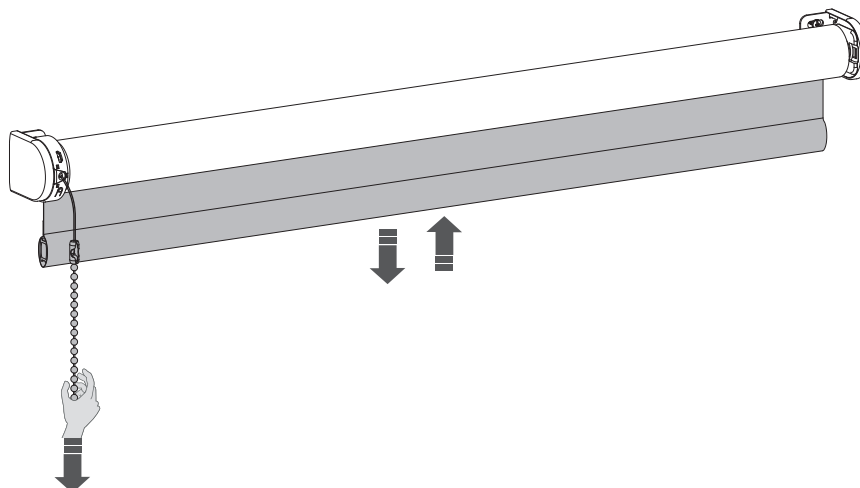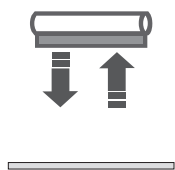


## 14 Set the blind to your favorite position

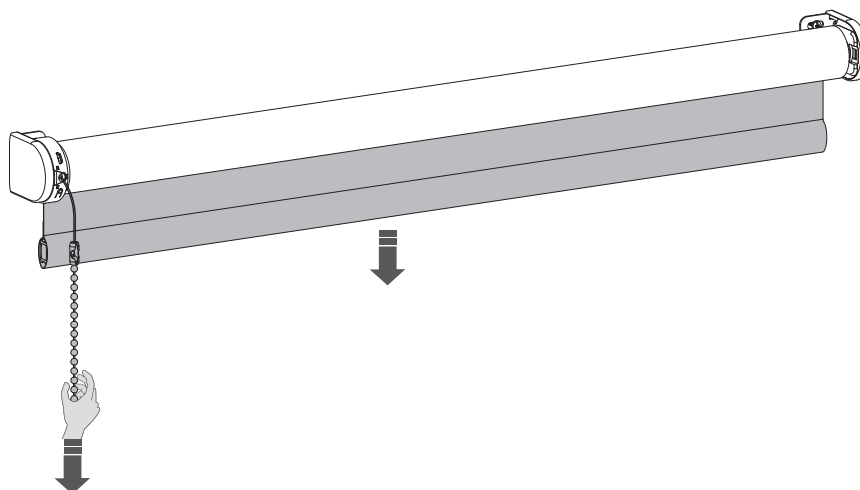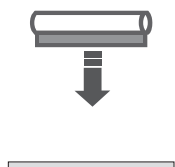



## 15 Optional : Save the favorite position

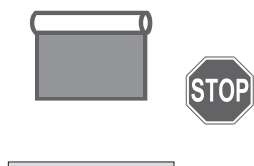



Pull and hold the chain for approximately 7 second until the blind moves up and down

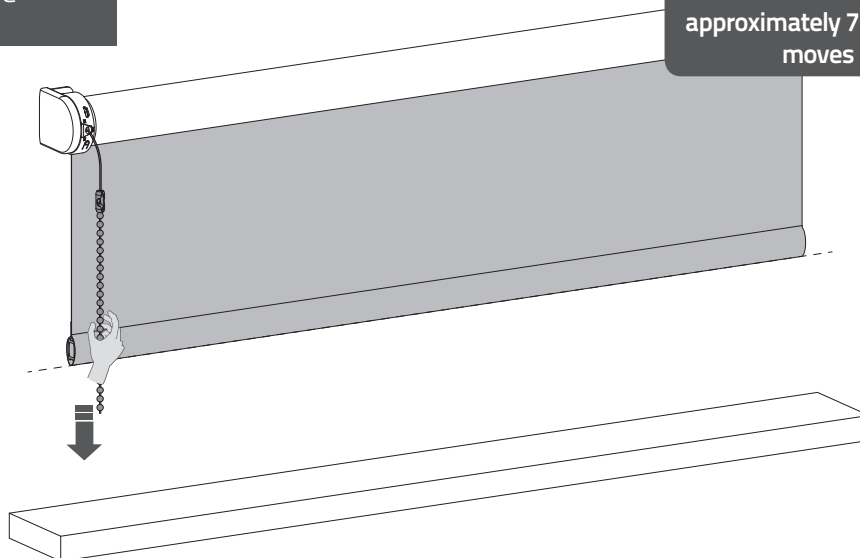


16

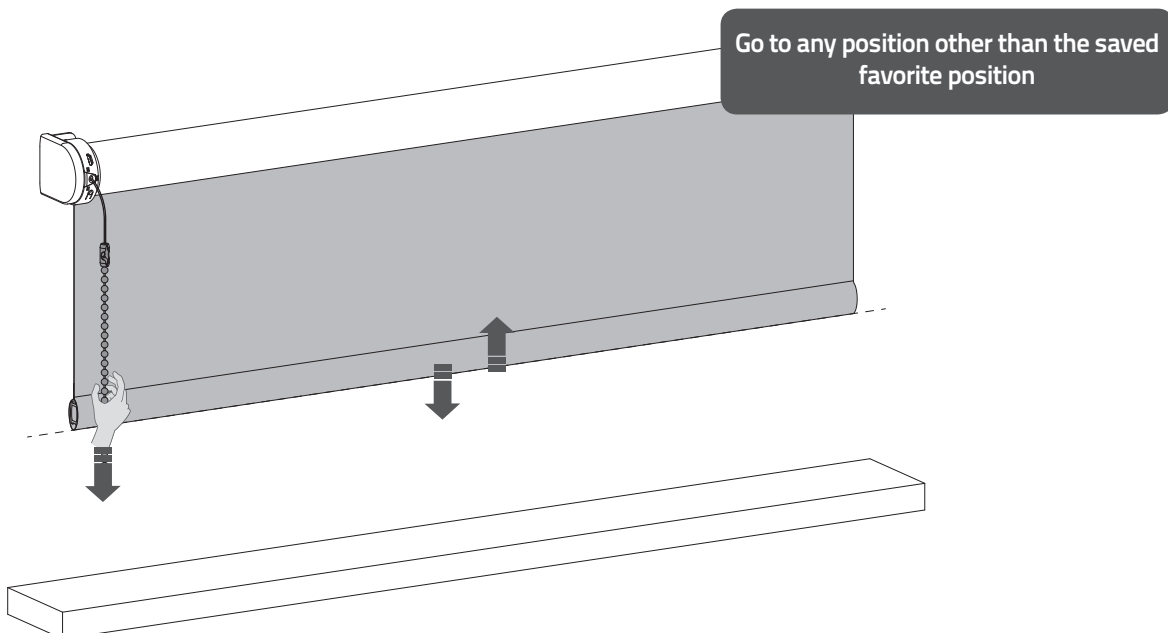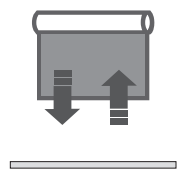

17 Operate to favorite position

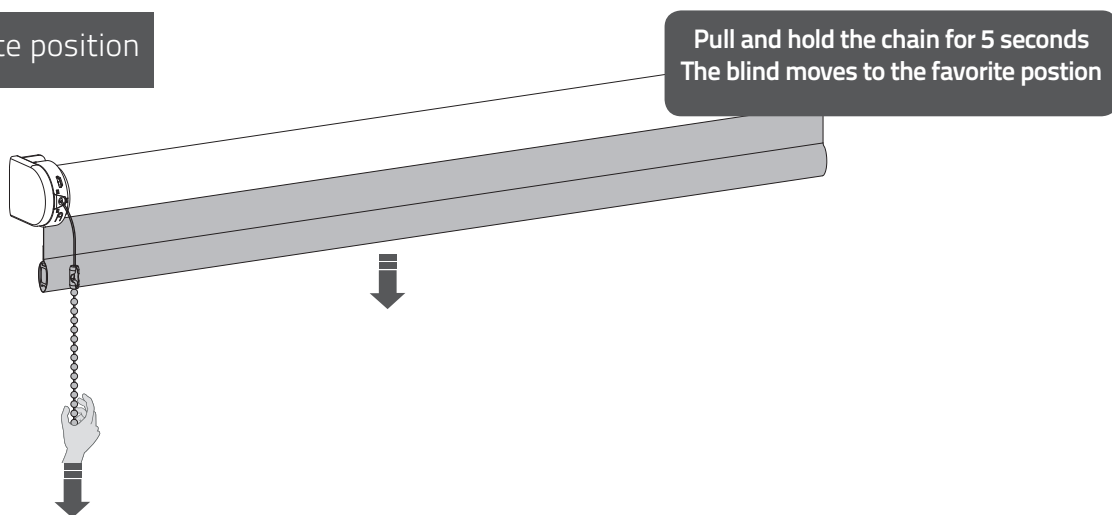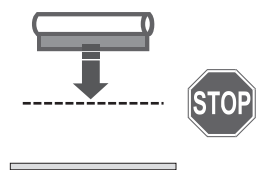


18 Delete favorite position

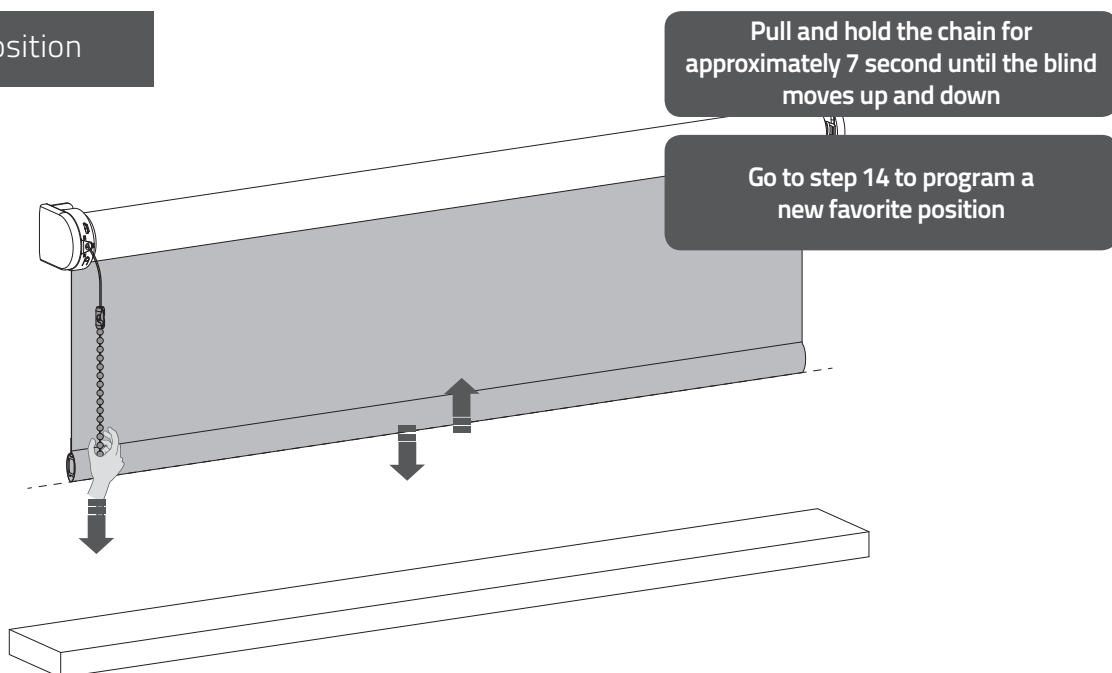

MN170071\_20171016

## 19 Delete end limits

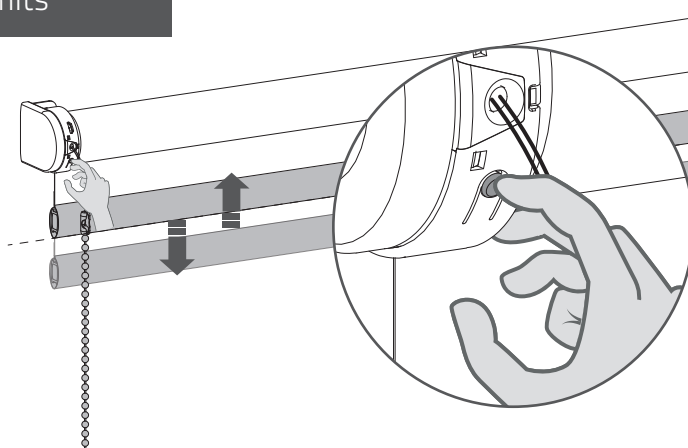


Hold the button for approximately 10 seconds, after 5 seconds the blind will move up and down. Keep pushing the button until the blind moves up and down again.


Repeat steps 9 - 12 to save new end limits

## 20 Charging


Use a Micro-USB cable

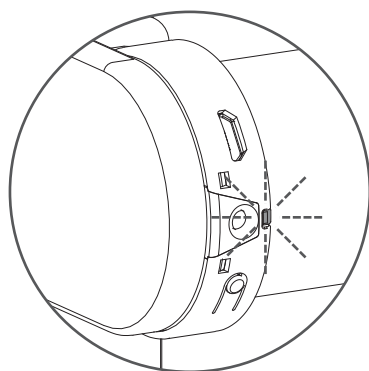

Blinking red during operation ;  
Charge the battery

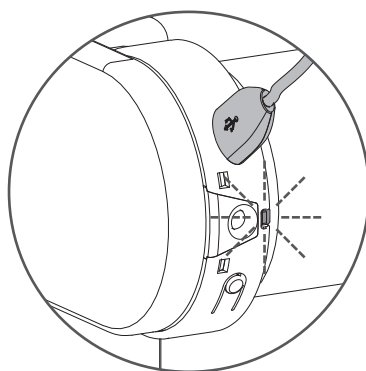

blinking green ;  
battery is charging

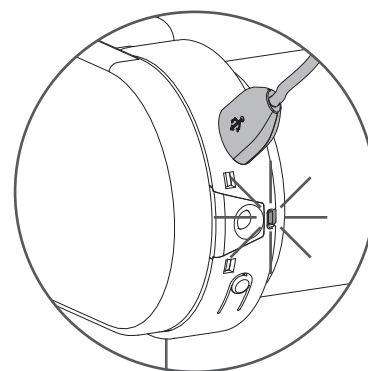

Continuously green ;  
battery is fully charged