


Operational Rules for A380:

1. Operational RWY: 16/34;
2. Operational TWYs: D(south of T3), E, E1-E7, E9-E11, F(BTN T3&T4), G, G1, G4(BTN G&E), G5(BTN G&E), G6(BTN G&E), G8(BTN G&E), G9(BTN G&E), J(BTN T3&T4), Q(BTN G&E), R(west of D), S(west of D), T3(west of D), T4(west of D), T5(BTN G&E), V1(BTN T3&T4), V2(BTN T3&T4), W(west of D), W1(BTN R&W), W2(BTN R&W).
3. Operational Stands: Nr.317,350,361,362,391.
4. A380 are strictly forbidden to operate within the area not mentioned above.
5. Follow-me vehicle is not available for arrival and departure aircraft.
6. A380 taxiing route:

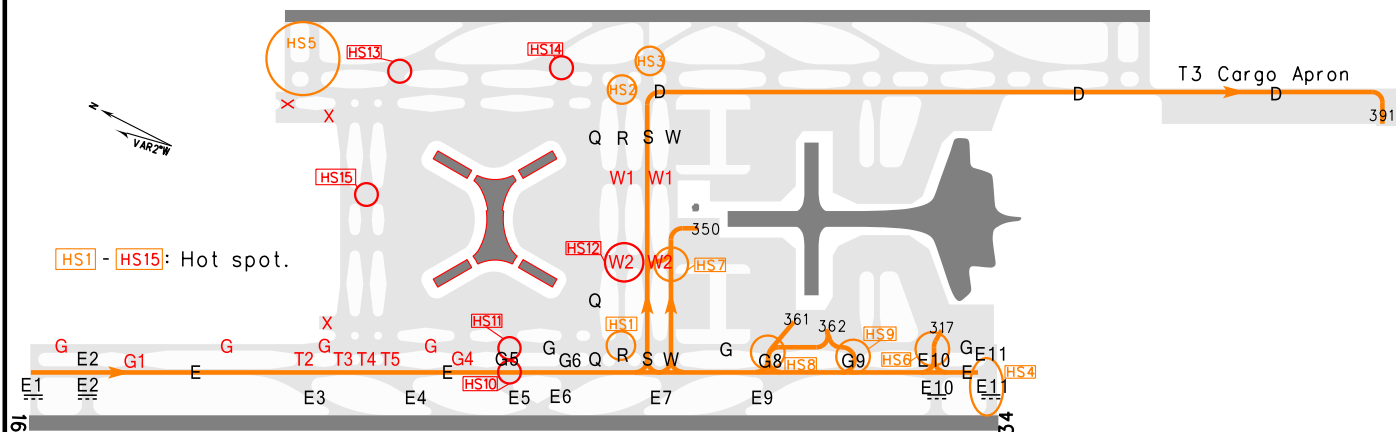

Taxiing route to Stand NR317:

Landing for RWY16: E-E10-NR317,
Landing for RWY34: E-E10-NR317.

Taxiing route to Stand NR350:

Landing for RWY16: E-W-NR350
or E-S(west of D)-W2-NR350,
Landing for RWY34: E-W-NR350
or E-S(west of D)-W2-NR350.

Taxiing route to Stand NR361:


Landing for RWY16: E-G8(BTN G&E)-NR361,
Landing for RWY34: E-G8(BTN G&E)-NR361.

Taxiing route to Stand NR362:

Landing for RWY16: E-G8/G9(BTN G&E)-G-NR362,
Landing for RWY34: E-G8(BTN G&E)-G-NR362.

Taxiing route to Stand NR391:

Landing for RWY16: E-S(west of D)-D(south of Q)-NR391,
Landing for RWY34: E-S(west of D)-D(south of Q)-NR391.

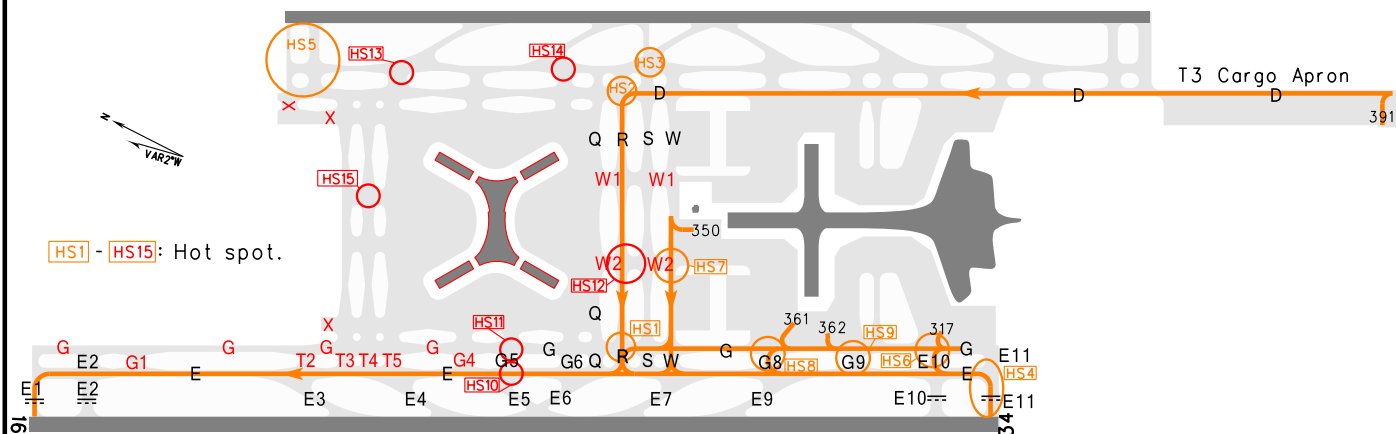

Taxiing route from Stand NR317:

Departure for RWY16: G-R(BTN G&E)-E-E1,
Departure for RWY34: G-E10(BTN G&E)-E-E11.

Taxiing route from Stand NR350:

Departure for RWY16: W-E-E1
or W-G-R-E-E1,
Departure for RWY34: W-E-E11.

Taxiing route from Stand NR361:

Departure for RWY16: G-R(BTN G&E)-E-E1,
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR362:

Departure for RWY16: G-R(BTN G&E)-E-E1,
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR391:

Departure for RWY16: D(south of Q)-R(west of D)-E-E1,
Departure for RWY34: D(south of Q)-R(west of D)-E-E11.

Changes: Add apron, TWY, HS10-HS15, delete RI, SI.