


# A380 Taxiing Routes Chart

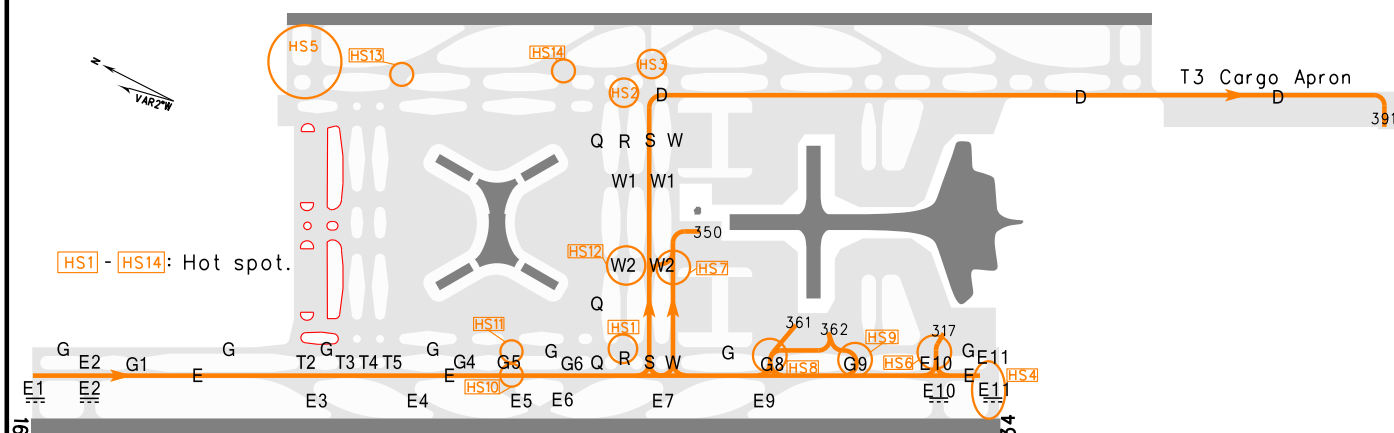


Taxiing route to Stand NR317:  
Landing for RWY16: E-E10-NR317,  
Landing for RWY34: E-E10-NR317.

Taxiing route to Stand NR361:  
Landing for RWY16: E-G8(BTN G&E)-NR361,  
Landing for RWY34: E-G8(BTN G&E)-NR361.

Taxiing route to Stand NR350:  
Landing for RWY16: E-W-NR350  
or E-S(west of D)-W2-NR350,  
Landing for RWY34: E-W-NR350  
or E-S(west of D)-W2-NR350.

Taxiing route to Stand NR362:  
Landing for RWY16: E-G8/G9(BTN G&E)-G-NR362,  
Landing for RWY34: E-G8(BTN G&E)-G-NR362.

Taxiing route to Stand NR391:  
Landing for RWY16: E-S(west of D)-D(south of Q)-NR391,  
Landing for RWY34: E-S(west of D)-D(south of Q)-NR391.

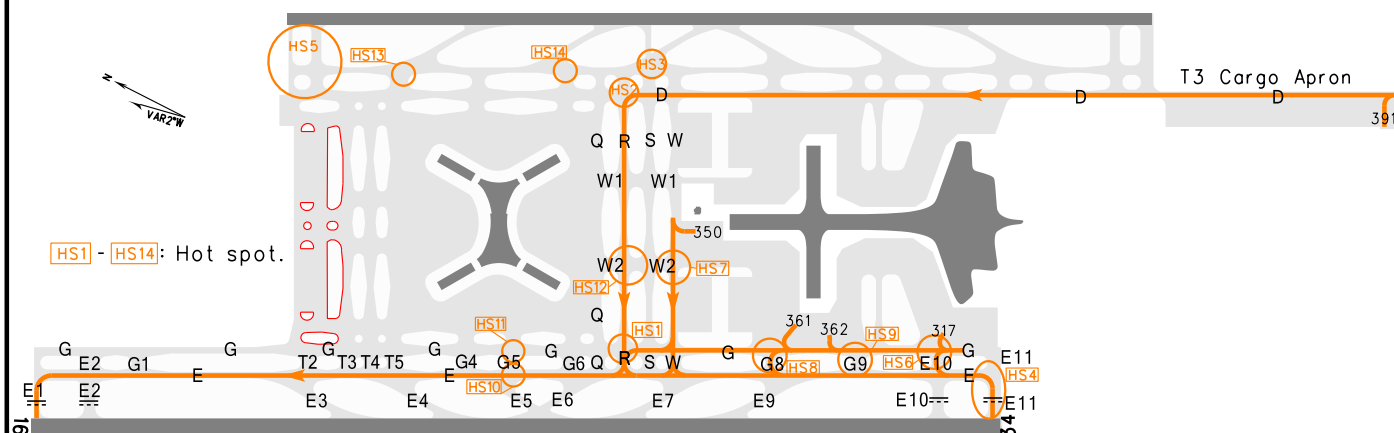

Taxiing route from Stand NR317:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-E10(BTN G&E)-E-E11.

Taxiing route from Stand NR361:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR350:  
Departure for RWY16: W-E-E1  
or W-G-R-E-E1,  
Departure for RWY34: W-E-E11.

Taxiing route from Stand NR362:  
Departure for RWY16: G-R(BTN G&E)-E-E1,  
Departure for RWY34: G-G8(BTN G&E)-E-E11.

Taxiing route from Stand NR391:  
Departure for RWY16: D(south of Q)-R(west of D)-E-E1,  
Departure for RWY34: D(south of Q)-R(west of D)-E-E11.

Changes: Apron, delete HS15.