

FOR THE SELLER



Turn On the Machine

- Seller must first plug the machine on a nearby power source. The machine will automatically turn on after plugging.



For Refilling

- Unlock the container shutters on top, then open to check or refill rice. Each container has a maximum capacity to hold 12 kilograms of rice.




Accessing the Cash Box

- The cash box is situated on the lower right corner of the machine. Seller must first unlock the box using a physical key to open the register.



For Dispensing Errors or Releasing All Rice

- In case of dispensing malfunctions, an emergency button is situated on top with green color. Pressing it will release all rice to the dispensing funnel. **SELLER MUST FIRST ACCESS ADMIN MODE OF MACHINE VIA PANEL TO ACTIVATE BUTTON.**

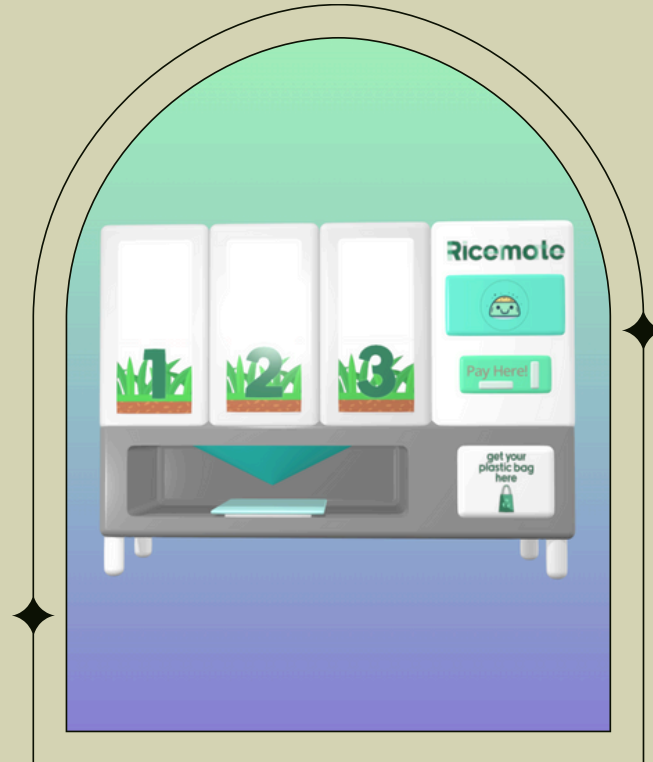

Ricemate

A Multi-Grain Rice
Dispensing Machine

USER MANUAL



Features of the Machine:



Touch Screen Display

A smooth and simple UI for customers to order their rice.



Container

A protective material of stainless steel, aluminum case, and composite panel for layered security.



SMS System:

The seller & developers are notified via text message technical issues or emergency.



Temperature & Humidity Sensor

Reads the container moisture level and sends an SMS to the seller for dry or wetness.



Load Cell

Reads the weight of the dispensed rice for accurate output.

FOR THE COSTUMERS

01 Touch-Screen UI

Choose your desired rice variety!

02 Payment

Insert your payment via coins or bills!

03 Plastic Bag Box


Get a piece of plastic bag and insert to funnel!

04 Funnel

Wait for the rice to be dispensed!

05 Enjoy!

Thank you for purchasing!

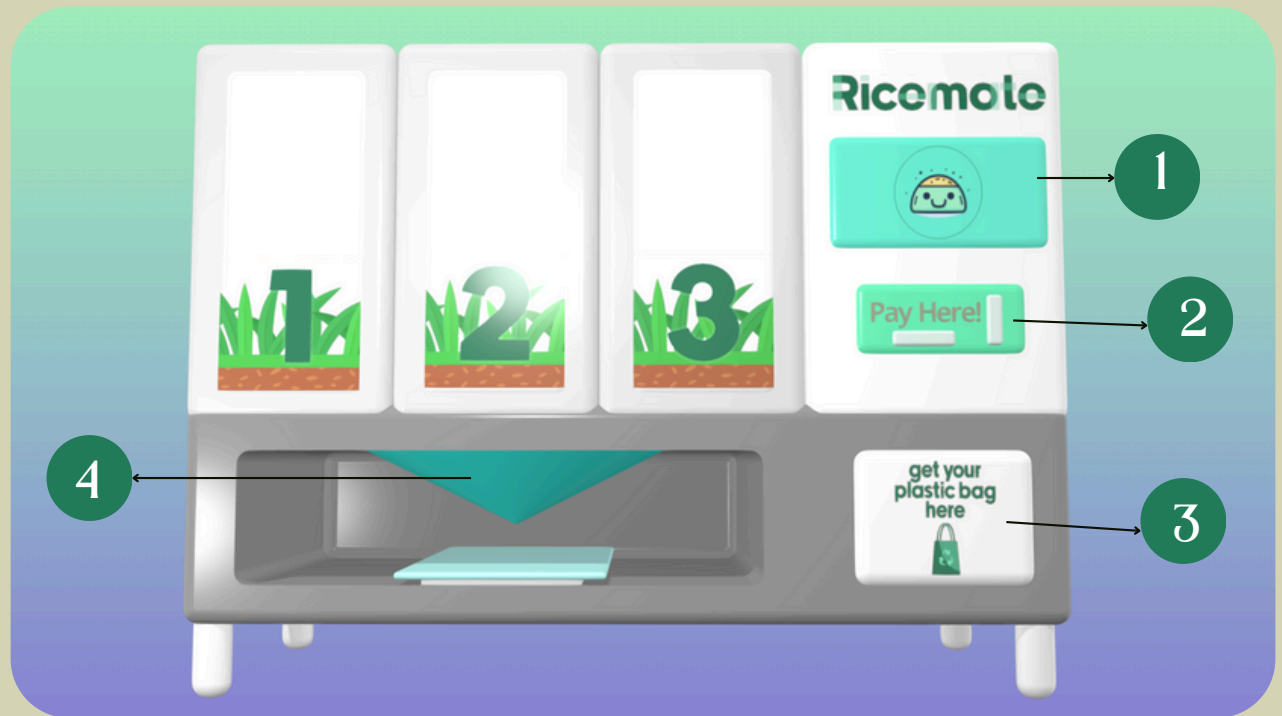

Notes:

- Only **valid PH peso and bill** are accepted on this machine.
- The machine is **limited to dispensing only 1 to 3 kilograms** of rice for every costumer purchase.
- It is recommended to **pay with exact amount** of coins and/or bills since the machine has **no money return or change** function.