



## Install serial driver

If the driver of the CP2102 chip has been installed in the computer system, you can skip the following content and do not need to install the driver again.

1. Find the CP2102\_USB\_Driver.zip file in the supporting materials, download it to the local computer and unzip it, and get the following files.

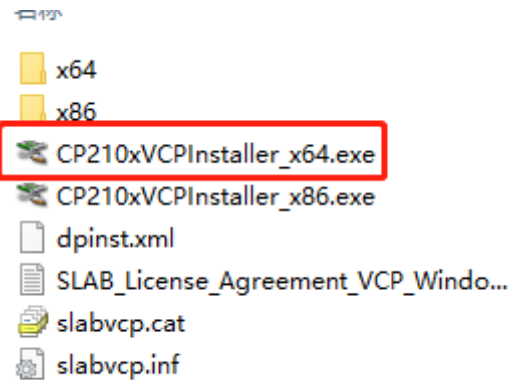

2. Take Win10 64-bit system as an example, double-click the CP210xVCPInstaller\_x64.exe file to open the installer, and then follow the prompts and click Next until it is completed.

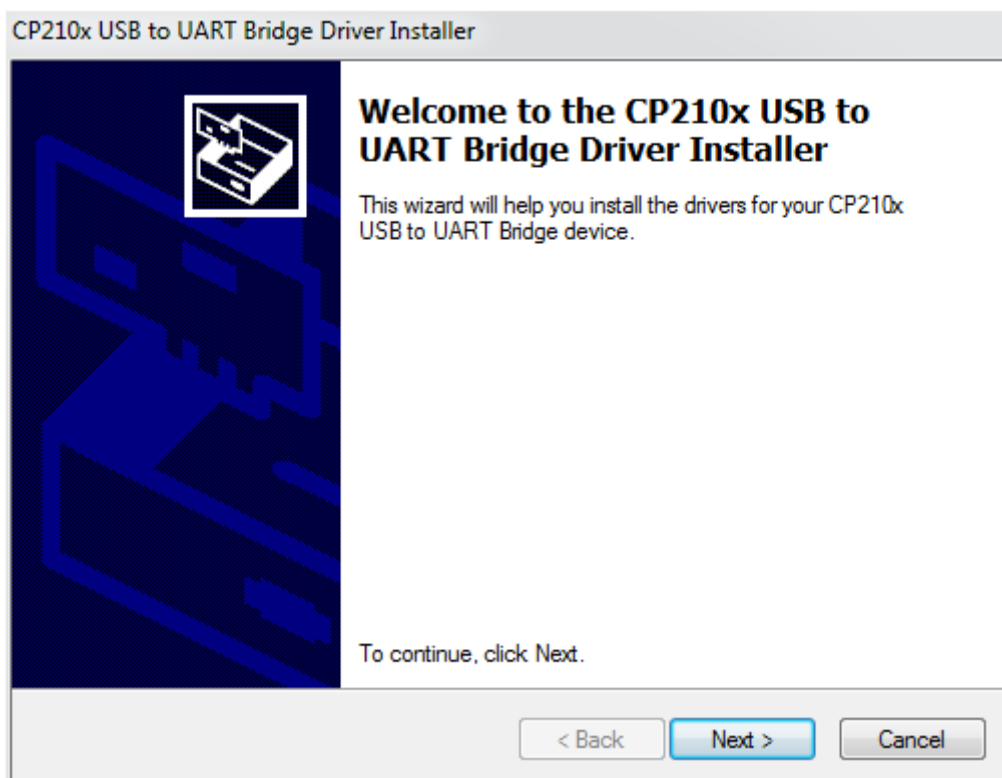

CP210x USB to UART Bridge Driver Installer

License Agreement



To continue, accept the following license agreement. To read the entire agreement, use the scroll bar or press the Page Down key.

LICENSE AGREEMENT  
SILICON LABS VCP DRIVER  
IMPORTANT: READ CAREFULLY BEFORE AGREEING TO TERMS  
  
THIS PRODUCT CONTAINS THE SILICON LABS VCP DRIVER AND  
INSTALLER PROGRAMS AND OTHER THIRD PARTY  
SOFTWARE. TOGETHER THESE PRODUCTS ARE REFERRED TO  
AS THE "LICENSED SOFTWARE". USE OF THE LICENSED  
SOFTWARE IS SUBJECT TO THE TERMS OF THIS LICENSE

☒ I accept this agreement

☐ I don't accept this agreement

Save As

Print

< Back

Next >

Cancel

CP210x USB to UART Bridge Driver Installer



## Completing the Installation of the CP210x USB to UART Bridge Driver

The drivers were successfully installed on this computer.

Driver Name	Status
✓ Silicon Laboratories Inc. ...	Device Updated

< Back

Finish

Cancel